

# VPort 56-2MP Series Quick Installation Guide

---

Edition 3.0, February 2017

## Technical Support Contact Information [www.moxa.com/support](http://www.moxa.com/support)

### Moxa Americas:

Toll-free: 1-888-669-2872

Tel: 1-714-528-6777

Fax: 1-714-528-6778

### Moxa China (Shanghai office):

Toll-free: 800-820-5036

Tel: +86-21-5258-9955

Fax: +86-21-5258-5505

### Moxa Europe:

Tel: +49-89-3 70 03 99-0

Fax: +49-89-3 70 03 99-99

### Moxa Asia-Pacific:

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

### Moxa India:

Tel: +91-80-4172-9088

Fax: +91-80-4132-1045



© 2017 Moxa Inc. All rights reserved.

P/N: 1802000560012



## Overview

The VPort 56-2MP series is the world's first rugged IP camera that can tolerate environmental temperatures ranging from -40 to 75°C without cooling fan. It is an industrial-grade, H.264 box-type IP camera that combines Full HD resolution (1920 x 1080), 10x optical zoom, and 16x digital zoom to enhance surveillance system efficiency while delivering state-of-the-art video quality. Optional housing and PT scanner accessories are available for indoor and outdoor installation.

With a built-in removable IR-cut filter and automatic color mode switching, the VPort 56-2MP series is suitable for both day and night use. Highly-tuned ROI (Region of Interest), BLC (Back Light Compensation), and sense up functions enable the VPort 56-2MP to produce exceptionally clear images. The VPort 56-2MP can encode analog video into both H.264 and MJPEG video streams and can transmit up to 3 independent video streams (2 in H.264, and 1 in MJPEG) simultaneously. Advanced video encoding technology enables the camera to support up to 30 fps for each of the H.264 and MJPEG streams.

## Package Checklist

Moxa's VPort 56-2MP series is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

- 1 VPort 56-2MP camera (see ordering information below)
- Terminal block accessory package (3-pin terminal block for power input, 9-pin terminal block for RS-485 DX+ and DX- and I/O)
- Documentation and software CD (includes user's manual, quick installation guide, and VPort utility)
- Quick installation guide (printed)
- Warranty card

**NOTE** Check the model name on the VPort's side label to verify that the model name is correct for your order.

**NOTE** This product must be installed in compliance with your local laws and regulations.

## Ordering Information

- **VPort 56-2MP-CAM10X:** 0 to 60°C operating temperature
- **VPort 56-2MP-CAM10X-T:** -40 to 75°C operating temperature
- **VPort 56-2MP-CAM10X-S-SC:** 0 to 60°C operating temperature, single mode fiber interface
- **VPort 56-2MP-CAM10X-S-SC-T:** -40 to 75°C operating temperature, single mode fiber interface


## Specifications

<b>Camera</b>
<b>Sensor:</b> 1/2.5" HD progressive scan CMOS
<b>Lens:</b> 6.3 to 63 mm auto focus zoom lens
<b>Illumination:</b> <ul style="list-style-type: none"><li>• Color: 0.2 lux at F1.8</li><li>• B/W: 0.05 lux at F1.8</li></ul>
<b>Synchronization:</b> Internal
<b>White Balance:</b> ATW, AWB
<b>Electronic Shutter:</b> AES: On/Off Fix: 1/50, 1/100, 1/250, 1/500, 1/1000, 1/2000, 1/4000, 1/10000 sec
<b>S/N Ratio:</b> More than 50 dB (AGC off)
<b>ICR Control:</b> Auto (light sensor control) or DI control
<b>DNR:</b> Built-in 3D DNR
<b>AGC Control:</b> On/Off
<b>Backlight Compensation:</b> On/Off
<b>Auto Exposure:</b> On/Off
<b>Image Rotation:</b> Flip, Mirror, and 180° rotation
<b>Auto Sense Up:</b> On/Off, Max. 64x
<b>Image Setting:</b> Manually tune sharpness
<b>Video</b>
<b>Video Compression:</b> H.264 (ISO/IEC 14496-10) or MJPEG
<b>Video Output:</b> via Ethernet
<b>Video Streams:</b> Up to 3 video streams (2 x H.264 and 1 x MJPEG)
<b>Video Resolution and FPS (frames per second):</b> Up to 30/25 FPS for each of 3 independent streams at max resolution.
<b>Video Viewing:</b> <ul style="list-style-type: none"><li>• DynaStream™ supported for automatic adjustment of frame rate</li><li>• Image stabilizer to reduce video shaking</li><li>• CBR Pro™ for optimized image quality within limited bandwidth</li><li>• 8 privacy mask areas provided</li><li>• Adjustable image size and quality</li><li>• Timestamp and text overlay</li><li>• Maximum of 10 simultaneous unicast connections</li><li>• ROI (Region of Interest) configuration for up to 3 areas</li></ul>
<b>PTZ:</b> Compatible with Videotec Ulisse Netcam PT scanner
<b>Audio</b>
<b>Audio Inputs:</b> 1 Line-in with 3.5 mm phone jack
<b>Audio Outputs:</b> 1 Line-out with 3.5 mm phone jack
<b>Two-Way Audio:</b> Full duplex two-way audio
<b>Network</b>
<b>Protocols:</b> TCP, UDP, HTTP, SMTP, FTP, Telnet, NTP, DNS, DHCP, UPnP, RTP, RTSP, ICMP, IGMPv3, QoS, SNMPv1/v2c/v3, DDNS, Modbus/TCP, 802.1X, SSL
<b>Ethernet:</b> 1 10/100BaseT(X) Ethernet port, RJ45 connector, or 1 100BaseFX, single mode
<b>Standard:</b> ONVIF
<b>GPIO</b>
<b>Digital Inputs:</b> 1, max. 8 mA <ul style="list-style-type: none"><li>• High: +13 to +30 V</li><li>• Low: -30 to +3 V</li></ul>
<b>Relay Output:</b> 1, max. 24 VDC @ 1 A

<b>Serial Interface</b>
<b>RS-485:</b> 1 full-duplex RS-485 port
<b>LED Indicators</b>
<b>STAT:</b> Indicates if the system is booted properly or not
<b>Network:</b> 10 Mbps or 100 Mbps
<b>Power:</b> Power on/off
<b>Local Storage</b>
<b>SD Socket:</b> Standard SD socket (SDHC, SDXC)
<b>Power Requirements</b>
<b>Input:</b> 12/24 VDC, 24 VAC or Power-over-Ethernet (PoE+, 802.3at), redundant power design
<b>Power Consumption:</b> 23 W
<b>Physical Characteristics</b>
<b>Camera Body Housing:</b> Metal, IP30 protection
<b>Installation:</b> Wall mounting, ceiling mounting, pole mounting, corner mounting (optional external housing and mounting accessory may be required)
<b>Alarms</b>
<b>Video Motion Detection:</b> 3 independently configurable motion areas
<b>Camera Tamper:</b> Sensitivity adjustable camera tamper detection (Pending)
<b>Scheduling:</b> Daily repeat timing schedule
<b>Imaging:</b> JPEG snapshots for pre/trigger/post alarm images
<b>Custom Alarms:</b> HTTP event and CGI events for setting customized alarm actions
<b>Email/FTP Messaging:</b> Automatic transfer of stored images via email or FTP as event-triggered actions
<b>Pre-alarm Buffer:</b> 84 MB video buffer for JPEG snapshot images
<b>Environmental Limits</b>
<b>Operating Temperature:</b> Standard Models: 0 to 60°C (32 to 140°F) Wide Temp. Models: -40 to 75°C (-40 to 167°F)
<b>Storage Temperature:</b> -40 to 85°C (-40 to 185°F)
<b>Ambient Relative Humidity:</b> 5 to 95% (non-condensing)
<b>Standards and Certifications</b>
<b>Safety:</b> UL 60950-1, EN 50121-4, NEMA TS2
<b>EMI:</b> FCC Part 15, CISPR 32 class A
<b>EMS:</b> EN 61000-4-2 (ESD), Level 3, EN 61000-4-3 (RS), Level 3, EN 61000-4-4 (EFT), Level 3, EN 61000-4-5 (Surge), Level 3, EN 61000-4-6 (CS), Level 3, EN 61000-4-8, EN 61000-4-11
<b>Shock:</b> IEC 60068-2-27
<b>Freefall:</b> IEC 60068-2-32
<b>Vibration:</b> IEC 60068-2-6
<b>Warranty</b>
<b>Warranty Period:</b> 3 years
<b>Details:</b> See <a href="http://www.moxa.com/warranty">www.moxa.com/warranty</a>

## Product Description

### Front and Top Panels

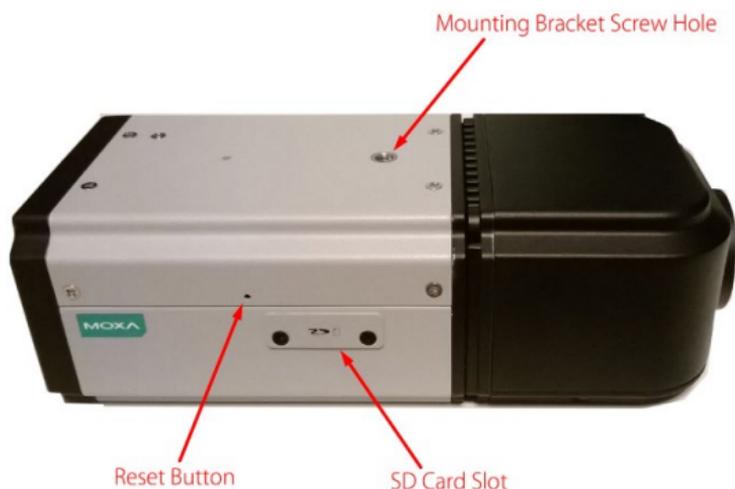

- **SD Card Slot:** You can remove the SD card slot cover and insert an SD card for disconnection/event local storage.
- **Mounting Bracket Screw Hole:** Screw holes for fastening the camera to a protective housing.
- **Reset Button:** Use a pointed object to depress the reset button to reboot; push and hold to reboot and restore factory defaults.

### Rear Panel



1. Phone jack for audio output
2. Phone jack for audio input
3. RJ45 port for PoE/non-PoE connection
4. Ground screw for connecting a ground wire
5. 3-pin terminal block for power input
6. LED indicator to show network and system status. Green indicates normal operation.
7. LED indicator to show power status. Green indicates normal operation.
8. 9-pin terminal block for RS-485 and DI and relay.

**NOTE** The VPort 56-2MP can be powered by a 12 VDC, 24 VDC, or 24 VAC input or Power-over-Ethernet (PoE+, 802.3at). Use an external power supply together with PoE+ for power redundancy.

# Software Installation

## Step 1: Configure the VPort 56-2MP's IP address


When the VPort 56-2MP is first powered on, the POST (Power On Self Test) will run for a few moments (about 30 seconds). The network environment determines how the IP address is assigned.

### Network Environment with DHCP Server

When DHCP is active, the unit's IP address will be assigned by the network's DHCP server. Refer to the DHCP server's IP address table to determine the unit's assigned IP address. You may also use the Moxa VPort and EtherDevice Configurator Utility (edscfgui.exe), as described below:

### **Using the Moxa VPort and EtherDevice Configurator Utility (edscfgui.exe)**

1. Run the edscfgui.exe program to search for the VPort. After the utility's window opens, you may also click on the Search button  to initiate a search.
2. When the search has concluded, the Model Name, MAC address, IP address, serial port, and HTTP port of the VPort will be listed in the utility's window.

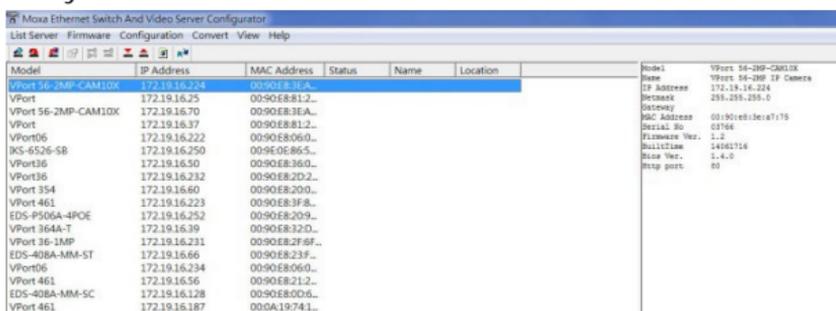

Model	IP Address	MAC Address	Status	Name	Location	Model	VPort
VPort 56-2MP-CAM10X	172.19.16.234	0090E833A...				VPort 56-2MP IP Camera	
VPort	172.19.16.25	0090E8812...				IP Address	172.19.16.224
VPort 56-2MP-CAM10X	172.19.16.70	0090E83EA...				Subnet Mask	255.255.255.0
VPort	172.19.16.37	0090E8812...				Discovery	
VPort06	172.19.16.222	0090E8060...				MAC Address	00:90:e8:3e:a1:75
KX-6526-SB	172.19.16.250	0090E8965...				Serial No	03166
VPort36	172.19.16.50	0090E8360...				Firmware Ver.	1.2
VPort36	172.19.16.232	0090E82D2...				Build Date	14062716
VPort 354	172.19.16.60	0090E82D0...				Rele Ver.	1.4.0
VPort 461	172.19.16.223	0090E83F8...				Help port	80
EDS-P506A-4POE	172.19.16.252	0090E8209...					
VPort 364A-T	172.19.16.30	0090E832D...					
VPort 36-1MP	172.19.16.231	0090E82F5F...					
EDS-408A-MM-ST	172.19.16.66	0090E823F...					
VPort06	172.19.16.234	0090E8060...					
VPort 461	172.19.16.56	0090E8212...					
EDS-408A-MM-SC	172.19.16.128	0090E80D6...					
VPort 461	172.19.16.187	0090A19741...					

3. Double click the selected VPort or use the IE web browser to access the VPort's web-based manager (web server).

### **Non DHCP Server Network Environment**

If your VPort 56-2MP is connected to a network that does not have a DHCP server, then you will need to configure the IP address manually. The default IP address of the VPort 56-2MP is 192.168.127.100 and the default subnet mask is 255.255.255.0. Note that you may need to change your computer's IP address and subnet mask so that the computer is on the same subnet as the VPort.

To change the IP address of the VPort manually, access the VPort's web server, and then navigate to the **System Configuration → Network → General** page to configure the IP address and other network settings. Check the **Use fixed IP address** option to ensure that the IP address you assign is not deleted each time the VPort is restarted.

### **Step 2: Accessing the VPort 56-2MP's web-based manager**

Type the IP address in the web browser's address input box and then press enter.

### Step 3: Install the ActiveX Control Plug-in

A security warning message will appear the first time you access the VPort's web-based manager. The message is related to installing the VPort ActiveX Control component on your PC or notebook. Click **Yes** to install this plug-in to enable the IE web browser for viewing video images.



**NOTE** For Windows XP SP2 or above operating systems, the ActiveX Control component will be blocked for system security reasons. In this case, the VPort's security warning message window may not appear. Users should unlock the ActiveX control blocked function or disable the security configuration to enable the installation of the VPort's ActiveX Control component.

### Step 4: Access the homepage of the VPort 56-2MP's web-based manager.

After installing the ActiveX Control component, the homepage of the VPort 56-2MP's web-based manager will appear. Check the following items to make sure the system was installed properly:

1. Video Images
2. Video Information



### Step 5: Access the VPort's system configuration

Click on **System Configuration** to access the overview of the system configuration to change the configuration. **Model Name**, **Server Name**, **IP Address**, **MAC Address**, and **Firmware Version** appear in the green bar near the top of the page. Use this information to check the system information and installation.

For details of each configuration, check the user's manual on the software CD.

Model Name: VPort56-2MP-CAM10X Server Name: VPort 56-2MP IP Camera IP Address: 192.168.127.100 MAC Address: 00-80-00-3C-7B-9E Firm. Version: 1.0.0 Build: 13102614

Home Main Menu Overview System General Account Local Storage System Log System Parameter Firmware Upgrade Factory Default Reboot Network General SMTP Server FTP Server DNS Universal IP ToS Multicast HTTP Event Server Accessible IP SNMP Modbus/TCP 802.1X Telnet LLDP

### System Configuration

Welcome to the System Configuration pages. A brief description of each configuration group is given below. Click on a plus sign in the left pane to expand a group, and then click on the name of the page you would like to open.

Category	Item	Description and Content
System	General	Setting Host Name and Date/Time
	Account	Administrator, User and Demo Account Privileges Management
	System Log	System Log and operation information
	System Parameter	System parameters information and Import/Export function
	Firmware Upgrade	Remote Firmware Upgrade
	Factory Default	Reset to Factory Default
	Reboot	Device will reboot for restarting system
	General	The IP network settings of this VPort
	SMTP Server	Set up Primary and Secondary SMTP Server and E-mail accounts
	FTP Server	Set up the Primary and Secondary FTP Server
Network	DNS	Configure DNS
	Universal IP	Enable UPnP function
	ToS	Configure ToS(Type of Service)
	Multicast	Set up Multicast (IGMP) Streaming
	HTTP Event Server	Set up the HTTP Event Server to send the event alarm action
	Accessible IP	Set up a list to control the access permission of clients by checking their IP address
	SNMP	Configure the SNMP settings
	Modbus/TCP	Enable Modbus/TCP function
	Dot1X	Configure 802.1X
	Telnet	Configure Telnet
Video	LLDP	Configure LLDP
	Image Settings	Configure the information of video image
	Camera Setting	Configure the attributes of video image
	ROI	Configure the ROI(region of interest) settings

## Wiring Requirements



### SAFETY FIRST!

- Be sure to disconnect the power cord before installing and/or wiring your Moxa VPort 56-2MP.
- Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size.
- If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

You should also pay attention to the following:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separated.
- It is strongly advised that you label wiring to all devices in the system when necessary.