

# **NPort 5000 Series User's Manual**

---

**NPort 5000/5000A/IA5000/IA5000A/5000AI-M12 Series**

**Version 6.1, May 2021**

**[www.moxa.com/product](http://www.moxa.com/product)**



© 2021 Moxa Inc. All rights reserved.

# NPort 5000 Series User's Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

## Copyright Notice

© 2021 Moxa Inc. All rights reserved.

## Trademarks

The MOXA logo is a registered trademark of Moxa Inc.  
All other trademarks or registered marks in this manual belong to their respective manufacturers.

## Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document as is, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

## Technical Support Contact Information

[www.moxa.com/support](http://www.moxa.com/support)

### **Moxa Americas**

Toll-free: 1-888-669-2872  
Tel: +1-714-528-6777  
Fax: +1-714-528-6778

### **Moxa Europe**

Tel: +49-89-3 70 03 99-0  
Fax: +49-89-3 70 03 99-99

### **Moxa India**

Tel: +91-80-4172-9088  
Fax: +91-80-4132-1045

### **Moxa China (Shanghai office)**

Toll-free: 800-820-5036  
Tel: +86-21-5258-9955  
Fax: +86-21-5258-5505

### **Moxa Asia-Pacific**

Tel: +886-2-8919-1230  
Fax: +886-2-8919-1231

# Table of Contents

|  |            |
|--|------------|
| <b>1. About This Manual</b>  | <b>1-1</b> |
| <b>2. Getting Started</b>  | <b>2-1</b> |
| Installing Your NPort Device Server  | 2-2        |
| Wiring Requirements  | 2-2        |
| Connecting the Power   | 2-2        |
| Grounding the NPort Device Server  | 2-2        |
| Connecting to the Network  | 2-3        |
| Connecting to a Serial Device  | 2-3        |
| LED Indicators   | 2-4        |
| Beeper Definition  | 2-7        |
| RS-485 Port's Adjustable Pull High/Low Resistor  | 2-7        |
| Configuration by Windows Utility   | 2-7        |
| Installing NPort Administrator   | 2-7        |
| Searching for Device Servers over a LAN  | 2-7        |
| Adjusting General Settings   | 2-9        |
| Configuring Device Port Operation Mode   | 2-10       |
| Configuring Serial Communication Parameters  | 2-11       |
| Mapping COM Port to Device (only required when operation mode is set to Real COM or RFC2217) | 2-13       |
| Configuration by Web Console   | 2-16       |
| Opening Your Browser   | 2-16       |
| Quick Setup (excluding the NPort 5100, 5200, and IA5000 Series)                              | 2-19       |
| Export/Import (Excluding the NPort 5100, 5200, and IA5000 Series)                            | 2-21       |
| Basic Settings   | 2-23       |
| Network Settings   | 2-26       |
| Serial Settings  | 2-32       |
| Operating Settings   | 2-35       |
| Accessible IP Settings   | 2-38       |
| Account Management   | 2-39       |
| Notification Message   | 2-39       |
| User Account   | 2-40       |
| Password and Login Policy  | 2-41       |
| Auto Warning Settings  | 2-42       |
| Monitor  | 2-47       |
| System Log Settings  | 2-49       |
| Change Password  | 2-50       |
| Load Factory Default   | 2-51       |
| Configuration by Telnet Console  | 2-52       |
| Configuration by Serial Console  | 2-55       |
| Serial Console (19200, n, 8, 1)  | 2-55       |
| Testing Your NPort   | 2-58       |
| <b>3. Cybersecurity Considerations</b>   | <b>3-1</b> |
| Updating Firmware  | 3-2        |
| Turn Off Unused Service and Ports  | 3-2        |
| Turn Off Moxa Service After Installation   | 3-2        |
| Turn On Services That Are Necessary  | 3-2        |
| Limited IP Access  | 3-2        |
| Account and Password   | 3-3        |
| System Log   | 3-3        |
| Testing the Security Environment   | 3-3        |
| <b>4. Choosing the Proper Operation Mode</b>   | <b>4-1</b> |
| Overview   | 4-2        |
| Real COM Mode  | 4-2        |
| RFC2217 Mode   | 4-3        |
| TCP Server Mode  | 4-3        |
| TCP Client Mode  | 4-3        |
| UDP Mode   | 4-4        |
| Pair Connection Mode   | 4-4        |
| Ethernet Modem Mode  | 4-4        |
| Reverse Telnet Mode  | 4-5        |
| PPP Mode   | 4-5        |
| Disabled Mode  | 4-5        |
| <b>5. Advanced Operation Mode Settings</b>   | <b>5-1</b> |
| Overview   | 5-2        |
| List of Parameters   | 5-2        |
| When to Make Adjustments   | 5-2        |
| Using Pair Connection Modes  | 5-3        |
| Parameter Summary  | 5-3        |

|   |             |
|---|-------------|
| Connection Management Parameters.....                                 | 5-3         |
| Data Packing Parameters.....  | 5-4         |
| Other Parameters .....  | 5-6         |
| Web Console.....  | 5-8         |
| <b>6. Configuring NPort Administrator.....</b>                        | <b>6-1</b>  |
| Overview.....   | 6-2         |
| Installing NPort Administrator .....                                  | 6-2         |
| Configuration .....   | 6-5         |
| Broadcast Search.....   | 6-5         |
| Unlock Password Protection .....                                      | 6-6         |
| Configuring NPort .....   | 6-8         |
| Upgrading the Firmware.....   | 6-9         |
| Export Configuration.....   | 6-11        |
| Import Configuration .....  | 6-12        |
| Monitor .....   | 6-14        |
| Port Monitor.....   | 6-18        |
| COM Mapping.....  | 6-19        |
| On-line COM Mapping .....   | 6-19        |
| Off-line COM Mapping.....   | 6-24        |
| COM Grouping.....   | 6-25        |
| Creating a COM Group .....  | 6-25        |
| Deleting a COM Group .....  | 6-27        |
| Adding a Port to a COM Group.....                                     | 6-28        |
| Removing a Port from a COM Group.....                                 | 6-29        |
| Modify Ports in a COM Group.....                                      | 6-30        |
| IP Address Report.....  | 6-33        |
| <b>7. NPort CE Driver Manager for Windows CE.....</b>                 | <b>7-1</b>  |
| Overview.....   | 7-2         |
| Installing NPort CE Driver Manager .....                              | 7-2         |
| Using NPort CE Driver Manager .....                                   | 7-2         |
| <b>8. Linux Real TTY Drivers.....</b>                                 | <b>8-1</b>  |
| Basic Procedures.....   | 8-2         |
| Hardware Setup.....   | 8-2         |
| Installing Linux Real TTY Driver Files .....                          | 8-2         |
| Mapping TTY Ports .....   | 8-3         |
| Mapping tty ports automatically.....                                  | 8-3         |
| Mapping tty ports manually .....                                      | 8-3         |
| Removing Mapped TTY Ports.....  | 8-3         |
| Removing Linux Driver Files.....                                      | 8-4         |
| <b>9. macOS TTY Drivers.....</b>                                      | <b>9-1</b>  |
| Basic Procedures.....   | 9-2         |
| Hardware Setup.....   | 9-2         |
| Installing macOS TTY Driver Files .....                               | 9-2         |
| Mapping macOS TTY port .....  | 9-5         |
| Uninstalling the Driver .....   | 9-8         |
| <b>10. IP Serial LIB.....</b>   | <b>10-1</b> |
| Overview.....   | 10-2        |
| What is IP Serial Library? .....                                      | 10-2        |
| Why Use IP Serial Library?.....                                       | 10-2        |
| How to Install IP Serial Library .....                                | 10-2        |
| IP Serial LIB Function Groups.....                                    | 10-3        |
| Example Program.....  | 10-3        |
| <b>11. Android API Instructions .....</b>                             | <b>11-1</b> |
| Overview.....   | 11-2        |
| How to Start MxNPortAPI.....  | 11-2        |
| MxNPortAPI Function Groups.....                                       | 11-3        |
| Example Program.....  | 11-4        |
| <b>12. Introduction to LCM Display.....</b>                           | <b>12-1</b> |
| Basic Operation .....   | 12-2        |
| Detailed Menu Options.....  | 12-2        |
| <b>A. Pinouts and Cable Wiring.....</b>                               | <b>A-1</b>  |
| Port Pinout Diagrams.....   | A-2         |
| Ethernet Port Pinouts.....  | A-2         |
| Serial Port Pinouts.....  | A-2         |
| Cable Wiring Diagrams.....  | A-5         |
| Ethernet Cables.....  | A-5         |
| Serial Cables.....  | A-6         |
| <b>B. Adjustable Pull High/low Resistors for the RS-485 Port.....</b> | <b>B-1</b>  |

- C. Well-Known Port Numbers..... C-1
- D. SNMP Agents with MIB II & RS-232/422/485 Like Groups.....D-1
- E. Auto IP Report Protocol..... E-1
- F. Compliance Notice..... F-1

## About This Manual

---

Read this user's manual to learn how to configure and use your Moxa NPort device server. The following products are covered by this manual:

| NPort Family         | Model Series   | Introduction  |
|----------------------|--|---|
| NPort 5000           | NPort 5110/5130/5150 Series<br>NPort 5210/5230/5232 Series<br>NPort 5410/5430/5450 Series<br>NPort 5610/5630/5650 Series<br>NPort 5610-8-DT/5650-8-DT Series<br>NPort 5610-8-DTL/5650-8-DTL Series | NPort 5000 series device servers are designed to make serial devices network-ready in an instant. The different form factors of the servers provide flexible options for users to connect legacy devices to an IP-based Ethernet LAN.   |
| NPort 5000A          | NPort 5110A/5130A/5150A Series<br>NPort 5210A/ 5230A/5250A Series<br>NPort 5150AI-M12/5250AI-M12/5450AI-M12 Series<br>NPort P5150A Series  | The NPort 5000A device servers are designed to make serial devices network-ready in an instant and give your PC software direct access to serial devices from anywhere on the network. The NPort 5000A device servers are ultra-lean, rugged, and user-friendly, making simple and reliable serial-to-Ethernet solutions possible.  |
| NPort IA5000/IA5000A | NPort IA5150/IA5250 Series<br>NPort IA5150A/IA5250A/IA5450A Series   | NPort IA device servers are an ideal choice for establishing network access to RS-232/422/485 serial devices, including PLCs, sensors, meters, motors, drives, barcode readers, and operator displays. All models are housed in a compact, rugged, DIN-rail mountable housing, and come with redundant power inputs, cascading Ethernet ports, and industrial-grade certifications. |

## Getting Started

---

In this chapter, we explain how to install a Moxa NPort device server for the first time. There are four ways to access the Moxa NPort's configuration settings: Windows utility, web console, serial console, or Telnet console.

NPort products support the following configuration options:

- Windows Utilities: NPort Administrator; Device Search Utility and Windows Driver Manager
- Web Console
- Quick Setup Wizard\*
- Serial Console\*\*
- Telnet Console

\* Does not support 5100/5200/IA5000 series

\*\* Only available for NPort Series that has RS-232 interface.

The following topics are covered in this chapter:

- Installing Your NPort Device Server**
- Configuration by Windows Utility**
- Configuration by Web Console**
- Account Management**
- System Log Settings**
- Configuration by Telnet Console**
- Configuration by Serial Console**
- Testing Your NPort**

# Installing Your NPort Device Server

This section describes how to connect an NPort device server to your serial devices for the first time. We cover Wiring Requirements, Connecting the Power, Grounding the NPort Device Server, Connecting to the Network, Connecting to a Serial Device, and LED Indicators.

## Wiring Requirements



### ATTENTION

#### Safety First!

Be sure to disconnect the power cord before installing and/or wiring your NPort Device Server.

#### Wiring Caution!

Calculate the maximum possible current allowed in each power wire and common wire. Observe all electrical codes dictating the maximum current allowed for each wire size. If the current goes above the allowed maximum, the wiring could overheat, causing serious damage to your equipment.

#### Temperature Caution!

Please be cautious when handling the NPort device server. When plugged in, the NPort's internal components generate heat, and consequently the casing may feel hot to the touch. When installed with other components, make sure that there is at least a 2-cm clearance on all sides of the NPort device server in order to allow proper heat dissipation.

You should observe the following:

- Use separate paths to route wiring for power and devices. If the power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.  
**NOTE:** Do not run signal or communication wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wires that shares similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- Where necessary, it is strongly advised that you label wires to all devices in the system.

## Connecting the Power

Connect the power line with the NPort's power input. If the power is properly supplied, the "Ready" LED will show a solid red color until the system is ready, at which time the "Ready" LED will change to a green color.

## Grounding the NPort Device Server

Note: This section only applies if your NPort's power input is on a terminal block.





Grounding and wire routing help limit the effects of noise caused by electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface before connecting the devices.



### WARNING

NPorts with a power terminal block are intended to be mounted to a well-grounded mounting surface such as a metal panel.

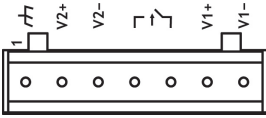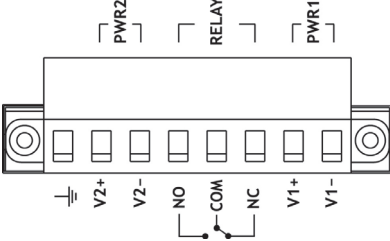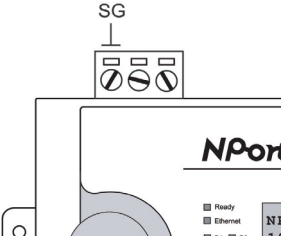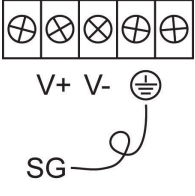

| Type of Power Terminal Block   | Shielded Ground (SG)   | Applicable Products                                  |
|--|--|--|
|   | <p>The Shielded Ground (sometimes called Protected Ground) contact is the left most contact of the 7-pin power terminal block connector when viewed from the angle shown here. Connect the SG wire to an appropriate grounded metal surface.</p>     | <p>NPort IA5000 Series</p>                           |
|   | <p>The Shielded Ground (sometimes called Protected Ground) contact is the left most contact of the 8-contact power terminal block connector when viewed from the angle shown here. Connect the SG wire to an appropriate grounded metal surface.</p> | <p>NPort IA5000A Series</p>                          |
|   | <p>The Shielded Ground (sometimes called Protected Ground) contact is the left most contact of the 3-pin power terminal block connector when viewed from the angle shown here. Connect the SG wire to an appropriate grounded metal surface.</p>     | <p>NPort 5200/5400 Series<br/>NPort 5200A Series</p> |
|  | <p>The Shielded Ground (sometimes called Protected Ground) contact is the second contact from the right of the 5-pin power terminal block connector located on the rear panel of NPort 5600 VDC models. Connect the SG wire to the earth ground.</p> | <p>NPort 5600 Series</p>                             |

## Connecting to the Network

Connect one end of the Ethernet cable to the NPort’s 10/100M Ethernet port and the other end of the cable to the Ethernet network. The NPort device server will indicate a valid connection to the Ethernet in the following ways:

- The Ethernet LED maintains a solid green color when connected to a 100 Mbps Ethernet network.
- The Ethernet LED maintains a solid orange color when connected to a 10 Mbps Ethernet network.
- The Ethernet LED will flash when Ethernet packets are being transmitted or received.



### ATTENTION

NPort IA5000/IA5000A/5600-8-DT series NPorts have two Ethernet ports that can be used to create an open chain of NPort IA5000/IA5000A/5600-8-DT device servers. Be careful not to connect the Ethernet ports of the two device servers at the ends of the chain.

In other words, NPort IA5000/IA5000A/5600-8-DT series NPorts do NOT support closed chains.

## Connecting to a Serial Device

Connect a serial data cable between the NPort and the serial device. Serial data cables must be purchased separately. They are not provided with the NPort.

## LED Indicators

### NPort 5100/5100A/P5150A Series

| LED Name | LED Color  | LED Function  |
|----------|--|---|
| Ready    | Red  | Steady on: Power is on, and the NPort is booting up.                                      |
|          |  | Blinking: Indicates an IP conflict, or the DHCP or BOOTP server did not respond properly. |
|          | Green  | Steady on: Power is on, and the NPort is functioning normally.                            |
|          |  | Blinking: The device server has been located by NPort Administrator's Location function.  |
| Off      | Power is off, or a power error condition exists. |   |
| Link     | Orange   | The device is connected to a 10 Mbps Ethernet connection.                                 |
|          | Green  | The device is connected to a 100 Mbps Ethernet connection.                                |
|          | Off  | The Ethernet cable is disconnected, or has a short.                                       |
| Tx/Rx    | Orange   | The serial port is receiving data.  |
|          | Green  | The serial port is transmitting data.   |
|          | Off  | Data is NOT being transmitted or received through the serial port.                        |

### NPort 5200/5200A/5400 Series

| LED Name            | LED Color  | LED Function  |
|---------------------|--|---|
| Ready               | Red  | Steady on: Power is on, and the NPort is booting up.                                      |
|                     |  | Blinking: Indicates an IP conflict, or the DHCP or BOOTP server did not respond properly. |
|                     | Green  | Steady on: Power is on, and the NPort is functioning normally.                            |
|                     |  | Blinking: The device server has been located by NPort Administrator's Location function.  |
| Off                 | Power is off, or a power error condition exists. |   |
| Link<br>(Ethernet)  | Orange   | The device is connected to a 10 Mbps Ethernet connection.                                 |
|                     | Green  | The device is connected to a 100 Mbps Ethernet connection.                                |
|                     | Off  | The Ethernet cable is disconnected, or has a short.                                       |
| P1, P2,<br>(P3, P4) | Orange   | The serial port is receiving data.  |
|                     | Green  | The serial port is transmitting data.   |
|                     | Off  | Data is NOT being transmitted or received through the serial port.                        |

## NPort 5600 Series (Rackmount)

| LED Name            | LED Color  | LED Function  |
|---------------------|--|---|
| Ready               | Red  | Steady on: Power is on and the NPort is booting up.                                       |
|                     |  | Blinking: Indicates an IP conflict, or the DHCP or BOOTP server did not respond properly. |
|                     | Green  | Steady on: Power is on, and the NPort is functioning normally                             |
|                     |  | Blinking: The device server has been located by NPort Administrator's Location function.  |
| Off                 | Power is off, or a power error condition exists. |   |
| Tx/Rx,<br>P1 to P16 | Orange   | The serial port is receiving data.  |
|                     | Green  | The serial port is transmitting data.   |
|                     | Off  | Data is NOT being transmitted or received through the serial port.                        |
| LAN                 | Green  | The Ethernet port is connected, but data is NOT being transmitted.                        |
|                     | Blinking   | The Ethernet port is connected, and data is being transmitted.                            |
|                     | Off  | The Ethernet port is disconnected.  |
| PWR                 | Green  | Power cable is connected and provides electricity properly.                               |
|                     | Off  | Power cable is disconnected.  |

## NPort 5600-8-DT/DTL Series

| LED Name             | LED Color  | LED Function   |
|----------------------|------------|--|
| PWR                  | Red        | Power is on.   |
|                      | Off        | Power is off.  |
| Ready                | Green      | Steady on: The NPort is operational.   |
|                      |            | Blinking: The NPort is responding to NPort Administrator's Location function, or the NPort is being reset to factory defaults. |
|                      | Off        | Power is off, or power error condition exists.   |
| Fault                | Red        | Indicates an IP conflict, or the DHCP or BOOTP server did not respond properly.  |
|                      | Off        | No fault condition detected.   |
|                      | Off        | Blinking: Network is connected, data is being transmitted.   |
| ETH 1, ETH2          | Green      | Steady on Network is connected, no data is being transmitted.  |
|                      | Off        | Blinking Network is connected, data is being transmitted.  |
| In Use<br>(P1 to P8) | Green      | Serial port has been opened by server side software.   |
|                      | Off        | Serial port is not currently opened by host side software.   |
| Tx/Rx<br>(P1 to P8)  | Green (Tx) | Serial device is transmitting data.  |
|                      | Orange(Rx) | Serial device is receiving data.   |
|                      | Off        | No data is flowing to or from the serial port.   |

### NPort 5000AI-M12 Series

| LED Name       | LED Color  | LED Function  |
|----------------|--|---|
| PWR            | Green  | Power is being supplied to the power input.   |
| Ready          | Red  | Steady on: Power is on, and the NPort is booting up.                                      |
|                |  | Blinking: Indicates an IP conflict, or the DHCP or BOOTP server did not respond properly. |
|                | Green  | Steady on: Power is on, and the NPort is functioning normally                             |
|                |  | Blinking: The device server has been located by NPort Administrator's Location function.  |
| Off            | Power is off, or a power error condition exists. |   |
| 10M, 100M      | Orange   | The device is connected to a 10 Mbps Ethernet connection.                                 |
|                | Green  | The device is connected to a 100 Mbps Ethernet connection.                                |
|                | Off  | The Ethernet cable is disconnected, or has a short.                                       |
| P1, P2, P3, P4 | Orange   | The serial port is receiving data.  |
|                | Green  | The serial port is transmitting data.   |
|                | Off  | Data is NOT being transmitted or received through the serial port.                        |

### NPort IA5000/IA5000A Series

| LED Name         | LED Color  | LED Function   |
|------------------|--|--|
| PWR1, PWR2       | Red  | Power is being supplied to power input PWR1, PWR2.   |
| Ready            | Red  | Steady on: Power is on, and the NPort IA is booting up.  |
|                  |  | Blinking: Indicates an IP conflict, the DHCP or BOOTP server did not respond properly, or a relay output was triggered. When the above two conditions occur at the same time, check the relay output first. If after resolving the relay output and the Ready LED is still blinking, then there is an IP conflict, or the DHCP or BOOTP server did not respond properly. |
|                  | Green  | Steady on: Power is on and the NPort IA is functioning normally.   |
|                  |  | Blinking: The device server has been located by NPort Administrator's Location function.   |
| Off              | Power is off, or a power error condition exists. |  |
| E1, E2           | Orange   | The device is connected to a 10 Mbps Ethernet connection.  |
|                  | Green  | The device is connected to a 100 Mbps Ethernet connection.   |
|                  | Off  | The Ethernet cable is disconnected, or has a short.  |
| P1, P2, (P3, P4) | Orange   | The serial port is receiving data.   |
|                  | Green  | The serial port is transmitting data.  |
|                  | Off  | Data is NOT being transmitted or received through the serial port.   |
| FX*              | Orange   | Steady on: The fiber port is connected, but data is NOT being transmitted.   |
|                  |  | Blinking: The fiber port is connected, and data is being transmitted.  |

\*Only applies to NPort IA5000 fiber models.

## Beeper Definition

| Beeper Timing | Frequency (Length/Intervals/Times)             | Definition  |
|---------------|--|---|
| Startup       | 100 ms / 100 ms / 2                            | When the NPort is ready to run                      |
| Locating      | 100 ms / 900 ms / when user stops the function | When the NPort is located by an utility such as DSU |

## RS-485 Port's Adjustable Pull High/Low Resistor

For some applications, you may need to use termination resistors to prevent the reflection of serial signals. When using termination resistors, it is important to set the pull high/low resistors correctly so that the electrical signal is not corrupted. Refer to **Appendix B** for detailed instructions on how to set the pull high/low resistor values for different models.

## Configuration by Windows Utility



### ATTENTION

Before installing and the configuring the NPort Administration suite, make sure your user privilege is set as system administrator.

NPort Administration Suite is an integrated software suite that bundles NPort Administrator and the IP Serial Library, providing everything you need to manage, monitor, and modify your NPort from a remote location.

With NPort Administrator, you can easily install and configure your NPort device server over the network. Five different sets of functions are provided to ease the installation process: Configuration, Monitor, Porting Monitor, COM Mapping, and IP Address Report.

In this section, we will cover only the "configuration of general settings" using NPort Administrator. For more detailed information on how to use this suite of useful utilities, refer to **Chapter 6**.


You may also use the web console, serial console, or Telnet to configure the device server. Refer to the section **Configuration by Web Console**, **Configuration by Serial Console**, and **Configuration by Telnet Console** for additional information on using these consoles.

## Installing NPort Administrator


Download and run the setup program from Moxa's support website (<https://www.moxa.com/support/>). You may find it in the **Resource** section under your product page. Run NPort Administrator when the installation has been completed.

## Searching for Device Servers over a LAN

The **Broadcast Search** function is used to locate all NPort 5400 device servers that are connected to the same LAN as your computer. Since the **Broadcast Search** function searches by MAC address and not IP address, all NPorts connected to the LAN will be located, regardless of whether or not they are part of the same subnet as the host.

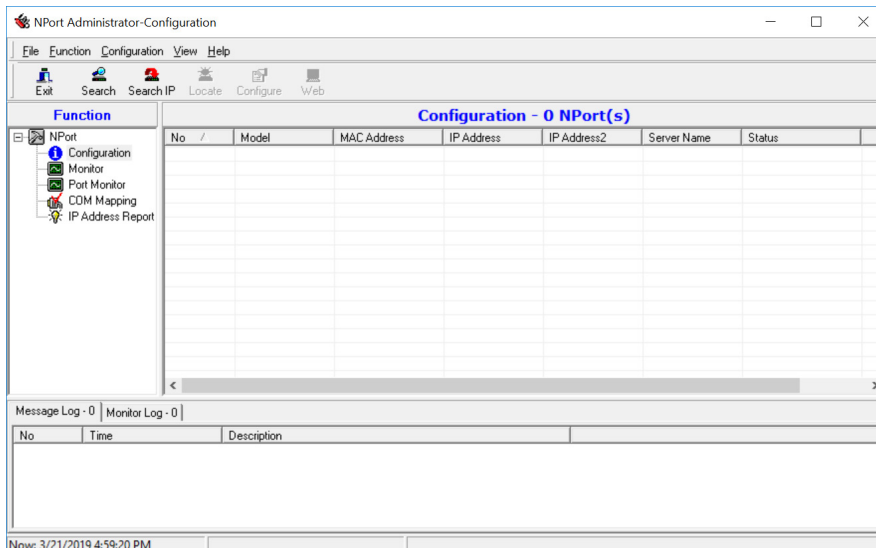

In NPort Administrator, click **Search** to search your LAN for NPort device servers. When your unit appears in the search results, you may click **Stop** to end the search. You may also wait a few more moments for the search to complete.

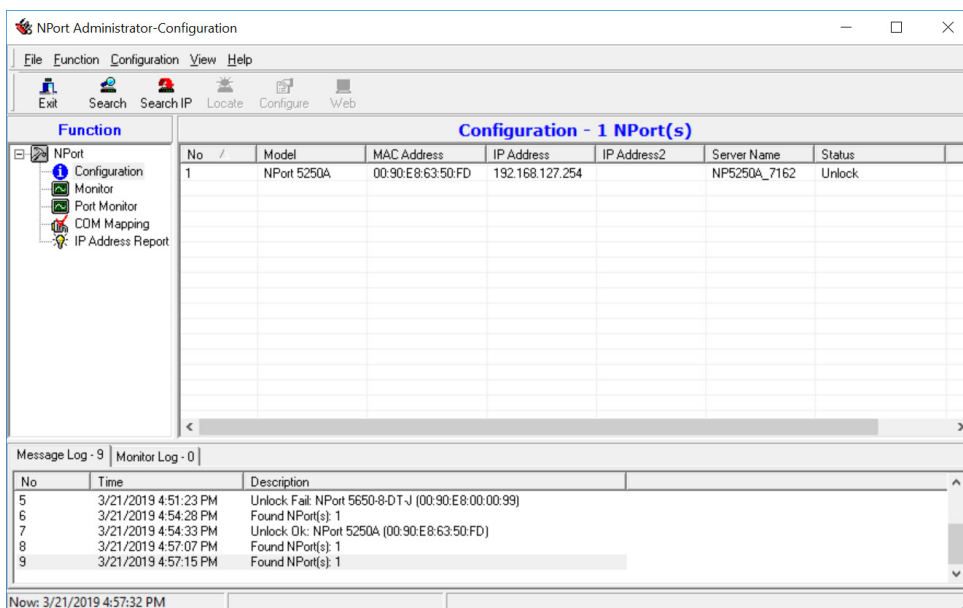

The **Configuration** screen will list the NPort device servers that were found on the LAN. If your unit cannot be found, you may have a network problem. Check all cables and verify that your PC and device server are on the same LAN. If you still have problems, try connecting the device server directly to your PC.

Before configuring the NPort, you will need to unlock the NPort first. Right-click the unit in the Configuration screen and select **Unlock** in the pop-up menu. Before configuring the NPort, you will need to unlock it first. Right-click the unit in the Configuration screen and select **Unlock** in the pop-up menu.

The default login is:

Username: **admin**

Password: **moxa**

For the NPort 5100, 5200, and IA5000 Series, only the password is required to log in.

## Adjusting General Settings

Right-click your unit in the Configuration screen and select **Configure** in the pop-up menu. If your device server is password protected (the default username is **account** and the default password is **moxa**), first select **Unlock** in the pop-up menu, and then click the **Network** tab in the configuration window. Select the **Modify** checkbox for items you would like to modify. The device server must be assigned a unique IP address that is valid for your network. Both fixed and dynamic IP addresses are supported. Consult with your network administrator if you are not sure how to set these parameters.

Also, For the NPort 5100, 5200, and IA5000 Series, only the password is required to log in.

When you are ready to restart the device server with the new settings, click **OK**.

The screenshot shows the 'Configuration' window for an NPort 5250A. On the left, there is an 'Information' panel with fields for Model Name (NPort 5250A), MAC Address (00:90:E8:63:50:FD), Serial Number (7162), Firmware Version (Ver 1.5), and System Uptime (0 days, 00h:01m:39s). The main area has several tabs: Account Management, Configuration Pre-shared Key, System Log Settings, Auto Warning, Basic, Network, IP Address Report, Serial, Operating Mode, and Accessible IP's. The 'Network Setting' tab is selected, showing a 'Modify' checkbox (checked) and fields for IP Address (192.168.127.254), Netmask (255.255.255.0), IP Configuration (Static), and Gateway. Below this are sections for DNS Server 1 and 2, and a section for 'Enable LLDP' (checked) and 'Message Transmit Interval' (30 seconds). At the bottom, there is a note: 'Click the "Modify" check box to modify configuration' and 'OK' and 'Cancel' buttons.

## Static IP Addresses

For most applications, you will assign a fixed IP address to the device server. To assign a static (fixed) IP address, the **IP Configuration** parameter must be set to **Static**, which is the default setting. You may then modify the **IP Address** and **Netmask** parameters.

## Dynamic IP Addresses

For certain network environments, your device server's IP address will be assigned by a DHCP or BOOTP server. In this case, instead of assigning the device server's IP address, you will need to configure the device server to receive its IP address from the appropriate server. Set the **IP Configuration** parameter to **DHCP**, **BOOTP**, or **DHCP/BOOTP**, depending on your network environment. The **IP Address** and **Netmask** parameters will be unavailable for editing since these parameters will be assigned automatically.

If you are not sure whether you need to configure your device server for a dynamic or static IP address, consult the administrator who set up the LAN.

## Verifying Network Settings


If your device server has been configured correctly, you should be able to ping its IP address from your PC. First, make sure that your PC and device server are on the same subnet, and then ping the device server's address. If no response is received, check your cables and network settings.

## Configuring Device Port Operation Mode


This section covers configuration of a device port’s operation mode. The operation mode determines how the device port will interact with the network. Which operation mode you select will depend on your specific application. Refer to the chart at the end of this section for guidance on selecting the most appropriate operation mode. For additional information on each operation mode, refer to **Chapter 4** and **Chapter 5**.

### Adjusting Operation Mode Settings

The operation mode parameters for each device port can be configured through NPort Administrator. Open your device server’s configuration window using the same method you used to adjust the network parameters. On the **Operating Mode** screen, select the **Modify** check box and then select the device port that you wish to configure. Click **Settings** to configure the selected device port.

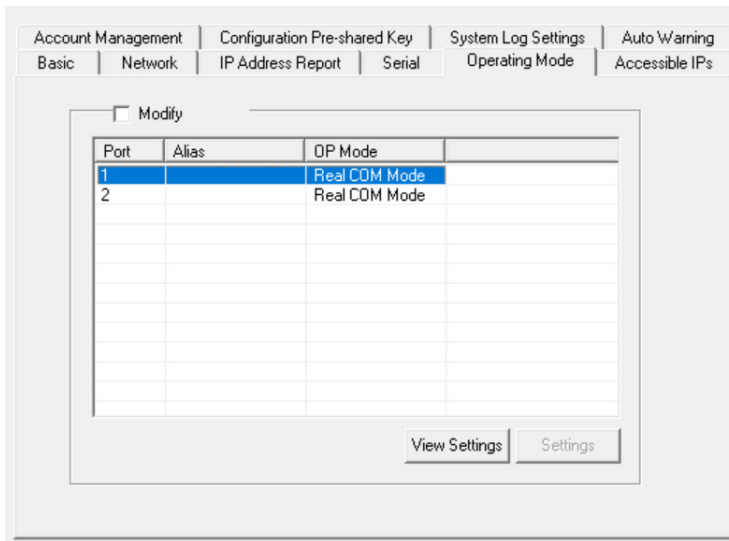


Set the operating mode and associated parameters as needed. Refer to **Chapter 4** and **Chapter 5** for additional information on operating modes and advanced settings. When you are ready to restart the device server with the new settings, click **OK**.

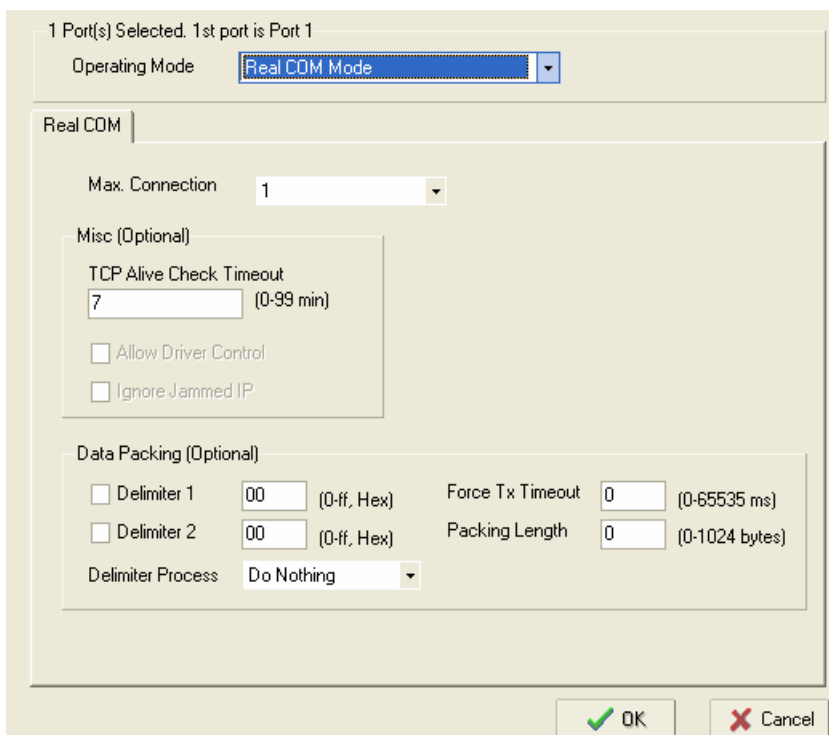



## Operation Mode Selection Chart

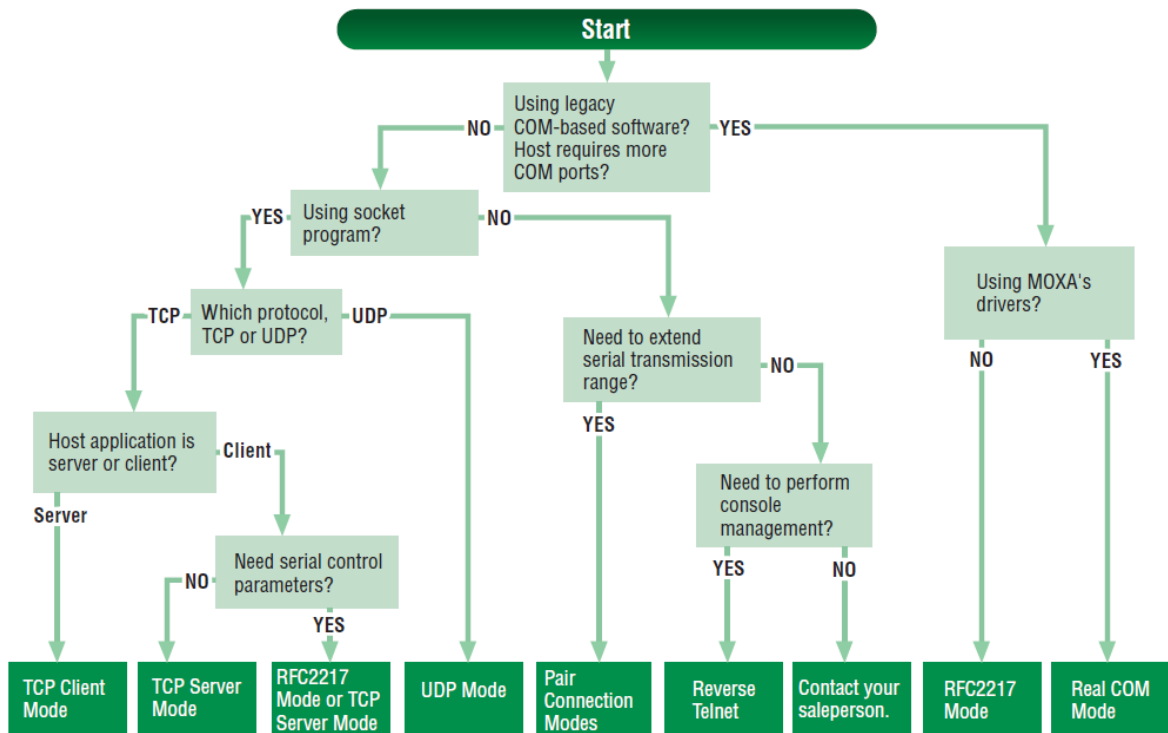

## Configuring Serial Communication Parameters

This section covers the configuration of each device port’s serial communication parameters: baudrate, stop bit, etc.

### Serial Parameter Review


The following parameters need to be set correctly on the device port to ensure proper communication with your device. Refer to your device’s documentation for the appropriate settings.

| Parameter | Setting   | Factory Default | Description  | Necessity |
|-----------|---|-----------------|--|-----------|
| Baudrate  | Support standard baudrates (bps):<br>50/ 75/ 110/ 134/ 150/<br>300/ 600/ 1200 1800/<br>2400/ 4800/ 7200/<br>9600/ 19200/ 38400/<br>57600/ 115200/<br>230.4k/ 460.8k/<br>921.6k<br><br>* The NPort 5110/5210/5230/5232I Series, and IA 5000 Series are as low as 110 bps, and up to 230.4 kbps | 115200 bps      | The data transmission rate to and from the attached serial device. | Required  |
| Data bits | 5, 6, 7, 8  | 8               | The size of each data character.                                   | Required  |
| Stop bits | 1, 1.5, 2   | 1               | The size of the stop character.                                    | Required  |

| Parameter    | Setting  | Factory Default | Description  | Necessity |
|--------------|--|-----------------|--|-----------|
| Parity       | None, Even, Odd, Space, Mark                       | None            | The parity that will be used. Even and Odd parity provide rudimentary error-checking; Space and Mark parity are rarely used.                     | Required  |
| Flow control | None, RTS/CTS, DTR/DSR, Xon/Xoff                   | RTS/CTS         | The method used to suspend and resume data transmission to ensure that data is not lost. RTS/CTS (hardware) flow control is recommended.         | Required  |
| FIFO         | Enable, Disable                                    | Enable          | Controls whether the device port's built-in 128-byte FIFO buffer is used. When enabled, the FIFO helps reduce data loss regardless of direction. | Required  |
| Interface*   | RS-232<br>RS-422<br>2-wire RS-485<br>4-wire RS-485 | RS-232          | The serial interface that will be used. The options that are available depend on the specific model of device server.                            | Required  |


\*Supported interfaces vary by model; refer to your NPort's datasheet for a list of supported serial interfaces.

## Adjusting Serial Parameters

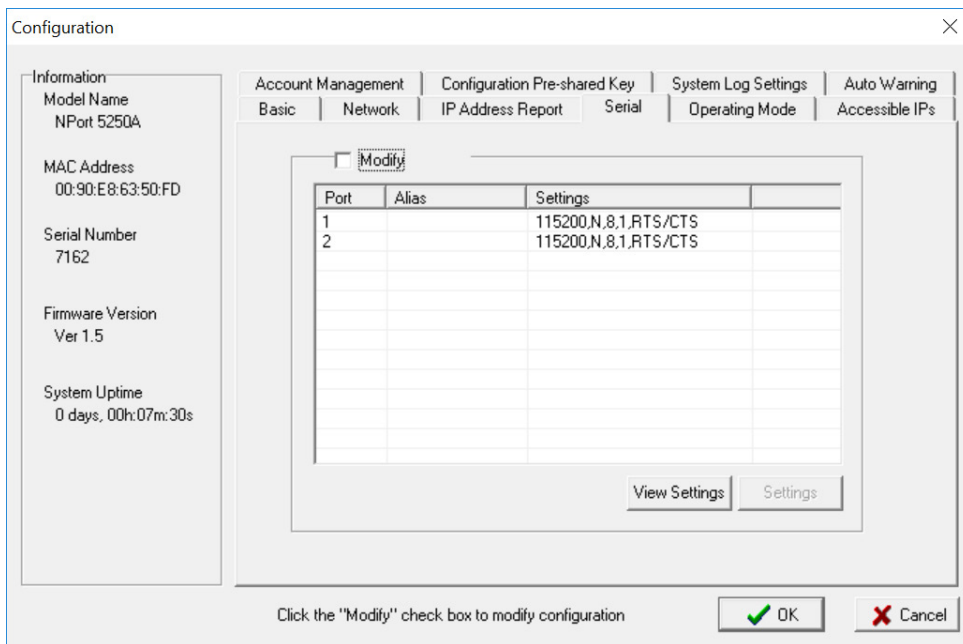

The serial communication parameters for each device port can be configured through NPort Administrator. Open your device server's configuration window, using the same method you used to configure network parameters. On the **Serial** screen, select the **Modify** check box and then select the device port that you wish to configure. Click **Settings** to configure the selected device port.

Modify the parameters as needed. When you are ready to restart the device server with the new settings, click **OK**.

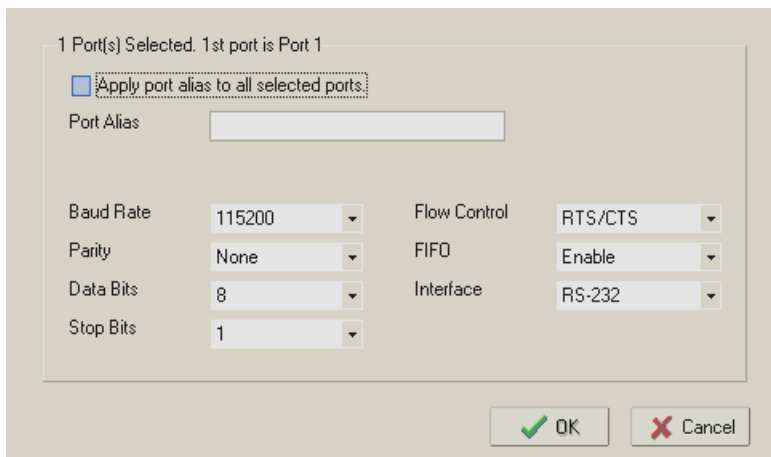


## Mapping COM Port to Device (only required when operation mode is set to Real COM or RFC2217)

This section covers how to map the COM ports on a Windows PC to NPort device ports. The mapping will allow Windows software to access serial devices over the network as if they were local COM devices, providing instant device networking without software migration. COM mapping is supported in Real COM and RFC2217 modes only.


The following instructions are for device ports operating in Real COM mode. For device ports operating in RFC2217 mode, follow the instructions for your particular driver. Real COM mode also supports TTY port mapping on Linux and UNIX systems.

### Specifying the Target Device Server

In NPort Administrator, click **COM Mapping** in the **Function** panel to open the COM Mapping window. Right-click on an empty line in the COM Mapping window. Select **Add Target** in the pop-up menu to assign your device server as the mapping target.

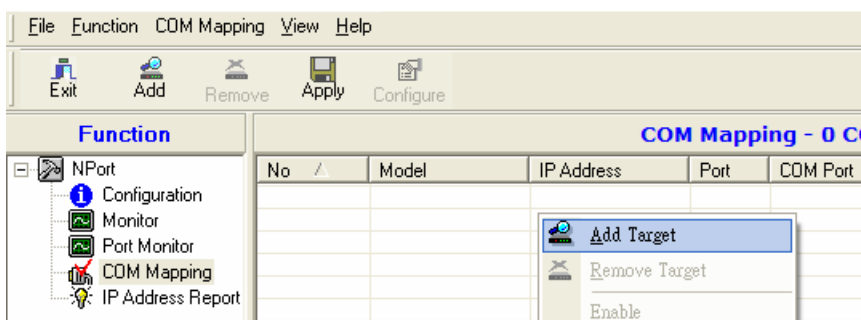


A list of NPort device servers that have been found by NPort Administrator will appear. Select your device server and click **Finish**.

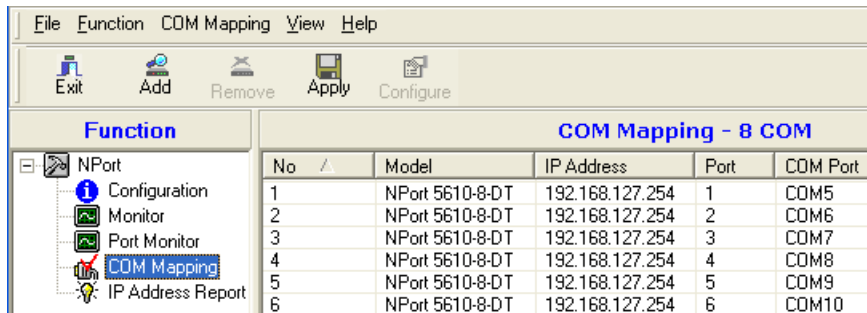


## Assigning COM Port Number to Device Port


The **COM Mapping** screen shows a list of available device ports on the network. Right-click the target device port and select **COM Settings** in the pop-up menu.

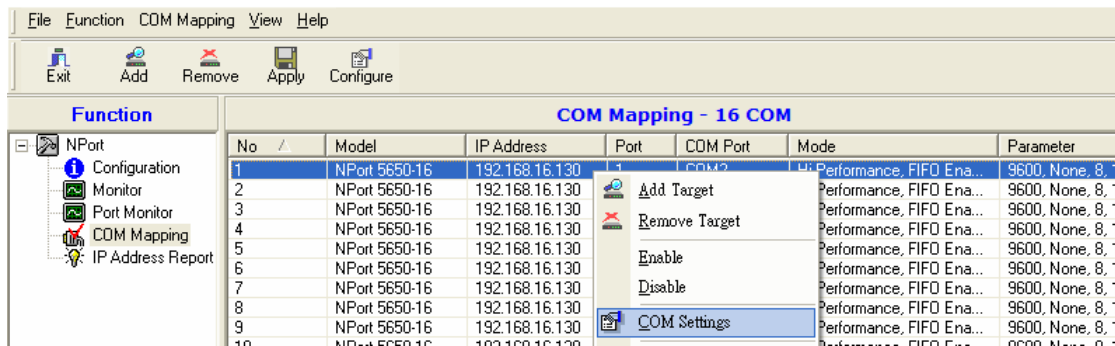

On the **Basic Settings** screen, select the COM port number that will be mapped to the device port. You can map multiple COM ports at the same time by selecting the **Auto Enumerating** check box to number the COM ports automatically.

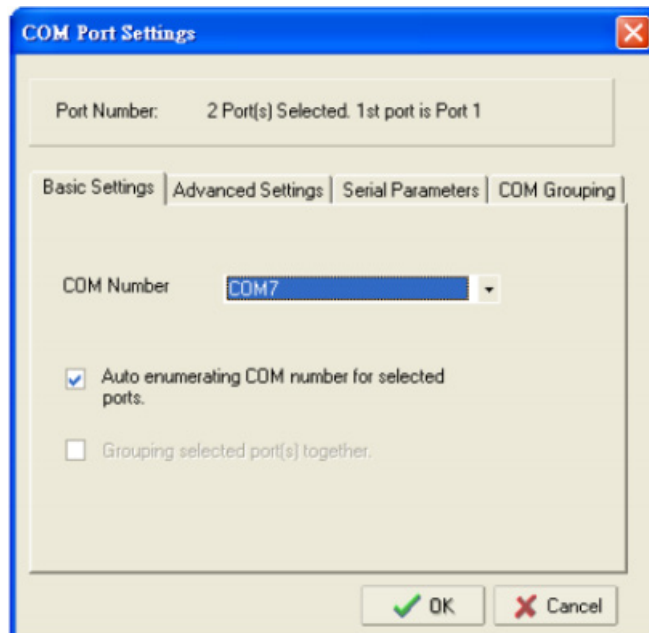

On the **Serial Parameters** screen, adjust the settings to match your device. These settings, which are only used for serial printers, must also match the settings on the device port. Click **OK** when you are satisfied with your changes.

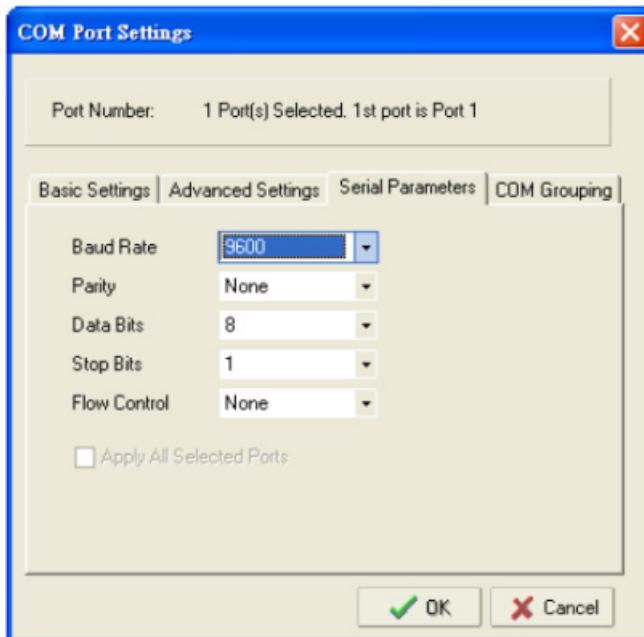

## Advanced Settings

(See **Chapter 6** for detailed information about NPort Administrator's Advanced Settings.)

**Tx Mode:** In Hi-Performance mode, the driver immediately issues a "Tx Empty" response to the program after sending data to the NPort. In Classical mode, the driver sends the "Tx Empty" response after confirmation is received from the NPort. Classical mode is recommended if you want to ensure that all data is sent out before further processing.

**FIFO:** Tells the driver whether or not to use FIFO transmission.

**Network Timeout:** Specifies when an open, close, or serial parameter change operation will time out.


**Fast Flush:** When enabled, the driver flushes only the local buffer on the host for a Win32 PurgeComm() function call. When disabled, both the local and remote buffers are flushed. If your application uses PurgeComm() and its performance seems sluggish, try enabling Fast Flush.

**Always Accept Open Requests:** Even if the driver cannot establish a connection with the NPort, the user's software will still be able to open the mapped COM port, the same as with an onboard COM port.

**Ignore TX Purge:** The application can use Win32 API PurgeComm to clear the output buffer and terminate outstanding overlapped write operations. Select **Ignore TX Purge** if you do not want the output buffer to be purged.

## Apply Change

Right-click **COM Mapping** in the **Function** panel. Select **Apply Change** in the pop-up menu to save the current COM mapping settings. Your application will now be able to access the target serial device using the COM port.

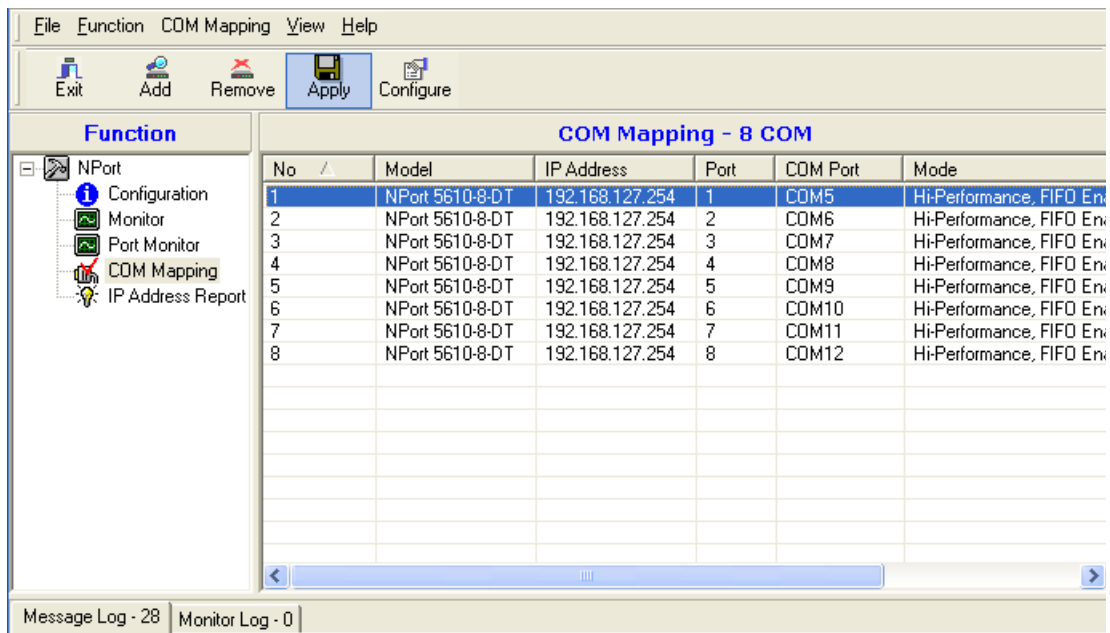


## Configuration by Web Console

The Web Console is the most user-friendly way to configure NPort products. In this section, we cover a device server's general settings.

### Opening Your Browser


1. Open your browser with the cookie functionality enabled. (To enable your browser for cookies, right-click on your desktop's Internet Explorer icon, select **Properties**, click on the **Security** tab, and then select the three Enable options as shown in the figure below.)

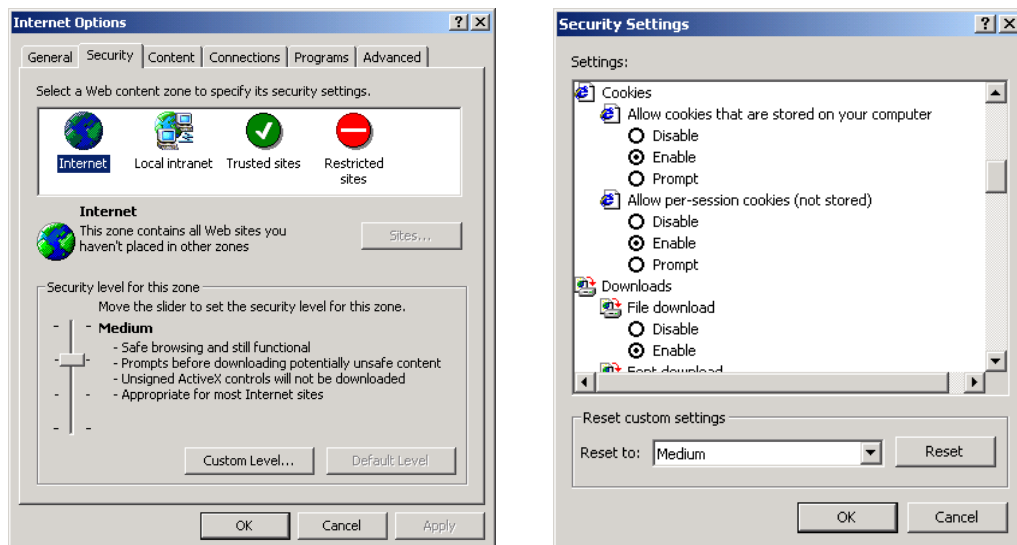


2. Type 192.168.127.254 in the **Address** input box (use the correct IP address if different from the default), and then press **Enter**.

- For the overall NPort 5000 Series, you will be prompted to enter the username and password to access the NPort web console. Before configuring the NPort, you will need to unlock it first. Right-click the unit in the Configuration screen and select **Unlock** in the pop-up menu. The default username and password are **admin** and **moxa**, respectively. For the NPort 5100, 5200, and IA5000 Series, only the password is required to log in.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

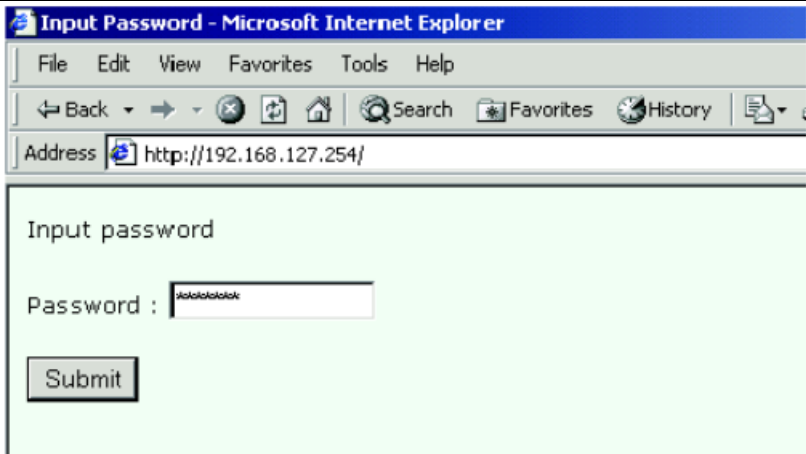

**Web Interface for the Overall NPort 5000 Series**

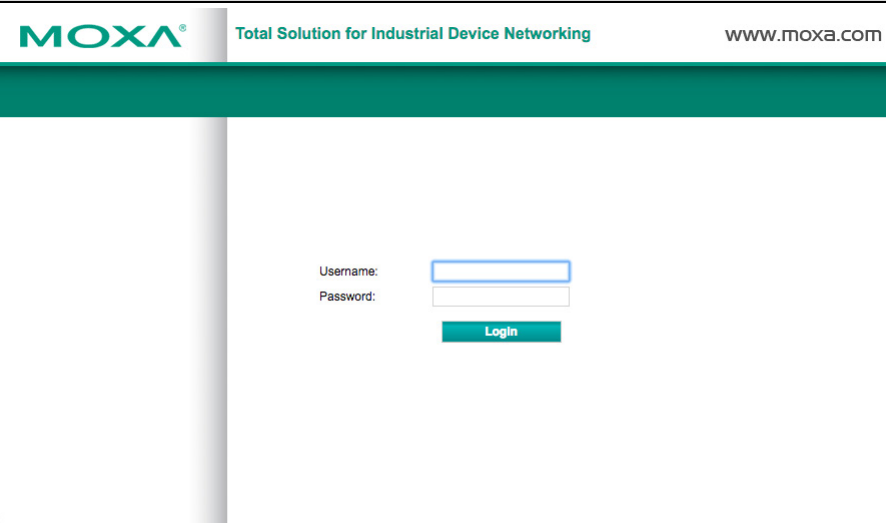




**ATTENTION**

If you use other web browsers, remember to enable the functions to “allow cookies that are stored on your computer” or “allow per-session cookies.” NPort device servers use cookies only for “password” transmissions.

The NPort homepage will open. On this page, you can see a brief description of the Web Console's function groups.

### Web Interface for the NPort 5100, 5200, and IA5000 Series Only

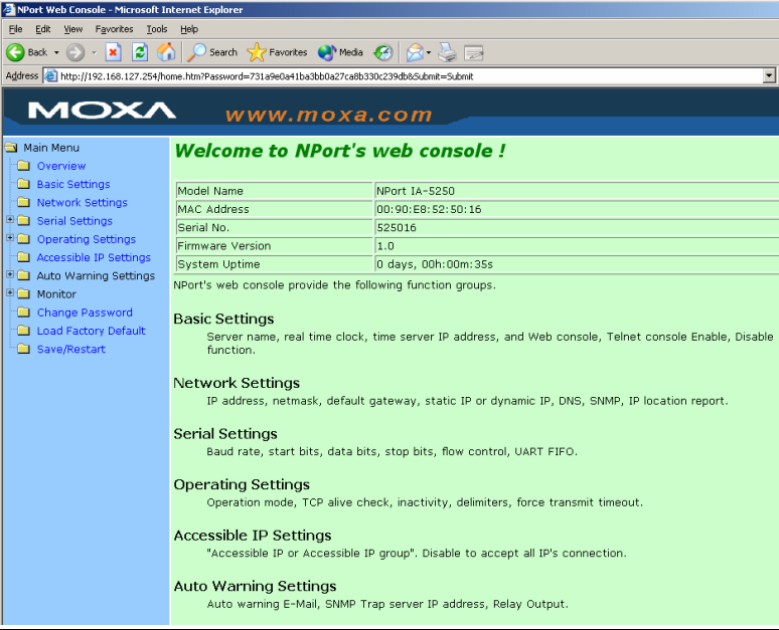

**Welcome to NPort's web console !**

|                  |                     |
|------------------|---------------------|
| Model Name       | NPort IA-5250       |
| MAC Address      | 00:90:E8:52:50:16   |
| Serial No.       | 525016              |
| Firmware Version | 1.0                 |
| System Uptime    | 0 days, 00h:00m:35s |

NPort's web console provide the following function groups.

**Basic Settings**  
Server name, real time clock, time server IP address, and Web console, Telnet console Enable, Disable function.

**Network Settings**  
IP address, netmask, default gateway, static IP or dynamic IP, DNS, SNMP, IP location report.

**Serial Settings**  
Baud rate, start bits, data bits, stop bits, flow control, UART FIFO.


**Operating Settings**  
Operation mode, TCP alive check, inactivity, delimiters, force transmit timeout.

**Accessible IP Settings**  
\*Accessible IP or Accessible IP group\*. Disable to accept all IP's connection.

**Auto Warning Settings**  
Auto warning E-Mail, SNMP Trap server IP address, Relay Output.

---

### Web Interface for the Overall NPort 5000 Series

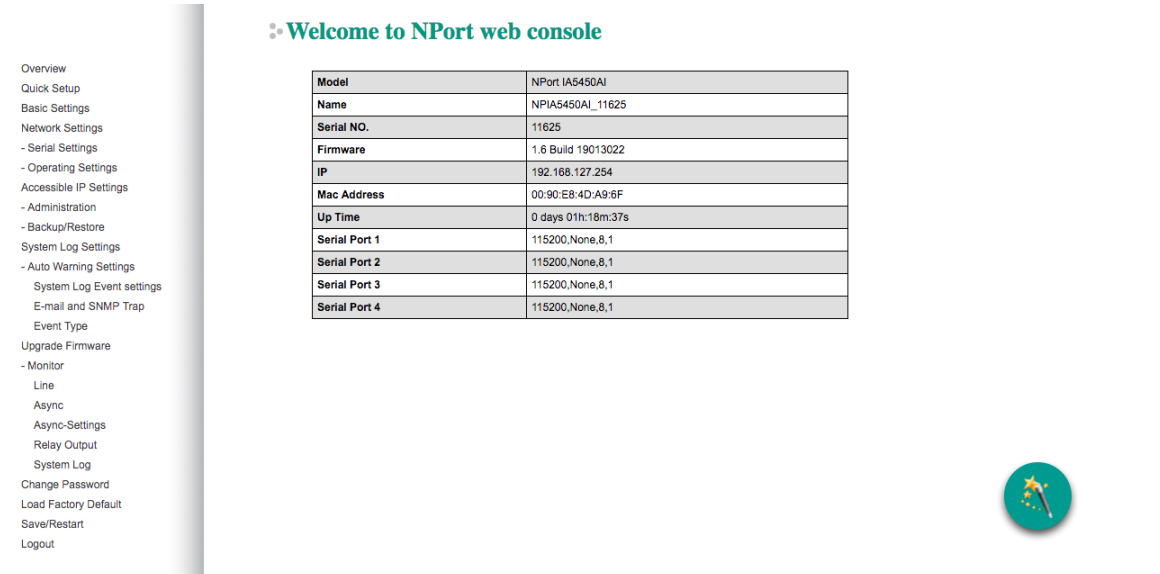

**Welcome to NPort web console**

|               |                    |
|---------------|--------------------|
| Model         | NPort IA5450AI     |
| Name          | NPIA5450AI_11625   |
| Serial NO.    | 11625              |
| Firmware      | 1.6 Build 19013022 |
| IP            | 192.168.127.254    |
| Mac Address   | 00:90:E8:4D:A9:6F  |
| Up Time       | 0 days 01h:18m:37s |
| Serial Port 1 | 115200,None,8,1    |
| Serial Port 2 | 115200,None,8,1    |
| Serial Port 3 | 115200,None,8,1    |
| Serial Port 4 | 115200,None,8,1    |



**ATTENTION**

If you can't remember the password, the **ONLY** way to start configuring the NPort is to load factory defaults by using the **Reset** button located near the NPort's Ethernet port.

Remember to use NPort Administrator (for NPort 5000 and NPort IA5000 Series) to export the configuration file when you have finished the configuration. After using the **Reset** button to load factory defaults, your configuration can be easily reloaded into NPort by using the NPort Administrator Import function. Refer to **Chapter 5** for details about using the Export and Import functions



## Quick Setup (excluding the NPort 5100, 5200, and IA5000 Series)

**Quick Setup** streamlines configuration of your NPort into three basic and quick steps that cover the most commonly-used settings. While in Quick Setup, you may click the **Back** button at any time to return to the previous step, or click the **Cancel** button to reverse all settings. For more detailed settings, refer to the **Basic Settings**, **Network Settings**, **Serial Settings**, and **Operating Settings** sections later in this chapter

### Step 1/3

In Step 1/3, you must assign a valid IP address to the NPort before it will work in your network environment. Your network system administrator should provide you with an IP address and related settings for your network. In addition, the server name field is a useful way to specify the location or application of different NPort units.

#### ❖ Step 1/3

Server Settings

Server name

Network Settings

IP settings Static ▾

IP address

Netmask

Gateway

Back
Next
Cancel

### Step 2/3

In Step 2/3, you must specify which operation mode you will use. If your operation mode is not **Real COM**, **TCP Server**, **TCP Client**, or **UDP mode**, click **Cancel**, return to the main menu, and choose **Operating Settings** to select the correct settings.

#### ❖ Step 2/3

Operation Mode Settings

**Real COM**  
PC communicate with serial device through COM port.  
**Remember to install Real COM/TTY driver on PC. For detail information please refer to User's Manual.**

**TCP**  
PC communicate with serial device through TCP port.  
 Device is TCP client  
Destination IP address  Port

**UDP**  
PC communicate with serial device through UDP port.  
Destination IP address  Port

Back
Next
Cancel

## Step 3/3

In Step 3/3, modify the **Serial Settings**.

### • Step 3/3

| Serial Settings |          |
|-----------------|----------|
| Baud rate       | 115200 ▼ |
| Data bits       | 8 ▼      |
| Stop bits       | 1 ▼      |
| Parity          | None ▼   |
| Interface       | RS-232 ▼ |

Back Next Cancel

## Finish Settings

Review your settings on the **Finish Settings** page to confirm that they are correct and then click the **Save/Restart** button to restart the device with the new settings.

### • Finish Settings

Your changes have not been saved. Please check that your settings in the following and click **Save/Restart** for the updates to take effect or click **Back** to modify it.

| Basic Settings          |  |
|-------------------------|--|
| Server name             | NPIA5450AI_6671                          |
| Network Settings        |  |
| IP settings             | Static                                   |
| IP                      | 192.168.127.135                          |
| Netmask                 | 255.255.255.0                            |
| Gateway                 |  |
| Operation Mode Settings |  |
| Mode                    | RealCOM                                  |
| Parameters              | ---                                      |
| Serial Settings         |  |
| Baudrate                | 115200                                   |
| Parameters              | Data bits: 8, Stop bits: 1, Parity: None |
| Interface               | RS-232                                   |

Back Save/Restart Cancel

**NOTE** If you change the IP address, you will not be able to use the **Home** button to return to the Home Page.

# Export/Import (Excluding the NPort 5100, 5200, and IA5000 Series)

**Export/Import** allows you to back up and recover your settings.

- Overview
- Quick Setup
- Basic Settings
- Network Settings
  - Serial Settings
  - Operating Settings
- Accessible IP Settings
  - Administration
  - Backup/Restore
    - Pre-shared Key
    - Configuration Import**
    - Configuration Export
- System Log Settings
  - Auto Warning Settings
- Upgrade Firmware
  - Monitor
- Change Password
- Load Factory Default
- Save/Restart
- Logout

## ❖ Configuration Import

---

**Configuration Import**

Select configuration file Choose File No file chosen

IP configuration  Import all configurations including IP configurations.

---

**Submit**

- Overview
- Quick Setup
- Basic Settings
- Network Settings
  - Serial Settings
  - Operating Settings
- Accessible IP Settings
  - Administration
  - Backup/Restore
    - Pre-shared Key
    - Configuration Import
    - Configuration Export**
- System Log Settings
  - Auto Warning Settings
- Upgrade Firmware
  - Monitor
- Change Password
- Load Factory Default
- Save/Restart
- Logout

## ❖ Configuration Export

---

**Configuration Export**

---

**Download**

The exported configuration file can be encrypted for security purposes with a user-specified export password (the default password is **moxa**), which you may assign in **Pre-shared Key**. Click **Download** to write all configuration data to a fixed file name as follows: **<Servername>.txt**.


To import the configuration file, you will need to be sure that the pre-shared key stored in the system is the same as the configuration file (which is assigned when exporting the configuration file) in order to successfully import the configuration file.

If the firmware is not up to the version below, you may need to key in the password manually.

NPort 5100A Series Firmware v1.5

- NPort 5200A Series Firmware v1.5
- NPort 5150AI Series Firmware v1.4
- NPort 5250AI Series Firmware v1.4
- NPort 5450AI Series Firmware v1.4
- NPort 5600 Series Firmware v3.9
- NPort 5600 DT Series Firmware v2.6
- NPort 5600 DTL Series Firmware v1.5
- NPort IA5150A Series Firmware v1.4
- NPort IA5450A Series Firmware v1.6

**NOTE** The configuration encrypting function is not available in the NPort 5100, NPort 5200, and NPort IA5000 Series.

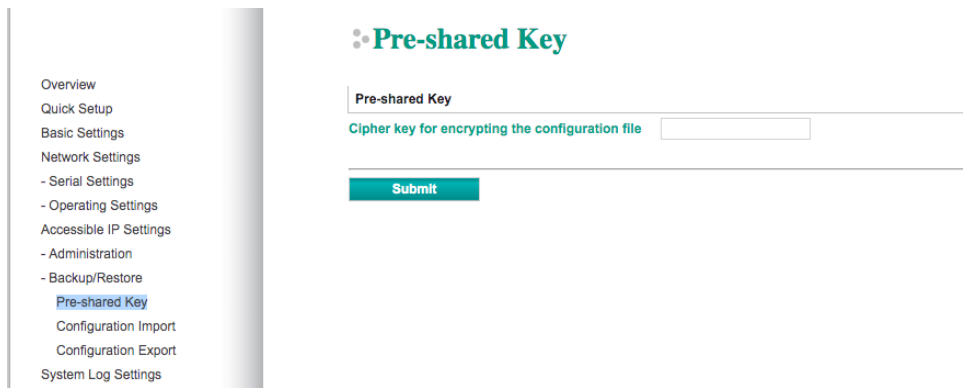

Refer to the table below for the firmware versions that support the encrypted configuration files in the Web Console.

| <b>Model Name</b>            | <b>Firmware version supporting encrypted configuration files.</b> |
|------------------------------|---|
| NPort 5100A Series           | Firmware v1.3 and up  |
| NPort 5200A Series           | Firmware v1.3 and up  |
| NPort 5x50AI-M12 Series      | Firmware v1.2 and up  |
| NPort IA5150A, NPort IA5250A | Firmware v1.3 and up  |
| NPort IA5450A                | Firmware v1.4 and up  |

# Basic Settings

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

The screenshot shows a web browser window titled "NPort Web Console - Microsoft Internet Explorer". The address bar contains the URL: `http://192.168.127.254/home.htm?Password=731a9e0a41ba3bb0a27ca8b330c239db&Submit=Submit`. The page header features the MOXA logo and the website URL `www.moxa.com`. On the left, there is a "Main Menu" with options: Overview, Basic Settings, Network Settings, Serial Settings, Operating Settings, Accessible IP Settings, Auto Warning Settings, Monitor, Change Password, Load Factory Default, and Save/Restart. The main content area is titled "Basic Setting" and contains the following fields:

- Server name:
- Time**
  - Time zone: (GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London
  - Local time: 2005 / 8 / 31 5 : 56 : 36
  - Time server:
- Settings**
  - Web console:  Enable  Disable
  - Telnet console:  Enable  Disable
  - Reset button protect:  No  Yes


A "Submit" button is located at the bottom right of the form.

**Web Interface for the Overall NPort Series**

The screenshot shows a web page titled "Basic Settings" with a gear icon. The page is divided into two main sections:

- Server Settings**
  - Server name:
- Console Settings**
  - HTTP console:  Enable  Disable
  - HTTPS console (support TLS v1.2):  Enable  Disable
  - TLS v1.0/v1.1 for HTTPS console:  Enable  Disable
  - Telnet console:  Enable  Disable
  - Serial console:  Enable  Disable
  - Moxa Service:  Enable  Disable
  - Maximum Login Users For HTTP+HTTPS:  (1~6)
  - Auto Logout Setting (min):  (1~1440)
  - Reset button protect:  No  Yes

A "Submit" button is located at the bottom left of the form.

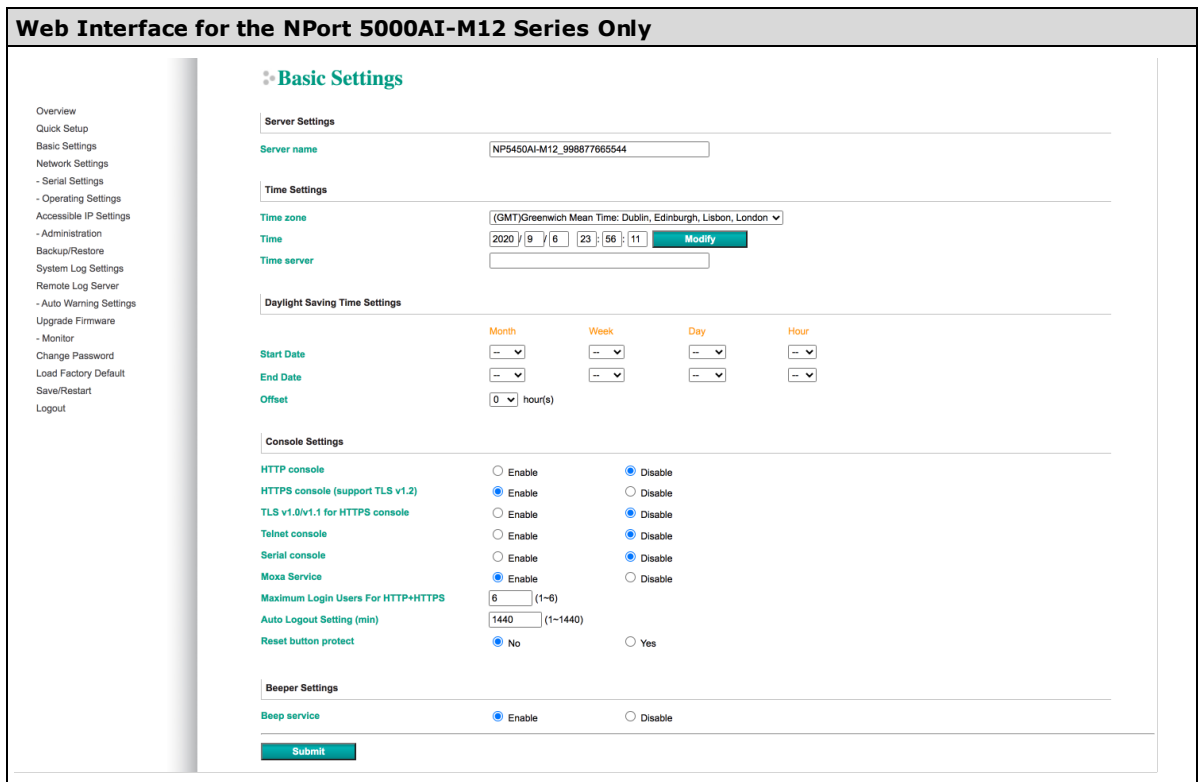

**NOTE** The NPort 5100/5100A does not support **Time Settings**.

| Parameter              | Setting   | Factory Default             | Description   | Necessity |
|------------------------|---|-----------------------------|---|-----------|
| <i>Server name</i>     | 1 to 39 characters  | NP[model name]_[Serial No.] | This option is useful for specifying the location or application of different NPorts.   | Optional  |
| <i>Time zone</i>       | User selectable time zone<br>Not available in NPort 5100/5100A/5200/5200A Series  | GMT (Greenwich Mean Time)   | N/A   | Required  |
| <i>Local time</i>      | User adjustable time (1900/1/1-2037/12/31)<br>Not available in NPort 5100/5100A/5200/5200A Series                         | GMT (Greenwich Mean Time)   | Click the <b>Modify</b> button to open the Modify time settings window to input the correct local time.   | Required  |
| <i>Time server</i>     | IP or Domain address (only available in 4/8/16 ports models)<br>E.g., 192.168.1.1 or time.stdtime.gov.tw or time.nist.gov | None                        | NPorts use SNTP (RFC-1769) for auto time calibration. Input the correct <b>Time server</b> IP address or domain name. Once the NPort is configured with the correct Time server address, the NPort will request time information from the Time server every 10 minutes. | Optional  |
| <i>Daylight saving</i> | Setting 1: "Start Date: Month, Week, Day, Hour"   | None                        | The NPort can offset the system time to the values you have set in this settings.   |           |

| Parameter                              | Setting   | Factory Default | Description  | Necessity |
|--|---|-----------------|--|-----------|
|  | Setting 2: "End Date: Month, Week, Day, Hour"<br>Setting 3: "Offset: hours" |                 | (This feature only applies to the NPort 5000AI-M12 Series.)  |           |
| <i>http console</i>                    | Enable or Disable   | Disable         | The options that are disabled by default—http Console, Telnet Console, and Serial Console—are for security reasons. In some cases, you may want to disable one or most of these console utilities as an extra precaution to prevent unauthorized users from accessing your NPort. Please refer to Chapter 3 "Cybersecurity Considerations" for detailed suggestions. | Required  |
| <i>https console</i>                   | Enable or Disable   | Enable          |  | Required  |
| <i>TLS v1.0/v1.1 for HTTPS console</i> | Enable or Disable   | Disable         |  | Required  |
| <i>Telnet console</i>                  | Enable or Disable   | Disable         |  | Required  |
| <i>Serial Consoles</i>                 | Enable or Disable   | Enable          |  | Required  |
| <i>Moxa Service</i>                    | Enable or Disable   | Enable          |  | Required  |
| <i>Beep Service</i>                    | Enable or Disable   | Enable          | Beeper Service is to provide audio notification and warning according to the different situations.<br>(This feature only applies to the NPort 5000AI-M12 Series.)  | Optional  |
| <i>Reset button protection</i>         | No or Yes   | No              | Select the <b>Yes</b> option to allow limited use of the Reset Button. In this case, the Reset Button can be used for only 60 seconds; 60 s. after booting up, the Reset Button will be disabled automatically.  | Required  |
| <i>LCM read-only protection</i>        | Writeable/Read-only   | Writeable       | The NPort 5000 front panel, known as the LCM (Liquid Crystal Module), may be configured for read-only or writeable access. Read-only access allows settings to be viewed but not changed. Writeable access allows users in the Administration group to change the setting. This setting is only available for the model that has a font panel.                       | Optional  |



**ATTENTION**

If you disable both the http/https console and Telnet console, you can still use NPort Administrator to configure the NPort device servers either locally or remotely over the network. Refer to Chapter 5 for details. If you disable all the console and services, there is no alternative way to access the NPort device servers neither locally nor remotely. The only way to gain control is to reset to factory default settings.

# Network Settings

Web Interface for the NPort 5100, NPort 5200, and NPort IA5000 Series Only

**MOXA** [www.moxa.com](http://www.moxa.com)

- Main Menu
  - Overview
  - Basic Settings
  - Network Settings
  - Serial Settings
  - Operating Settings
  - Accessible IP Settings
  - Auto Warning Settings
  - Monitor
  - Change Password
  - Load Factory Default
  - Save/Restart

### Network Settings

|                  |  |
|------------------|--|
| IP address       | <input type="text" value="192.168.127.254"/> |
| Netmask          | <input type="text" value="255.255.255.0"/>   |
| Gateway          | <input type="text"/>                         |
| IP configuration | <input type="text" value="Static"/>          |
| DNS server 1     | <input type="text"/>                         |
| DNS server 2     | <input type="text"/>                         |

#### SNMP Setting

|                |   |
|----------------|---|
| SNMP           | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Community name | <input type="text" value="public"/>                                   |
| Contact        | <input type="text"/>  |
| Location       | <input type="text"/>  |

#### IP Address report

|                         |   |
|-------------------------|---|
| Auto report to IP       | <input type="text"/>                    |
| Auto report to TCP port | <input type="text" value="4002"/>       |
| Auto report period      | <input type="text" value="10"/> seconds |



Web Interface for the Overall NPort 5000 Series, excluding the NPort IA5000A Series

## Network Settings

### Network Settings

|                  |  |
|------------------|--|
| IP address       | <input type="text" value="192.168.127.254"/> |
| Netmask          | <input type="text" value="255.255.255.0"/>   |
| Gateway          | <input type="text"/>                         |
| IP configuration | <input type="text" value="Static"/>          |
| DNS server 1     | <input type="text"/>                         |
| DNS server 2     | <input type="text"/>                         |

### IP Address Report

|                         |   |
|-------------------------|---|
| Auto report to IP       | <input type="text"/>                        |
| Auto report to UDP port | <input type="text" value="4002"/>           |
| Auto report period      | <input type="text" value="10"/> (0~99 secs) |

### LLDP Settings

|                           |   |
|---------------------------|---|
| LLDP                      | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Message Transmit Interval | <input type="text" value="30"/> (5~32768 secs)                        |

**Web Interface for the NPort IA5000A Series**

## Network Settings

---

**Network Settings**

LAN1 IP address

LAN1 Netmask

LAN1 Gateway

LAN1 IP configuration

---

Multi-LAN mode

LAN2 IP address

LAN2 Netmask

LAN2 Gateway

LAN2 IP configuration

---

DNS server 1

DNS server 2

---

**IP Address Report**

Auto report to IP

Auto report to IP (LAN2)

Auto report to UDP port

Auto report period  (0-99 secs)

---

**LLDP Settings**

LLDP  Enable  Disable

Message Transmit Interval  (5-32768 secs)

---

You must assign a valid IP address to the NPort before it will work in your network environment. Your network system administrator should provide you with an IP address and related settings for your network. The IP address must be unique within the network (otherwise, the NPort will not have a valid connection to the network). You can choose from four possible **IP configuration** modes—Static, DHCP, DHCP/BOOTP, and BOOTP—located under the web console screen’s IP configuration dropdown box.

| Method     | Function Definition   |
|------------|---|
| Static     | The user must define the IP address, Netmask, and Gateway.  |
| DHCP       | The DHCP Server assigns the IP address, Netmask, Gateway, DNS, and Time Server  |
| DHCP/BOOTP | The DHCP Server assigns the IP address, Netmask, Gateway, DNS, and Time Server, or the BOOTP Server assigns the IP address (if the DHCP Server does not respond). |
| BOOTP      | The BOOTP Server assigns the IP address.  |

### Network Settings

| Parameter  | Setting           | Factory Default | Description  | Necessity |
|------------|-------------------|-----------------|--|-----------|
| IP Address | E.g., 192.168.1.1 | 192.168.127.254 | An IP address is a number assigned to a network device (such as a computer) as a | Required  |

| Parameter                      | Setting                               | Factory Default | Description   | Necessity |
|--------------------------------|---------------------------------------|-----------------|---|-----------|
|                                |                                       |                 | permanent address on the network. Computers use the IP address to identify and talk to each other over the network. Choose a proper IP address that is unique and valid in your network environment.  |           |
| <i>Netmask</i>                 | E.g.,<br>255.255.255.0                | 255.255.255.0   | A subnet mask represents all of the network hosts at one geographic location, in one building, or on the same local area network. When a packet is sent out over the network, the NPort will use the subnet mask to check whether the desired TCP/IP host specified in the packet is on the local network segment. If the address is on the same network segment as the NPort, a connection is established directly from the NPort. Otherwise, the connection is established through the given default gateway. | Required  |
| <i>Gateway</i>                 | E.g., 192.168.1.1                     | None            | A gateway is a network gateway that acts as an entrance to another network. Usually, the computers that control traffic within the network or at the local Internet service provider are gateway nodes. The NPort needs to know the IP address of the default gateway computer in order to communicate with the hosts outside the local network environment. For correct gateway IP address information, consult with your network administrator.   | Optional  |
| <i>IP Configuration</i>        | Static<br>DHCP<br>DHCP/BOOTP<br>BOOTP | Static          | N/A   | Required  |
| <i>Multi-LAN mode (for the</i> | Switch<br>Redundant LAN               | Switch          | Dual LAN can be used as a redundant connection or dual  | Optional  |


| Parameter                          | Setting           | Factory Default | Description   | Necessity |
|------------------------------------|-------------------|-----------------|---|-----------|
| <i>NPort IA5000A Series only</i> ) | Dual IP           |                 | IP. The scenario for redundancy is the NPort will automatically switch to working connection in case the other one lose connectivity (due to failed network component in the NPort, port at the switch/router stop working, etc.). As for dual IP scenario, each port will have its own IP address, but both will have the same MAC address, as it is convenient to connect the NPort to different network.   |           |
| <i>DNS server 1/ DNS server 2</i>  | E.g., 192.168.1.1 | None            | In order to use the NPort’s DNS feature, you need to configure the DNS server. Doing so allows the NPort to use a host’s domain name to access the host. The NPort provides DNS server 1 and DNS server 2 configuration items to configure the IP address of the DNS server. DNS Server 2 is included for use when DNS server 1 is unavailable. The NPort plays the role of DNS client, in the sense that the NPort will actively query the DNS server for the IP address associated with a particular domain name. | Optional  |
| <i>LLDP Settings</i>               | Enable or Disable | Enable          | Not available for the NPort 5600DT Rev 1.5 or earlier   | Optional  |



**ATTENTION**

In Dynamic IP environments, the firmware will retry three times every 30 seconds until network settings are assigned by the DHCP or BOOTP server. The Timeout for each try increases from 1 second, to 3 seconds, to 5 seconds.

If the DHCP/BOOTP Server is unavailable, the firmware will use the default IP address (192.168.127.254), Netmask, and Gateway for IP settings.

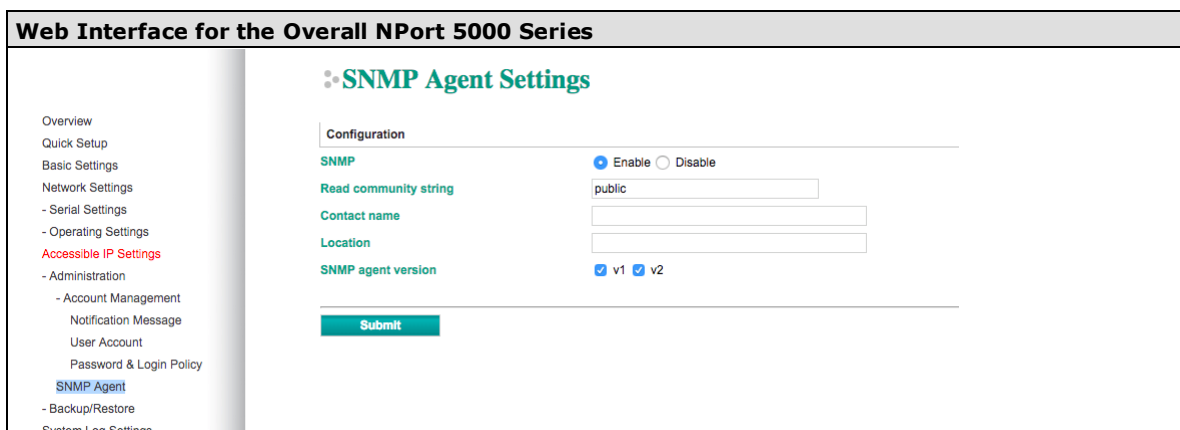

### SNMP Settings

| Parameter                            | Setting  | Factory Default  | Description  | Necessity |
|--------------------------------------|--|--|--|-----------|
| <i>Community Name</i>                | 1 to 31 characters (e.g., MOXA)                        | Public   | A community name is a plain-text password mechanism that is used to weakly authenticate queries to agents of managed network devices.  | Optional  |
| <i>Contact</i>                       | 1 to 31 characters (e.g., Support, 886- 89191230 #300) | None   | The SNMP contact information usually includes an emergency contact name and telephone or pager number.   | Optional  |
| <i>Location</i>                      | 1 to 39 characters (E.g., floor 1, office 2)           | None   | Specify the location string for SNMP agents, such as the NPort. This string is usually set to the street address where the NPort is physically located.  | Optional  |
| <i>SNMP Agent Version V1, V2, V3</i> | V1, V2, V3 (V3 is available on 4/8/16 ports model)     | V1, V2 checked for 1/2-port models.<br>V1, V2, V3 checked for 4/8/16-port models.. | The NPort 5000 1- and 2-port model supports SNMP V1 and V2, where the 4/8/16-port model supports V1, V2 and V3. Select the version according to your environmental needs. Please note that the 4/8/16-port model only supports standard MIB such as RFC1213/1317, which supports <b>Set</b> server name, contact, location, whereas the 1/2-port model only supports <b>Get</b> , but not <b>Set</b> . | Optional  |

The following fields allow you to define usernames, passwords, and authentication parameters for two levels of access: read-only and read/write. The name of the field will indicate which level of access it refers to. For example, Read-only authentication mode allows you to configure the authentication mode for read-only access, whereas Read/write authentication mode allows you to configure the authentication mode for read/write access. For each level of access, you may configure the following:

|                                      |                    |         |  |          |
|--------------------------------------|--------------------|---------|--|----------|
| <i>Read-only username</i>            | 1 to 31 characters | None    | Use this optional field to identify the username for the specified level of access.  | Optional |
| <i>Read-only authentication mode</i> | MD5, SHA           | Disable | Use this field to select MD5 or SHA as the method of password encryption for the specified level of access, or to disable authentication | Optional |
| <i>Read-only password</i>            | 1 to 31 characters |         | Use this field to set the password for read only of access.  | Optional |

| Parameter                             | Setting            | Factory Default | Description  | Necessity |
|---------------------------------------|--------------------|-----------------|--|-----------|
| <i>Read-only privacy mode</i>         | DEC, CBC           | Disable         | Use this field to enable or disable DES_CBC data encryption for the specified level of access.   | Optional  |
| <i>Read-only privacy</i>              | 1 to 31 characters | None            | Use this field to define the encryption key for the specified level of access.   | Optional  |
| <i>Read/write username</i>            | 1 to 31 characters | None            | Use this optional field to identify the username for the specified level of access.  | Optional  |
| <i>Read/write authentication mode</i> | MD5, SHA           | Disable         | Use this field to select MD5 or SHA as the method of password encryption for the specified level of access, or to disable authentication | Optional  |
| <i>Read/write only password</i>       | 1 to 31 characters |                 | Use this field to set the password for read/write access.  | Optional  |
| <i>Read/write only privacy mode</i>   | DEC, CBC           | Disable         | Use this field to enable or disable DES_CBC data encryption for the specified level of access.   | Optional  |
| <i>Read/write only privacy</i>        | 1 to 31 characters | None            | Use this field to define the encryption key for the specified level of access  | Optional  |

## IP Address Report

When NPort products are used in a dynamic IP environment, users must spend more time with IP management tasks. For example, if the NPort works as a server (TCP or UDP), then the host, which acts as a client, must know the IP address of the server. If the DHCP server assigns a new IP address to the NPort, the host must have some way of determining the NPort's new IP address.

NPort products help out by reporting their IP address periodically to the IP location server, in case the dynamic IP has changed. The parameters shown below are used to configure the Auto IP report function. There are two ways to develop an "Auto IP report Server" to receive NPort's Auto IP report.

1. Use Device Server Administrator's **IP Address Report** function.
2. **Auto IP report protocol**, which can receive the Auto IP report automatically on a regular basis, is also available to help you develop your own software. Refer to **Appendix E** for details about the **Auto IP report protocol**.

| Parameter                      | Setting                    | Factory Default | Description  | Necessity |
|--------------------------------|----------------------------|-----------------|--|-----------|
| <i>Auto report to IP</i>       | E.g., 192.168.1.1 or URL   | None            | Reports generated by the Auto report function will be automatically sent to this IP address. In multiple-LAN model version, two IPs can be set for Auto report. The report will be sent to each IP when generated. | Optional  |
| <i>Auto report to UDP port</i> | E.g., 4001                 | 4002            | In multiple-LAN model version, two IPs can be set for Auto report. Report will be sent to each IP when generated.  | Optional  |
| <i>Auto report period</i>      | Time interval (in seconds) | 10              | NA   | Optional  |

## Serial Settings

The **Serial Settings** page is where you set the serial communication parameters for each device port. Settings include baudrate, parity, and flow control. Each device port can be configured independently.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

**MOXA** [www.moxa.com](http://www.moxa.com)

Main Menu

- Overview
- Basic Settings
- Network Settings
- Serial Settings
  - Port 1
  - Port 2
  - Port 3
  - Port 4
  - Port 5
  - Port 6
  - Port 7

**Serial Settings**

| Serial Settings |       |           |           |           |        |        |           |           |
|-----------------|-------|-----------|-----------|-----------|--------|--------|-----------|-----------|
|                 | Alias | Baud rate | Data bits | Stop bits | Parity | FIFO   | Flow ctrl | Interface |
| Port 1          |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| Port 2          |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| Port 3          |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| Port 4          |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| Port 5          |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| Port 6          |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| Port 7          |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| Port 8          |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |


**Web Interface for the Overall NPort 5000 Series**

**Serial Settings**


| Port | Alias | Baud rate | Data bits | Stop bits | Parity | FIFO   | Flow ctrl | Interface |
|------|-------|-----------|-----------|-----------|--------|--------|-----------|-----------|
| 1    |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| 2    |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| 3    |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |
| 4    |       | 115200    | 8         | 1         | None   | Enable | RTS/CTS   | RS-232    |

To modify serial settings for a particular port, click on the **Port Number** under **Serial Settings**, located under **Main Menu** on the left side of the browser window.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**



**Web Interface for the Overall NPort 5000 Series**

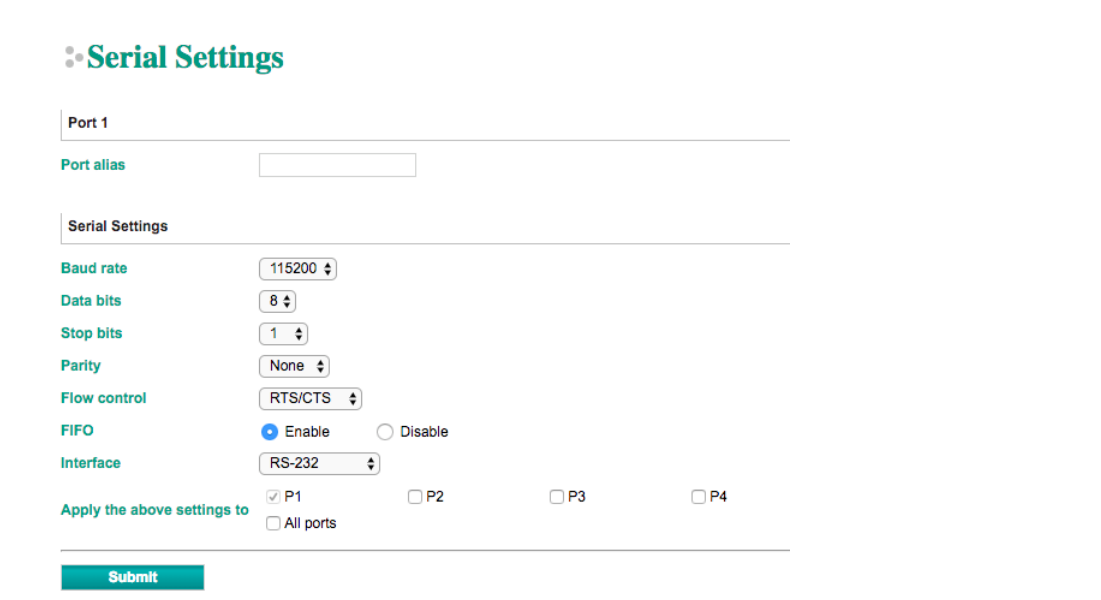



**ATTENTION**

It is critical that the device port's serial communication settings match the attached device. Refer to the user's manual for your serial device for the correct serial communication settings.

| Parameter  | Setting  | Factory Default | Description  | Necessity |
|------------|--|-----------------|--|-----------|
| Port Alias | 1 to 15 characters (E.g., PLC-No.1)  | None            | Port Alias is specially designed to allow easy identification of the serial devices that are connected to the NPort's serial port. | Optional  |
| Baud rate  | Support standard baudrates (bps):<br>50/ 75/ 110/ 134/<br>150/ 300/ 600/<br>1200 1800/ 2400/ | 115200 bps      | The rate of data transmission to and from the attached serial device.  | Required  |




| Parameter           | Setting   | Factory Default | Description  | Necessity |
|---------------------|---|-----------------|--|-----------|
|                     | 4800/ 7200/<br>9600/ 19200/<br>38400/ 57600/<br>115200/ 230.4k/<br>460.8k/ 921.6k<br><br>* The NPort 5110/5210/ 5230/5232I Series, and IA 5000 series are as low as 110 bps, and up to 230.4 kbps |                 |  |           |
| <i>Data bits</i>    | 5, 6, 7, 8  | 8               | When Data bits is set to 5 bits, the stop bits setting will automatically change to 1.5 bits.  | Required  |
| <i>Stop bits</i>    | 1, 1.5, 2   | 1               | The size of the stop character.  | Required  |
| <i>Parity</i>       | None, Even, Odd, Space, Mark  | None            | Even and Odd parity provide rudimentary error-checking; Space and Mark parity are rarely used.   | Required  |
| <i>Flow control</i> | None, RTS/CTS, DTR/DSR, Xon/Xoff  | RTS/CTS         | The method used to suspend and resume data transmission to ensure that data is not lost. If you can use it, <b>RTS/CTS (hardware)</b> flow control is recommended. | Required  |
| <i>FIFO</i>         | Enable, Disable   | Enable          | Controls whether or not the device port's built-in 128-byte FIFO buffer is used. When enabled, the FIFO helps reduce data loss regardless of direction.            | Required  |
| <i>Interface*</i>   | RS-232<br>RS-422<br>2-wire RS-485<br>4-wire RS-485  | RS-232          | The serial interface that will be used. The options that are available depend on the specific model of device server.  | Required  |

\*Supported interfaces vary by model. Refer to the datasheet of your NPort device to see which serial interface it supports.

## Operating Settings

Operating Settings is where each device port's operation mode and associated parameters are configured. Use the chart provided below to select the operation mode that is most suitable for your application and refer to **Chapters 4 and 5** for a detailed explanation of different operating modes and parameters.

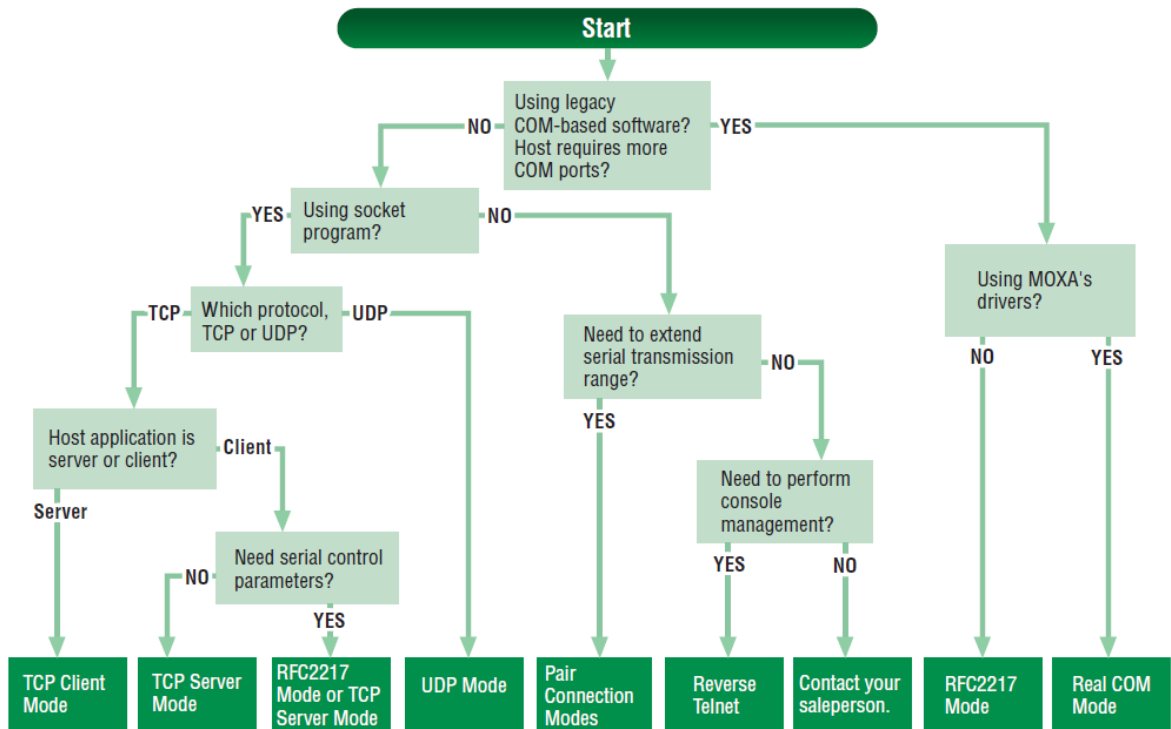

Click on **Operating Settings** under **Main Menu** to display the operating settings for the NPort’s serial ports. To modify operating settings for a particular port, click on the **Port Number** under **Operating Settings**, located under **Main Menu** on the left side of the browser window.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

**Operating Settings**

| Operating Settings |                |  |             |             |                   |                |
|--------------------|----------------|--|-------------|-------------|-------------------|----------------|
| Port               | Operating mode | Packing length                               | Delimiter 1 | Delimiter 2 | Delimiter process | Force transmit |
| 1                  | Real COM Mode  | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|                    |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |
| 2                  | Real COM Mode  | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|                    |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |

**Web Interface for the Overall NPort 5000 Series**

**Operation Modes**

| Port | Operating Mode | Packing Length                               | Delimiter 1 | Delimiter 2 | Delimiter Process | Force Transmit |
|------|----------------|--|-------------|-------------|-------------------|----------------|
| 1    | RealCOM        | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|      |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |
| 2    | RealCOM        | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|      |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |
| 3    | RealCOM        | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|      |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |
| 4    | RealCOM        | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|      |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |

For each mode, the default settings should work for most applications. Modify these settings only if absolutely necessary for your application. The operation mode and related parameters can be configured through the web console. The same parameters can also be configured using NPort Administrator, the Telnet console, or serial console. Refer to **Chapters 4 and 5** for details.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

**MOXA** [www.moxa.com](http://www.moxa.com)

**Operating Settings**

**Port = 1**

Operation mode: TCP Server Mode

TCP alive check time: 7 (0 - 99 min)

Inactivity time: 0 (0 - 65535 ms)

Max connection: 1

Ignore jammed IP:  No  Yes

Allow driver control:  No  Yes

**Data Packing**

Packing length: 0 (0 - 1024)

Delimiter 1: 0 (Hex)  Enable

Delimiter 2: 0 (Hex)  Enable

Delimiter process: Do Nothing (Processed only when Packing length is 0)

Force transmit: 0 (0 - 65535 ms)

**TCP Server Mode**

Local TCP port: 4001

Command port: 966

Apply the above settings to all serial ports (Local listen port will be enumerated automatically).

**Web Interface for the Overall NPort 5000 Series**

**Operation Modes**

**Port 1**

Operation mode: RealCOM

TCP alive check time: 7 (0 - 99 min)

Max connection: 1

Ignore jammed IP:  No  Yes

Allow driver control:  No  Yes

**Data Packing**

Packing length: 0 (0 - 1024)

Delimiter 1: 00 (Hex)  Enable

Delimiter 2: 00 (Hex)  Enable

Delimiter process: Do Nothing (Processed only when packing length is 0)

Force transmit: 0 (0 - 65535 ms)

Apply the above settings to:  P1  P2  P3  P4  All ports

# Accessible IP Settings

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

| No. | Activate the rule        | IP Address | Netmask |
|-----|--------------------------|------------|---------|
| 1   | <input type="checkbox"/> |            |         |
| 2   | <input type="checkbox"/> |            |         |
| 3   | <input type="checkbox"/> |            |         |
| 4   | <input type="checkbox"/> |            |         |
| 5   | <input type="checkbox"/> |            |         |
| 6   | <input type="checkbox"/> |            |         |
| 7   | <input type="checkbox"/> |            |         |
| 8   | <input type="checkbox"/> |            |         |
| 9   | <input type="checkbox"/> |            |         |
| 10  | <input type="checkbox"/> |            |         |

**Web Interface for the Overall NPort 5000 Series**

Activate the accessible IP list (Operation modes are NOT allowed for the IPs NOT on the list)

Apply additional restrictions (All device services are NOT allowed for the IPs NOT on the list)

| No. | Activate the rule        | IP Address | Netmask |
|-----|--------------------------|------------|---------|
| 1   | <input type="checkbox"/> |            |         |
| 2   | <input type="checkbox"/> |            |         |
| 3   | <input type="checkbox"/> |            |         |
| 4   | <input type="checkbox"/> |            |         |
| 5   | <input type="checkbox"/> |            |         |
| 6   | <input type="checkbox"/> |            |         |
| 7   | <input type="checkbox"/> |            |         |
| 8   | <input type="checkbox"/> |            |         |
| 9   | <input type="checkbox"/> |            |         |
| 10  | <input type="checkbox"/> |            |         |
| 11  | <input type="checkbox"/> |            |         |
| 12  | <input type="checkbox"/> |            |         |
| 13  | <input type="checkbox"/> |            |         |
| 14  | <input type="checkbox"/> |            |         |
| 15  | <input type="checkbox"/> |            |         |
| 16  | <input type="checkbox"/> |            |         |

**Accessible IP Settings** allow you to add or block remote host IP addresses to prevent unauthorized access. Access to the NPort is controlled by an IP address. That is, if a host's IP address is in the accessible IP table, then the host will be allowed to access the NPort. Three setting types are described below:

- **Activate the Accessible IP list**

Operation modes are NOT allowed for IPs NOT on the list. IPs that are not on the list will not be granted when communicating with NPort via Operation mode

- **Apply additional restrictions**

All device services are NOT allowed for IPs NOT on the list. Services will not be granted for IPs that are not on the list. Please note that all IPs will still have access if the IP list is empty, even though the function is enabled.

Tip: For exact IP identification, the netmask needs to be 255.255.255.255.

- **Only one host with a specific IP address can access the NPort**

Enter "[IP address]/255.255.255.255" (e.g., "192.168.1.1/255.255.255.255").

- **Hosts on a specific subnet can access the NPort**

Enter "[IP address]/255.255.255.0" (e.g., "192.168.1.0/255.255.255.0").

- **Any host can access the NPort**

Disable this function. Refer to the following table for more details about the configuration.

| Allowable Hosts                | Input format                    |
|--------------------------------|---------------------------------|
| Any host                       | Disable                         |
| 192.168.1.120                  | 192.168.1.120 / 255.255.255.255 |
| 192.168.1.1 to 192.168.1.254   | 192.168.1.0 / 255.255.255.0     |
| 192.168.0.1 to 192.168.255.254 | 192.168.0.0 / 255.255.0.0       |
| 192.168.1.1 to 192.168.1.126   | 192.168.1.0 / 255.255.255.128   |
| 192.168.1.129 to 192.168.1.254 | 192.168.1.128 / 255.255.255.128 |

## Account Management

The Account Management setting provides administrators the authority to add/delete/modify an user account, grant access to the device users for specified function groups, and manage password and login policy to ensure device is used by a proper set of people.

## Notification Message

As an administrator, you are allowed to customize your **Login Message** and the **Login Authentication Failure Message** to notify users with information you would like to provide.

### Notification Message

**Notification Message**

**Login Message**

Welcome to NPort

16 characters/Maximum 240 characters



**Login Authentication Failure Message**

Please contact administrators if you forget the password

56 characters/Maximum 240 characters

Submit

The message will appear on the log-in page at the time of a successful login or login failure. Examples are shown below.

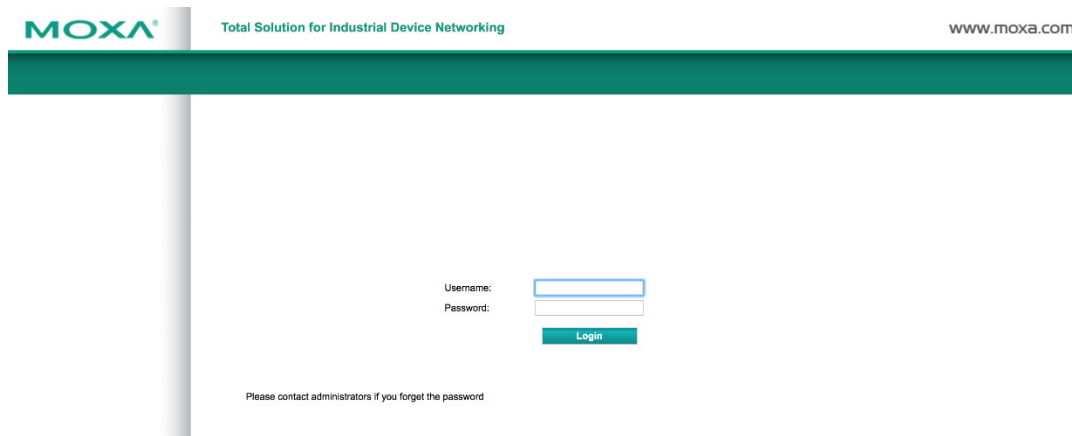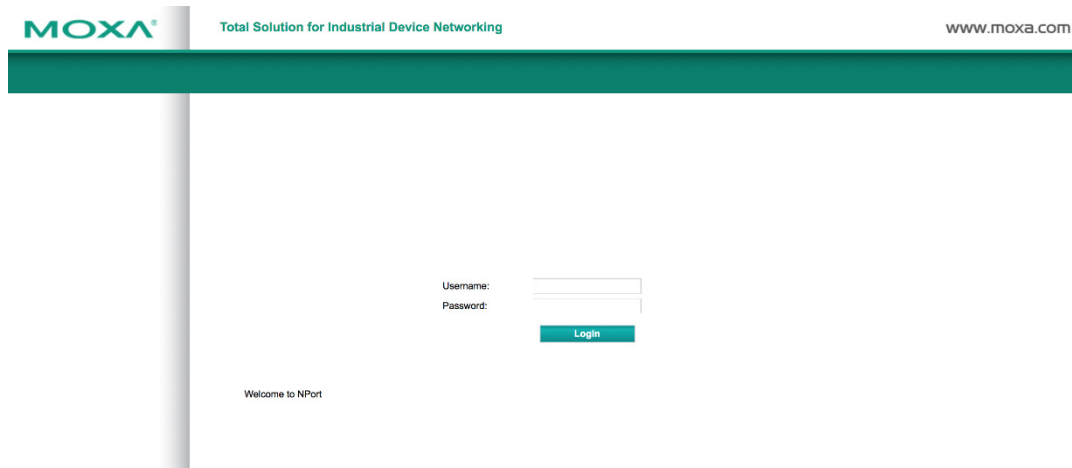





## User Account

In the NPort 5000 Series, the main function groups are highly correlated with the **User Level** set by the administrator(s). Administrators are allowed to add user accounts to the NPort 5000 device by clicking the **Add** button on the **User Account** page. You may also click on the current user to **Edit** or Delete the selected account.

### User Account

**User Account**

 Add  Edit  Delete  Save/Restart

| Active                              | Account Name | User Level |
|-------------------------------------|--------------|------------|
| <input checked="" type="checkbox"/> | admin        | Read Write |
| <input checked="" type="checkbox"/> | guest        | Read Only  |

Your changes will take effect after save and restart

The **Add Account (Edit Account)** page will show up for you to enter (modify) account information and assign password to this user. Also, the Administrator(s) are allowed to assign proper **User Level** to this user to limit his/her privileges of using NPort 5000.

### User Account

**Add Account**

Active

Account Name

Password

Confirm Password

User Level

## Password and Login Policy

A user with an administrator role is authorized to determine the password and login policy of the NPort 5000 device.

### Account Password and Login Management

**Account Password Policy**

Password minimum length  ( 4 - 16 )

Password complexity strength check  Enable  Disable

At least one digit (0-9)  Enable  Disable

Mixed upper and lower case letters (A~Z, a~z)  Enable  Disable

At least one special character (~!@#%&^\*~\_!;:.,<>[]{}())  Enable  Disable

Password lifetime  ( 0 - 180 day; 0 for Disable )

**Account Login Failure Lockout**

Account login failure lockout  Enable  Disable

Retry failure threshold  ( 1 - 10 retry )

Lockout Time  ( 1 - 60 min )

### Account Password Policy

| Parameter   | Setting         | Default | Description   |
|---|-----------------|---------|---|
| Password minimum length   | 4-16 characters | 4       | Define the minimum length of login password   |
| Password complexity strength check:   | Enable/Disable  | Disable | Enable password complexity strength check will enforce the password combination setting |
| <ul style="list-style-type: none"> <li>At least one digit (0-9)</li> </ul>  | Enable/Disable  | Disable | The password must contain at least one number (0-9) when enabling this parameter        |
| <ul style="list-style-type: none"> <li>Mixed upper and lower case letters (A~Z, a~z)</li> </ul>                       | Enable/Disable  | Disable | The password must contain an upper and a lower case letter when enabling this parameter |
| <ul style="list-style-type: none"> <li>At least one special characters (~!@#%&amp;^*~_!;:.,&lt;&gt;[]{}())</li> </ul> | Enable/Disable  | Disable | The password must contain at least one special character when enabling this parameter   |

| Parameter         | Setting                       | Default | Description  |
|-------------------|-------------------------------|---------|--|
| Password lifetime | 0-180 days<br>(0 for disable) | 90 days | A password lifetime can be specified and a system notification message will show up to remind users to change the password if the option is enabled. |

### Account Login Failure Lockout

| Parameter                     | Setting        | Default      | Description   |
|-------------------------------|----------------|--------------|---|
| Account Login Failure Lockout | Enable/Disable | Disable      | An account login failure lockout rule can be defined and enforced when enabled. |
| • Retry failure threshold     | 1-10 retry     | 5 if enabled | Number of retries can be determined prior to the lockout                        |
| • Lockout time                | 1-60 minute(s) | 5 if enabled | Lockout duration can be specified to determine time until next retry.           |

## Auto Warning Settings

The NPort device server can automatically warn administrators of certain system, network, and configuration events. Depending on the event, different options for automatic notification are available. These options are configured in the Auto Warning Settings.

### Auto warning: E-mail and SNMP trap

The Email and SNMP trap parameters are used to configure how e-mail and SNMP traps are sent when an automatic warning is issued by the NPort device server.

**Web Interface for the NPort 5100, 5200, IA5000 Series**



**Web Interface for the Overall NPort 5000 Series**

- Overview
- Quick Setup
- Basic Settings
- Network Settings
- Serial Settings
- Operating Settings
- Accessible IP Settings
- Administration
- Backup/Restore
- System Log Settings
- Auto Warning Settings
- System Log Event settings
- E-mail and SNMP Trap
- Event Type
- Upgrade Firmware
- Monitor
- Line
- Async
- Async-Settings
- Relay Output
- System Log
- Change Password

## E-mail and SNMP Trap Settings

**Mail Server**

**Mail server**

My server requires authentication

**User name**

**Password**

**From E-mail address**

**E-mail address 1**

**E-mail address 2**

**E-mail address 3**

**E-mail address 4**

**SNMP Trap Server**

**SNMP trap server IP or domain name**

**Trap version**  v1  v2c

**Trap community**

Submit

**Mail Server**

| Parameter                     | Setting            | Factory Default | Description  | Necessity |
|-------------------------------|--------------------|-----------------|--|-----------|
| <i>Mail server</i>            | IP or Domain Name  | None            | This optional field is for the IP address or domain name of your network mail server, if applicable. A mail server is required for the NPort to send e-mail warnings of administrative events. | Optional  |
| <i>User name</i>              | 1 to 15 characters | None            | This optional field is used if your mail server requires it.   | Optional  |
| <i>Password</i>               | 1 to 15 characters | None            | This optional field is used if your mail server requires it.   | Optional  |
| <i>From E-mail address</i>    | 1 to 63 characters | None            | This optional field sets the "from" e-mail address that will show up in an automatic warning e-mail.   | Optional  |
| <i>E-mail address 1/2/3/4</i> | 1 to 63 characters | None            | These optional fields set the "destination" e-mail address for automatic e-mail warnings.  | Optional  |

**SNMP Trap Server**

| Parameter                                 | Setting                   | Factory Default | Description  | Necessity |
|---|---------------------------|-----------------|--|-----------|
| <i>SNMP trap server IP or domain name</i> | IP address or Domain Name | None            | Selecting the version based on your environmental needs. We strongly suggest that you change the community name from the default <b>public</b> to another name; it is for security prevention reasons. | Optional  |



**ATTENTION**

Consult your network administrator or ISP for the proper mail server settings. The **Auto warning** function may not work properly if it is not configured correctly. NPort SMTP AUTH supports LOGIN, PLAIN, CRAM-MD5 (RFC 2554).

## Event Type

**Web Interface for the NPort 5100, 5200 and IA5000 Series Only**

### Event Type

|                        |                               |                               |                                       |
|------------------------|-------------------------------|-------------------------------|---------------------------------------|
| Cold start             | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap |                                       |
| Warm start             | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap |                                       |
| Authentication failure | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap |                                       |
| IP address changed     | <input type="checkbox"/> Mail |                               |                                       |
| Password changed       | <input type="checkbox"/> Mail |                               |                                       |
| Power failure          | <input type="checkbox"/> Mail |                               | <input type="checkbox"/> Relay Output |
| Ethernet1 link down    | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay Output |
| Ethernet2 link down    | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay Output |
| <b>DCD changed</b>     |                               |                               |                                       |
| Port 1                 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay Output |
| Port 2                 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay Output |
| <b>DSR changed</b>     |                               |                               |                                       |
| Port 1                 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay Output |
| Port 2                 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay Output |

**Web Interface for the Overall NPort 5000 Series**

- Overview
- Quick Setup
- Basic Settings
- Network Settings
- Serial Settings
- Operating Settings
- Accessible IP Settings
- Administration
- Backup/Restore
- System Log Settings
- Auto Warning Settings
  - System Log Event settings
  - E-mail and SNMP Trap
  - Event Type
- Upgrade Firmware
- Monitor
- Line
- Async
- Async-Settings
- Relay Output
- System Log
- Change Password
- Load Factory Default
- Save/Restart
- Logout

### Event Settings

**System Event**

|            |                               |                               |  |
|------------|-------------------------------|-------------------------------|--|
| Cold start | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap |  |
| Warm start | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap |  |

**Config Event**

|                        |                               |                               |                                       |
|------------------------|-------------------------------|-------------------------------|---------------------------------------|
| Authentication failure | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap |                                       |
| IP changed             | <input type="checkbox"/> Mail |                               |                                       |
| Password changed       | <input type="checkbox"/> Mail |                               |                                       |
| Power failure          | <input type="checkbox"/> Mail |                               | <input type="checkbox"/> Relay output |
| Ethernet1 link down    | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |
| Ethernet2 link down    | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |

**DCD Changed**

|        |                               |                               |                                       |
|--------|-------------------------------|-------------------------------|---------------------------------------|
| Port 1 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |
| Port 2 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |
| Port 3 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |
| Port 4 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |

**DSR Changed**

|        |                               |                               |                                       |
|--------|-------------------------------|-------------------------------|---------------------------------------|
| Port 1 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |
| Port 2 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |
| Port 3 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |
| Port 4 | <input type="checkbox"/> Mail | <input type="checkbox"/> Trap | <input type="checkbox"/> Relay output |

The Event Type parameters are used to configure which events will generate an automatic warning from the NPort device server, and how that warning will be issued. For each listed event, certain automatic warning options are available. If Mail is selected, an e-mail will be sent. If Trap is selected, an SNMP trap will be sent. The **Relay Output** option is available for NPort IA5000/IA5000A series.

2-44

**Cold start**

Refers to starting the system from power off (contrast this with warm start). When performing a cold start, the NPort will automatically issue an auto warning message by e-mail, or send an SNMP trap after booting up.

**Warm start**

A warm start refers to restarting the computer without turning the power off. When performing a warm start, the NPort will automatically send an e-mail, or send an SNMP trap after rebooting.

**Authentication failure**

An authentication failure event is triggered when the user inputs an incorrect password from the Console or Administrator. When an authentication failure occurs, the NPort will immediately send an e-mail or SNMP trap.

**IP address changed**


An IP address changed event is triggered when the user has changed the NPort’s IP address. When the IP address changes, the NPort will send an e-mail with the new IP address before the NPort reboots. If the NPort is unable to send an e-mail message to the mail server within 15 seconds, the NPort will reboot anyway, and abort the e-mail auto warning.

**Password changed**

A password changed event is triggered when the user has changed the NPort’s password. When the password changes, the NPort will send an e-mail with the password changed notice before the NPort reboots. If the NPort is unable to send an e-mail message to the mail server within 15 seconds, the NPort will reboot anyway, and abort the e-mail auto warning.

**Power failure (this event type is only applicable to NPort IA5000/IA5000A series)**

NPort IA5000/IA5000A series NPorts have two DC power inputs for redundancy. Different approaches are used to warn engineers automatically, including by email and by relay output. Users can connect to **Monitor** → **Relay Output** from the web console to check which event caused the warning. The relay output will be canceled after the power recovers, or by selecting “acknowledge event” using the web console or Telnet. When the Relay Output is sending a warning, the Ready LED will flash red until the warning event ceases.

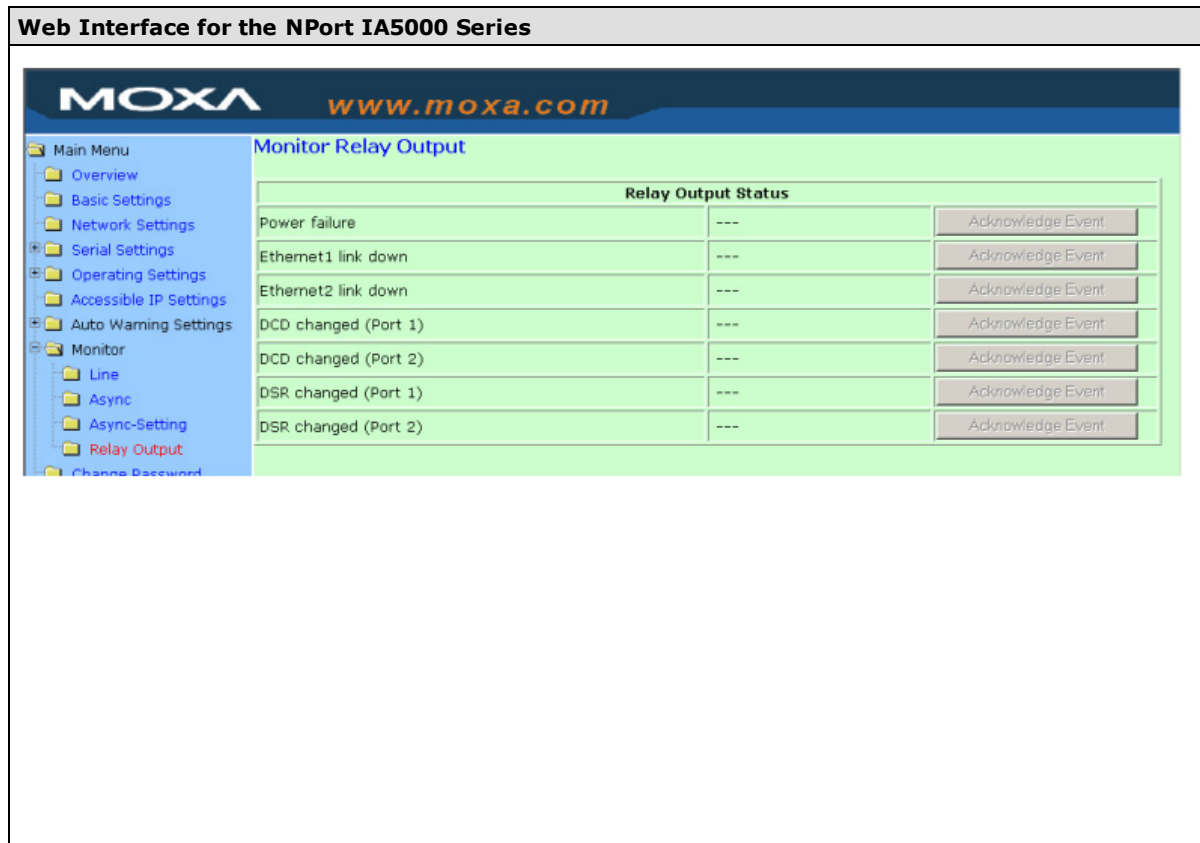

**Web Interface for the NPort IA5000A Series**

- Overview
- Quick Setup
- Basic Settings
- Network Settings
- Serial Settings
- Operating Settings
- Accessible IP Settings
- Administration
- Account Management
- SNMP Agent
- Backup/Restore
- System Log Settings
- Auto Warning Settings
- System Log Event settings
- E-mail and SNMP Trap
- Event Type
- Upgrade Firmware
- Monitor
- Line
- Async
- Async-Settings
- Relay Output**
- System Log
- Change Password

### Dout State

| Dout Status          |   |                   |
|----------------------|---|-------------------|
| Power failure        | - | Acknowledge Event |
| Ethernet1 link down  | - | Acknowledge Event |
| Ethernet2 link down  | - | Acknowledge Event |
| DCD changed (Port 1) | - | Acknowledge Event |
| DSR changed (Port 1) | - | Acknowledge Event |
| DCD changed (Port 2) | - | Acknowledge Event |
| DSR changed (Port 2) | - | Acknowledge Event |
| DCD changed (Port 3) | - | Acknowledge Event |
| DSR changed (Port 3) | - | Acknowledge Event |
| DCD changed (Port 4) | - | Acknowledge Event |
| DSR changed (Port 4) | - | Acknowledge Event |

**Ethernet link down**

The NPort device server provides system maintainers with real-time alarm messages for Ethernet link down. Even when control engineers are out of the control room for an extended period of time, they can still be informed of the status of devices almost instantaneously when exceptions occur. The NPort device server supports different methods for warning engineers automatically, such as by email, SNMP trap, and relay output\*.

**DCD changed**

A DCD (Data Carrier Detect) signal change indicates that the modem connection status has changed. For example, a DCD change to high indicates that the local modem and remote modem are connected. A DCD signal change to low indicates that the connection line is down. When the DCD changes, the NPort will immediately send an e-mail, send an SNMP trap, or trigger the relay output\*.

**DSR changed**

A DSR (Data Set Ready) signal change indicates that the data communication equipment’s power is off. For example, a DSR change to high indicates that the DCE is powered ON. A DSR signal changes to low indicates that the DCE is powered off. When the DSR changes, the NPort will immediately send an e-mail, send an SNMP trap, or trigger the relay output\*.

\*Relay output is only supported by the NPort IA5000/IA5000A series.

**NOTE** **Relay Output** is only available for the NPort IA5000/IA5000A series. Users can connect to **Monitor** → **Relay Output** from the web console to check which event is causing the warning. The relay output will be canceled if the abnormal state is restored, or if **Acknowledge Event** is selected from the web or Telnet console. When the Relay Output is issuing a warning, the Ready LED will flash red until the warning event ceases.

| Parameter | Setting         | Factory Default | Description  | Necessity |
|-----------|-----------------|-----------------|--|-----------|
| Mail      | Enable, Disable | Disable         | This feature helps the administrator manage how the NPort sends e-mail to pre-defined e-mail boxes when the enabled events (Cold start, Warm start, Authentication failure, etc.) occur. To configure this feature, click the <b>Event Type Mail</b> checkbox.                     | Optional  |
| Trap      | Enable, Disable | Disable         | This feature helps the administrator manage how the NPort IA5000A sends an SNMP Trap to a pre-defined SNMP Trap server when the enabled events (Cold start, Warm start, Authentication failure, etc.) occur. To configure this feature, click the <b>Event Type Trap</b> checkbox. | Optional  |



**ATTENTION**

DCD and DSR signal changes are only applicable for the RS-232 interface.

## Monitor

### Monitor Line

Click **Line** under **Monitor** to show the operation mode and status of each connection (IPx), for each of the four serial ports.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

| Monitor Line |               |        |     |     |     |
|--------------|---------------|--------|-----|-----|-----|
| Line         |               |        |     |     |     |
| Port         | OP Mode       | IP1    | IP2 | IP3 | IP4 |
| 1            | Real COM Mode | Listen |     |     |     |
| 2            | Real COM Mode | Listen |     |     |     |
| 3            | Real COM Mode | Listen |     |     |     |
| 4            | Real COM Mode | Listen |     |     |     |

**Web Interface for the Overall NPort 5000 Series**

- Overview
- Quick Setup
- Basic Settings
- Network Settings
- Serial Settings
  - Port 1
  - Port 2
  - Port 3
  - Port 4
- Operating Settings
  - Port 1
  - Port 2
  - Port 3
  - Port 4
- Accessible IP Settings
  - Administration
  - Backup/Restore
- System Log Settings
  - Auto Warning Settings
    - System Log Event settings
    - E-mail and SNMP Trap
    - Event Type
- Upgrade Firmware
  - Monitor
    - [Line](#)
    - Async

### Monitor Line

| Port | Operation Mode | Connections | [ ] | [ ] | [ ] | [ ] |
|------|----------------|-------------|-----|-----|-----|-----|
| 1    | RealCOM        | [Listen]    | [ ] | [ ] | [ ] | [ ] |
| 2    | RealCOM        | [Listen]    | [ ] | [ ] | [ ] | [ ] |
| 3    | RealCOM        | [Listen]    | [ ] | [ ] | [ ] | [ ] |
| 4    | RealCOM        | [Listen]    | [ ] | [ ] | [ ] | [ ] |

## Monitor Async

Click **Async** under **Monitor** to show the current status of each of the four serial ports.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

MOXA
www.moxa.com

- Main Menu
- Overview
- Basic Settings
- Network Settings
- Serial Settings
- Operating Settings
- Accessible IP Settings
- Auto Warning Settings
- Monitor

### Monitor Async

| Async |       |       |            |            |     |     |     |
|-------|-------|-------|------------|------------|-----|-----|-----|
| Port  | TxCnt | RxCnt | TxTotalCnt | RxTotalCnt | DSR | CTS | DCD |
| 1     | 0     | 0     | 0          | 0          | OFF | OFF | OFF |
| 2     | 0     | 0     | 0          | 0          | OFF | OFF | OFF |
| 3     | 0     | 0     | 0          | 0          | OFF | OFF | OFF |
| 4     | 0     | 0     | 0          | 0          | OFF | OFF | OFF |

**Web Interface for the Overall NPort 5000 Series**

MOXA
www.moxa.com

- Main Menu
- Overview
- Quick Setup
- Export/Import
- Basic Settings
- Network Settings
- Serial Settings
- Operating Settings
- Accessible IP Settings
- Auto Warning Settings
- Upgrade Firmware
- Monitor
  - [Line](#)
  - [Async](#)

### Monitor Async

| Port | TxCnt | RxCnt | TxTotalCnt | RxTotalCnt | DSR | DTR | RTS | CTS | DCD |
|------|-------|-------|------------|------------|-----|-----|-----|-----|-----|
| 1    | 0     | 0     | 0          | 0          | ●   | ●   | ●   | ●   | ●   |
| 2    | 0     | 0     | 0          | 0          | ●   | ●   | ●   | ●   | ●   |

## Monitor Async-Settings

Click **Async Setting** under **Monitor** to show the run-time settings for each of the four serial ports.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

| Async-Settings |           |           |           |        |        |         |          |         |
|----------------|-----------|-----------|-----------|--------|--------|---------|----------|---------|
| Port           | Baud rate | Data bits | Stop bits | Parity | FIFO   | RTS/CTS | XON/XOFF | DTR/DSR |
| 1              | 115200    | 8         | 1         | None   | Enable | OFF     | OFF      | OFF     |
| 2              | 115200    | 8         | 1         | None   | Enable | OFF     | OFF      | OFF     |
| 3              | 115200    | 8         | 1         | None   | Enable | OFF     | OFF      | OFF     |
| 4              | 115200    | 8         | 1         | None   | Enable | OFF     | OFF      | OFF     |

**Web Interface for the Overall NPort 5000 Series**

| Port | Baud Rate | Data Bits | Stop Bits | Parity | Flow Control |          |         | FIFO   | Interface |
|------|-----------|-----------|-----------|--------|--------------|----------|---------|--------|-----------|
|      |           |           |           |        | RTS/CTS      | XON/XOFF | DTR/DSR |        |           |
| 1    | 115200    | 8         | 1         | None   | OFF          | OFF      | OFF     | Enable | RS-232    |
| 2    | 115200    | 8         | 1         | None   | ON           | OFF      | OFF     | Enable | RS-232    |
| 3    | 115200    | 8         | 1         | None   | ON           | OFF      | OFF     | Enable | RS-232    |
| 4    | 115200    | 8         | 1         | None   | ON           | OFF      | OFF     | Enable | RS-232    |

## System Log Settings

### System Log Settings

| Event Group | Local Log                | Summary  |
|-------------|--------------------------|--|
| System      | <input type="checkbox"/> | System Cold Start, System Warm Start   |
| Network     | <input type="checkbox"/> | DHCP/BOOTP Get IP/Renew, NTP, Mail Fail, NTP Connect Fail, IP Conflict, Network Link Up, Network Link Down |
| Config      | <input type="checkbox"/> | Login Fail, IP Changed, Password Changed, Config Changed, Firmware Upgrade, Config Import, Config Export   |
| OpMode      | <input type="checkbox"/> | Connect, Disconnect  |

**NOTE** The NPort 5100, NPort 5200, and NPort IA5000 Series don't support this function.

System Log Settings allow NPort users to customize network events that are logged by the NPort 5000. Events are grouped into four categories, known as event groups, and the user selects which groups to log

as Local Log (on NPort 5000). The actual system events that would be logged for each system group are listed under the column "Summary". For example, if **System** was enabled, then System Cold Start events and System Warm Start events would be logged.

|           |  |
|-----------|--|
| Local Log | Keep the log in the flash of NPort 5000 up to 512 items. |
|-----------|--|

**System**

|                   |                        |
|-------------------|------------------------|
| System Cold Start | NPort 5000 cold start. |
| System Warm Start | NPort 5000 warm start. |

**Network**

|                               |  |
|-------------------------------|--|
| DHCP/BOOTP/PPPoE Get IP/Renew | IP of the NPort 5000 is refreshed.                 |
| NTP                           | Time synchronization successful.                   |
| NTP Connect Fail              | The NPot 5000 failed to connect to the NTP Server. |
| Mail Fail                     | Failed to deliver the email.                       |
| IP Conflict                   | There is an IP conflict on the local network.      |
| Network Link Down             | LAN 1 Link is down.                                |

**Config**


|                        |   |
|------------------------|---|
| Login Fail             |   |
| IP Changed             | Static IP address was changed.              |
| Password Changed       | Administrator Password was changed.         |
| Config Changed         | The NPort 5000's configuration was changed. |
| Firmware Upgrade       | Firmware was upgraded.                      |
| SSL Certificate Import | SSL Certificate was impoted.                |
| Config Import          | Config was impoted.                         |
| Config Export          | Config was expoted.                         |

**OpMode**

|                     |   |
|---------------------|---|
| Connect             | Op Mode is in use   |
| Disconnect          | Op Mode switched from in use to disconnect.   |
| Authentication Fail | The Authentication failed in terminal; reverse terminal; or dial in/out operation modes |
| Restart             | Serial port was restarted.  |

## Change Password

You can set a password to restrict access to the NPort's configuration parameters. (The default password for NPort is **moxa**.) If a user does not enter the correct password when accessing the NPort through one of the consoles (e.g., web console), access to the NPort configuration settings will be denied.

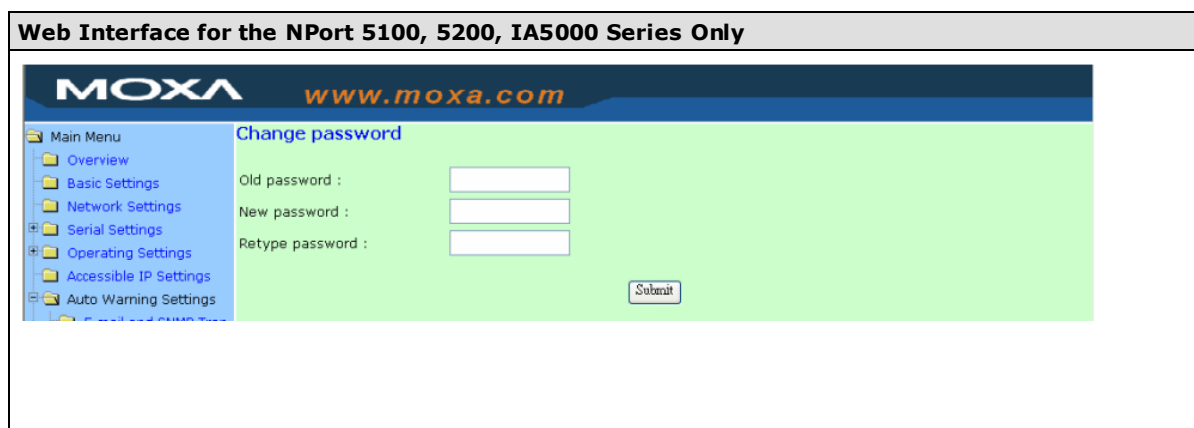



**Web Interface for the Overall NPort 5000 Series**

- Overview
- Quick Setup
- Basic Settings
- Network Settings
- Serial Settings
  - Port 1
  - Port 2
  - Port 3
  - Port 4
- Operating Settings
  - Port 1
  - Port 2
  - Port 3
  - Port 4
- Accessible IP Settings
- Administration
- Backup/Restore
- System Log Settings
- Auto Warning Settings
  - System Log Event settings
  - E-mail and SNMP Trap
  - Event Type
- Upgrade Firmware
- Monitor
  - Line
  - Async
  - Async-Settings
  - Relay Output
  - System Log
- [Change Password](#)
- Load Factory Default

⚙️ Change Password

Password

Old password

New password

Retype password

---

Submit



**ATTENTION**

If you forget the NPort’s password, the ONLY way to configure the NPort is by using the hardware reset button to load the factory defaults. Before you set a password for the first time, it is a good idea to export the NPort’s complete configuration to a file. Your configuration can then be easily restored if necessary.

## Load Factory Default

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

www.moxa.com

Load Factory Default

This function will reset all MOXA NPort Server settings to their factory default values. Be aware that previous settings will be lost.

Submit

**Web Interface for the Overall NPort 5000 Series**

⚙️ Load Factory Default

This function will reset all MOXA NPort Server settings to their factory default values. Be aware that previous settings will be lost.

---


Submit

This function will reset all of the NPort's settings to the factory default values. Be aware that previous settings will be lost.

## Configuration by Telnet Console

You can update your NPort's IP address by using Telnet to connect to your NPort IA5000A over the network. (Figures in this section were generated using the NPort IA5450AI).

1. From the Windows desktop, click on **Start** and then select **Run**.
2. Type **telnet 192.168.127.254** (use the correct IP address if different from the default) in the **Open** text input box, and then click **OK**.

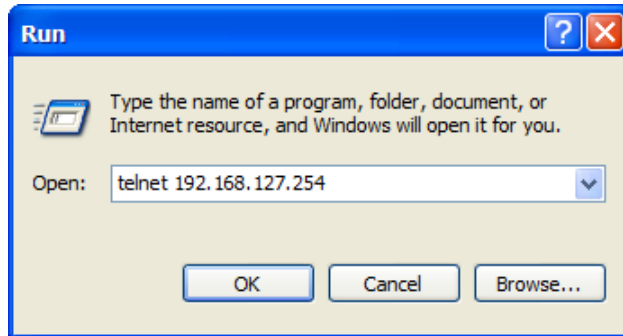

3. When the Telnet window opens, you will be prompted to input the Console password (the default username is **admin** and password is **moxa**; for the NPort 5100/5200/IA5000, it only requires the default password **moxa**); input the password and then press **Enter**.

```
Trying 192.168.127.254...
Connected to 192.168.127.254.
Escape character is '^]'.
Model name      : NPort 5250A

Please keyin your username:admin

Please keyin your password:****
```

4. Type **2** to select Network settings, and then press **Enter**.

```
-----  
Model name       : NPort 5250A  
MAC address      : 00:90:E8:63:50:FD  
Serial No.       : 7162  
Firmware version : 1.5 Build 19013022  
System uptime    : 0 days, 01h:59m:07s  
-----  
<< Main menu >>  
(1) Basic settings  
(2) Network settings  
(3) Serial settings  
(4) Operating settings  
(5) Accessible IP settings  
(6) Account Management  
(7) Auto warning settings  
(8) Monitor  
(9) Ping  
(a) Change password  
(b) Load factory default  
(v) View settings  
(s) Save/Restart  
(q) Quit  
  
Key in your selection: 2
```

5. Type **1** to select IP address and then press **Enter**.

```
<< Main menu->Network settings >>  
<1> IP address  
<2> Netmask  
<3> Gateway  
<4> IP configuration  
<5> DNS server 1  
<6> DNS server 2  
<7> SNMP  
<8> SNMP community name  
<9> SNMP contact  
<a> SNMP location  
<b> Auto IP report to IP  
<c> Auto IP report to UDP port  
<d> Auto IP report period  
<v> View settings  
<m> Back to main menu  
<q> Quit  
  
Key in your selection: 1
```

- Use the **Backspace** key to erase the current IP address, type in the new IP address, and then press **Enter**.

```
<< Main menu->Network settings >>
<1> IP address
<2> Netmask
<3> Gateway
<4> IP configuration
<5> DNS server 1
<6> DNS server 2
<7> SNMP
<8> SNMP community name
<9> SNMP contact
<a> SNMP location
<b> Auto IP report to IP
<c> Auto IP report to UDP port
<d> Auto IP report period
<v> View settings
<m> Back to main menu
<q> Quit

Key in your selection: 1
IP address: 192.168.127.253
```

- Press any key to continue...

```
<< Main menu->Network settings >>
<1> IP address
<2> Netmask
<3> Gateway
<4> IP configuration
<5> DNS server 1
<6> DNS server 2
<7> SNMP
<8> SNMP community name
<9> SNMP contact
<a> SNMP location
<b> Auto IP report to IP
<c> Auto IP report to UDP port
<d> Auto IP report period
<v> View settings
<m> Back to main menu
<q> Quit

Key in your selection: 1
IP address: 192.168.127.253
Set IP address success

Press any key to continue..._
```

8. Type **m** and then press **Enter** to return to the main menu.

```

<< Main menu->Network settings >>
(1) IP address
(2) Netmask
(3) Gateway
(4) IP configuration
(5) DNS server 1
(6) DNS server 2
(7) SNMP
(8) SNMP community name
(9) SNMP contact
(a) SNMP location
(b) Auto IP report to IP
(c) Auto IP report to UDP port
(d) Auto IP report period
(v) View settings
(m) Back to main menu
(q) Quit

Key in your selection: m

```

9. Type **s** and then press **Enter** to **Save/Restart** the system.

```

Model name       : NPort IA5450AI
MAC address      : 00:90:E8:12:34:57
Serial No.       : 2
Firmware version : 1.0 Build 10032318
System uptime    : 0 days, 00h:06m:48s
-----
<< Main menu >>
(1) Basic settings
(2) Network settings
(3) Serial settings
(4) Operating settings
(5) Accessible IP settings
(6) Auto warning settings
(7) Monitor
(8) Ping
(9) Change password
(a) Load factory default
(v) View settings
(s) Save/Restart
(q) Quit

Key in your selection: s

```

10. Type **y** and then press **Enter** to save the new IP address and restart the NPort.

```

Save change?
(y) Yes
(n) No

Key in your selection: y

```

## Configuration by Serial Console

### Serial Console (19200, n, 8, 1)

You may use the RS-232 console port to configure your NPort's IP address. We suggest using PComm Terminal Emulator, which is available free of charge as part of the PComm Lite program suite, to carry out the installation procedure, although other similar utilities may also be used.




**ATTENTION**


The serial console port is an RS-232 port.

Before you configure the NPort device server over the serial console, turn off the power and connect the serial cable from the NPort to your computer’s serial port.

1. Connect the NPort’s serial port 1 directly to your computer’s male RS-232 serial port. From the Windows desktop click **Start → Programs → PComm Lite → Terminal Emulator**.
2. When the **PComm Terminal Emulator** window opens, first click on the **Port Manager** menu item and select **Open**, or simply click on the **Open** icon.

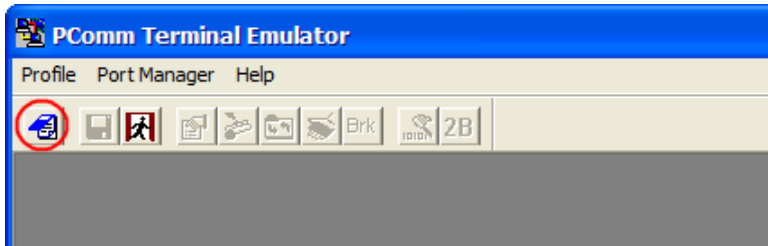


3. The **Property** window opens automatically. From the **Communication Parameter** page, select the appropriate COM port for the connection, COM1 in this example, and 19200 for Baud Rate, 8 for Data Bits, None for Parity, and 1 for Stop Bits.

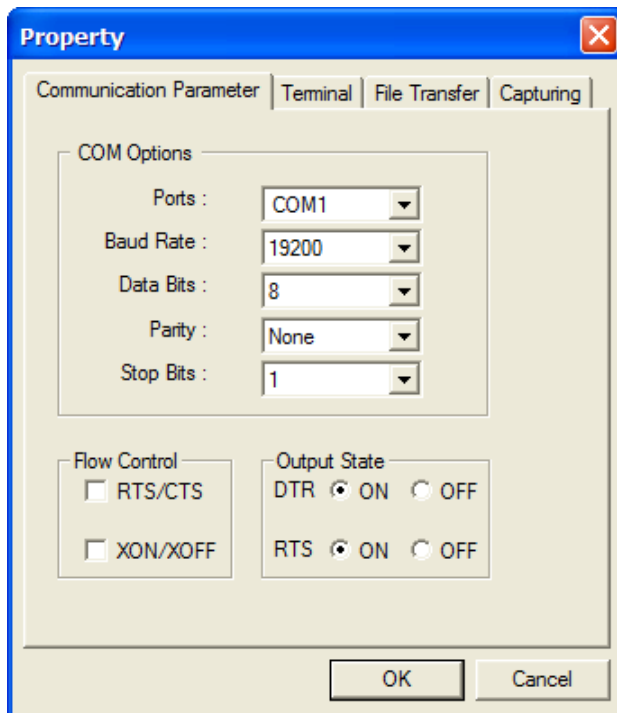


4. From the **Property** window’s **Terminal** page, select ANSI or VT100 for **Terminal Type** and then click **OK**.
5. If you select **Dumb Terminal** as the terminal type, some of the console functions—especially the **Monitor** function—may not work properly.


- 6. Press the "`" key continuously and then power on the NPort.

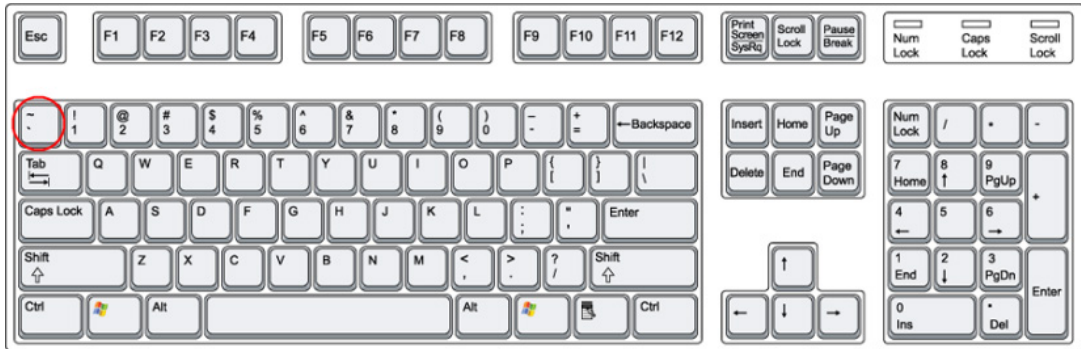

- 7. The NPort will automatically switch from data mode to console mode as it receives a continuous string of "`" characters.
- 8. The default username is **admin**, and the password is **moxa**.

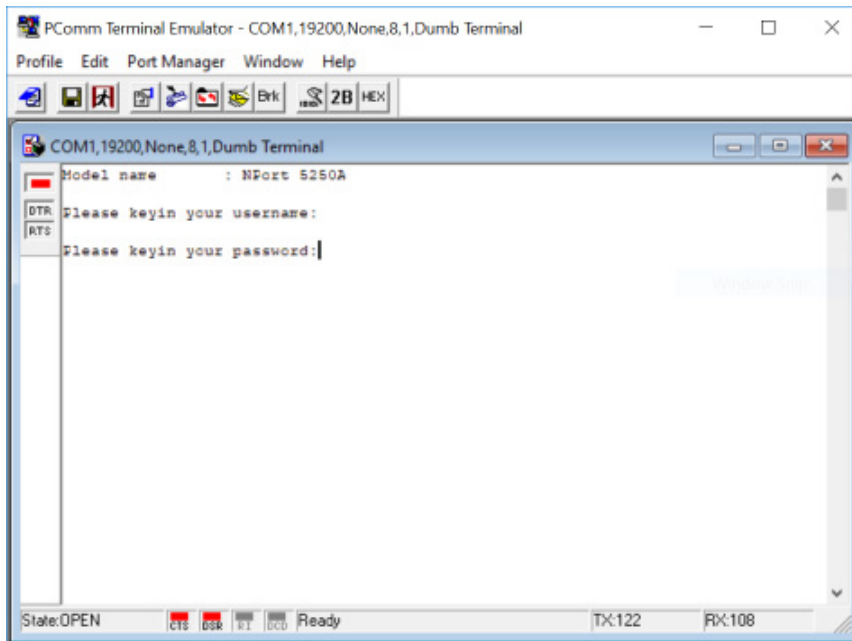

- Start configuring the IP address under **Network Settings**. Refer to step 4 in the Telnet Console section for the rest of the IP settings.

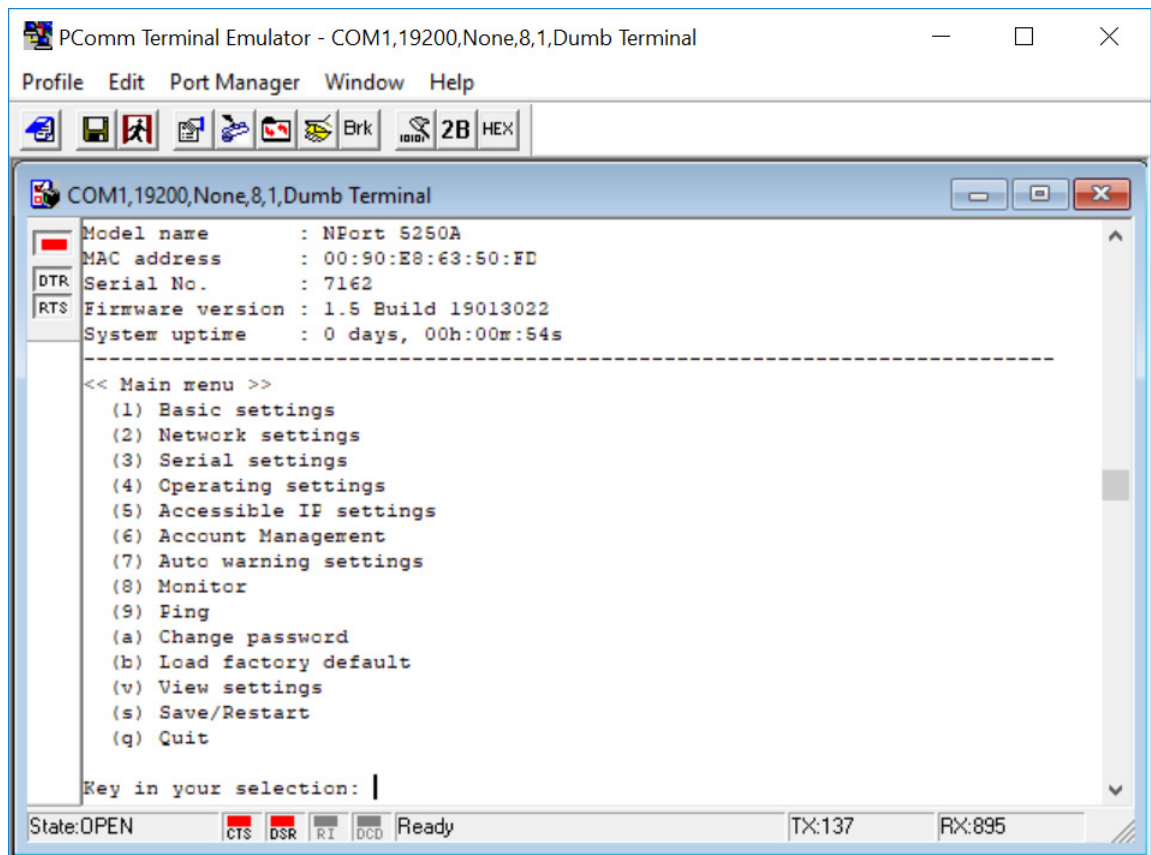

## Testing Your NPort

After completing installation and configuration, you can do a simple test to ensure that your NPort will communicate successfully. Click on the appropriate link below to view a technical note that explains how to test your NPort one of four common operation modes: Real COM, TCP client, TCP server, and UDP.

- [Real COM Mode for NPort](#)
- [TCP Client Mode for NPort](#)
- [TCP Server Mode for NPort](#)
- [UDP Mode for NPort](#)



## Cybersecurity Considerations

---

With cyberattacks growing in number and sophistication, network device vendors are adding functions geared towards protecting sensitive business and personal information. Moxa has dedicated itself in this area by developing measure to make sure all the products can and will meet the security standard, so customers will use Moxa's product without too much to worry about. There are certain details that Moxa cannot do alone; customers and Moxa need to work together to build up a much secured environment to defend against all kinds of cyberthreats. This chapter introduces the essential steps to enhance the cybersecurity of Moxa's products. Customers may need to refer to other sections in the user manual for exact settings or commands. The following topics are covered in this chapter:

- ❑ **Updating Firmware**
- ❑ **Turn Off Unused Service and Ports**
  - Turn Off Moxa Service After Installation
  - Turn On Services That Are Necessary
- ❑ **Limited IP Access**
- ❑ **Account and Password**
- ❑ **System Log**
- ❑ **Testing the Security Environment**

## Updating Firmware

When a customer buys a product from Moxa or reseller, Moxa may have already pushed out a newer version of firmware and that is likely to have enhanced the security features included. It is suggested to always update to latest firmware. Please check with Moxa's support website for further details.

## Turn Off Unused Service and Ports

Imagine living in a house that has many entrances. If all the doors and windows are left unlocked or even open, it sends a message of welcoming to intruders out there. It is always recommended to turn off services and ports that are not in use to reduce the chances of being attacked.

## Turn Off Moxa Service After Installation

Moxa Service is extremely helpful for first-time installation as it helps the device to be discovered in a local area network (LAN). Once the installation is completed, this service should be turned off for safety reasons; however, once it is turned off, a utility such as Moxa's DSU (Device Search Utility) is no longer seeking for the device, and only by the IP and login with username and password will have the access to the product.

## Turn On Services That Are Necessary

There are services that were designed some while ago, but then cybersecurity wasn't much of an issue, therefore the design's considerations didn't quite cover cybersecurity. Below is a list of services that are recommended to turn on only when necessary:

- HTTP/HTTPS: If the web console is required to access the product, it is recommend to use HTTPS over HTTP
- Telnet: Only enable Telnet if command line is required to manage the product
- SNMP: If using Simple Network Management Protocol for remote device monitoring and management, this should be turned on. It is strongly advised to change the default community name once enabled and also set SNMP to send a trap if authentication failures happen.

**NOTE** Once all the settings are configured according to your needs, remember to save and restart the device so that all the new settings are effective. Remember to export your settings.

**NOTE** If all HTTP/HTTPS/Telnet/SSH/Serial consoles are turned off, then there is no other route to access the product. The only way to recover it is to reset the device and start from the beginning. Please refer to the user manual on how to reset the device

## Limited IP Access

Limiting the number of IP addresses that can access the product is one of the most effective way of blocking unwanted intruders. If there are only limited desktop/notebook/mobile devices that would access the product, grant those IPs access.

## Account and Password

- There is a default username and password for first-time installation; it is strongly suggested to change the password after installation has been done.
- Use your own passwords for users of the devices. If possible, also change the default name of the account, for example, don't name admin group "admin" before the device is deployed.
- Use strong passwords. The devices support a function to check if the passwords are strong enough. You can enable the function to help you check whether the passwords are strong enough.
- Use account login failure lockout feature to prevent unwelcome access

## System Log

System log can contain all kinds of activities that are happening on your NPort, such as Login Fail, IP Changed, Password Changed, Config Changed, etc. Check the log periodically to examine any abnormal behavior.

## Testing the Security Environment

Besides these devices that support those protective functions, network managers can follow a number of recommendations to protect their network and devices.

To prevent unauthorized access to a device, follow these recommendations:

- Testing tools for cybersecurity environment checks are available. Some may provide limited free use, for example, Nessus. These tools help identify possible security leaks in the environment.
- The device should be operated inside a secure network, protected by a firewall or router that blocks attacks via the Internet.
- Control access to the serial console as with any physical access to the device.
- Avoid using insecure services such as Telnet and TFTP; the best way is to disable them completely.
- Limit the number of simultaneous Web Server, Telnet, and SSH sessions allowed.
- Periodically, change the passwords.
- Backup the configuration files periodically and compare the configurations to make sure the devices work properly.
- Audit the devices periodically to make sure they comply with these recommendations and/or any internal security policies.
- If there is a need to return the unit to Moxa, make sure encryption is disabled and that you had already backup the current configuration before returning it.

**NOTE** DISCLAIMER: Please note that above information and guide (the "information") are for the purpose of your reference only. We do not guarantee a cyberthreat-free environment; these guidelines are to increase security level to defend against cyberintrusions and do not guarantee that the above information will meet your specific requirements. Furthermore, the above information is provided "as is", and we make no warranties, express, implied or otherwise, regarding its accuracy, completeness, or performance.

# Choosing the Proper Operation Mode

---

In this chapter, we describe the NPort device server's various operation modes. The options include an operation mode that uses a driver installed on the host computer, and operation modes that rely on TCP/IP socket programming concepts. After choosing the proper operation mode in this chapter, refer to **Chapter 5** for detailed configuration parameter definitions.

The following topics are covered in this chapter:

- ❑ **Overview**
- ❑ **Real COM Mode**
- ❑ **RFC2217 Mode**
- ❑ **TCP Server Mode**
- ❑ **TCP Client Mode**
- ❑ **UDP Mode**
- ❑ **Pair Connection Mode**
- ❑ **Ethernet Modem Mode**
- ❑ **Reverse Telnet Mode**
- ❑ **Disabled Mode**

## Overview

NPort serial device servers network-enable traditional RS-232/422/485 devices. A serial device server is a small computer equipped with a CPU, real-time OS, and TCP/IP protocols that can bi-directionally translate data between the serial and Ethernet formats. NPort device servers that are connected to a network that with access to the Internet can be accessed from a computer located anywhere in the world.

Traditional SCADA and data collection systems rely on serial ports (RS-232/422/485) to collect data from various kinds of instruments. Since NPort serial device servers network-enable instruments equipped with an RS-232/422/485 communication port, your SCADA and data collection system will be able to access all instruments connected to a standard TCP/IP network, regardless of whether the devices are used locally or at a remote site.


An NPort serial device server is an external IP-based network device that allows you to expand the number of serial ports for a host computer on demand. As long as your host computer supports the TCP/IP protocol, you won't be limited by the host computer's bus limitation (such as ISA or PCI), or lack of drivers for various operating systems.

In addition to providing socket access, the NPort also comes with a Real COM / TTY driver that transmits all serial signals intact. This means that you can continue using your existing COM/TTY-based software, without needing to invest in additional software.

Three different socket modes are available: TCP Server, TCP Client, and UDP Server/Client. The main difference between the TCP and UDP protocols is that TCP guarantees delivery of data by requiring the recipient to send an acknowledgement to the sender. UDP does not require this type of verification, making it possible to offer speedier delivery. UDP also allows data to be unicast to only one IP address, or multicast to groups of IP addresses.

## Real COM Mode

The NPort comes equipped with COM drivers that work with Windows systems, and also TTY drivers for Linux systems. The driver establishes a transparent connection between host and serial device by mapping the IP:Port of the NPort's serial port to a local COM/TTY port on the host computer. Real COM Mode also supports up to 4 simultaneous connections, so that multiple hosts can collect data from the same serial device at the same time.

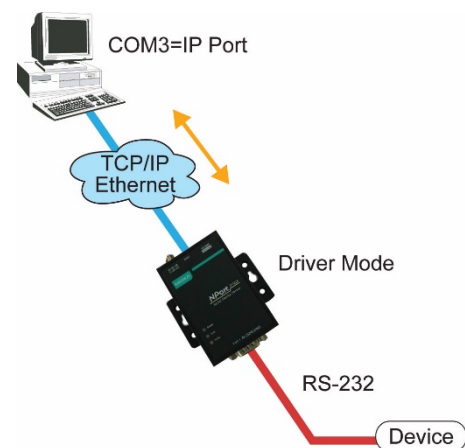

### ATTENTION

The driver used for Real COM Mode is bundled with NPort Administrator. The driver is installed on your computer automatically when you install NPort Administration Suite.

One of the major conveniences of using Real COM Mode is that Real COM Mode allows users to continue using RS-232/422/485 serial communications software that was written for pure serial communications applications. The driver intercepts data sent to the host's COM port, packs it into a TCP/IP packet, and then redirects it through the host's Ethernet card. At the other end of the connection, the NPort accepts the Ethernet frame, unpacks the TCP/IP packet, and then sends it transparently to the appropriate serial device attached to one of the NPort's serial ports.



**ATTENTION**

Real COM Mode allows several hosts to access the same NPort. The driver that comes with your NPort controls host access to attached serial devices by checking the host's IP address. Refer to the **Accessible IP Settings** section in **Chapter 2** for details.

# RFC2217 Mode


**RFC2217 Mode is only supported by the NPort 5000A, NPort 5000AI-M12, NPort IA5000A, NPort 5600, and NPort 5600-8-DT/DTL Series.**

RFC 2217 mode is similar to Real COM mode in that a driver is used to establish a transparent connection between a host computer and a serial device by mapping the serial port on the NPort to a local COM port on the host computer. RFC2217 defines general COM port control options based on the Telnet protocol. Third party drivers supporting RFC2217 are widely available on the Internet and can be used to implement Virtual COM mapping to your NPort serial port(s).

# TCP Server Mode

In **TCP Server Mode**, the NPort is configured with a unique IP:Port combination on a TCP/IP network. In this case, the NPort waits passively to be contacted by the host computer. After the host computer establishes a connection with the serial device, it can then proceed with data transmission. TCP Server mode also supports up to 4 simultaneous connections, so that multiple hosts can collect data from the same serial device—at the same time. As illustrated in the figure, data transmission proceeds as follows:

1. The host requests a connection from the NPort configured for TCP Server Mode.
2. Once the connection is established, data can be transmitted in both directions—from the host to the NPort, and from the NPort to the host.

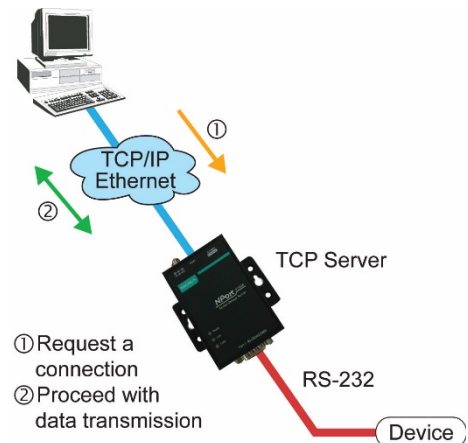


- 1 Request a connection
- 2 Proceed with data transmission

# TCP Client Mode

In TCP Client Mode, the NPort can actively establish a TCP connection with a pre-determined host computer when serial data arrives. After the data has been transferred, the NPort can disconnect automatically from the host computer by using the **TCP alive check time** or **Inactivity time** settings. Refer to **Chapter 4** for detailed configuration instructions. As illustrated in the figure, data transmission proceeds as follows:


1. The NPort configured for TCP Client Mode requests a connection from the host.
2. Once the connection is established, data can be transmitted in both directions—from the host to the NPort, and from the NPort to the host.

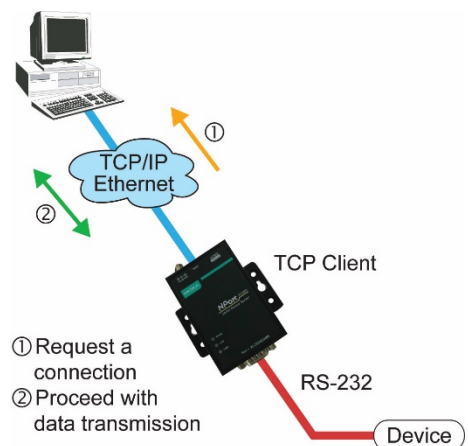

- 1 Request a connection
- 2 Proceed with data transmission

## UDP Mode

Compared to TCP communication, UDP is faster and more efficient. In UDP mode, you can unicast or multicast data from the serial device to one or multiple host computers, and the serial device can also receive data from one or multiple host computers, making this mode ideal for message display applications.

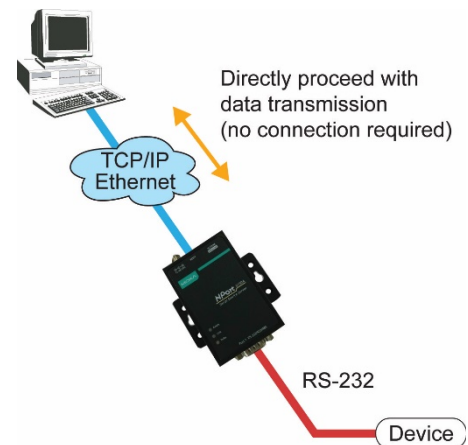

## Pair Connection Mode

Pair Connection Mode employs two NPort units in tandem, and can be used to remove the 15-meter distance limitation imposed by the RS-232 interface. One NPort is connected from its RS-232/422/485 port to the COM port of a PC or other type of computer, such as hand-held PDAs that have a serial port, and the serial device is connected to the RS-232/422/485 port of the other NPort. The two NPort units are then connected to each other with a cross-over Ethernet cable, both are connected to the same LAN, or in a more advanced setup, they communicate with each other over a WAN (i.e., through one or more routers). Pair Connection Mode transparently transfers both data and modem control signals (although it cannot transmit the DCD signal) between the two NPorts.


## Ethernet Modem Mode

**Ethernet Modem Mode is only supported by the NPort IA5000/IA5000A, NPort 5000A, NPort 5000AI-M12, and NPort 5100 series.**

Ethernet Modem Mode is designed for use with legacy operating systems, such as MS-DOS, that do not support TCP/IP Ethernet. By connecting one of NPort's serial ports to the MS-DOS computer's serial port, it is possible to use legacy software originally designed to transmit data via modem, but now transmit the data over the Ethernet.

## Reverse Telnet Mode

Console management is commonly used by connecting to Console/AUX or COM ports of routers, switches, and UPS units. Rtelnet works the same as TCP Server mode in that only one TCP port is listened to after booting up. The system then waits for a host on the network to initiate a connection. The difference is that the TCP Server mode does not provide the conversion function provided by Telnet. If the connected devices need to use the CR/LF conversion function when controlling, then users must choose Reverse Telnet mode.

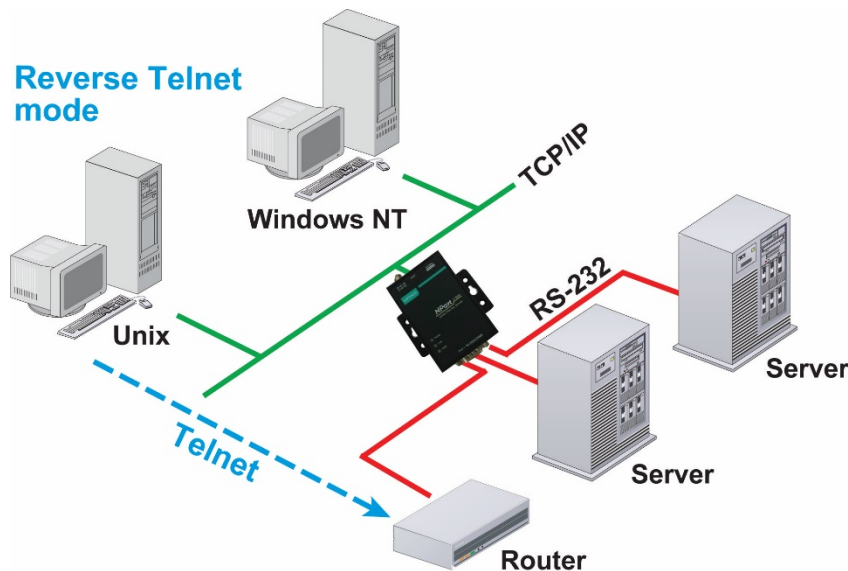

## PPP Mode

PPP Mode is only supported by the NPort 5600 Series.

The NPort 5000 provides dial-in access for ISPs and enterprises that need a remote access solution. When a user at a remote site uses a PPP dial-up connection to access the NPort 5600, the NPort 5600 plays the role of a dial-up server, but also ensures that the user has legal access to the network by verifying the user's identity with the NPort 5600 User Table.

## Disabled Mode

When the Operation Mode for a particular port is set to **Disabled**, that port will be disabled.



# Advanced Operation Mode Settings

---

Your NPort's serial ports can be configured to use one of several operation modes, such as Real COM mode or Reverse Telnet mode. In this chapter, we explain the settings for every parameter of every operation mode.

The following topics are covered in this chapter:

▣ **Overview**

- List of Parameters
- When to Make Adjustments

▣ **Using Pair Connection Modes**

▣ **Parameter Summary**

- Connection Management Parameters
- Data Packing Parameters
- Other Parameters

▣ **Web Console**

# Overview

A device port's operation mode determines how the port interacts with the network. Depending on your application and device, you may have the option of choosing between two or more operating modes. For each mode, the default settings should work for most applications. Modify these settings only if absolutely necessary for your application. The operation mode and related parameters can be configured through NPort Administrator. The same parameters may also be configured using the web console, Telnet console, or serial console.

## List of Parameters

| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode |   |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|---|
|               |                 |                 |          |                     |                      |              | <b>Connection Management Parameters</b> |
| ✓             | ✓               | ✓               |          | ✓                   | ✓                    | ✓            | TCP alive check time                    |
|               | ✓               | ✓               |          | ✓                   |                      |              | Inactivity time                         |
| ✓             | ✓               | ✓               |          |                     |                      |              | Max connection                          |
| ✓             | ✓               | ✓               |          |                     |                      |              | Ignore jammed IP                        |
| ✓             | ✓               |                 |          |                     |                      |              | Allow driver control                    |
|               |                 |                 |          |                     |                      |              | <b>Data Packing Parameters</b>          |
| ✓             | ✓               | ✓               | ✓        |                     |                      | ✓            | Packing length                          |
| ✓             | ✓               | ✓               | ✓        |                     |                      | ✓            | Delimiter 1 and 2                       |
| ✓             | ✓               | ✓               | ✓        |                     |                      | ✓            | Delimiter process                       |
| ✓             | ✓               | ✓               | ✓        |                     |                      | ✓            | Force transmit                          |
|               |                 |                 |          |                     |                      |              | <b>Other Parameters</b>                 |
|               | ✓               |                 |          | ✓                   | ✓                    |              | Local TCP port                          |
|               | ✓               |                 |          |                     |                      |              | Command port                            |
|               |                 |                 |          |                     | ✓                    |              | Destination IP address                  |
|               |                 | ✓               | ✓        |                     |                      |              | Destination IP address 1 through 4      |
|               |                 | ✓               |          |                     |                      |              | Designated local port 1 through 4       |
|               |                 |                 | ✓        |                     |                      |              | Local listen port                       |
|               |                 | ✓               |          |                     |                      |              | Connection Control                      |
|               |                 |                 |          | ✓                   |                      |              | Map <CR-LF>                             |

## When to Make Adjustments

The default settings for each operation mode are designed to work for most applications and usually do not need to be modified. However, adjustments may be required for the following situations:

- You need to control network data packing using specific delimiter characters.  
Adjust **Delimiters 1 and 2 and Delimiter process.**
- Multiple hosts will simultaneously access the attached device.  
Adjust **Max Connection, Ignore Jammed IP, and Allow driver control.**
- Data will be broadcast from the serial device to multiple network destinations.  
Adjust **Destination IP 1 through 4.**
- You are using Pair Connection modes to connect two serial devices over Ethernet.  
Adjust **Local TCP port and Destination IP Address**

# Using Pair Connection Modes

For some applications, you may want to configure two serial devices to communicate directly with each other over the network. This can be done with a pair of NPort device servers configured for Pair Connection Master/Slave modes. Configure one device port on one of the NPorts to Pair Connection Master mode, and one device port on the other NPort to Pair Connection Slave mode. It doesn't matter which NPort is the master and which NPort is the slave.

For the device port configured for Pair Connection Slave mode, designate a Local TCP port to be used for communication. For the device port configured for Pair Connection Master mode, enter the slave's IP address and Local TCP port as the **Destination IP**.

Once both device ports have been configured, the attached serial devices will communicate over Ethernet as if they were connected by a serial cable. The two NPorts can be connected by an Ethernet cable, or they can be connected to the same network.

## Parameter Summary

### Connection Management Parameters

|               |                 |                 |          |                     |                      |              |          |   |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|
| ✓             | ✓               | ✓               |          | ✓                   | ✓                    | ✓            |          | <b>Inactivity time</b>  |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | Setting Options: 0 to 99 minutes<br>Default: 7 minutes<br><br>Description: Specifies the time limit for keeping the connection open if no data flows to or from the serial device. If there is no activity for the specified time, the connection will be closed. A setting of 0 means that the connection will remain open even if data is never received.<br><br>For many applications, the serial device may be idle for long periods of time, so 0 is an appropriate setting. If you wish to use Inactivity time with TCP Client mode, you must set Connection Control to Any Character/Inactivity Time (see Connection Control).<br><br>When adjusting Inactivity time, make sure that it is greater than the Force transmit time. Otherwise, the TCP connection may be closed before data in the buffer can be transmitted. |

|               |                 |                 |          |                     |                      |              |          |   |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|
|               | ✓               | ✓               |          | ✓                   |                      |              | ✓        | <b>Inactivity time</b>  |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | Setting Options: 0 to 65535 ms<br>Default: 0<br><br>Description: Specifies the time limit for keeping the connection open if no data flows to or from the serial device. If there is no activity for the specified time, the connection will be closed. A setting of 0 means that the connection will remain open even if data is never received.<br><br>For many applications, the serial device may be idle for long periods of time, so 0 is an appropriate setting. If you wish to use Inactivity time with TCP Client mode, you must set Connection Control to Any Character/Inactivity Time (see Connection Control).<br><br>When adjusting Inactivity time, make sure that it is greater than the Force transmit time. Otherwise, the TCP connection may be closed before data in the buffer can be transmitted. |

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
| ✓             | ✓               | ✓               |          |                     |                      |              |          | <b>Max connection</b>  |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: 1 to 8 (1 to 4 for the NPort 5100/NPort 5200/NPort 5400 Series)</p> <p>Default: 1</p> <p>Description: Specifies the maximum number of simultaneous connections that the port will accept. When adjusting Max connection, make sure that Ignore jammed IP and Allow driver control are also configured correctly.</p> |

|               |                 |                 |          |                     |                      |              |          |   |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|
| ✓             | ✓               | ✓               |          |                     |                      |              |          | <b>Ignore jammed IP</b>   |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: Yes or No</p> <p>Default: No</p> <p>Description: This field specifies how an unresponsive IP address is handled when there are simultaneous connections to the device port (see Max connection). <b>Yes</b> means that transmission to the other hosts will not be suspended if one IP address becomes unresponsive. <b>No</b> means that all transmission will be suspended if one IP address becomes unresponsive, and will resume when all hosts have responded. <b>Yes</b> is the recommended setting when Max connection is 2 or more.</p> |

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
| ✓             | ✓               |                 |          |                     |                      |              |          | <b>Allow driver control</b>  |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: Yes or No</p> <p>Default: No</p> <p>Description: Specifies whether or not the device port will respond to driver control commands when multiple simultaneous connections are enabled (see Max connection).</p> |

## Data Packing Parameters

|               |                 |                 |          |                     |                      |              |          |   |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|
| ✓             | ✓               | ✓               | ✓        |                     |                      | ✓            |          | <b>Packing length</b>   |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: 0 to 1024</p> <p>Default: 0</p> <p>Description: Controls data packing by the amount of data received. Serial data accumulates in the device port's buffer until it reaches the specified length. When the specified amount of data has accumulated in the buffer, the data is packed for network transmission. A setting of 0 means that data will not be packed until the buffer is full. 0 is the recommended setting, unless your application has a specific need to limit packet sizes or improve response times.</p> |

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
| ✓             | ✓               | ✓               | ✓        |                     |                      | ✓            |          | <b>Delimiter 1 and 2</b>   |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: Enable, 0 to FF<br/>Default: Disable</p> <p>Description: Controls data packing using special delimiter character(s).<br/>Serial data accumulates in the device port's buffer until the delimiter character(s) are received, after which the data is packed for network transmission. If only one delimiter character is needed, be sure to enable Delimiter 1 only. If both Delimiter 1 and 2 are enabled, both characters must be received in sequence for data packing to occur. For example, the carriage return character could be used as a delimiter in order to transmit each sentence or paragraph in a separate packet. Data is packed according to the Delimiter process parameter.</p> <p>Delimiters must be incorporated into the data stream at the software or device level.</p> |



**ATTENTION**

When the device port buffer is full, the data will be packed for network transmission, regardless of the settings for Delimiter 1, Delimiter 2, and Force transmit.

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
| ✓             | ✓               | ✓               | ✓        |                     |                      | ✓            |          | <b>Delimiter process</b>   |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: Do Nothing, Delimiter + 1, Delimiter + 2, Strip Delimiter<br/>Default: Do Nothing</p> <p>Description: Controls how data is packed when delimiter characters are received. Note that this field has no effect if delimiters are not enabled (see Delimiters 1 and 2).</p> <p>"Do nothing" will pack the accumulated data including delimiters.</p> <p>"Delimiter + 1" will wait for an additional character before packing the accumulated data.</p> <p>"Delimiter + 2" will wait for two additional characters before packing the accumulated data.</p> <p>"Strip Delimiter" will pack the accumulated data but will not include the delimiter characters in the packet.</p> |

|               |                 |                 |          |                     |                      |              |          |   |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|
| ✓             | ✓               | ✓               | ✓        |                     |                      | ✓            |          | <b>Force transmit</b>   |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: 0 to 65535 ms<br/>Default: 0 ms</p> <p>Description: Controls data packing by the amount of time that elapses between bits of data. As serial data is received, it accumulates in the device port's buffer. If serial data is not received for the specified amount of time, the data that is currently in the buffer is packed for network transmission. A setting of 0 means that data in the buffer will not be automatically packed when additional data is not received from the device. When using this field, make sure Inactivity time is disabled or set to a larger value. Otherwise, the connection may be closed before the data in the buffer can be transmitted.</p> |

## Other Parameters

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
|               | ✓               |                 |          | ✓                   | ✓                    |              |          | <b>Local TCP port</b>  |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: 1 to 65535<br/>Default: 4001 for port 1, 4002 for port 2, etc.</p> <p>Description: Specifies the TCP port number for communicating with the attached device. Socket applications will need to use this port number to refer to the device. For Pair Connection modes, this field specifies the slave's port number, and the same value must be used for the master's Destination IP parameter.</p> |

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
|               | ✓               |                 |          |                     |                      |              |          | <b>Command port</b>  |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: 1 to 65535<br/>Default: 966</p> <p>Description: Specifies the TCP port number for Moxa IP-Serial Library commands. You do not need to reference this port number in your application when using the Moxa IP-Serial Library, since the library automatically obtains the number from the device server. Only change this setting if there is a port number conflict with another application or device.</p> |

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
|               |                 |                 |          |                     | ✓                    |              | ✓        | <b>Destination IP address</b>  |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: N/A<br/>Default: none</p> <p>Description: Specifies the IP address for the slave end of a pair connection.</p> |

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
|               |                 | ✓               | ✓        |                     |                      |              |          | <b>Destination IP address 1 through 4</b>  |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p>Setting Options: N/A<br/>Default: none</p> <p>Description: Specifies the network host(s) that will access the device. Serial data will be transmitted to every address listed, and network data will be sent to the device on a first-in-first-out basis.</p> |

|               |                 |                 |          |                     |                      |              |          |  |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|--|
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p><b>Designated local port 1 through 4</b></p> <p>Setting Options: 1 to 65535<br/>Default: none</p> <p>Description: Specifies the TCP port number that will be used for data transmission with the device port.</p>   |
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p><b>Local listen port</b></p> <p>Setting Options: 1 to 65535<br/>Default: 4001 for port 1, 4002 for port 2, etc.</p> <p>Description: Specifies the UDP port number for network communication to the serial device. Socket applications will need to use this port number to refer to the device.</p> |

|               |                 |                 |          |                     |                      |              |          |   |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p><b>Connection Control</b></p> <p>Setting Options: Startup/None, Any Character/None, Any Character/Inactivity Time, DSR On/DSR Off, DSR On/None, DCD On/DCD Off, DCD On/None<br/>Default: Startup/None</p> <p>Description: Specifies how connections to the device are established and closed.</p> <p>For example, "Startup/None" means that as soon as the device server starts up, the TCP connection is opened, and the connection can only be closed manually. "DCD On/DCD Off" means that the TCP connection is opened when the DCD signal is on, and closed when the DCD signal is off.</p> <p>If you want to use the Inactivity Time parameter to close the connection when the serial device is inactive, you must set Connection Control to "Any Character/Inactivity time".</p> |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|

|               |                 |                 |          |                     |                      |              |          |   |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|
| Real COM Mode | TCP Server Mode | TCP Client Mode | UDP Mode | Reverse Telnet Mode | Pair Connection Mode | RFC2217 Mode | PPP Mode | <p><b>Map &lt;CR-LF&gt;</b></p> <p>Setting Options: CR, LF, or CR-LF<br/>Default: CR-LF</p> <p>Description: Specifies how the ENTER key is mapped from the Ethernet port through the serial port. For certain terminal applications, the Enter key needs to be translated specifically as a CR character rather than CR-LF.</p> |
|---------------|-----------------|-----------------|----------|---------------------|----------------------|--------------|----------|---|

# Web Console

Click **Operating Settings** to display the operating settings for each of the NPort's serial ports.

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

**Operating Settings**

| Operating Settings |                |  |             |             |                   |                |
|--------------------|----------------|--|-------------|-------------|-------------------|----------------|
| Port               | Operating mode | Packing length                               | Delimiter 1 | Delimiter 2 | Delimiter process | Force transmit |
| 1                  | Real COM Mode  | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|                    |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |
| 2                  | Real COM Mode  | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|                    |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |

**Web Interface for the Overall NPort 5000 Series**

- Overview
- Quick Setup
- Basic Settings
- Network Settings
- Serial Settings
  - Port 1**
  - Port 2
  - Port 3
  - Port 4
- Operating Settings
- Accessible IP Settings
- Administration
- Backup/Restore
- System Log Settings

**Operation Modes**

| Port | Operating Mode | Packing Length                               | Delimiter 1 | Delimiter 2 | Delimiter Process | Force Transmit |
|------|----------------|--|-------------|-------------|-------------------|----------------|
| 1    | RealCOM        | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|      |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |
| 2    | RealCOM        | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|      |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |
| 3    | RealCOM        | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|      |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |
| 4    | RealCOM        | 0  | 0 (Disable) | 0 (Disable) | Do Nothing        | 0              |
|      |                | TCP alive check time: 7<br>Max connection: 1 |             |             |                   |                |

## Real COM Mode

**Web Interface for the NPort 5100, 5200, and IA5000A Series Only**

www.moxa.com

- Main Menu
- Overview
- Basic Settings
- Network Settings
- Serial Settings
- Operating Settings
  - Port 1**
  - Port 2
  - Port 3
  - Port 4
- Accessible IP Settings
- Auto Warning Settings
- Monitor
- Change Password
- Load Factory Default
- Save/Restart

**Operating Settings**

Port = 01

|                      |  |
|----------------------|--|
| Operation mode       | Real COM Mode  |
| TCP alive check time | 7 (0 - 99 min)                                       |
| Max connection       | 1  |
| Ignore jammed IP     | <input type="radio"/> No <input type="radio"/> Yes   |
| Allow driver control | <input type="radio"/> No <input type="radio"/> Yes   |
| <b>Data Packing</b>  |  |
| Packing length       | 0 (0 - 1024)   |
| Delimiter 1          | 0 (Hex) <input type="checkbox"/> Enable              |
| Delimiter 2          | 0 (Hex) <input type="checkbox"/> Enable              |
| Delimiter process    | Do Nothing (Processed only when Packing length is 0) |
| Force transmit       | 0 (0 - 65535 ms)                                     |

Apply the above settings to all serial ports



**Web Interface for the Overall NPort 5000 Series**

---

## Operation Modes

Port 1

**Operation mode** RealCOM

**TCP alive check time**  (0 - 99 min)

**Max connection** 1

**Ignore jammed IP**  No  Yes

**Allow driver control**  No  Yes

---

**Data Packing**

**Packing length**  (0 - 1024)

**Delimiter 1**  (Hex)  Enable

**Delimiter 2**  (Hex)  Enable

**Delimiter process** Do Nothing (Processed only when packing length is 0)

**Force transmit**  (0 - 65535 ms)

**Apply the above settings to**  P1  P2  P3  P4  
 All ports

---

**Submit**

| Parameter            | Setting   | Factory Default | Description  | Necessity |
|----------------------|---|-----------------|--|-----------|
| TCP Alive Check Time | 0 to 99 min   | 7 min           | <p><b>0 min:</b> TCP connection is not closed due to an idle TCP connection.</p> <p><b>1 to 99 min:</b> The NPort automatically closes the TCP connection if there is no TCP activity for the given time. After the connection is closed, the NPort starts listening for another Real COM driver connection.</p>   | Optional  |
| Max Connection       | 1 to 8<br>(1 to 4 for the NPort 5100/ NPort 5200/ NPort 5400 Series only) | 1               | <p><b>Max connection</b> is set to 2 to 8 when the user needs to receive data from different hosts simultaneously. The factory default only allows 1 connection at a same. When Max Connection is set to 1, the Real COM driver on the specific host has full control.</p> <p><b>Max. Connection 1:</b> Allows only 1 host's Real COM driver to open the specific NPort serial port.</p> <p><b>Max Connection 2 to 8:</b> Allows 2 to 8 host's Real COM drivers to open the specific NPort serial port, at the same time. When multiple hosts' Real COM drivers open the serial port at the same time, the COM driver only provides a pure data tunnel without control ability. That is, this serial port parameter will use the firmware's settings, not the settings of your application program (AP). Application software that is based on the COM driver will receive a driver response of "success" when the software uses any of the Win32 API functions. The firmware will only send the data back to the driver on the host. Data will be sent first-in-first-out when data</p> | Required  |

|                         |           |      |   |          |
|-------------------------|-----------|------|---|----------|
|                         |           |      | comes into the NPort from the Ethernet interface.   |          |
| <i>Ignore jammed IP</i> | No or Yes | No   | No: When Max connections > 1, and the serial device is transmitting data, if any one of the connected hosts is not responding, it will wait until the data has been transmitted successfully before transmitting the second group of data to all hosts.<br>Yes: If you select Yes for "Ignore jammed IP," the host that is not responding will be ignored, but the data will still be transmitted to the other hosts. | Optional |
| <i>Packing length</i>   | 0 to 1024 | 0    | 0: The Delimiter Process will be followed, regardless of the length of the data packet.<br>Greater than 0: If the data length (in bytes) matches the configured value, the data will be forced out.   | Optional |
| <i>Delimiter 1</i>      | 00 to FF  | None | Once the NPort receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it to the NPort's Ethernet port.   | Optional |
| <i>Delimiter 2</i>      | 00 to FF  | None |   | Optional |

| Parameter                | Setting   | Factory Default | Description   | Necessity |
|--------------------------|---|-----------------|---|-----------|
| <i>Delimiter process</i> | Do nothing, Delimiter + 1, Delimiter + 2, Strip Delimiter | Do nothing      | <b>[Delimiter + 1] or [Delimiter + 2]:</b> The data will be transmitted when an additional byte (for Delimiter +1), or an additional 2 bytes (for Delimiter +2) of data is received after receiving the Delimiter.<br><b>[Strip Delimiter]:</b> When the Delimiter is received, the Delimiter is deleted (i.e., stripped), and the remaining data is transmitted.<br><b>[Do nothing]:</b> The data will be transmitted when the Delimiter is received.  | Optional  |
| <i>Force Transmit</i>    | 0 to 65535 ms   | 0 ms            | <b>0:</b> Disable the force transmit timeout.<br><b>1 to 65535:</b> Forces the NPort's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.<br>This parameter defines the time interval during which the NPort fetches the serial data from its internal buffer. If data is incoming through the serial port, the NPort stores the data in the internal buffer. The NPort transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified under Force Transmit timeout. | Optional  |



**ATTENTION**

When Max connection is set to two or more, the NPort will use a "multiconnection application" (i.e., two or more hosts are allowed access to the port at the same time). When using a multiconnection application, the NPort will use the serial communication parameters set in the console. All of the hosts connected to that port must use the same serial settings. If one of the hosts opens the COM port with parameters that are different from the NPort's console setting, data communication may not work properly.

**NOTE**

Optimal force transmit timeout differs according to your application, but it must be at least larger than one character interval within the specified baudrate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits needed to send a character is 10 bits, and the time required to transfer one character is:

$$10 \text{ (bits)} / 1200 \text{ (bits/s)} * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$$

Therefore, you should set Force Transmit timeout greater than 8.3 ms. Force Transmit timeout is specified in milliseconds and must be greater than 10 ms.

If you want to send the series of characters in a packet, the serial device attached to the NPort should send characters with time delay less than Force Transmit timeout between characters and the total length of data must be smaller than or equal to the NPort's internal buffer size. The serial communication buffer size of the NPort is 1 Kbyte per port.

**RFC2217 Mode**

**Web Interface for the NPort 5000A and NPort IA5000A Series Only**

The screenshot shows the Moxa web interface for configuring NPort settings. The left sidebar contains a 'Main Menu' with options like Overview, Basic Settings, Network Settings, Serial Settings, Operating Settings (selected), Accessible IP Settings, PPP User Table Settings, Auto Warning Settings, Monitor, Change Password, Load Factory Default, and Save/Restart. Under 'Operating Settings', 'Port 1' is selected. The main content area displays 'Operating Settings' for 'Port 1'. The 'Operation mode' is set to 'RFC 2217 Mode'. The 'TCP alive check time' is set to 7 (0 - 99 min). The 'Data Packing' section includes 'Packing length' (0, 0 - 1024), 'Delimiter 1' (0 Hex, Enable checkbox), 'Delimiter 2' (0 Hex, Enable checkbox), 'Delimiter process' (Do Nothing, (Processed only when Packing length is 0)), and 'Force transmit' (0, 0 - 65535 ms). There is an 'Apply the above settings to all serial ports' checkbox and a 'Submit' button.

**Web Interface for the Overall NPort 5000 Series**

---

**Operation Modes**

Port 1

Operation mode: RFC2217

TCP alive check time: 7 (0 - 99 min)

Local TCP port: 4001

---

Data Packing

Packing length: 0 (0 - 1024)

Delimiter 1: 00 (Hex)  Enable

Delimiter 2: 00 (Hex)  Enable

Delimiter process: Do Nothing (Processed only when packing length is 0)

Force transmit: 0 (0 - 65535 ms)

Apply the above settings to:  P1  P2  P3  P4  
 All ports

**Submit**

| Parameter            | Setting   | Factory Default | Description  | Necessity |
|----------------------|---|-----------------|--|-----------|
| TCP Alive Check Time | 0 to 99 min   | 7 min           | <b>0 min:</b> TCP connection is not closed due to an idle TCP connection.<br><b>1 to 99 min:</b> The NPort automatically closes the TCP connection if there is no TCP activity for the given time. After the connection is closed, the starts listening for another TCP connection.  | Optional  |
| Local TCP Port       | 1 to 65535  | 4001            | The TCP port that the NPort uses to listen to connections, and that other devices must use to contact the NPort. To avoid conflicts with well-known TCP ports, the default is set to 4001.   | Required  |
| Packing length       | 0 to 1024   | 0               | 0: The Delimiter Process will be followed, regardless of the length of the data packet. Greater than 0: If the data length (in bytes) matches the configured value, the data will be forced out.   | Optional  |
| Delimiter 1          | 00 to FF  | None            | Once the NPort receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it to the NPort's Ethernet port.  | Optional  |
| Delimiter 2          | 00 to FF  | None            |  | Optional  |
| Delimiter process    | Do nothing, Delimiter + 1, Delimiter + 2, Strip Delimiter | Do nothing      | <b>[Delimiter + 1] or [Delimiter + 2]:</b> The data will be transmitted when an additional byte (for Delimiter +1), or an additional 2 bytes (for Delimiter +2) of data is received after receiving the Delimiter.<br><b>[Strip Delimiter]:</b> When the Delimiter is received, the Delimiter is deleted (i.e., stripped), and the remaining data is transmitted.<br><b>[Do nothing]:</b> The data will be transmitted when the Delimiter is received. | Optional  |

|                       |                      |             |  |                 |
|-----------------------|----------------------|-------------|--|-----------------|
| <p>Force Transmit</p> | <p>0 to 65535 ms</p> | <p>0 ms</p> | <p><b>0:</b> Disable the force transmit timeout.<br/> <b>1 to 65535:</b> Forces the NPort's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.<br/>                 This parameter defines the time interval during which the NPort fetches the serial data from its internal buffer. If data is incoming through the serial port, the NPort stores the data in the internal buffer. The NPort transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified under Force Transmit timeout.</p> | <p>Optional</p> |
|-----------------------|----------------------|-------------|--|-----------------|

**NOTE** Optimal force transmit timeout differs according to your application, but it must be at least larger than one character interval within the specified baudrate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits needed to send a character is 10 bits, and the time required to transfer one character is:

$$10 \text{ (bits)} / 1200 \text{ (bits/s)} * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$$

Therefore, you should set Force Transmit timeout to be larger than 8.3 ms. Force Transmit timeout is specified in milliseconds and must be larger than 10 ms.

If you want to send the series of characters in a packet, the serial device attached to the NPort should send characters with time delay less than Force Transmit timeout between characters and the total length of data must be smaller than or equal to the NPort's internal buffer size. The serial communication buffer size of the NPort is 1 Kbyte per port.

## TCP Server Mode

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

The screenshot shows the Moxa web interface for the NPort 5100, 5200, and IA5000 series. The interface is titled "Operating Settings" and is for "Port=01". The "Operation mode" is set to "TCP Server Mode". Other settings include "TCP alive check time" (7 min), "Inactivity time" (0 ms), "Max connection" (1), "Ignore jammed IP" (No), and "Allow driver control" (No). Under "Data Packing", "Packing length" is 0, and "Delimiter 1" and "Delimiter 2" are both 0 with "Enable" checkboxes. "Force transmit" is 0 ms. Under "TCP Server Mode", "Local TCP port" is 4001 and "Command port" is 966. A "Submit" button is at the bottom.

### Web Interface for Overall NPort 5000 Series

## Operation Modes

**Port 1**

---

**Operation mode** TCP Server ▾

**TCP alive check time** 7 (0 - 99 min)

**Inactivity time** 0 (0 - 65535 ms)

**Max connection** 1 ▾

**Ignore jammed IP**  No  Yes

**Allow driver control**  No  Yes

**Local TCP port** 4001

**Command port** 966

**Data Packing**

---

**Packing length** 0 (0 - 1024)

**Delimiter 1** 00 (Hex)  Enable

**Delimiter 2** 00 (Hex)  Enable

**Delimiter process** Do Nothing ▾ (Processed only when packing length is 0)

**Force transmit** 0 (0 - 65535 ms)

**Apply the above settings to**  P1  P2  P3  P4  
 All ports

Submit

| Parameter                   | Setting       | Factory Default | Description   | Necessity |
|-----------------------------|---------------|-----------------|---|-----------|
| <i>TCP Alive Check Time</i> | 0 to 99 min   | 7 min           | <p><b>0 min:</b> TCP connection is not closed due to an idle TCP connection.</p> <p><b>1 to 99 min:</b> The NPort automatically closes the TCP connection if there is no TCP activity for the given time. After the connection is closed, the NPort starts listening for another Real COM driver connection.</p>  | Optional  |
| <i>Inactivity Time</i>      | 0 to 65535 ms | 0 ms            | <p><b>0 ms:</b> TCP connection is not closed due to an idle serial line.</p> <p><b>0-65535 ms:</b> The NPort automatically closes the TCP connection if there is no serial data activity for the given time. After the connection is closed, the NPort starts listening for another TCP connection.</p> <p>This parameter determines when the TCP connection is in Closed or Listen status. The connection is closed if there is no incoming or outgoing data through the serial port during the specific Inactivity time.</p> <p>If the inactivity time is set to 0, the current TCP connection is maintained until there is a connection close request. Although inactivity time is disabled, the NPort will check the connection status between the NPort and remote host by sending "keep alive" packets periodically. If the remote host does not respond to the packet, it assumes that the connection was closed down unintentionally.</p> | Optional  |

| Parameter                   | Setting   | Factory Default | Description  | Necessity |
|-----------------------------|---|-----------------|--|-----------|
|                             |   |                 | The NPort will then force the existing TCP connection to close.  |           |
| <i>Max Connection</i>       | 1 ~ 8<br>(1 to 4 for the NPort 5100/<br>NPort 5200/<br>NPort 5400 Series) | 1               | <p><b>Max connection</b> is set to 2 to 8 when the user needs to receive data from different hosts simultaneously. The factory default only allows 1 connection at a same. When Max Connection is set to 1, the Real COM driver on the specific host has full control.</p> <p><b>Max. Connection 1:</b> Allows only 1 host's Real COM driver to open the specific NPort serial port.</p> <p><b>Max Connection 2 to 8:</b> Allows 2 to 8 host's Real COM drivers to open the specific NPort serial port, at the same time. When multiple hosts' Real COM drivers open the serial port at the same time, the COM driver only provides a pure data tunnel without control ability. That is, this serial port parameter will use firmware's settings, not the settings of your application program (AP). Application software that is based on the COM driver will receive a driver response of "success" when the software uses any of the Win32 API functions. The firmware will only send the data back to the driver on the host. Data will be sent first-in-first-out when data comes into the NPort from the Ethernet interface.</p> | Required  |
| <i>Ignore jammed IP</i>     | No or Yes   | No              | <p>No: When Max connections &gt; 1, and the serial device is transmitting data, if any one of the connected hosts is not responding, it will wait until the data has been transmitted successfully before transmitting the second group of data to all hosts.</p> <p>Yes: If you select Yes for "Ignore jammed IP," the host that is not responding will be ignored, but the data will still be transmitted to the other hosts.</p>  | Optional  |
| <i>Allow Driver Control</i> | No or Yes   | No              | If "max connection" is greater than 1, the NPort will ignore driver control commands from all connected hosts. However, if you set "Allow driver control" to Yes, control commands will be accepted. Note that since the NPort may get configuration changes from multiple hosts, the most recent command received will take precedence.   | Optional  |
| <i>Packing length</i>       | 0 to 1024   | 0               | <p>0: The Delimiter Process will be followed, regardless of the length of the data packet.</p> <p>Greater than 0: If the data length (in bytes) matches the configured value, the data will be forced out.</p>   | Optional  |
| <i>Delimiter 1</i>          | 00 to FF  | None            |  | Optional  |

| Parameter                | Setting   | Factory Default | Description   | Necessity |
|--------------------------|---|-----------------|---|-----------|
| <i>Delimiter 2</i>       | 00 to FF  | None            | Once the NPort receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it to the NPort's Ethernet port.   | Optional  |
| <i>Delimiter process</i> | Do nothing, Delimiter + 1, Delimiter + 2, Strip Delimiter | Do nothing      | <b>[Delimiter + 1] or [Delimiter + 2]:</b> The data will be transmitted when an additional byte (for Delimiter +1), or an additional 2 bytes (for Delimiter +2) of data is received after receiving the Delimiter.<br><b>[Strip Delimiter]:</b> When the Delimiter is received, the Delimiter is deleted (i.e., stripped), and the remaining data is transmitted.<br><b>[Do nothing]:</b> The data will be transmitted when the Delimiter is received.  | Optional  |
| <i>Force Transmit</i>    | 0 to 65535 ms   | 0 ms            | <b>0:</b> Disable the force transmit timeout.<br><b>1 to 65535:</b> Forces the NPort's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.<br>This parameter defines the time interval during which the NPort fetches the serial data from its internal buffer. If data is incoming through the serial port, the NPort stores the data in the internal buffer. The NPort transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified under Force Transmit timeout. | Optional  |
| <i>Local TCP port</i>    | 1 to 65535  | 4001            | The TCP port that the NPort uses to listen to connections, and that other devices must use to contact NPort. To avoid conflicts with well-known TCP ports, the default is set to 4001.  | Required  |
| <i>Command port</i>      | 1 to 65535  | 966             | The command port is a listen TCP port for IP-Serial Lib commands from the host. In order to prevent a TCP port conflict with other applications, the user can adjust the command port to another port if needed.  | Optional  |

**ATTENTION**

The Inactivity time should at least be set larger than that of Force transmit timeout. To prevent the unintended loss of data due to the session being disconnected, it is highly recommended that this value is set large enough so that the intended data transfer is completed.

**ATTENTION**

Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1 KB, the NPort will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.



### TCP Client Mode

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

**MOXA** [www.moxa.com](http://www.moxa.com)

**Operating Settings**

Port=01

Operation mode: TCP Client Mode

TCP alive check time: 7 (0 - 99 min)

Inactivity time: 0 (0 - 65535 ms)

Ignore jammed IP:  No  Yes

**Data Packing**

Packing length: 0 (0 - 1024)

Delimiter 1: 0 (Hex)  Enable

Delimiter 2: 0 (Hex)  Enable

Delimiter process: Do Nothing (Processed only when Packing length is 0)

Force transmit: 0 (0 - 65535 ms)

**TCP Client Mode**

Destination IP Address

Destination IP address 1: : 4001

Destination IP address 2: : 4001

Destination IP address 3: : 4001

Destination IP address 4: : 4001

Designated Local Port 1: 5011 (0 - 65535, 0 represents assigned automatically.)

Designated Local Port 2: 5012 (0 - 65535)

Designated Local Port 3: 5013 (0 - 65535)

Designated Local Port 4: 5014 (0 - 65535)

Connection control: Startup/None (Connect on/Disconnect by)

Apply the above settings to all serial ports

Submit

**Web Interface for the Overall NPort 5000 Series**

---

## Operation Modes

**Port 1**

---

**Operation mode** TCP Client

**TCP alive check time** 7 (0 - 99 min)

**Inactivity time** 0 (0 - 65535 ms)

**Ignore jammed IP**  No  Yes

**Destination IP address 1**  Port 4001

**Destination IP address 2**  Port 4001

**Destination IP address 3**  Port 4001

**Destination IP address 4**  Port 4001

**Designated local port 1** 5011

**Designated local port 2** 5012

**Designated local port 3** 5013

**Designated local port 4** 5014

**Connection control** Startup/None

---

**Data Packing**

**Packing length** 0 (0 - 1024)

**Delimiter 1** 00 (Hex)  Enable

**Delimiter 2** 00 (Hex)  Enable

**Delimiter process** Do Nothing (Processed only when packing length is 0)

**Force transmit** 0 (0 - 65535 ms)

**Apply the above settings to**  P1  P2  P3  P4  
 All ports

---

Submit

| Parameter                   | Setting       | Factory Default | Description   | Necessity |
|-----------------------------|---------------|-----------------|---|-----------|
| <i>TCP Alive Check Time</i> | 0 to 99 min   | 7 min           | <p><b>0 min:</b> TCP connection is not closed due to an idle TCP connection.</p> <p><b>1 to 99 min:</b> The NPort automatically closes TCP connection if there is no TCP activity for the given time. After the connection is closed, the NPort starts listening for another Real COM driver connection.</p>  | Optional  |
| <i>Inactivity Time</i>      | 0 to 65535 ms | 0 ms            | <p><b>0 ms:</b> TCP connection is not closed due to an idle serial line.</p> <p><b>0-65535 ms:</b> The NPort automatically closes the TCP connection if there is no serial data activity for the given time. After the connection is closed, the NPort starts listening for another TCP connection.</p> <p>This parameter determines when the TCP connection is in Closed or Listen status. The connection is closed if there is no incoming or outgoing data through the serial port during the specific Inactivity time.</p> <p>If the inactivity time is set to 0, the current TCP connection is maintained until there is connection close request. Although inactivity time is disabled, the NPort will check the connection status between the NPort and remote</p> | Optional  |

| Parameter                   | Setting   | Factory Default | Description   | Necessity |
|-----------------------------|---|-----------------|---|-----------|
|                             |   |                 | host by sending "keep alive" packets periodically. If the remote host does not respond to the packet, it assumes that the connection was closed down unintentionally. The NPort will then force the existing TCP connection to close.   |           |
| <i>Ignore jammed IP</i>     | No or Yes   | No              | No: When Max connections > 1, and the serial device is transmitting data, if any one of the connected hosts is not responding, it will wait until the data has been transmitted successfully before transmitting the second group of data to all hosts.<br>Yes: If you select Yes for "Ignore jammed IP," the host that is not responding will be ignored, but the data will still be transmitted to the other hosts.                                       | Optional  |
| <i>Allow Driver Control</i> | No or Yes   | No              | If "max connection" is greater than 1, the NPort will ignore driver control commands from all connected hosts. However, if you set "Allow driver control" to Yes, control commands will be accepted. Note that since the NPort may get configuration changes from multiple hosts, the most recent command received will take precedence.  | Optional  |
| <i>Packing length</i>       | 0 to 1024   | 0               | 0: The Delimiter Process will be followed, regardless of the length of the data packet. Greater than 0: If the data length (in bytes) matches the configured value, the data will be forced out.  | Optional  |
| <i>Delimiter 1</i>          | 00 to FF  | None            | Once the NPort receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it to the NPort's Ethernet port.   | Optional  |
| <i>Delimiter 2</i>          | 00 to FF  | None            |   | Optional  |
| <i>Delimiter process</i>    | Do nothing, Delimiter + 1, Delimiter + 2, Strip Delimiter | Do nothing      | <b>[Delimiter + 1] or [Delimiter + 2]:</b> The data will be transmitted when an additional byte (for Delimiter +1), or an additional 2 bytes (for Delimiter +2) of data is received after receiving the Delimiter.<br><b>[Strip Delimiter]:</b> When the Delimiter is received, the Delimiter is deleted (i.e., stripped), and the remaining data is transmitted.<br><b>[Do nothing]:</b> The data will be transmitted when the Delimiter is received.      | Optional  |
| <i>Force Transmit</i>       | 0 to 65535 ms   | 0 ms            | <b>0:</b> Disable the force transmit timeout.<br><b>1 to 65535:</b> Forces the NPort's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.<br>This parameter defines the time interval during which the NPort fetches the serial data from its internal buffer. If data is incoming through the serial port, the NPort stores the data in the internal buffer. The NPort transmits data stored | Optional  |

| Parameter                            | Setting   | Factory Default  | Description  | Necessity |
|--------------------------------------|---|--|--|-----------|
|                                      |   |  | in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified under Force Transmit timeout.  |           |
| <i>Destination IP address 1</i>      | IP address or Domain Name (E.g., 192.168.1.1)   | None   | Allows the NPort to connect actively to the remote host (up to 4 hosts) whose IP address is set by this parameter.<br>The "Destination IP address" parameter can use either IP address or Domain Name. For some applications, the user may need to send the data actively to the remote destination domain name. | Required  |
| <i>Destination IP address 2/3/4</i>  |   |  |  |           |
| <i>Designated Local Port 1/2/3/4</i> | TCP Port No.  | 5011 (Port 1)<br>5012 (Port 2)<br>5013 (Port 3)<br>5014 (Port 4) | N/A  | Required  |
| <i>Connection control</i>            | Startup/None, Any Character/None, Any Character/Inactivity Time, DSR ON/DSR OFF, DSR ON/None, DCD ON/DCD OFF, DCD ON/None | Startup/None   | The meaning of each of the above settings is given in the table below. In general, both the Connect condition and Disconnect condition are given.  | Required  |

| Connect/Disconnect                   | Description  |
|--------------------------------------|--|
| <i>Startup/None (default)</i>        | A TCP connection will be established on startup, and will remain active indefinitely.  |
| <i>Any Character/None</i>            | A TCP connection will be established when any character is received from the serial interface, and will remain active indefinitely.                              |
| <i>Any Character/Inactivity Time</i> | A TCP connection will be established when any character is received from the serial interface, and will be disconnected when the Inactivity time out is reached. |
| <i>DSR On/DSR Off</i>                | A TCP connection will be established when a DSR "On" signal is received, and will be disconnected when a DSR "Off" signal is received.                           |
| <i>DSR On/None</i>                   | A TCP connection will be established when a DSR "On" signal is received, and will remain active indefinitely.  |
| <i>DCD On/DCD Off</i>                | A TCP connection will be established when a DCD "On" signal is received, and will be disconnected when a DCD "Off" signal is received.                           |
| <i>DCD On/None</i>                   | A TCP connection will be established when a DCD "On" signal is received, and will remain active indefinitely.  |



**ATTENTION**

The Inactivity time should at least be set larger than that of Force transmit timeout. To prevent the unintended loss of data due to the session being disconnected, it is highly recommended that this value is set large enough so that the intended data transfer is completed.

Inactivity time is ONLY active when "TCP connect on" is set to "Any character."

**NOTE**

Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1 KB, the NPort will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.



**ATTENTION**

Up to 4 connections can be established between the NPort and hosts. The connection speed or throughput may be low if one of the four connections is slow, since the slow connection will slow down the other 3 connections.

**UDP Mode**

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

**Operating Settings**

Port=01

Operation mode: UDP Mode

**Data Packing**

Packing length: 0 (0 - 1024)

Delimiter 1: 0 (Hex)  Enable

Delimiter 2: 0 (Hex)  Enable

Delimiter process: Do Nothing (Processed only when Packing length is 0)

Force transmit: 0 (0 - 65535 ms)

**UDP Mode**

|                          | Begin | End | Port |
|--------------------------|-------|-----|------|
| Destination IP address 1 |       |     | 4001 |
| Destination IP address 2 |       |     | 4001 |
| Destination IP address 3 |       |     | 4001 |
| Destination IP address 4 |       |     | 4001 |
| Local Listen port        | 4001  |     |      |

Apply the above settings to all serial ports (Local listen port will be enumerated automatically).

Submit

**Web Interface for the Overall NPort 5000 Series**

---

## Operation Modes

Port 1

Operation mode: UDP

|                          | Begin  | End                                       | Port   |
|--------------------------|--|---|--------|
| Destination IP address 1 | <input style="width: 100%;" type="text"/>              | <input style="width: 100%;" type="text"/> | : 4001 |
| Destination IP address 2 | <input style="width: 100%;" type="text"/>              | <input style="width: 100%;" type="text"/> | : 4001 |
| Destination IP address 3 | <input style="width: 100%;" type="text"/>              | <input style="width: 100%;" type="text"/> | : 4001 |
| Destination IP address 4 | <input style="width: 100%;" type="text"/>              | <input style="width: 100%;" type="text"/> | : 4001 |
| Local listen port        | <input style="width: 100%;" type="text" value="4001"/> |   |        |

Data Packing

Packing length:  (0 - 1024)

Delimiter 1:  (Hex)  Enable

Delimiter 2:  (Hex)  Enable

Delimiter process: Do Nothing (Processed only when packing length is 0)

Force transmit:  (0 - 65535 ms)

Apply the above settings to:  P1  P2  P3  P4  
 All ports

Submit

| Parameter                | Setting   | Factory Default | Description   | Necessity |
|--------------------------|---|-----------------|---|-----------|
| <i>Packing length</i>    | 0 to 1024   | 0               | 0: The Delimiter Process will be followed, regardless of the length of the data packet. Greater than 0: If the data length (in bytes) matches the configured value, the data will be forced out.  | Optional  |
| <i>Delimiter 1</i>       | 00 to FF  | None            | Once the NPort receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it to the NPort's Ethernet port.   | Optional  |
| <i>Delimiter 2</i>       | 00 to FF  | None            |   | Optional  |
| <i>Delimiter process</i> | Do nothing, Delimiter + 1, Delimiter + 2, Strip Delimiter | Do nothing      | <p><b>[Delimiter + 1] or [Delimiter + 2]:</b> The data will be transmitted when an additional byte (for Delimiter +1), or an additional 2 bytes (for Delimiter +2) of data is received after receiving the Delimiter.</p> <p><b>[Strip Delimiter]:</b> When the Delimiter is received, the Delimiter is deleted (i.e., stripped), and the remaining data is transmitted.</p> <p><b>[Do nothing]:</b> The data will be transmitted when the Delimiter is received.</p> | Optional  |
| <i>Force Transmit</i>    | 0 to 65535 ms   | 0 ms            | <p><b>0:</b> Disable the force transmit timeout.</p> <p><b>1 to 65535:</b> Forces the NPort's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.</p> <p>This parameter defines the time interval during which the NPort fetches the serial data from its internal buffer. If data is incoming</p>   | Optional  |

| Parameter                    | Setting   | Factory Default                          | Description  | Necessity |
|------------------------------|---|--|--|-----------|
|                              |   |  | through the serial port, the NPort stores the data in the internal buffer. The NPort transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified under Force Transmit timeout. |           |
| Destination IP address 1     | IP address range                                    | Begin: Empty<br>End: Empty<br>Port: 4001 | N/A  | Required  |
| Destination IP address 2/3/4 | E.g., Begin:<br>192.168.1.1<br>End:<br>192.168.1.10 |  | N/A  | Optional  |
| Local listen port            | 1 to 65535  | 4001                                     | The UDP port that the NPort listens to, and that other devices must use to contact the NPort. To avoid conflicts with well-known UDP ports, the default is set to 4001.  | Required  |

**NOTE** Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1 KB, the NPort will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

### UDP Multicast

A multicast is a packet sent by one host to multiple hosts. In multicast mode, each host that belongs to a specific multicast group will receive multicast packets for that group. For a host to be configured as a multicast receiver over the Internet, the must inform the routers on its LAN. The Internet Group Management Protocol (IGMP) is used to communicate group membership information between hosts and routers on a LAN. The NPort 5000 Series supports IGMP version 2. The NPort 5100, NPort 5200, IA5000 Series do not support IGMP function.

## Operation Modes

**Port 1**

**Operation mode** UDP

|                          | Begin   | End                                       | Port   |
|--------------------------|---|---|--------|
| Destination IP address 1 | <input style="width: 100%;" type="text" value="239.1.1.1"/> | <input style="width: 100%;" type="text"/> | : 4001 |
| Destination IP address 2 | <input style="width: 100%;" type="text"/>                   | <input style="width: 100%;" type="text"/> | : 4001 |
| Destination IP address 3 | <input style="width: 100%;" type="text"/>                   | <input style="width: 100%;" type="text"/> | : 4001 |
| Destination IP address 4 | <input style="width: 100%;" type="text"/>                   | <input style="width: 100%;" type="text"/> | : 4001 |
| Local listen port        | <input style="width: 100%;" type="text" value="4001"/>      |   |        |

**Data Packing**

**Packing length**  (0 - 1024)

**Delimiter 1**  (Hex)  Enable

**Delimiter 2**  (Hex)  Enable

**Delimiter process** Do Nothing (Processed only when packing length is 0)

**Force transmit**  (0 - 65535 ms)

**Apply the above settings to**  P1  P2  P3  P4  
 All ports

Submit



Type the IP address (e.g., 239.1.1.1) assigned to the multicast group in the **Begin** column. The NPort will automatically add the Group, and receive all packets from this group as required by the multicast function.

## Pair Connection Mode

Pair Connection Mode employs two NPort device servers in tandem, and can be used to remove the 15-meter distance limitation imposed by the RS-232 interface. One NPort is connected from its RS-232 port to the COM port of a PC or other type of computer, such as a hand-held PDA, and the serial device is connected to the RS-232 port of the other NPort. The two NPort device servers are then connected to each other with a cross-over Ethernet cable, both are connected to the same LAN, or in a more advanced setup, they communicate with each other over a WAN (i.e., through one or more routers). Pair Connection Mode transparently transfers both data and modem control signals (although it cannot transmit the DCD signal) between the two NPort device servers.

### Pair Connection Master Mode

When using Pair Connection Mode, you must select **Pair Connection Master Mode** for the Operation mode of one of the NPort device servers. In effect, this NPort will be acting as a TCP client.

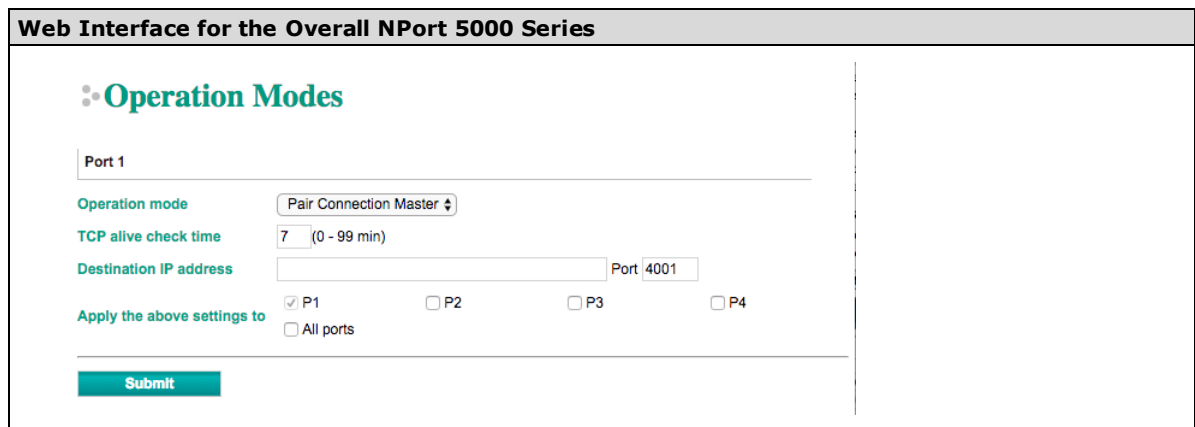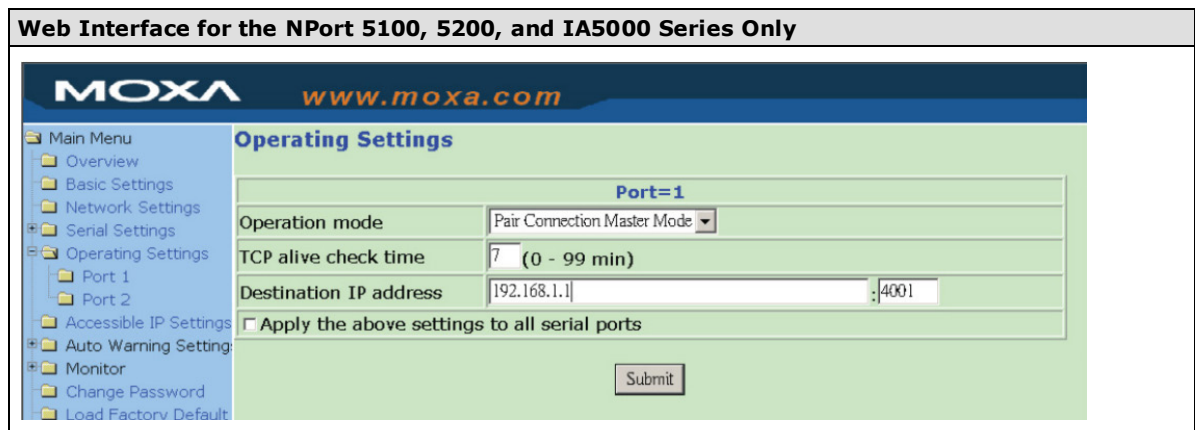

| Parameter              | Setting                   | Factory Default | Description  | Necessity |
|------------------------|---------------------------|-----------------|--|-----------|
| TCP Alive Check Time   | 0 to 99 min               | 7 min           | <b>0 min:</b> TCP connection is not closed due to an idle TCP connection.<br><b>1 to 99 min:</b> The NPort closes the TCP connection automatically if there is no TCP activity for the given time. | Required  |
| Destination IP address | IP address or Domain Name | blank           | The Pair Connection "Master" will contact the network host that has this IP address. Data will be transmitted through the port No.   | Optional  |



| Parameter | Setting             | Factory Default | Description  | Necessity |
|-----------|---------------------|-----------------|--|-----------|
|           | (E.g., 192.168.1.1) |                 | (4001 by default). Note that you must configure the same TCP port No. for the device server acting as the Pair Connection "Slave." |           |
|           | TCP Port            | 4001            |  | Required  |

**Pair Connection Slave Mode**

When using Pair Connection Mode, you must select **Pair Connection Slave Mode** for the Operation mode of one of the NPort device servers. In effect, this NPort will be acting as a TCP server.


**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

**Web Interface for the Overall NPort 5000 Series**


| Parameter            | Setting                   | Factory Default | Description  | Necessity |
|----------------------|---------------------------|-----------------|--|-----------|
| TCP Alive Check Time | 0 to 99 min               | 7 min           | <b>0 min:</b> TCP connection is not closed due to an idle TCP connection.<br><b>1 to 99 min:</b> The NPort closes the TCP connection automatically if there is no TCP activity for the given time. | Required  |
| Local TCP port       | TCP port No. (e.g., 4001) | 4001            | This Port No. must be the same port No. that you set up for the Pair Connection "Master" device server.  | Required  |

## Ethernet Modem Mode (for the NPort IA5000/IA5000A, NPort 5000A, NPort 5000AI-M12, NPort 5100 Series only)

Web Interface for the NPort 5100 and IA5000 Series Only

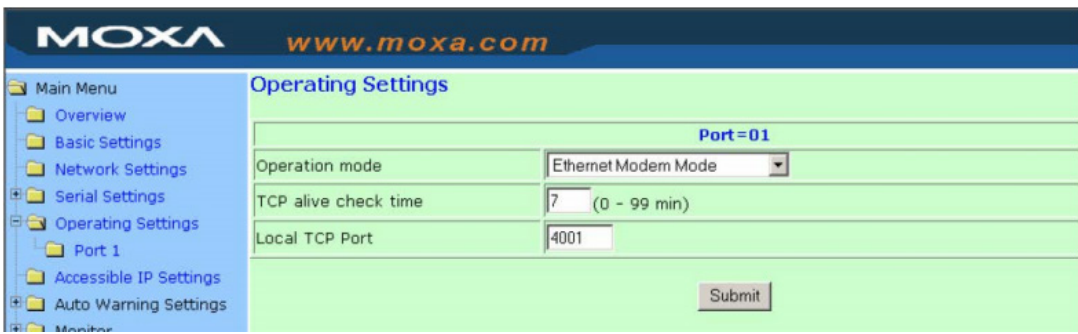

Web Interface for the NPort IA5000A, 5000A, and 5000AI-M12 Series Only

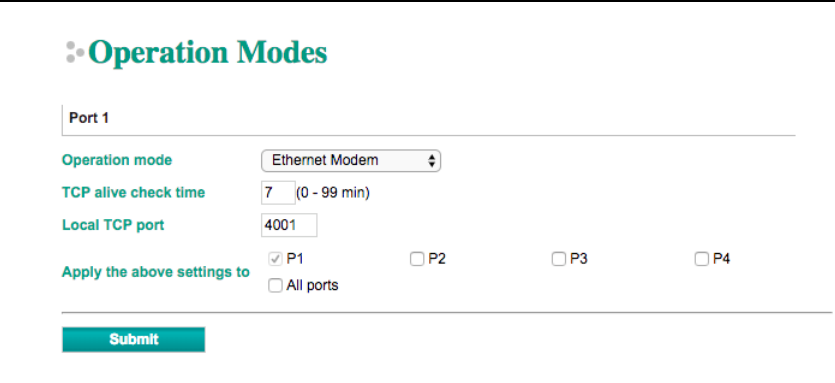

### Dial-in

The NPort listens for a TCP/IP connection request from the remote Ethernet modem or host. The NPort's response depends on the ATSO value, as outlined below.

#### ATSO=0 (default):

The NPort will temporarily accept the TCP connection and then send the **RING** signal out through the serial port. The serial controller must reply with "ATA" within 2.5 seconds to accept the connection request, after which the NPort enters data mode. If no "ATA" command is received, the NPort will disconnect after sending three "RING" signals.

#### ATSO≥0:

The NPort will accept the TCP connection immediately and then send the **CONNECT <baud>** command to the serial port, in which <baud> represents the baudrate of the NPort's serial port. After that, the NPort immediately enters data mode.

### Dial-out

The NPort accepts the AT command **ATD <IP>:<TCP port>** from the serial port and then requests a TCP connection from the remote Ethernet Modem or PC. This is where <IP> is the IP address of the remote Ethernet modem or PC, and <TCP port> is the TCP port number of the remote Ethernet modem or PC. Once the remote unit accepts this TCP connection, the NPort will send out the **CONNECT <baud>** signal via the serial port and then enter data mode.

### Disconnection Request from the Local Site

When the NPort is in data mode, the user can drive the DTR signal to OFF, or send +++ from the local serial port to the NPort. The NPort will enter command mode and return **NO CARRIER** via the serial port, and then input **ATH** to shut down the TCP connection after 1 second.

**NOTE** The “+++” command cannot be divided. The “+” character can be changed in register S2, and the guard time, which prefixes and suffixes the “+++” in order to protect the raw data, can be changed in register S12.

### Disconnection Request from the Remote Site

After the TCP connection has been shut down by the remote Ethernet modem or PC, the NPort will send the **NO CARRIER** signal via the serial port and then return to command mode.

### AT Commands

The NPort supports the following common AT commands used with a typical modem:

| No. | AT command            | Description   | Remarks           |
|-----|-----------------------|---|-------------------|
| 1   | ATA                   | Answer manually   |                   |
| 2   | ATD <IP>:<Port>       | Dial up the IP address: Port No.  |                   |
| 3   | ATE                   | ATE0=Echo OFF<br>ATE1=Echo ON (default)   |                   |
| 4   | ATH                   | ATH0=On-hook (default)<br>ATH1=Off-hook   |                   |
| 5   | ATI, ATIO, ATI1, ATI2 | Modem version   | reply “OK” only   |
| 6   | ATL                   | Speaker volume option   | reply “OK” only   |
| 7   | ATM                   | Speaker control option  | reply “OK” only   |
| 8   | ATO                   | On line command   |                   |
| 9   | ATP, ATT              | Set Pulse/Tone Dialing mode   | reply “OK” only   |
| 10  | ATQ0, ATQ1            | Quiet command (default=ATQ0)  |                   |
| 11  | ATSr=n                | Change the contents of S register   | See “S registers” |
| 12  | ATSr?                 | Read the contents of S register   | See “S registers” |
| 13  | ATV                   | Result code type<br>ATV0 for digit code<br>ATV1 for text code<br>0=OK<br>1=connect (default)<br>2=ring<br>3=No carrier<br>4=error |                   |
| 14  | ATZ                   | Reset (disconnect, enter command mode and restore the flash settings)   |                   |
| 15  | AT&C                  | Serial port DCD control AT&C0=DCD always on<br>AT&C1=DTE detects connection by DCD on/off (default)                               |                   |
| 16  | AT&D                  | Serial port DTR control AT&D0=recognize DTE always ready<br>AT&D1, AT&D2=reply DTE when DTR On (default)                          |                   |
| 17  | AT&F                  | Restore manufacturer’s settings   |                   |
| 18  | AT&G                  | Select guard time   | reply “OK” only   |
| 19  | AT&R                  | Serial port RTS option command  | reply “OK” only   |
| 20  | AT&S                  | Serial port DSR control   | reply “OK” only   |
| 21  | AT&V                  | View settings   |                   |
| 22  | AT&W                  | Write current settings to flash for next boot up  |                   |

### S Registers

| No. | S Register | Description & default value                  | Remarks           |
|-----|------------|--|-------------------|
| 1   | S0         | Ring to auto-answer (default=0)              |                   |
| 2   | S1         | Ring counter (always=0)                      | no action applied |
| 3   | S2         | Escape code character (default=43 ASCII “+”) |                   |
| 4   | S3         | Return character (default=13 ASCII)          |                   |

| No. | S Register | Description & default value   | Remarks           |
|-----|------------|---|-------------------|
| 5   | S4         | Line feed character (default=10 ASCII)  |                   |
| 6   | S5         | Backspace character (default= 8 ASCII)  |                   |
| 7   | S6         | Wait time for dial tone (always=2, unit=sec)  | no action applied |
| 8   | S7         | Wait time for carrier (default=3, unit=sec)   |                   |
| 9   | S8         | Pause time for dial delay (always=2, unit=sec)  | no action applied |
| 10  | S9         | Carrier detect response time (always=6, unit 1/10 sec)                                      | no action applied |
| 11  | S10        | Delay for hang up after carrier<br>(always=14, unit 1/10 sec)                               | no action applied |
| 12  | S11        | DTMF duration and spacing (always=100 ms)   | no action applied |
| 13  | S12        | Escape code guard time<br>(default=50, unit 1/50 sec)<br>to control the idle time for "+++" |                   |

| Parameter            | Setting     | Factory Default | Description  | Necessity |
|----------------------|-------------|-----------------|--|-----------|
| TCP Alive Check Time | 0 to 99 min | 7 min           | <b>0 min:</b> TCP connection is not closed due to an idle TCP connection.<br><b>1 to 99 min:</b> The NPort closes the TCP connection automatically if there is no TCP activity for the given time. | Required  |
| Local TCP port       | 1 to 65535  | 4001            | The TCP port that other devices must use to contact this device. To avoid conflicts with standard TCP ports, the default is set to 4001.   | Required  |

### Reverse Telnet Mode

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**

The screenshot shows the Moxa web interface for configuring a serial port. The left sidebar contains a 'Main Menu' with options like Overview, Basic Settings, Network Settings, Serial Settings, Operating Settings (selected), Accessible IP Settings, Auto Warning Settings, and Monitor. The 'Operating Settings' section is expanded to show 'Port 1', 'Port 2', 'Port 3', and 'Port 4'. The main content area is titled 'Operating Settings' and shows 'Port=01'. The settings are as follows:

- Operation mode: Reverse Telnet Mode (dropdown menu)
- TCP alive check time: 7 (0 - 99 min)
- Inactivity time: 0 (0 - 65535 ms)
- Local TCP port: 4001
- Map <CR-LF>: CR-LF (dropdown menu)

There is an unchecked checkbox labeled 'Apply the above settings to all serial ports' and a 'Submit' button at the bottom right.

**Web Interface for the Overall NPort 5000 Series**

---

**Operation Modes**

Port 1

Operation mode: Reverse Telnet

TCP alive check time: 7 (0 - 99 min)

Inactivity time: 0 (0 - 65535 ms)

Local TCP port: 4001


Map <CR-LF>: CR-LF

Apply the above settings to:  P1     P2     P3     P4  
 All ports

Submit

| Parameter            | Setting          | Factory Default | Description  | Necessity |
|----------------------|------------------|-----------------|--|-----------|
| TCP Alive Check Time | 0 to 99 min      | 0 min           | Specifies the time slice for checking if the TCP connection is alive. If no response is received, the NPort will disconnect the original connection.   | Optional  |
| Inactivity time      | 0 to 65535 ms    | 0               | Idle time setting for auto-disconnection. 0 min. means it will never disconnect.   | Optional  |
| Local TCP port       | 1 to 65535       | 4001            | Each of the NPort's serial ports is mapped to a TCP port. To avoid conflicts with TCP ports, set port numbers to 4001 for port1, 4002 for port 2, etc. (like the default values).  | Optional  |
| Map <CR-LF>          | CR, LF, or CR-LF | CR-LF           | If data received through the NPort's Ethernet port is sent using the "enter" command, the data will be transmitted out the serial port with an added: <ol style="list-style-type: none"> <li>1. "carriage return + line feed" if you select the &lt;CR-LF&gt; option (i.e., the cursor will jump to the next line, and return to the first character of the line)</li> <li>2. "carriage return" if you select the &lt;CR&gt; option (i.e., the cursor will return to the first character of the line)</li> <li>3. "line feed" if you select the &lt;LF&gt; option. (i.e., the cursor will jump to the next line, but not move horizontally)</li> </ol> | Optional  |

## PPPD Mode

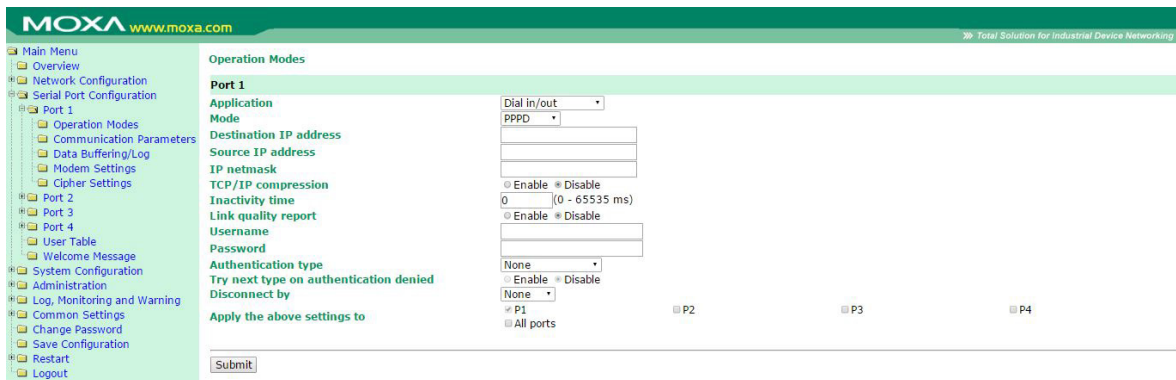

PPPD (PPP on demand) is used for dial-in services, since it provides PPP services only when receiving a request from a remote PC.

**Destination IP address:** This is the IP address of the remote dial-in/ dial-out server.

**Source IP address:** The Source IP address is IP address assigned to this serial port.

**IP netmask:** The IP netmask defines the netmask, also known as the subnet mask, for the PPP connection

**TCP/IP compression (default=Disable):** The setting of this field depends on whether the remote user’s application requests compression.

**Inactivity time (default=0 ms):** This field specifies the idle time setting for auto-disconnection. A setting of 0 ms will cause the port to remain connected even if idle.

**Link quality report (default=Disable):** Setting this field to **Enable** allows the NPort 5000 to disconnect a connection if the link noise exceeds a certain threshold.

**Username:** This is the dial-out user ID account.

**Password:** This is the dial-out user password.

**Authentication type (default=None):** This field allows you to configure the method used, if any, to verify a user’s ID and authorization.


| Option        | Description  |
|---------------|--|
| Local         | Verify the ID against the NPort 5000 User Table.                               |
| RADIUS        | Verify the ID against the external RADIUS server.                              |
| RADIUS-Local  | Radius authentication is tried first, switching to Local if unsuccessful.      |
| Local-RADIUS  | Authentication is performed locally first, switching to Radius if unsuccessful |
| TACACS+       | Verify the ID against the external TACACS+ server.                             |
| TACACS+-Local | TACACS+ authentication is tried first, switching to Local if unsuccessful.     |
| Local-TACACS+ | Authentication is performed locally first, switching to Radius if unsuccessful |
| None          | Authentication is not required.  |

**Try next type on authentication denied (default=Disable):** The field enables or disables the system to try next type on first authentication denied.


**Disconnect by (default=None):** If this field is set as **DCD-off**, the connection will be disconnected when the DCD signal is off. If this field is set as **DSR-off**, the connection will be disconnected when the DSR signal is off.

## Disabled Mode

**Web Interface for the NPort 5100, 5200, and IA5000 Series Only**



**Web Interface for the Overall NPort 5000 Series**



When Operation mode is set to Disabled, that particular port will be disabled. Select the **Apply the above settings to all serial ports** checkbox to apply this setting to the other ports.

# Configuring NPort Administrator

---

The following topics are covered in this chapter:

- **Overview**
- **Installing NPort Administrator**
- **Configuration**
  - Broadcast Search
  - Unlock Password Protection
  - Configuring NPort
  - Upgrading the Firmware
  - Export Configuration
  - Import Configuration
- **Monitor**
- **Port Monitor**
- **COM Mapping**
  - On-line COM Mapping
  - Off-line COM Mapping
- **COM Grouping**
  - Creating a COM Group
  - Deleting a COM Group
  - Adding a Port to a COM Group
  - Removing a Port from a COM Group
  - Modify Ports in a COM Group
- **IP Address Report**



## Overview

Device Server Administrator lets you install and configure your NPort device server easily over the network. Five function groups are provided to ease the installation process, allow off-line COM mapping, and provide monitoring and IP location server functions.




### ATTENTION


Before installing and the configuring the NPort Administration suite, make sure your user privilege is set as system administrator.

## Installing NPort Administrator


1. Once the Setup program starts running, click **Next** when the **Welcome** window opens to proceed with the installation.

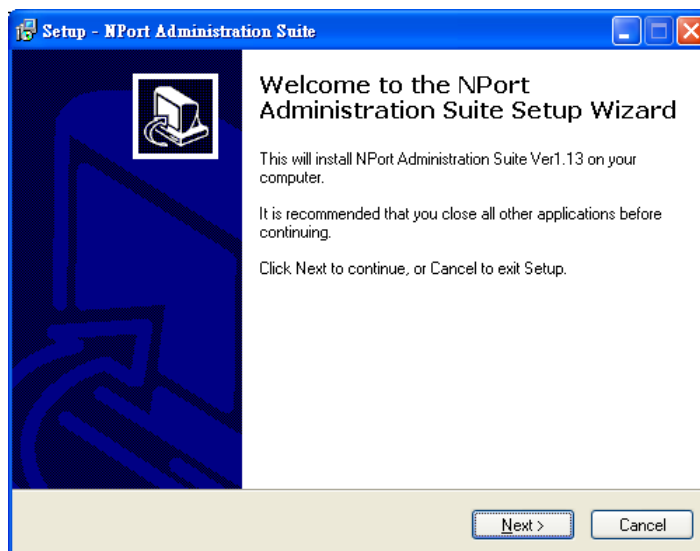


2. Click **Next** to install program files in the default directory, or select an alternative location.

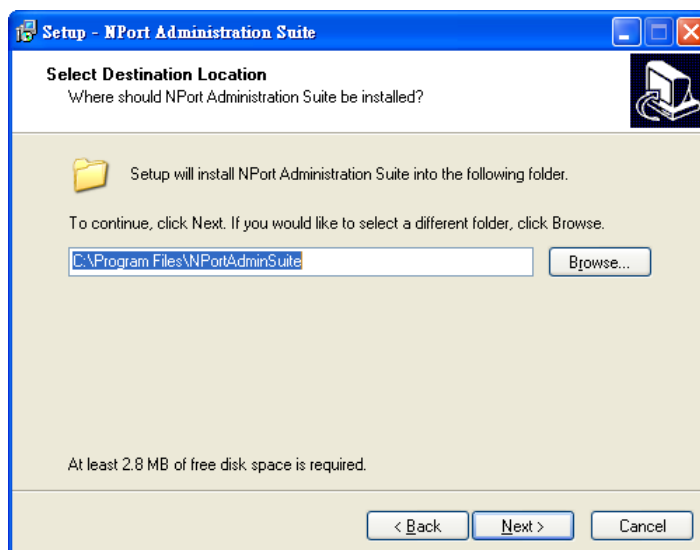


- Click **Next** to install the program using the default program name, or select a different name.

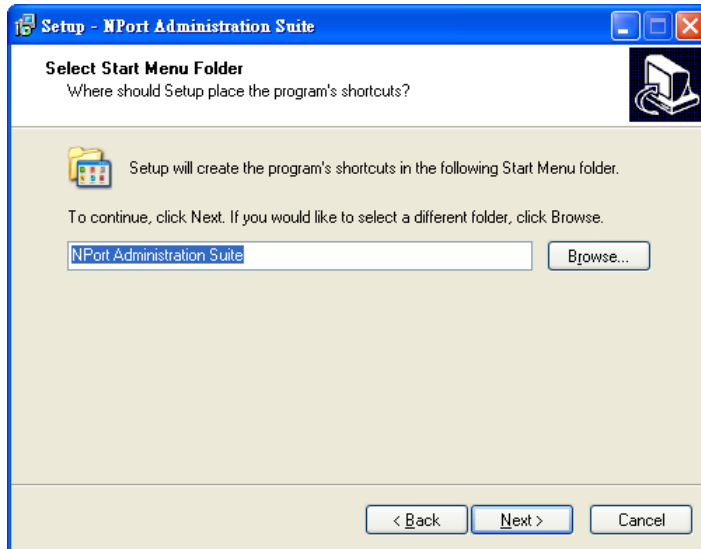


- Click **Install** to proceed with the installation.

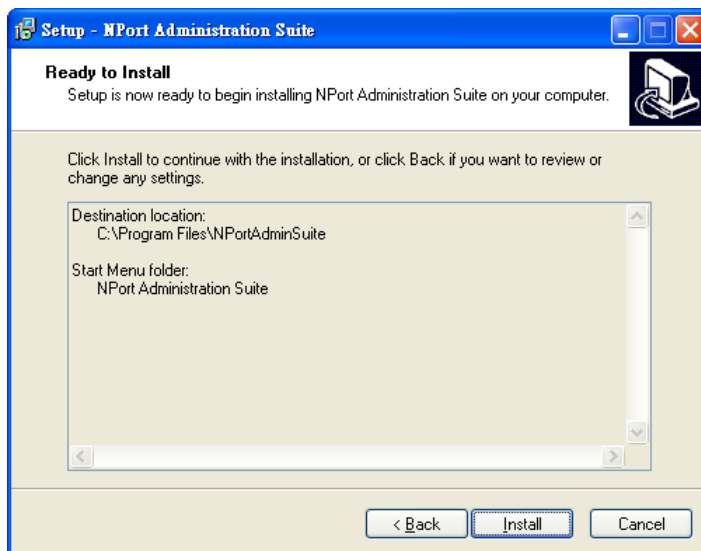


- The **Installing** window reports the progress of the installation.

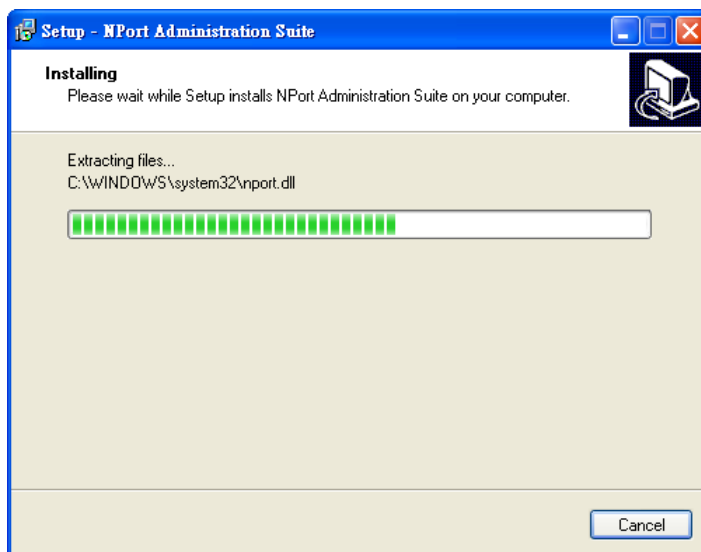

- Click **Next** to proceed with the installation.

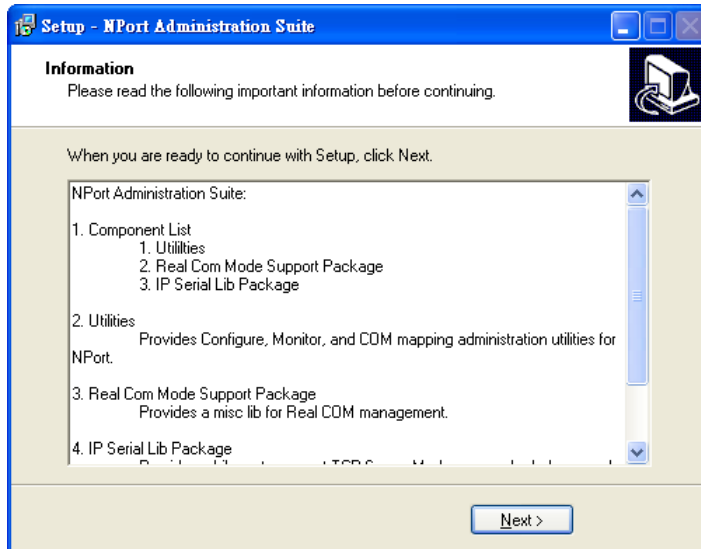


- Click **Finish** to complete the installation of NPort Administration Suite.

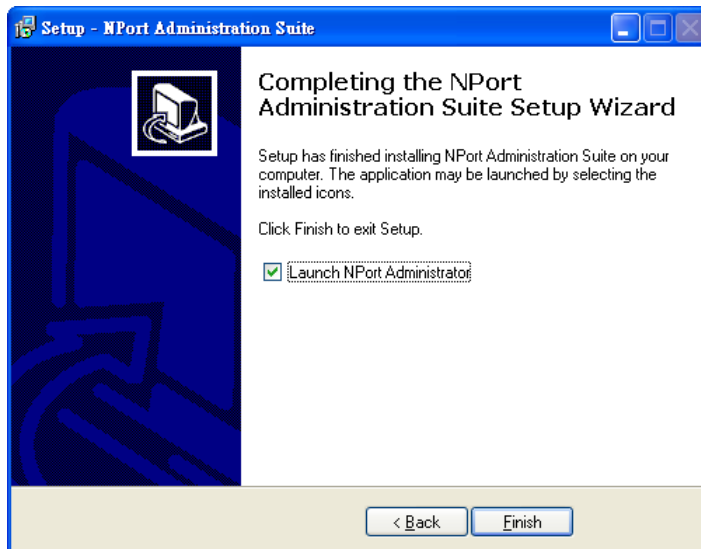

# Configuration

The Administrator-Configuration window is divided into four parts.


- The top section contains the function list and online help area. (Windows NT does not support this .chm file format.)
- The five Administrator function groups are listed in the left section.
- A list of NPort serial device servers, each of which can be selected to process user requirements, is displayed in the right section.
- The activity Log, which displays messages that record the user's processing history, is shown in the bottom section.

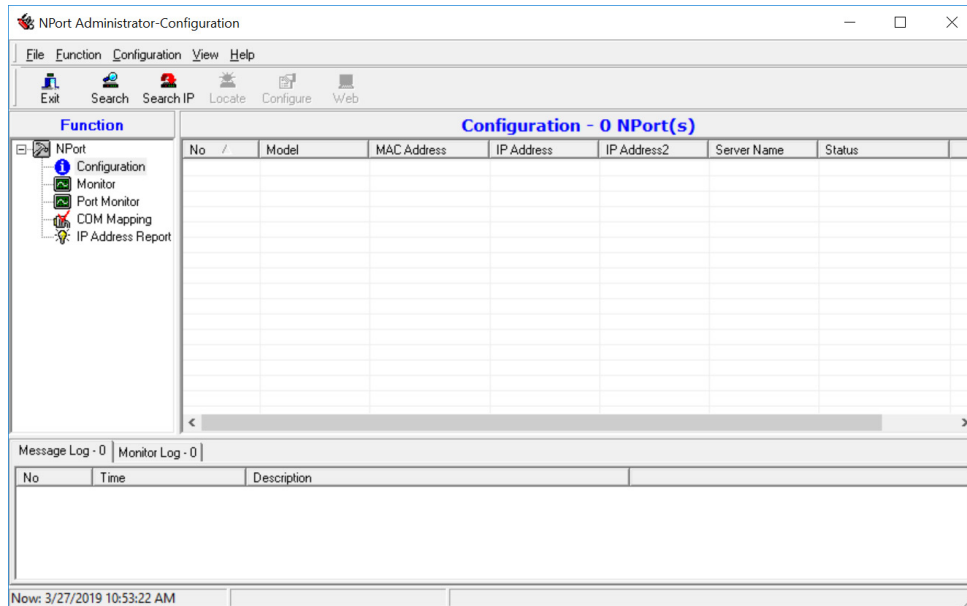


## Broadcast Search

The **Broadcast Search** function is used to locate all NPort units that are connected to the same LAN as your computer. Since the Broadcast Search function searches by MAC address and not IP address, all NPort units connected to the LAN will be located, regardless of whether or not they are part of the same subnet as the host.


1. Position the cursor in the right middle section of the **Administrator** window and then click right-click, or click the **Search** button on the toolbar.

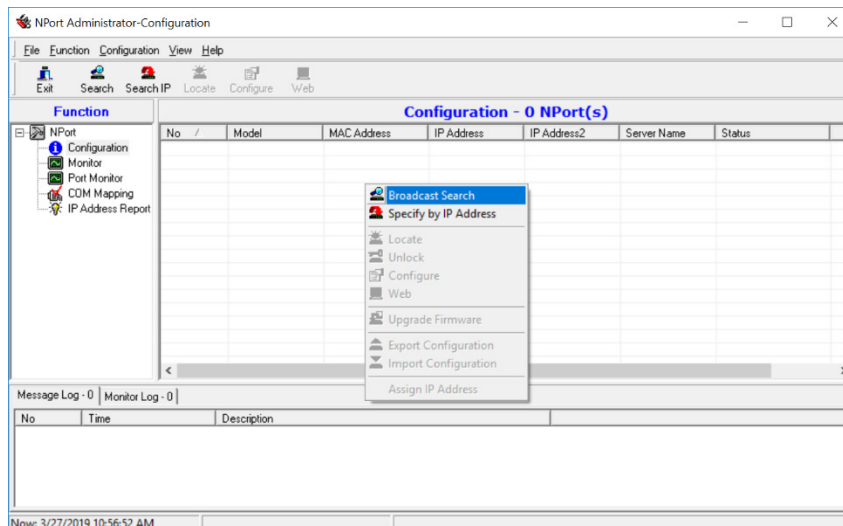

- The **Broadcast Search** window will open and display the Model, IP Address, MAC Address, and Progress of the search for that particular device.

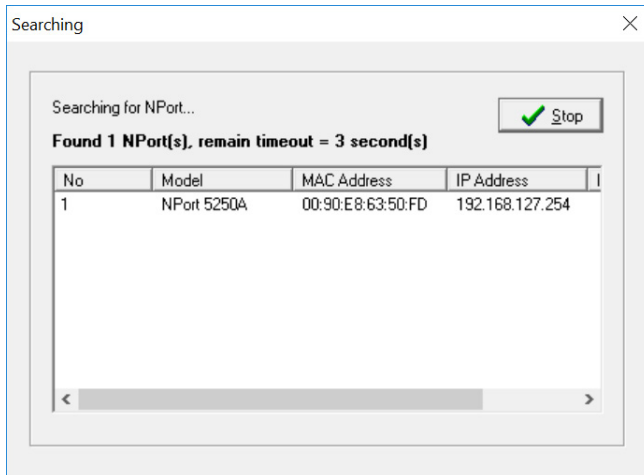

- When the search is complete, the Broadcast Search window will close, and the NPort units that were located will be displayed in the right panel of the Administrator window. If you found more than one server connected to this network, refer to the MAC address sticker on your server(s) to determine which server(s) are the ones you wish to configure. To configure an NPort, place the cursor over the row displaying that NPort's information, and then double click the left mouse button.

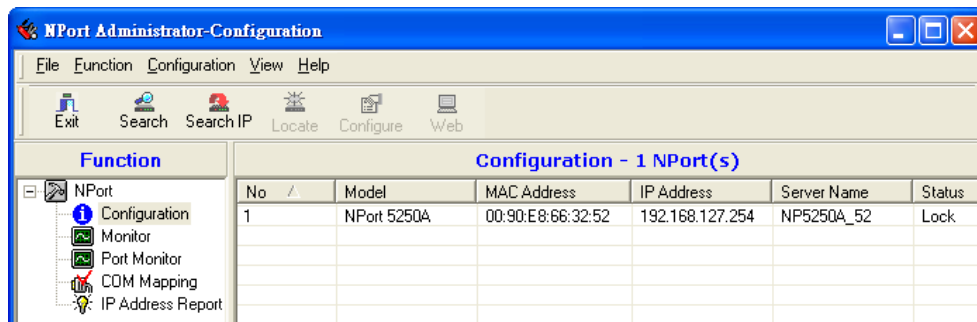


**ATTENTION**

Before modifying the NPort's configuration, use Broadcast Search to locate all NPort units connected to the LAN, or use Specify by IP Address to locate a particular NPort.

**Unlock Password Protection**


The NPort device server is password protected (the default username is **admin**, password is **moxa**). The status of the NPort device will be indicated by **Lock**. You will receive the following error, and you will not be able to right-click to open the configuration page.

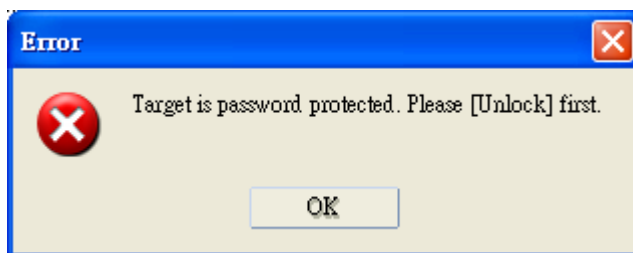


**NOTE** Only the NPort 5100/5200/IA5000 Series requires a password.

In this case, proceed as follows to “Unlock” the device server.


1. Select the NPort with “Lock” status, click the right mouse button, and then select **Unlock**.

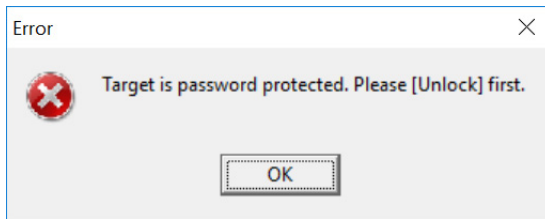

2. After inputting the correct password, the Administrator will display an “Unlock ok” message.

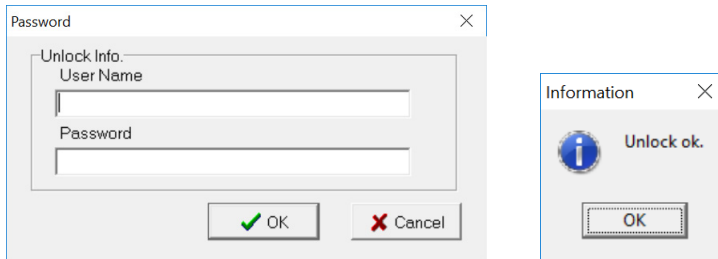

3. The “Lock” status will change to “Unlock,” and the Administrator utility will keep this NPort in the Unlock status throughout this Administrator session.

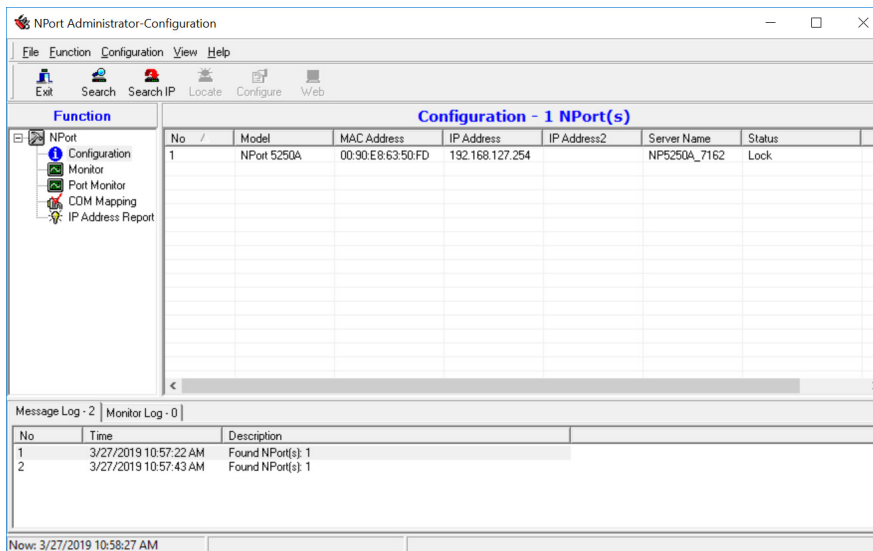

The meanings of the six “Status” states are given below (note that the term Fixed is borrowed from the standard fixed IP address networking terminology):

**Lock**

The NPort is password protected, “Broadcast Search” was used to locate it, and the password has not yet been entered from within the current Administrator session.

**Unlock**

The NPort is password protected, “Broadcast Search” was used to locate it, and the password has been entered from within the current Administrator session. Henceforth during this Administrator session, activating various utilities for this NPort will not require re-entering the server password.

**Blank**

The NPort is not password protected, and “Broadcast Search” was used to locate it.

**Fixed**

The NPort is not password protected, and “Search by IP address” was used to locate it.

**Lock Fixed**

The NPort is password protected, "Specify by IP address" was used to locate it, and the password has not yet been entered from within the current Administrator session.


**Unlock Fixed**

The NPort is password protected, "Specify by IP address" was used to locate it, and the password has been entered from within the current Administrator session. Henceforth during this Administrator session, activating various utilities for this NPort will not require re-entering the server password.


## Configuring NPort

In this section, we illustrate how to access the NPort's configuration utility. You should first make sure that you can connect over the network from your computer to the NPort.


1. To start NPort Administrator, click **Start → NPort Administration Suite → NPort Administrator**.

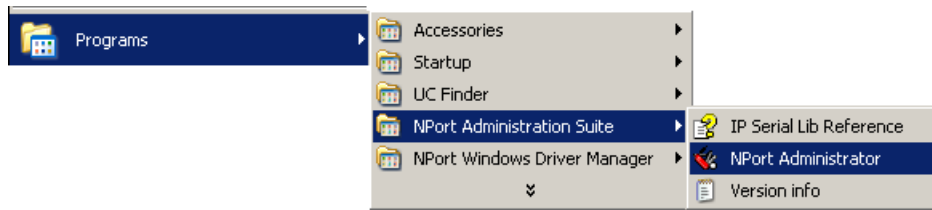


2. Unlock the NPort you wish to configure if it is password protected. Right click the NPort and select **Configure** to start the configuration.

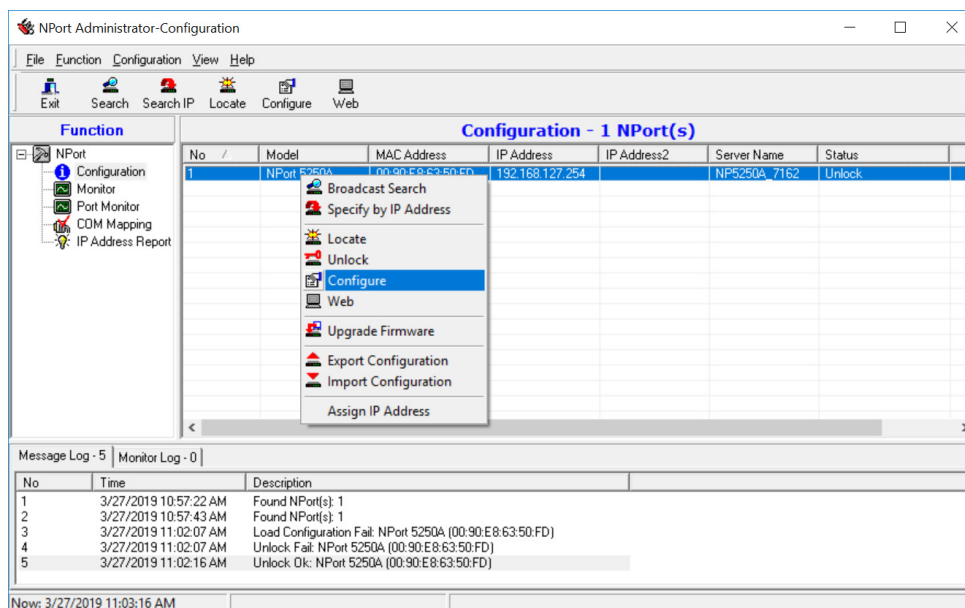

3. The progress bar shows that Administrator is retrieving configuration information from the specific NPort.

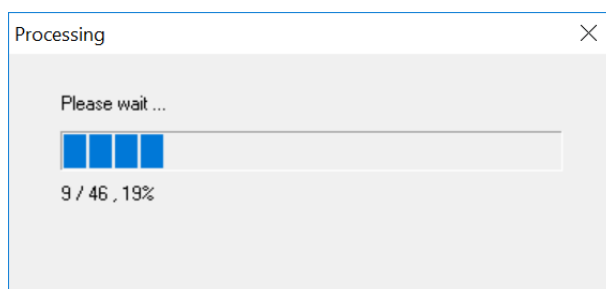

4. Refer to **Chapter 2** for each parameter’s function definition. To modify the configuration, you must first click in the modify box to activate the parameter setting box.

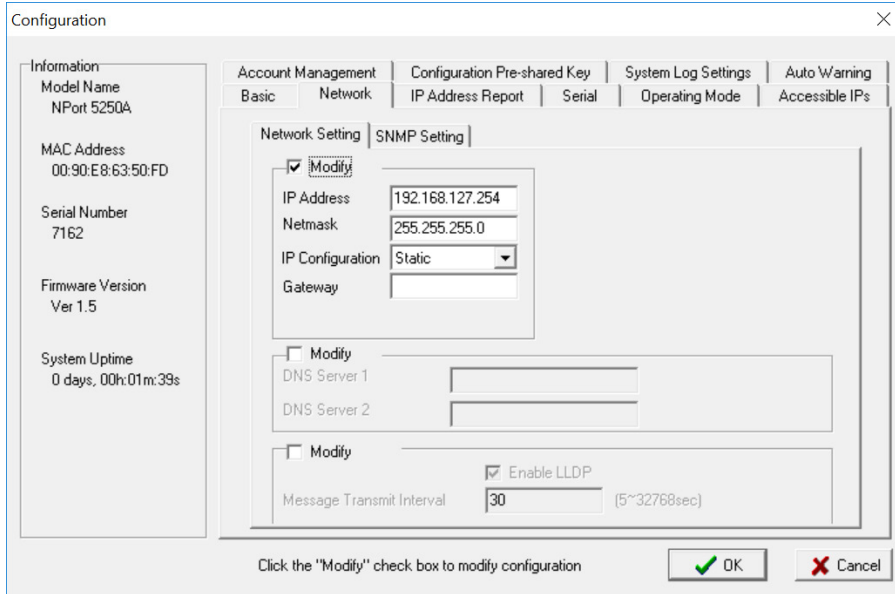


**ATTENTION**

You can simultaneously modify the configurations of multiple NPort units that are of the same model. To select multiple NPort units, hold down the Ctrl key when selecting additional NPort units, or hold down the Shift key to select a group of NPort units.

## Upgrading the Firmware


Follow these steps to upgrade the firmware of an NPort.

1. To start NPort Administrator, click **Start → NPort Administration Suite → NPort Administrator**.

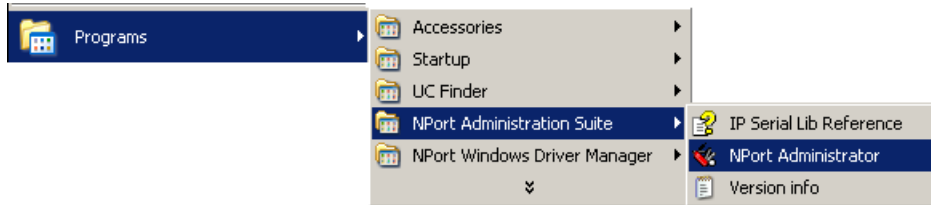





2. Unlock the NPort you wish to configure. Right click a specific NPort and select the **Upgrade Firmware** function to start upgrading the firmware.

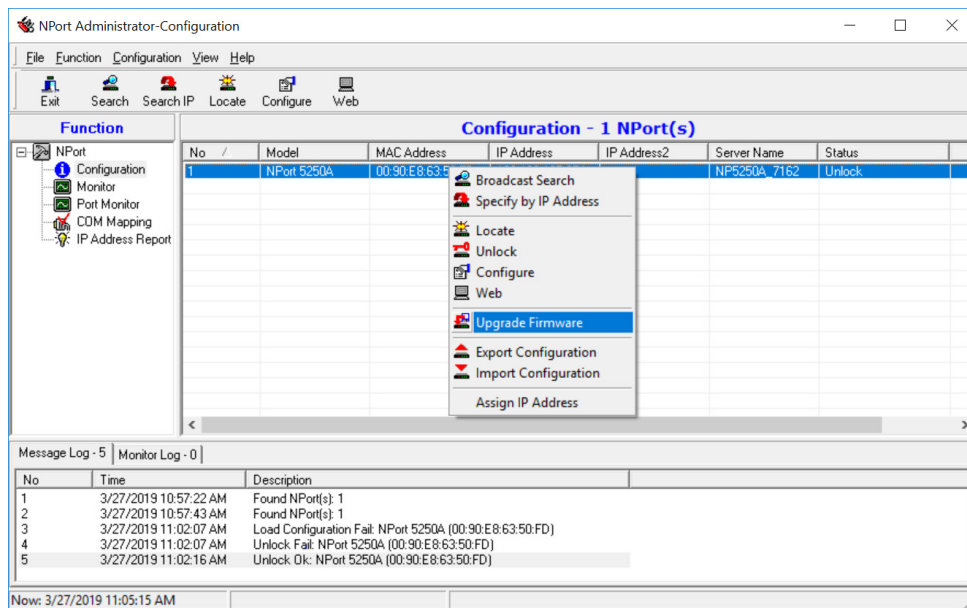

3. Select the correct ROM file to download.

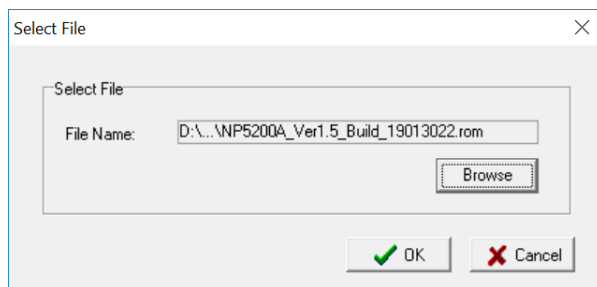

4. Wait while the Upgrade Firmware action is processed.

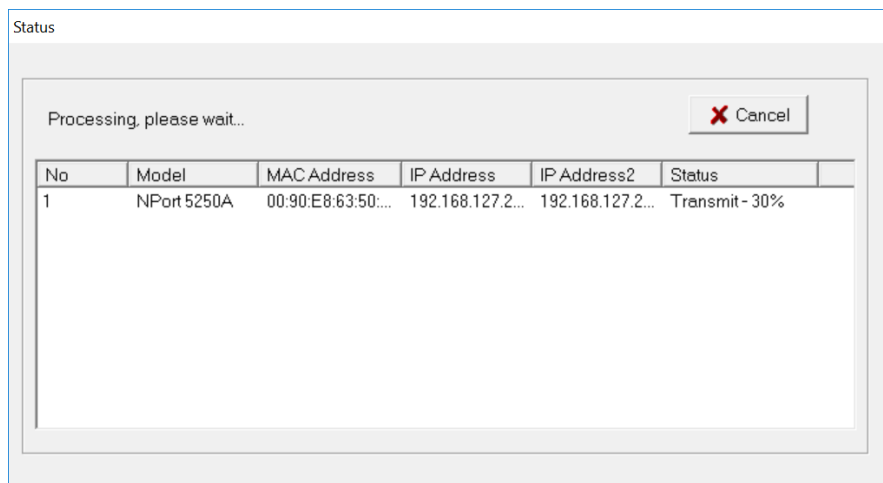


**ATTENTION**

You can simultaneously upgrade the firmware of multiple NPort units that are of the same model. To select multiple NPort units, hold down the Ctrl key when selecting an additional NPort, or hold down the Shift key to select a block of NPort units.


## Export Configuration

The Export Configuration function is a handy tool that can be used to produce a text file that contains the current configuration of a particular NPort.

If you are using the NPort 5100 Series, NPort 5200 Series, or NPort IA5000 Series and Administration Suite v1.22 or above, to export the configuration of an NPort, right-click **NPort**, select **Export Configuration**. An Export Password window will pop up for the user to assign a password for the exported configuration file. The exported configuration file will be encrypted for security purpose. You will need the same password you use for the exported file to import the same file back into the NPort.

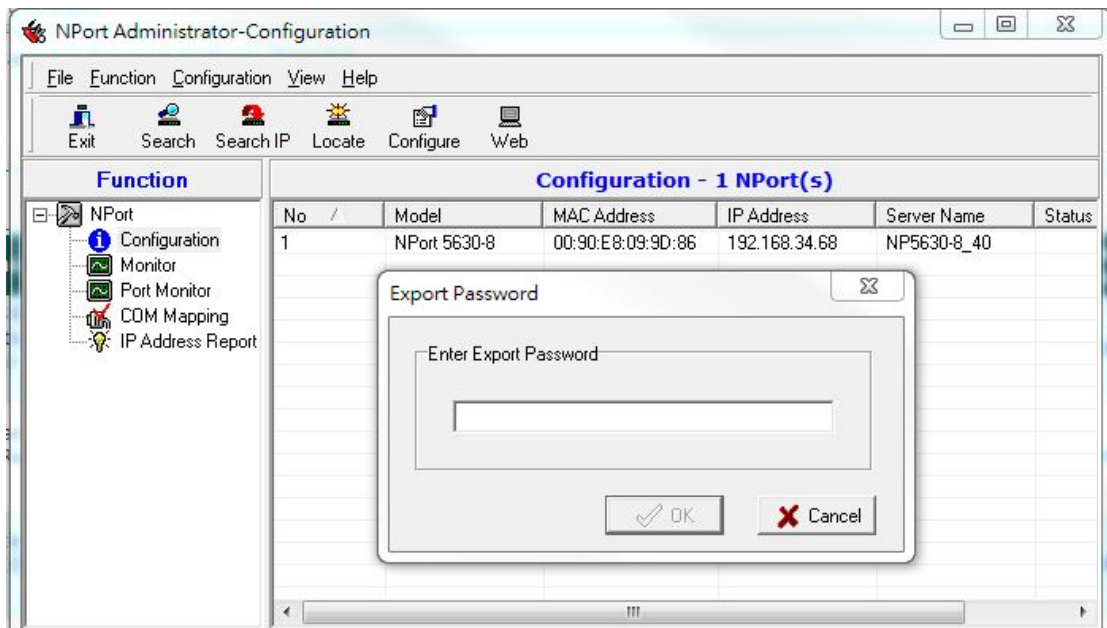


After assigning the export password, click the **Browse** button to set the file name and path, and then click **OK**.

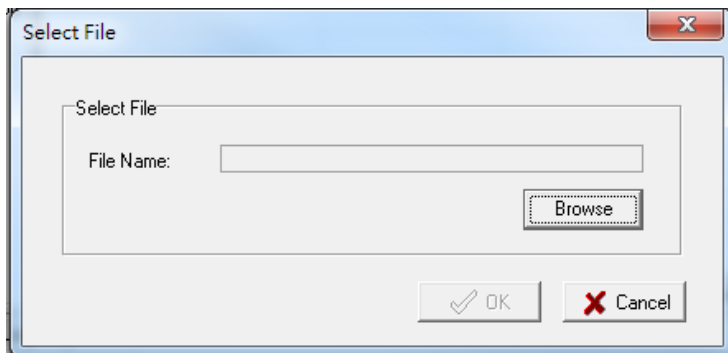

For the overall NPort 5000 Series with security enhanced firmware version, export configuration encryption will be based on the Pre-shared key defined in the NPort (default is empty password, and you may configure the password in **Configuration -> Configuration Pre-shared Key**). So when you are exporting the configuration file, you are only required to select the output file location. You may refer to page 2-21 for the security firmware version for your NPort.

## Import Configuration


The Import Configuration function is used to import an NPort configuration from a file into one or more of the same NPort model. To import a configuration, first select the target servers, click the right mouse button, and then select **Import Configuration**. Click on the **Browse** button to locate the configuration file and press **OK**.

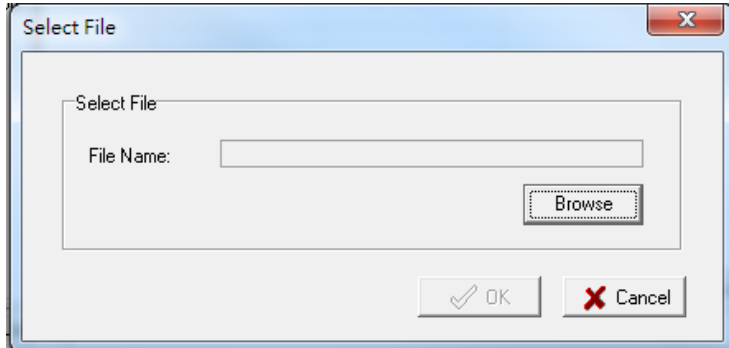

For the NPort 5100 Series, NPort 5200 Series, or NPort IA5000 Series and with NPort Administration Suite v1.22 or above, an **Import Password** window will pop up, and you will need to enter the password that is unique to the configuration file (which is assigned when exporting the configuration file) in order to successfully import the configuration file.




For the overall NPort 5000 Series with a security enhanced firmware version, importing configuration decryption will be based on the pre-shared key defined in the NPort. If the pre-shared key does not match, you will see an error dialogue box on the screen.

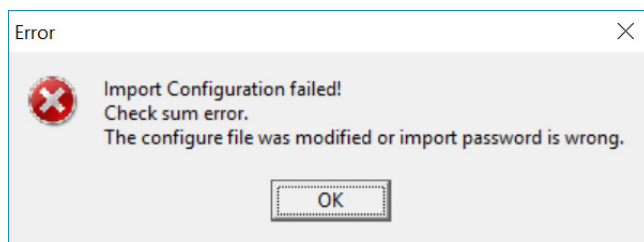


You will then need to modify the pre-shared key in **Configuration** to match the encryption password of the configuration file before you can begin to import.

**NOTE** If you do not remember the password of the encrypted configuration file, there is no alternative way to decrypt the file.

You will be able to confirm the import content before downloading the file.

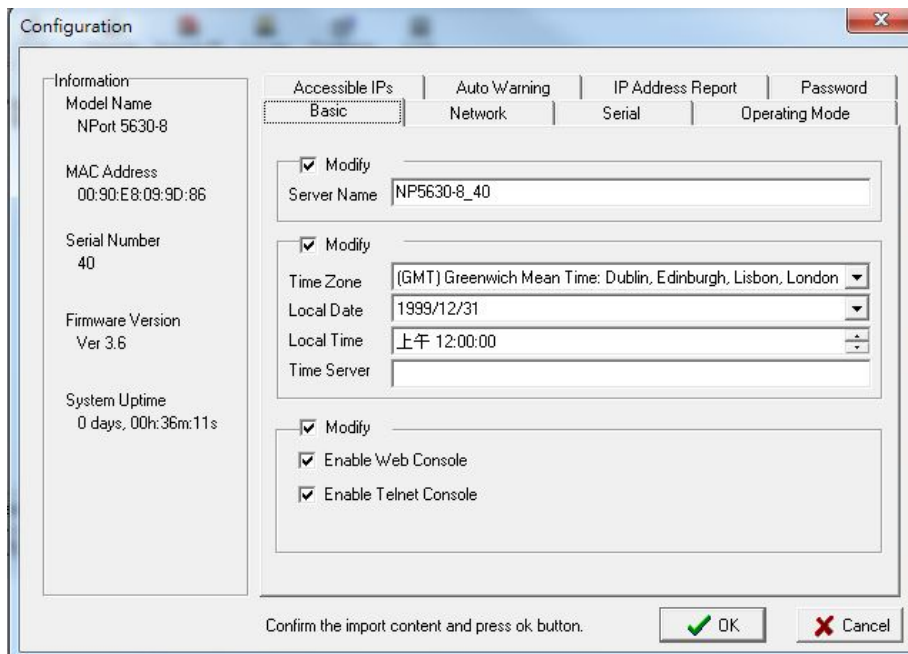

Press **OK** to start downloading the configuration file. A window will pop up to indicate that import was successful.

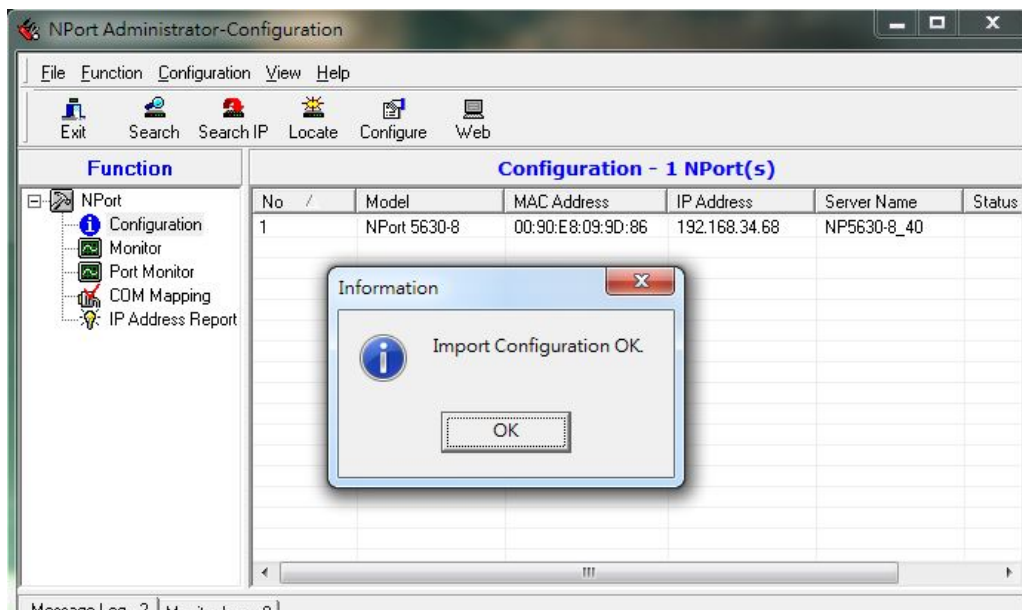

For firmware versions supporting encrypted configuration files, please refer to the table below.

| Model Name               | Firmware version supporting encrypted configuration files.         |
|--------------------------|--|
| <b>NPort 5000 Series</b> |  |
| NPort 5110               | Firmware v2.6 and up with NPort Administration Suite v1.22 and up  |
| NPort 5130, NPort 5150   | Firmware v3.6 and up with NPort Administration Suite v1.22 and up  |
| NPort 5200 Series        | Firmware v2.8 and up with NPort Administration Suite v1.22 and up  |
| NPort 5400 Series        | Firmware v3.11 and up with NPort Administration Suite v1.22 and up |

| Model Name                        | Firmware version supporting encrypted configuration files.   |
|-----------------------------------|--|
| NPort 5600-8-DT Series            | Firmware v2.4 and up with NPort Administration Suite v1.22 and up                                  |
| NPort 5600-8-DTL Series           | Firmware v1.3 and up with NPort Administration Suite v1.22 and up                                  |
| NPort 5600 Series                 | Firmware v3.7 and up with NPort Administration Suite v1.22 and up                                  |
| <b>NPort 5000A/IA5000A Series</b> |  |
| NPort 5100A Series                | Firmware v1.3 and up (Support with both web console and NPort Administration Suite v1.22 or above) |
| NPort 5200A Series                | Firmware v1.3 and up (Support with both web console and NPort Administration Suite v1.22 or above) |
| NPort 5x50AI-M12 Series           | Firmware v1.2 and up (Support with both web console and NPort Administration Suite v1.22 or above) |
| NPort IA5150A, NPort IA5250A      | Firmware v1.3 and up (Support with both web console and NPort Administration Suite v1.22 or above) |
| NPort IA5450A                     | Firmware v1.4 and up (Support with both web console and NPort Administration Suite v1.22 or above) |



**ATTENTION**


1. You can simultaneously import the same configuration file into multiple NPort units of the same model. To select multiple NPort units, hold down the **Ctrl** key when selecting an additional NPort, or hold down the **Shift** key to select a block of NPort units.
2. If you have an encrypted configuration file, you will need to use the NPort Administration Suite V1.22 or above to import an encrypted configuration file. On the other hand, if your configuration file is non-encrypted, it will also be accepted by the NPort Administration Suite V1.22 or above. (i.e. the NPort Administration Suite will not ask you to key in the **Import Password**.)

# Monitor


Use the following method to start the Monitor function.

**Broadcast Search → Monitor → Add Target**

1. With Configuration selected under Function, use Broadcast Search to locate all NPorts on your LAN.

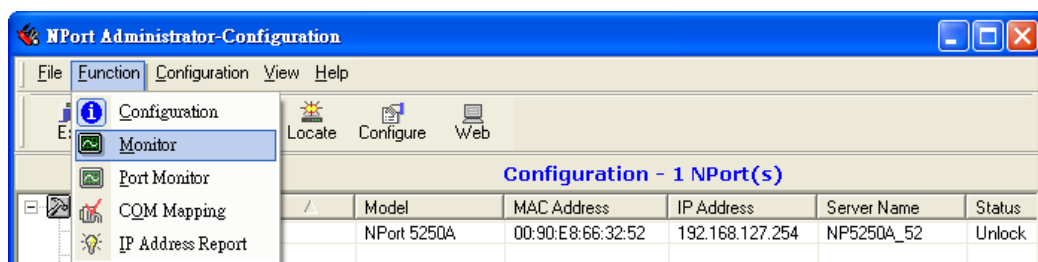


2. Next, click **Monitor → Add Target** and select your targets from the list, and then click **OK**.

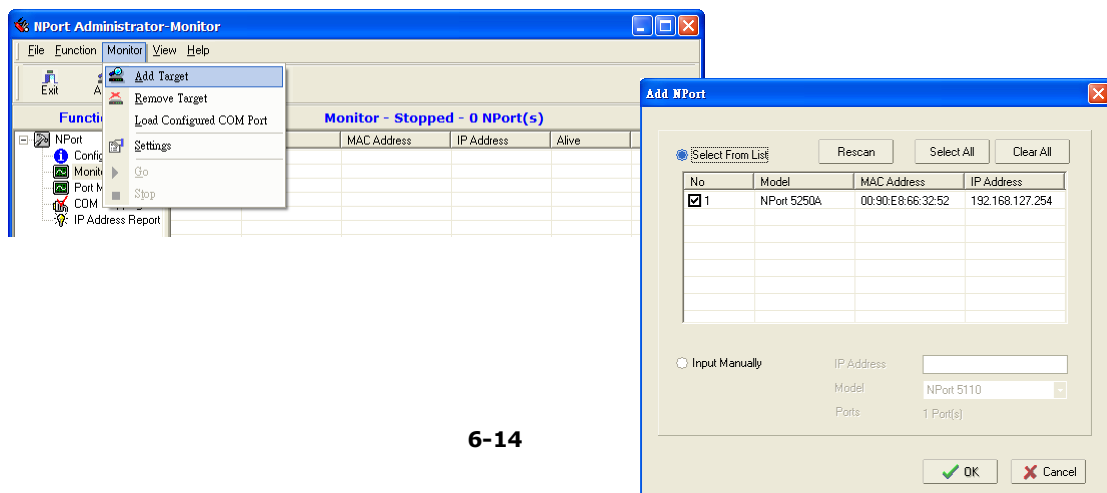


**Once the Monitor function is running:**


1. The NPort list will appear on the Monitor screen.

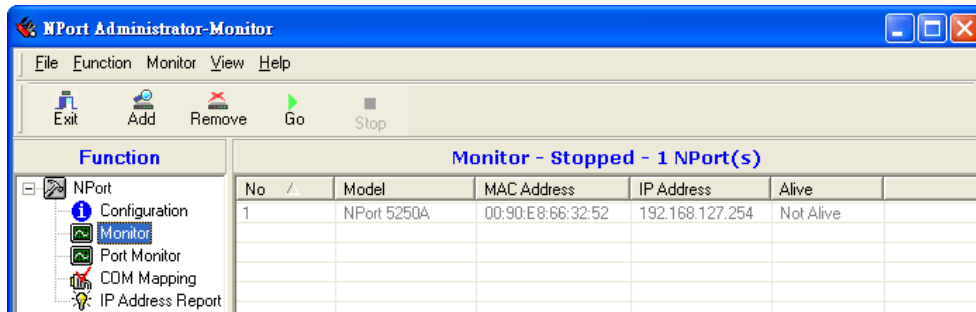


2. Right click the panel and select **Settings**.

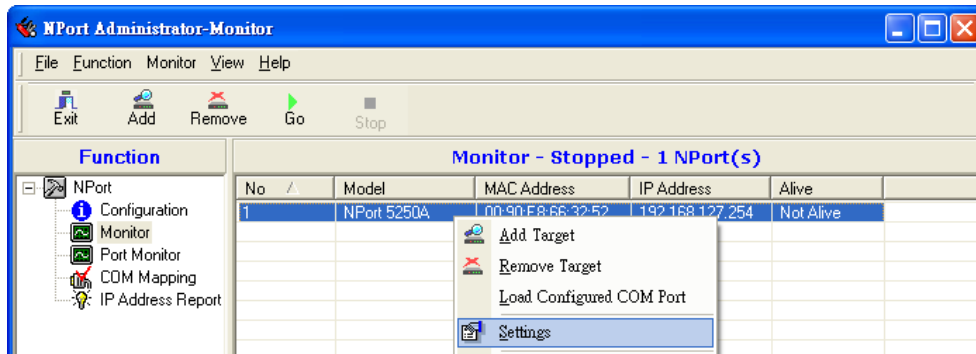


3. Select or de-select **Monitor Items**. Use the single arrowhead buttons to move highlighted items from one box to the other. Use the double arrowhead buttons to move all items in one box to the other.

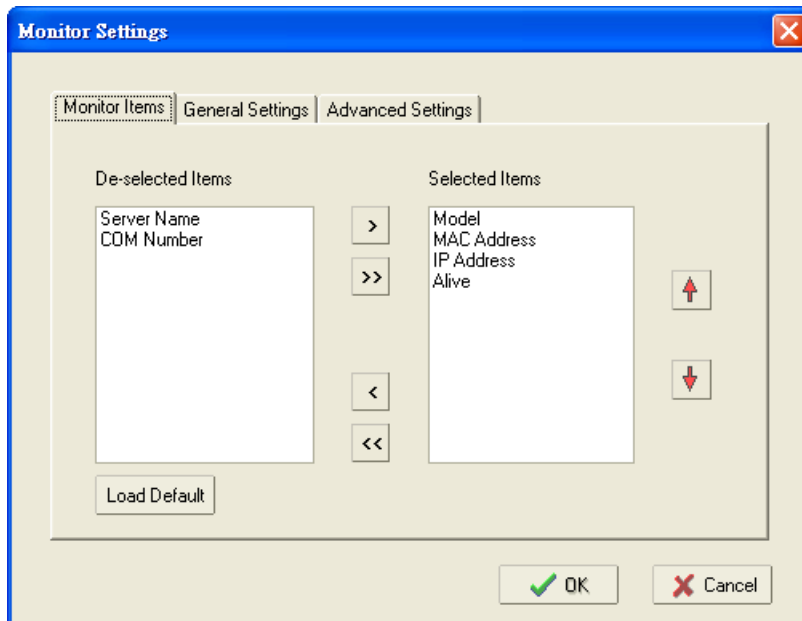


4. Select a **Refresh Rate** (the default is 3 seconds) on the General Settings page.

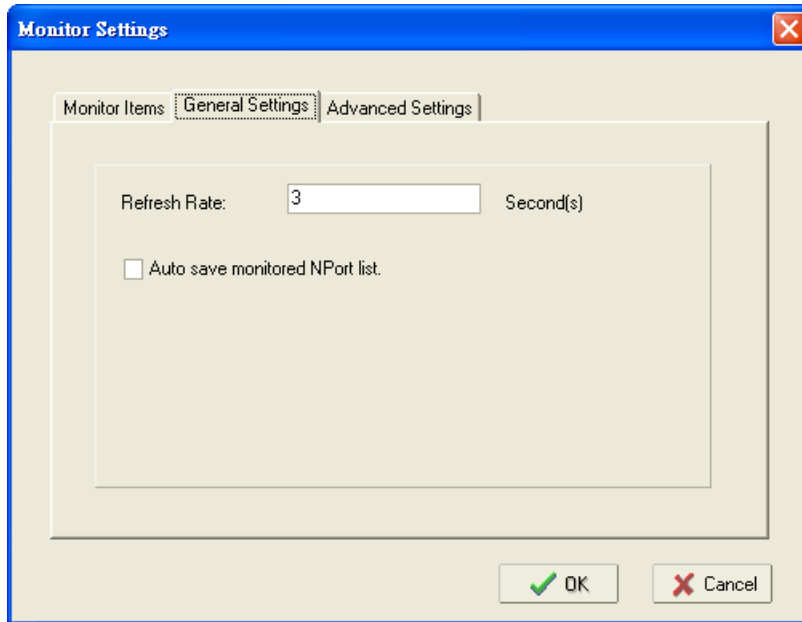


5. On the **Advanced Settings** page, select **Display warning message for new event** and/or **Play warning music for new event**. In the second case, you must enter the path to the WAV file that you want to be played. "New event" means that one of the NPort units in the monitor is "Alive" or "Not Alive," or has lost connection with the Monitor program.

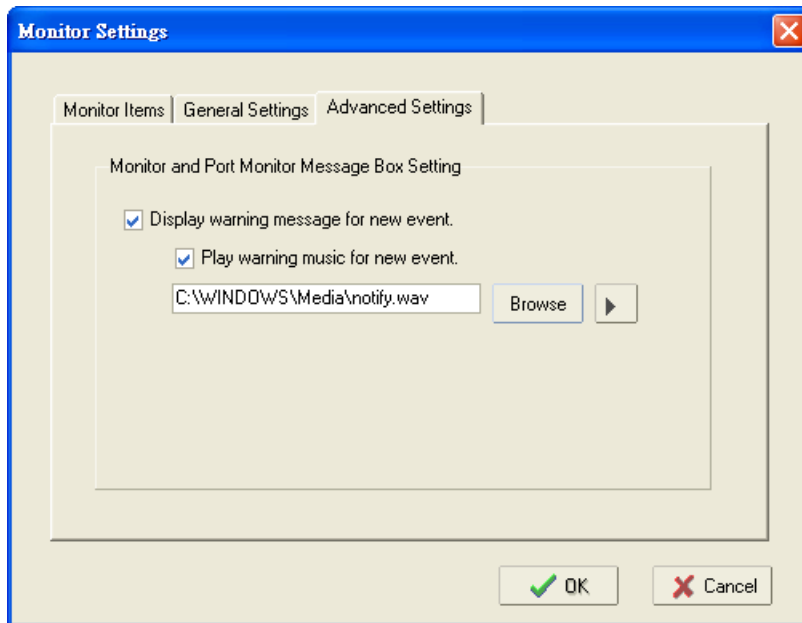


- Right click in the NPort list section and select **Go** to start Monitoring the NPort.

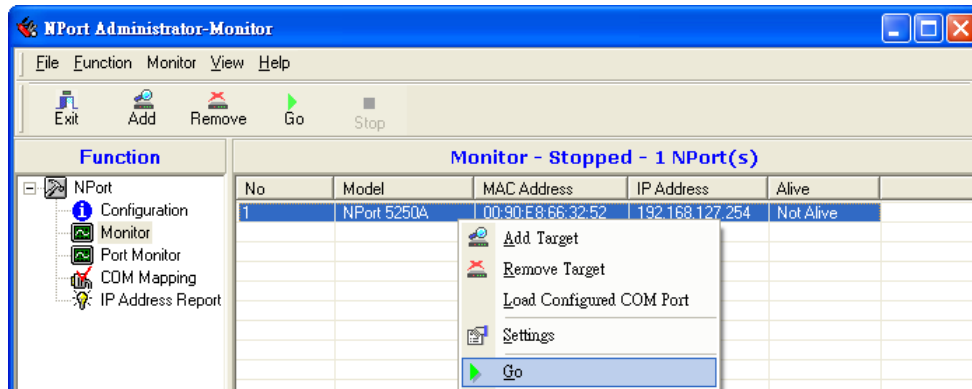


- For this example, the NPort shown in the list will be monitored.

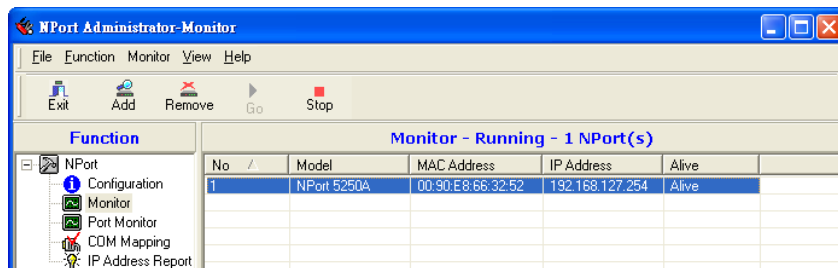

- When one of the NPort units loses connection with the Monitor program, a warning alert will display automatically. The warning music will be played at the same time.

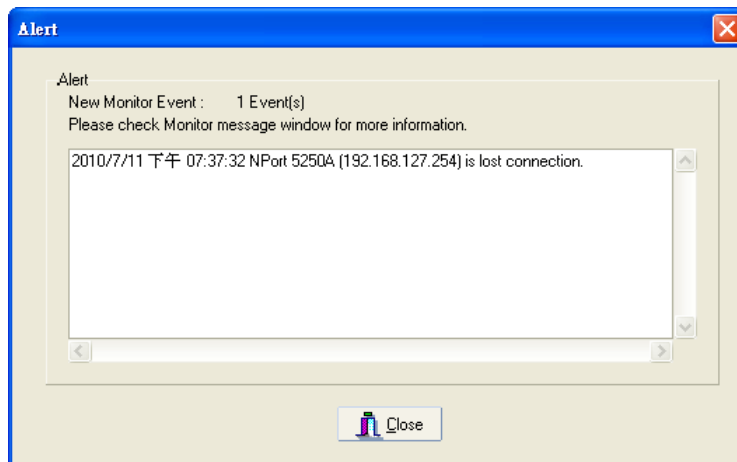


- In the Monitor screen, you can see that the NPort units that are "Not Alive" are shown in red color.

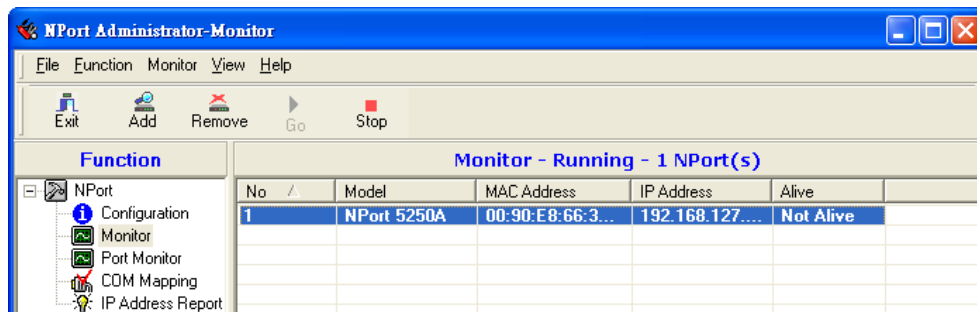




- If the NPort gets reconnected, a warning will be displayed to remind the user that the NPort is now "Alive."

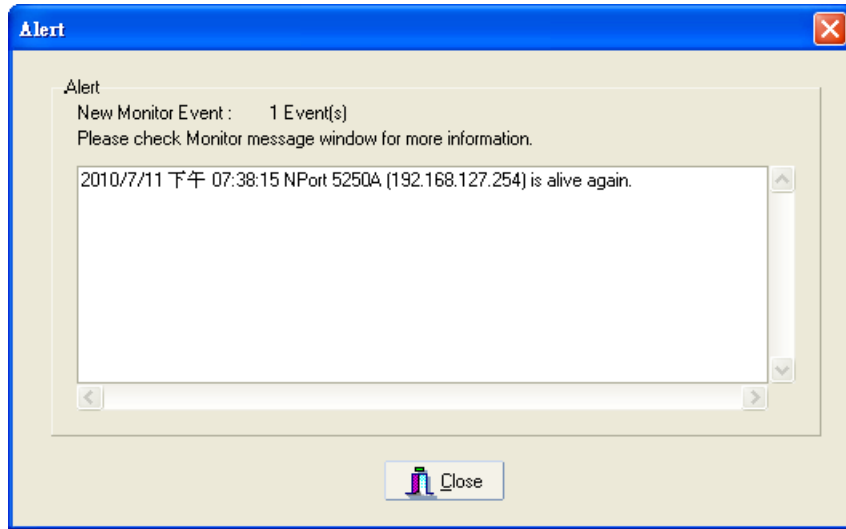


- The NPort units that were reconnected, and are now "Alive," will be shown in black color.

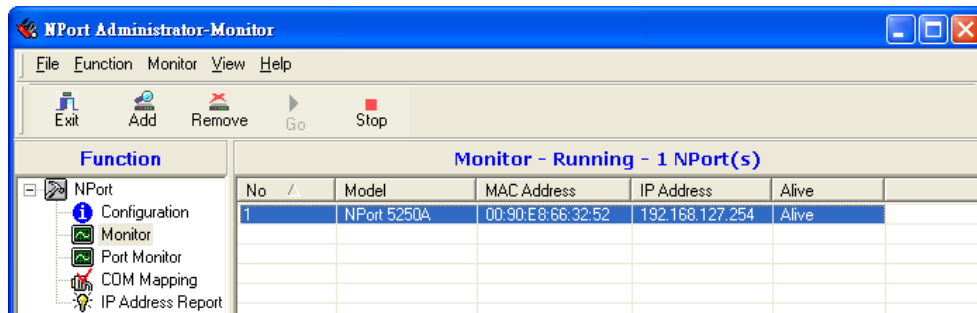


## Port Monitor

The process described here is the same as in the previous "Monitor" section. The only difference is that you can select more items under Port Monitor than under Monitor.

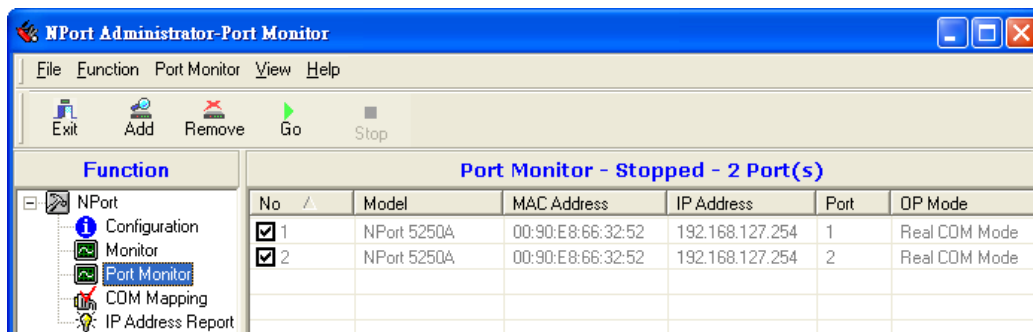

Select or de-select **Monitor Items**. Use the single arrowhead buttons to move highlighted items from one box to the other. Use the double arrowhead buttons to move all items in one box to the other.

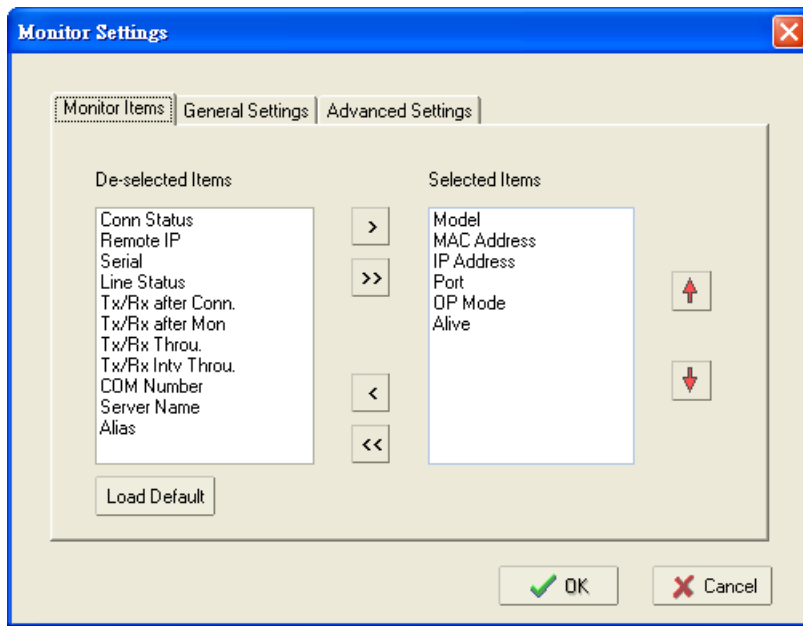

## COM Mapping

NPort Administration Suite comes with Windows Real COM drivers. After you install NPort Administration Suite, there are two ways to set up the NPort’s serial port as your host’s remote COM port.

The first way is with On-line COM Mapping. On-line COM Mapping will check to make sure that the NPort is connected correctly to the network and then install the driver on the host computer.

The second way is with Off-line COM Installation, without first connecting the NPort to the network. Off-line COM Mapping can decrease the system integrator’s effort by solving different field problems. Via off-line installation, users can first process software installation for the host, and then install the NPort to different fields.

Use the following procedure to map COM ports:

**1. On-line COM Mapping:**


Connect the NPort to the network → Set the NPort’s IP address → Map COMs to your host → Apply Change.

**2. Off-line COM Mapping:**


Map COMs to your host → Apply Change → Connect the NPort to the network → Configure the NPort’s IP address.

## On-line COM Mapping


- Broadcast Search** for NPort units on the network.

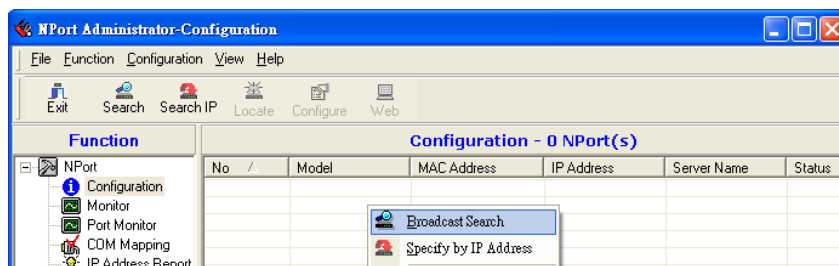


2. Select the **COM Mapping** function group.

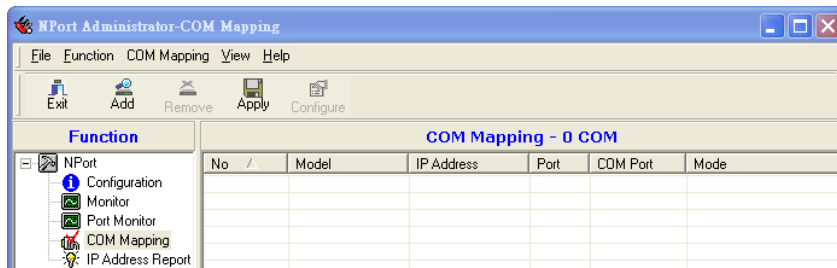


3. Add the target to which you would like to map COM ports.

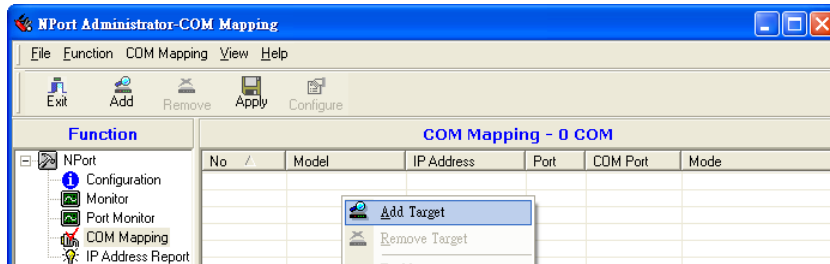

4. The NPort list that appears is the list generated by the previous Broadcast Search. Select the NPort to which you would like to map COM ports.

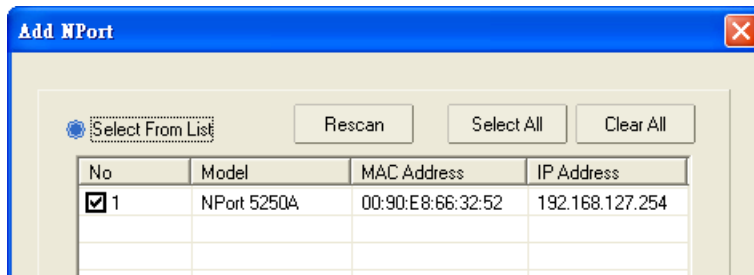


5. Select **COM Settings** to modify COM No., default setting, etc.

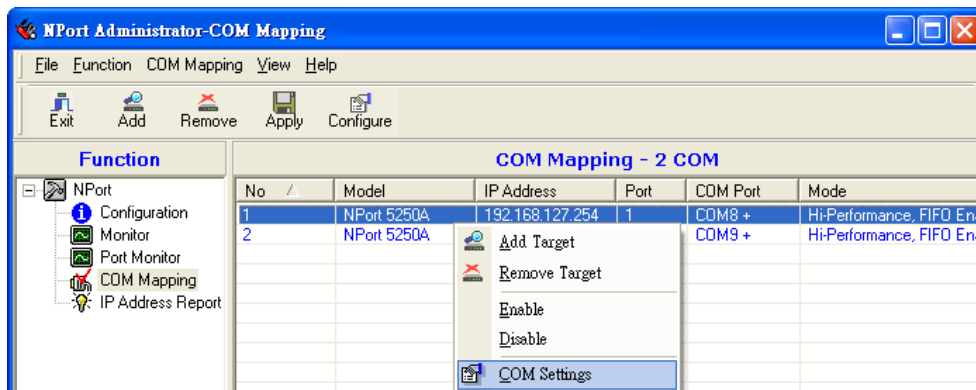

6. Select the **COM Number**.

COM ports that are "In use" or "Assigned" will also be indicated in this drop-down list. If you select multiple serial ports or multiple NPort units, remember to check the "Auto Enumerating" function to use the COM No. you select as the first COM No.

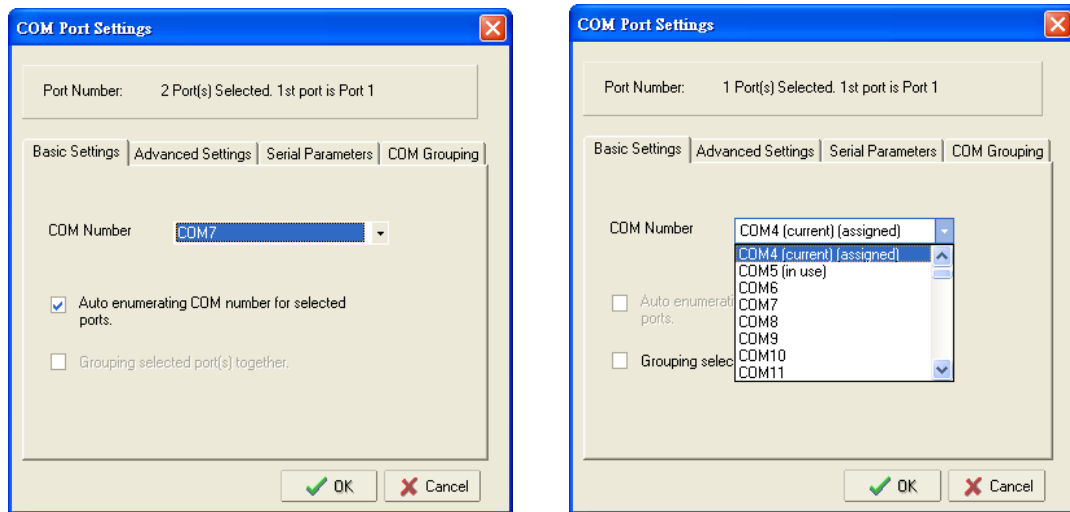

**Hi-performance mode** is the default for Tx mode. If the driver completes sending data out to the NPort 5200A, the driver will respond "Tx Empty" to the program.


Under **classical mode**, the driver will not notify the user's program that Tx is completed until all Tx data has been sent out from the NPort 5200A; this mode will cause lower throughput. If you want to ensure that all data is sent out before further processing, classical mode is recommended.

**Enable/Disable Tx/Rx FIFO.** If disabled, the NPort 5200A will send one byte each time the Tx FIFO becomes empty; and an Rx interrupt will be generated for each incoming byte. This will result in a faster response and lower throughput. If you want to use XON/XOFF flow control, we recommend setting FIFO to Disable.


**Fast Flush (only flush local buffer)**

- We have added one optional Fast Flush function to Moxa's new NPort Real COM driver. **NPort Administrator Suite for NPort** adds it after version 1.2.
- For some applications, the user's program will use the Win32 "PurgeComm()" function before it reads or writes data. With our design, after the program uses this Purge Comm() function, the NPort driver will keep querying the NPort's firmware several times to make sure there is really no data queued in the NPort firmware buffer, rather than just flushing the local buffer. This kind of design is used because of some special considerations. However, it might take more time (on the order of several hundred milliseconds) than a native COM1, because it needs to work via Ethernet. That's why the native COM ports on the motherboard can work fast with this function call, but the NPort requires much more time. In order to accommodate other applications that require a faster response time, the new NPort driver implements a new "Fast Flush" option. Note that by default, this function is disabled.
- To begin with, make sure there are some "PurgeComm()" functions being used in your application program. In this kind of situation, you might find that your NPort exhibits a much poorer operation performance than when using the native COM1 port. Once you have enabled the "Fast Flush" function, you can check to see if there has been an improvement in performance.
- By default, the optional "Fast Flush" function is disabled. If you would like to enable this function, from the "NPort Administrator," double click the COM ports that are mapped to the NPort, and then select the "Fast Flush" checkbox. You should find that when "Fast Flush" is enabled, the NPort driver will work faster with "PurgeComm()."


**Always Accept Open Requests:** Even the driver cannot establish the connection to NPort, user's software still can open the mapped COM port just like a onboard COM port.

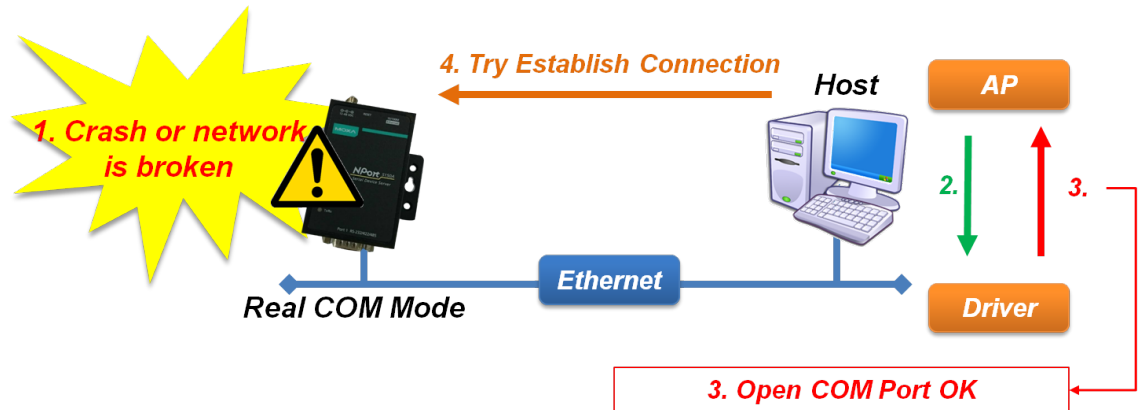


**Ignore TX Purge:** The application can use Win32 API PurgeComm to clear the output buffer and terminate outstanding overlapped write operations. Select **Ignore TX Purge** if you do not want the output buffer to be purged.

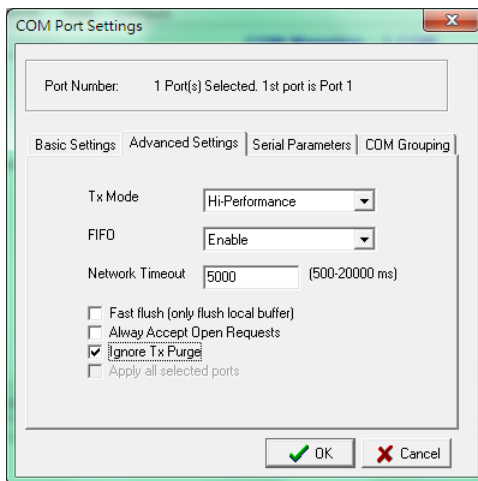


- 7. The Serial Parameter settings shown here are the default settings when the NPort is powered on. However, the program can redefine the serial parameters to different values after the program opens the port via Win 32 API.

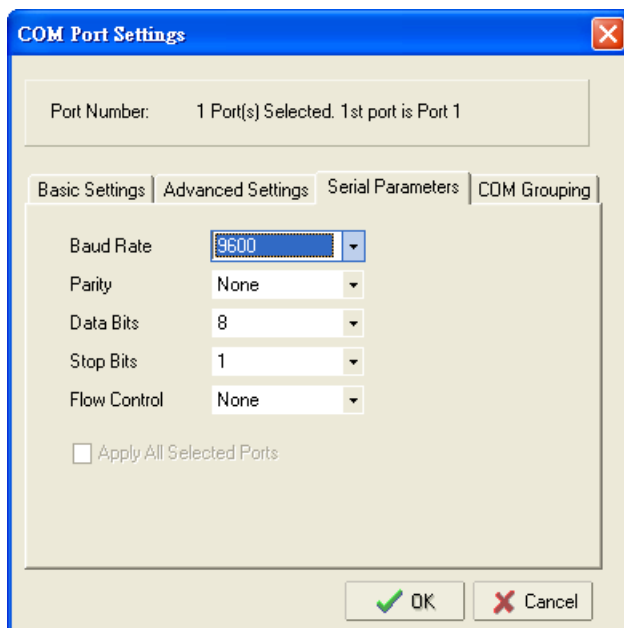


- After setting the COM Mapping, remember to select **Apply Change** to save the information in the host system registry. The host computer will not have the ability to use the COM port until after **Apply Change** is selected.

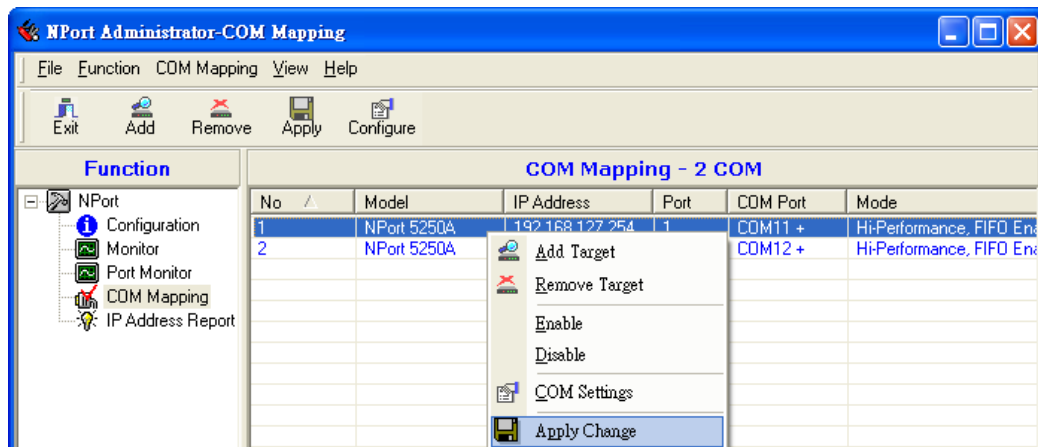

- Select **Discard Change** to tell Administrator NOT to save the COM Mapping information to the host.

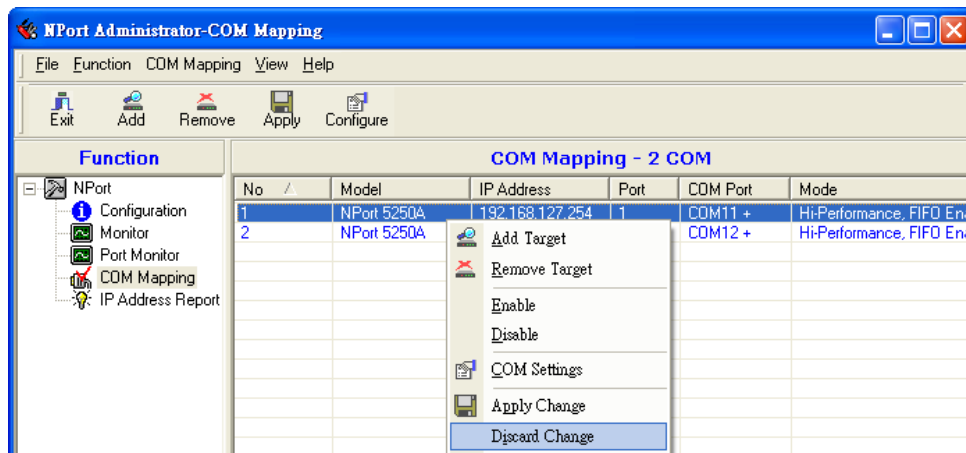


- To save the configuration to a text file, select **Export COM Mapping**. You will then be able to import this configuration file to another host and use the same COM Mapping settings in the other host.

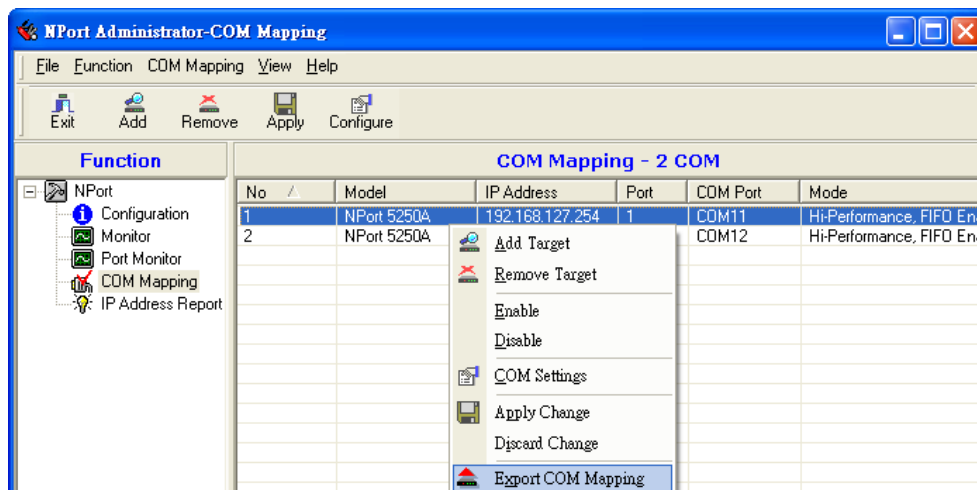


## Off-line COM Mapping


1. Add a target by inputting the IP address and selecting the Model Name without physically connecting the NPort to the network.

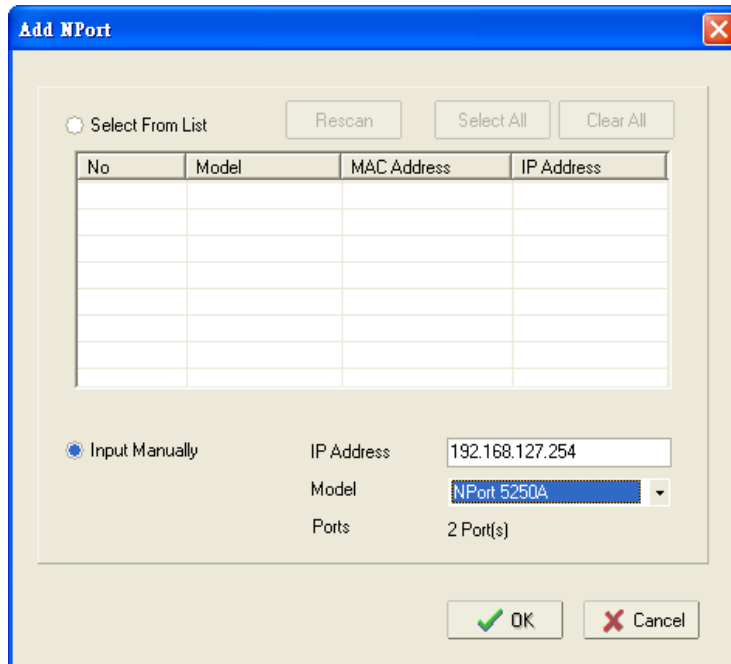

2. Modify the port settings as needed.

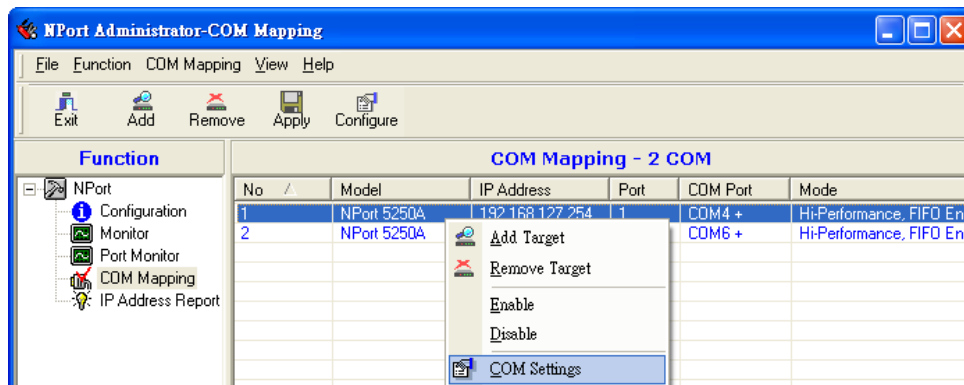

3. Right click in the NPort list section and select **Apply Change**.

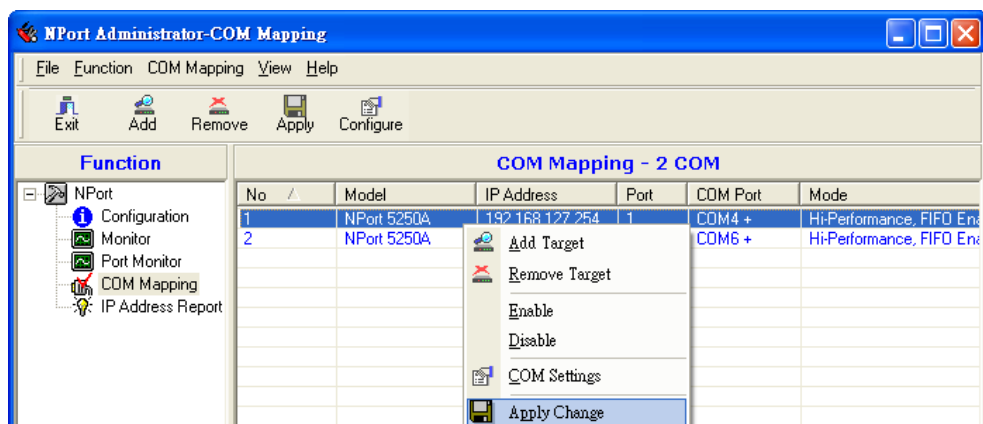


# COM Grouping

The "COM Grouping" function is designed to simulate the multi-drop behavior of serial communication over an Ethernet network. COM Grouping allows you to create a COM Group and redirect data from it to several physical COM ports on NPort device servers. With COM Grouping, you will be able to control multiple physical serial ports simultaneously by operating only one COM port.


## Creating a COM Group

Follow the steps below to add multiple COM ports into one group:

1. Select serial port(s) for the group that you are going to create, and right-click to select **COM Settings**.

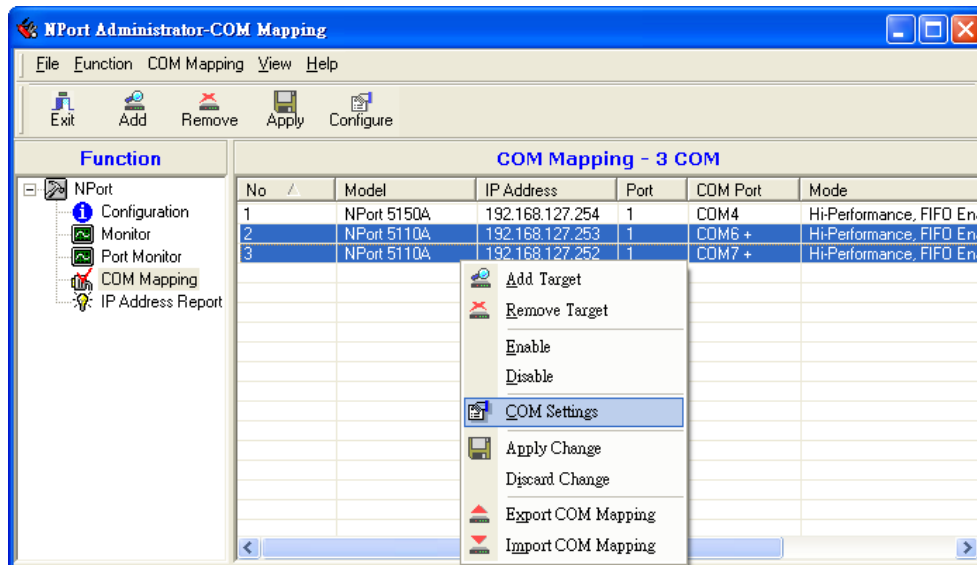

2. Select a COM number for this COM group. You may select one of the ports already assigned to a member of the COM Group. However, once the COM Group is configured, all of the original COM number(s) within the group will be released simultaneously.

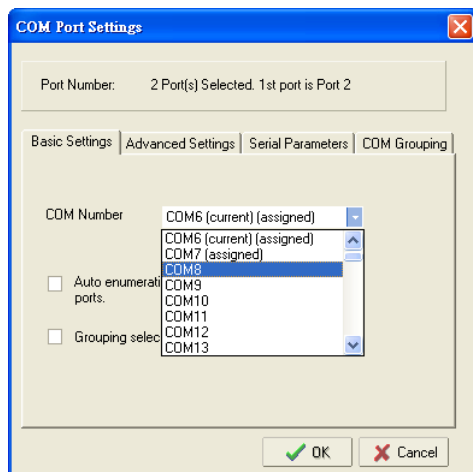


### ATTENTION


The COM Grouping function only supports Windows NT, 2000, and later. The maximum number of ports for each group is 32.




3. Select the **Grouping selected port(s) together** checkbox.

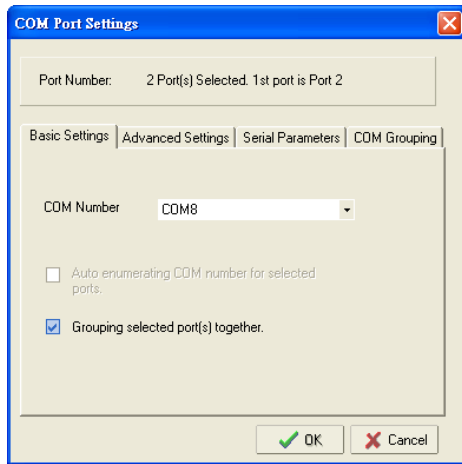


4. On the **COM Grouping** page, you can set "Read" and "Write" permissions for every serial port. It is necessary to set **Signal Status** in order to control the data transmission with specified control signals (e.g., DTR/RTS). You can assign one serial port whose signals will be taken into account by the COM Group.

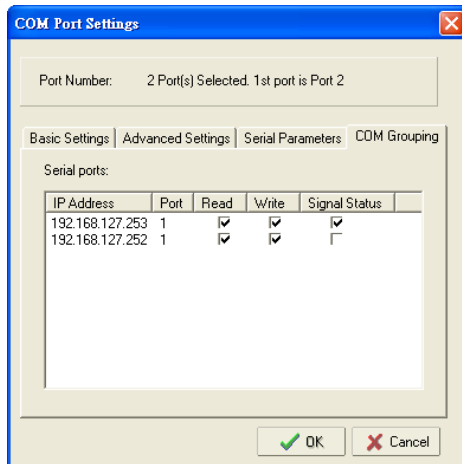

5. Click **OK**, and confirm that the serial ports that were assigned. The COM Port column confirms that your selected ports are labeled as part of a "Group." You will be able to view the serial ports that were assigned to and removed from the Group. Click **Apply** to apply the settings.

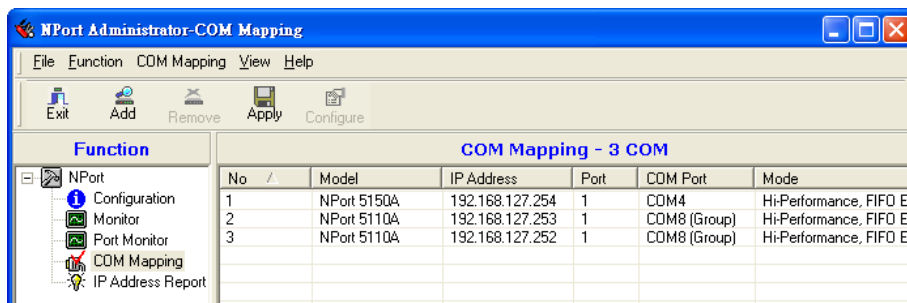


6. Finally, click **Yes** to confirm.

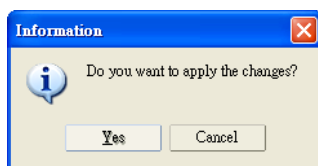


## Deleting a COM Group

Follow the steps below to delete a COM Group and then auto-assign COM numbers for each port in the Group:


1. Select all serial ports in the Group you are deleting and then right-click to select **COM Settings**.

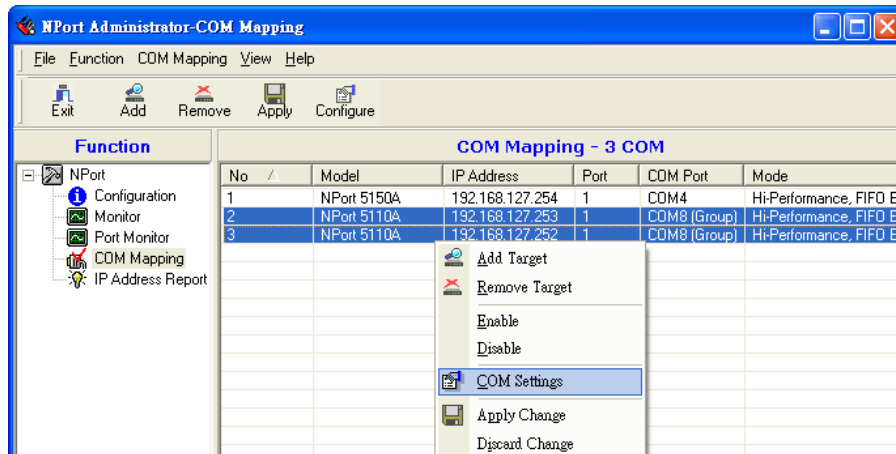


2. Select a COM number for this COM group and check the **Auto enumerating COM number for selected ports** to use the COM number you select as the first starting COM number, and then click **OK**.

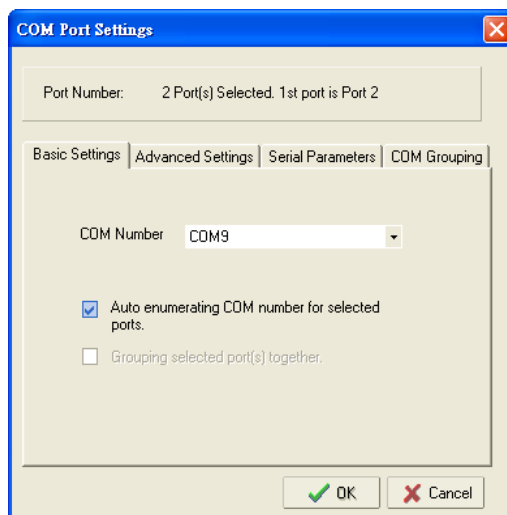

3. You will be able to view the serial ports that were assigned to and removed from the Group. Click **Apply** to apply the settings.

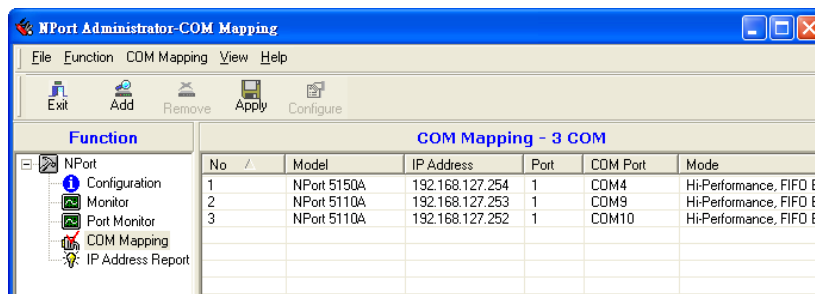


4. Finally, click **Yes** to confirm.

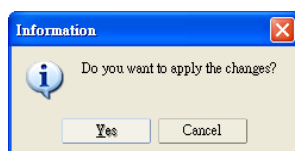


## Adding a Port to a COM Group

Follow the steps below to add a serial port into an existing COM Group:


1. Select the serial port that you are adding and right-click to select **COM Settings**.

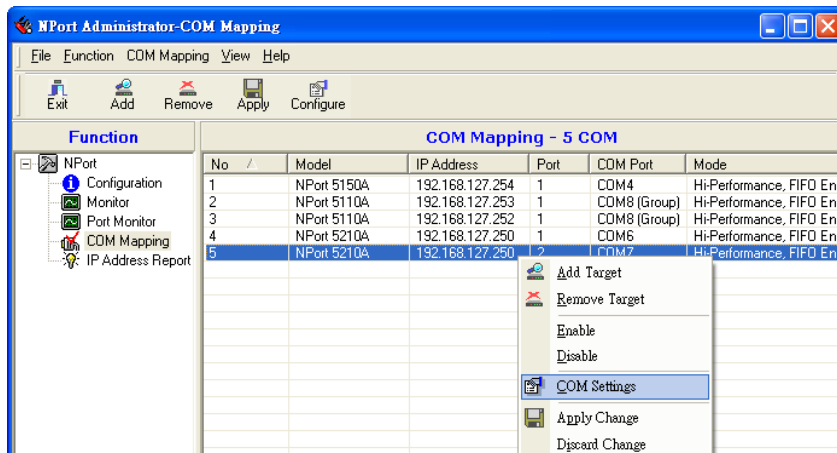


2. Select the COM number of the COM Group you are adding and check mark the **Grouping selected port(s) together** check box and then click **OK**.

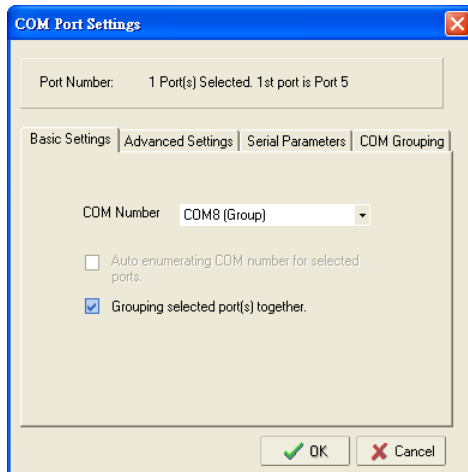

3. You will be able to view the serial ports that were assigned to and removed from the Group. Click **Apply** to apply the settings.

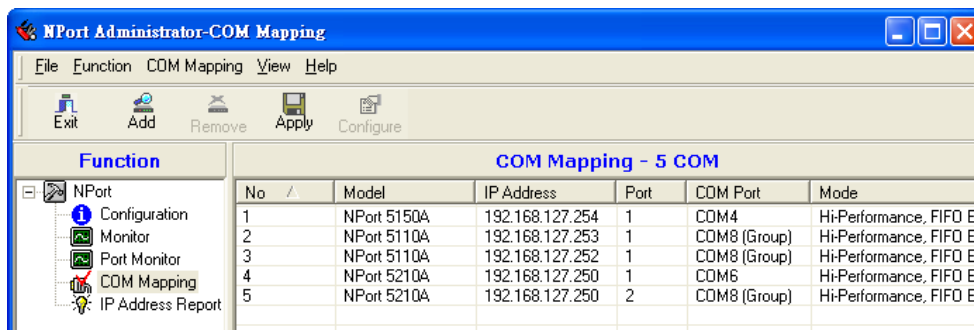


4. Finally, click **Yes** to confirm.

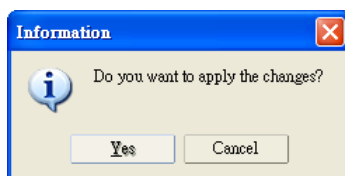


## Removing a Port from a COM Group

Follow the steps below to remove a serial port from a COM Group:


1. Select a serial port in the Group and right-click to select **COM Settings**.

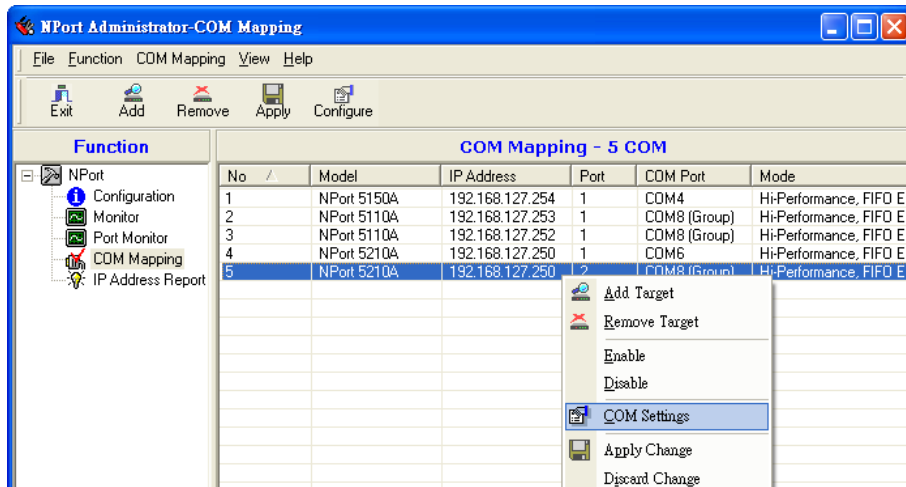


2. Select a COM number that is not in use or assigned to a Group and click **OK**.

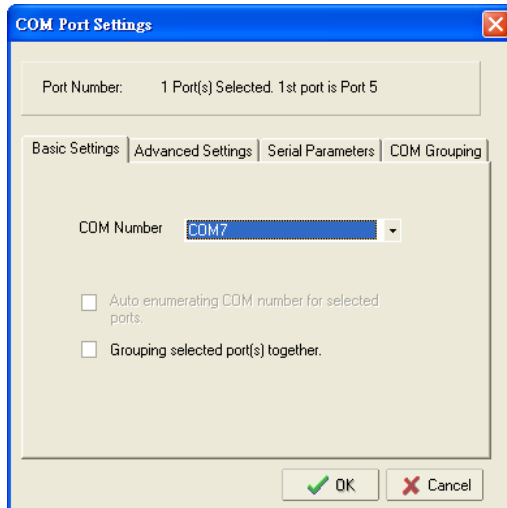

3. You will be able to view the serial ports that were assigned to and removed from the Group. Click **Apply** to apply the settings.

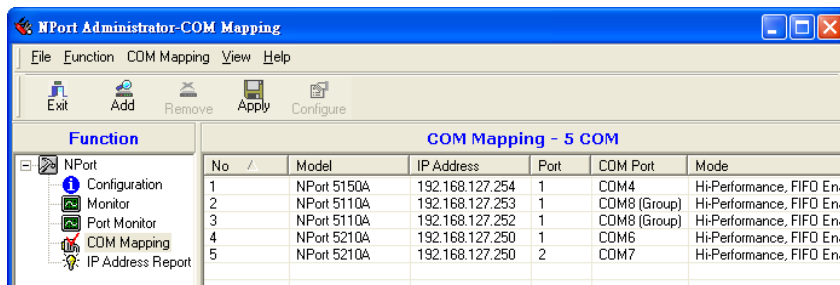

4. Finally, click **Yes** to confirm.

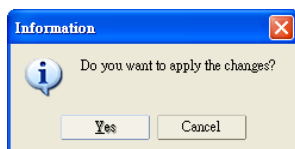


## Modify Ports in a COM Group


In the following subsections we examine three ways in which the serial ports in a COM Group can be modified:

### Changing the COM Number of a COM Group


1. Select all serial ports in the Group and right-click to select **COM Settings**.

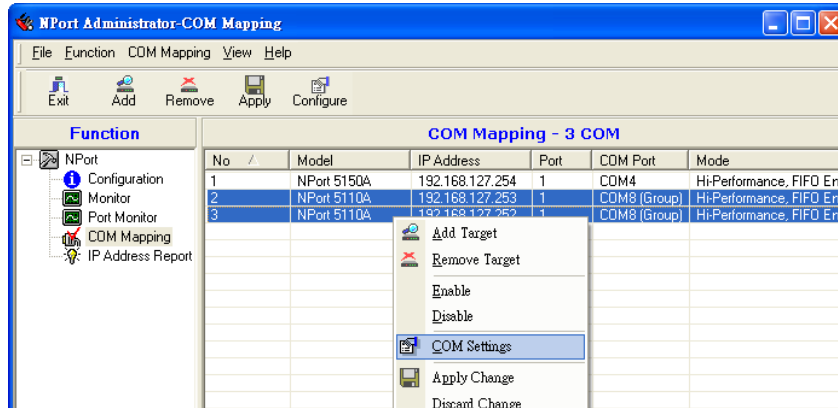


2. Select a COM number that is not in use or assigned to a Group.

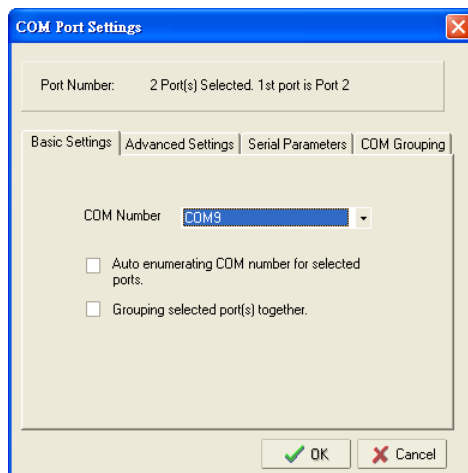


3. Select the **Grouping selected port(s) together** checkbox and then click **OK**.

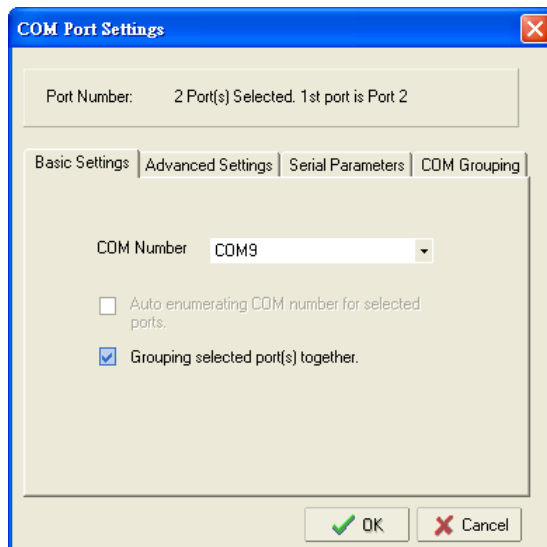

- You will be able to view the serial ports that were assigned to and removed from the Group. Click **Apply** to apply the settings.

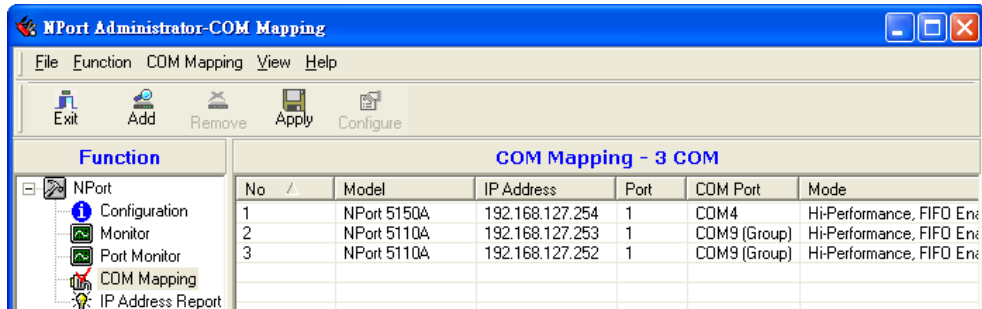


- Finally, click **Yes** to confirm.

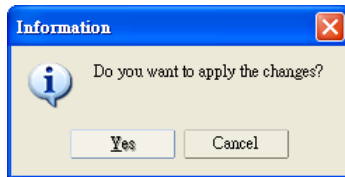


### Changing Advanced Settings and Serial Parameters of the COM Group


- Check the port specified on the **COM Grouping** page as the signal port.

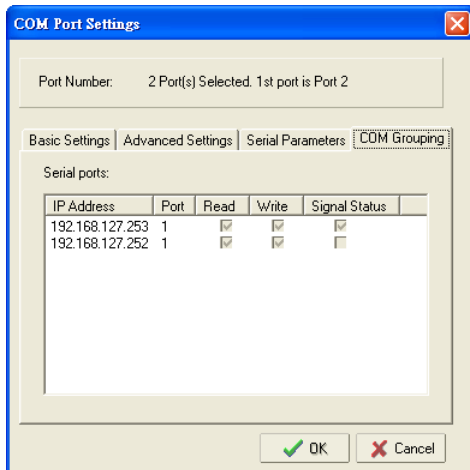

- Select the "Signal Status" controlled port and then right-click and select **COM Settings**.

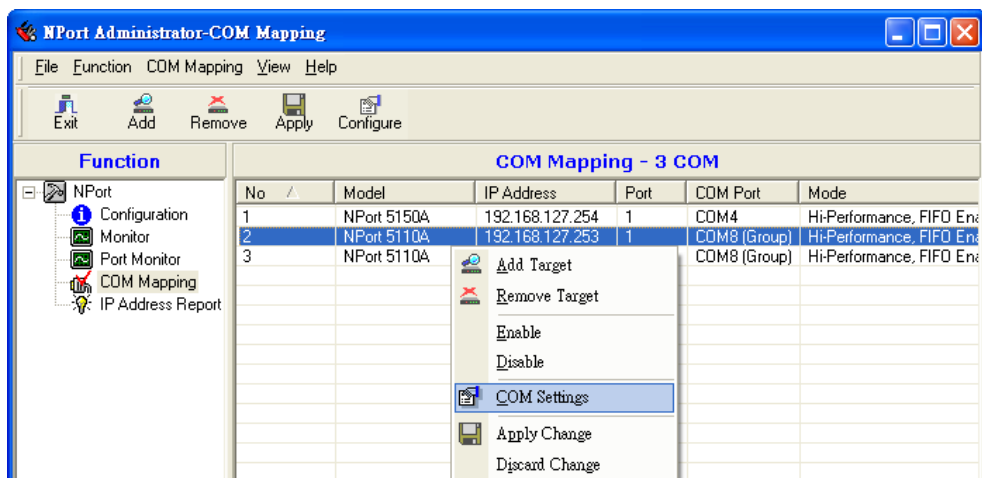


- The **Advanced Settings** and **Serial Parameters** pages will be available for modification.

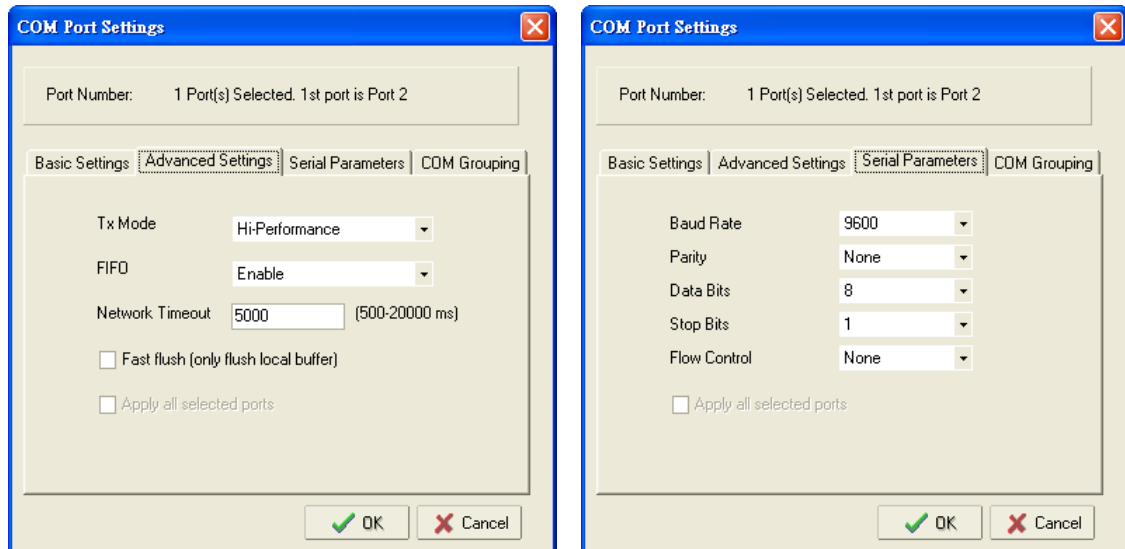


### Changing the Serial Port Specified as Signal Port for the COM Group


- Select a serial port in the Group and then right-click and select **COM Settings**.

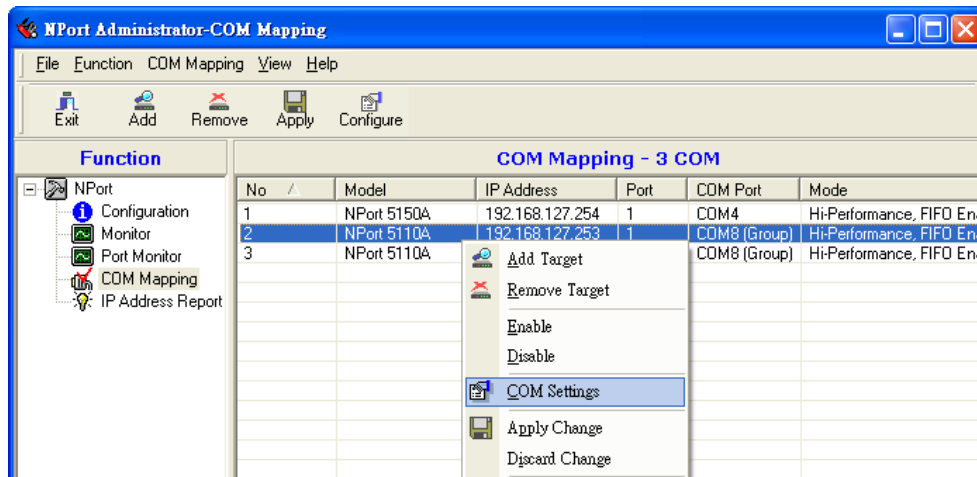

- Check the **Grouping selected port(s) together** check box.

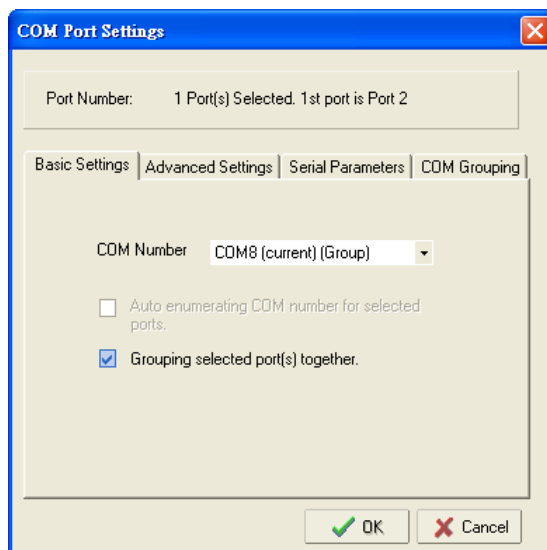


- On **COM Grouping** page, you can specify one serial port whose signals will be taken into account by the COM Group and change the Read/Write status for each serial port.

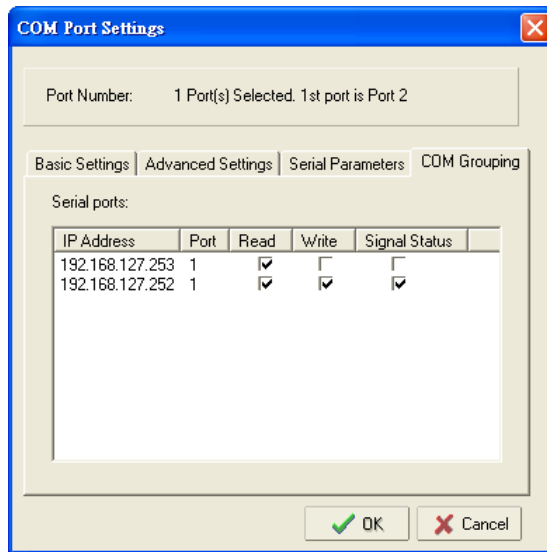

## IP Address Report


When the NPort is used in a dynamic IP environment, users must spend more time with IP management tasks. NPort serial device servers help out by periodically reporting their IP address to the IP location server, in case the dynamic IP has changed.

- Configure the NPort with Dynamic IP settings (DHCP, BOOTP, or DHCP/BOOTP). Assign the remote Auto IP report server's IP address and UDP port.

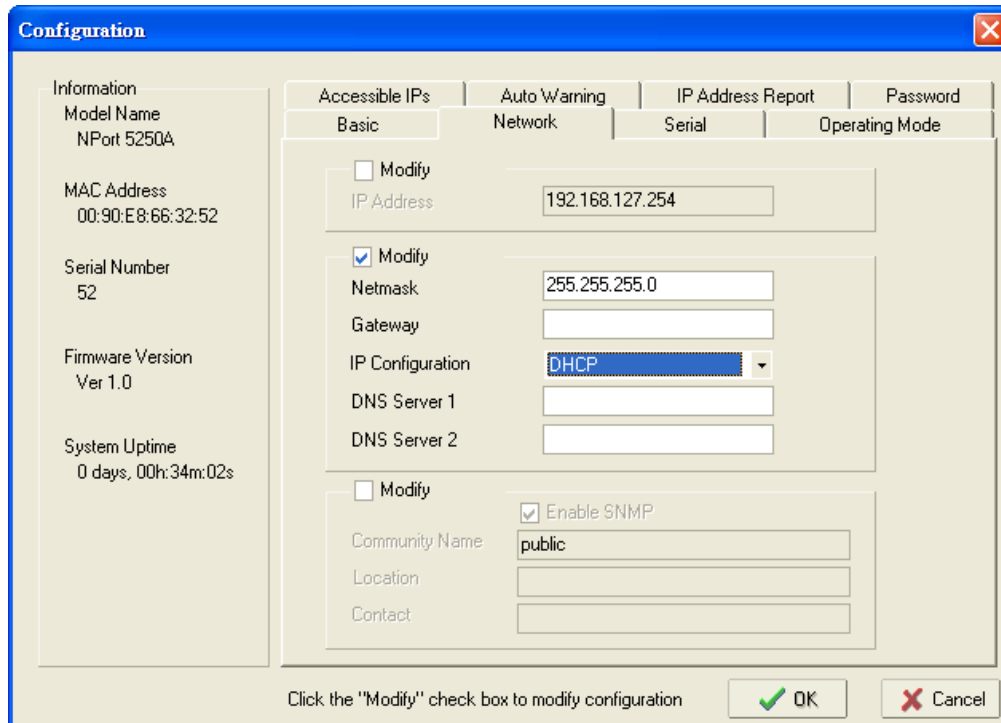





2. Select the **IP Address Report**, and click the right mouse button to select **Settings**.

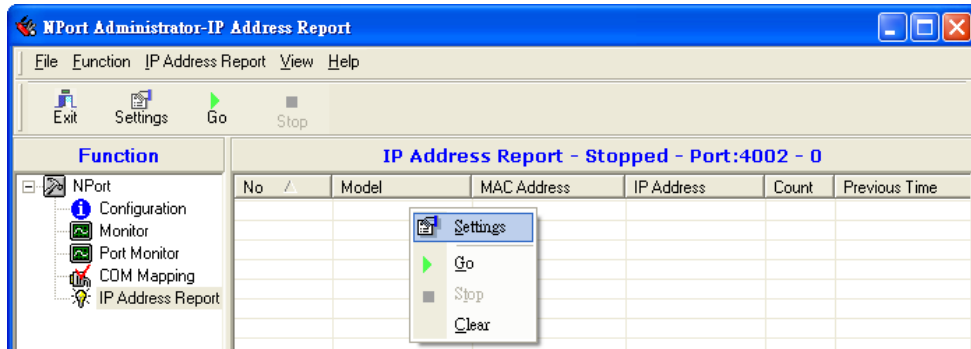

3. Configure the Local Listen Port to be the same as the NPort's "Auto report to UDP port" setting.

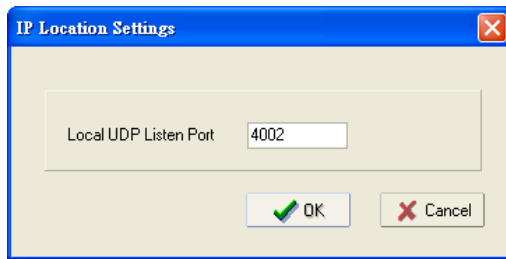

4. Click **Go** to start receiving the Auto IP address report from the NPort.

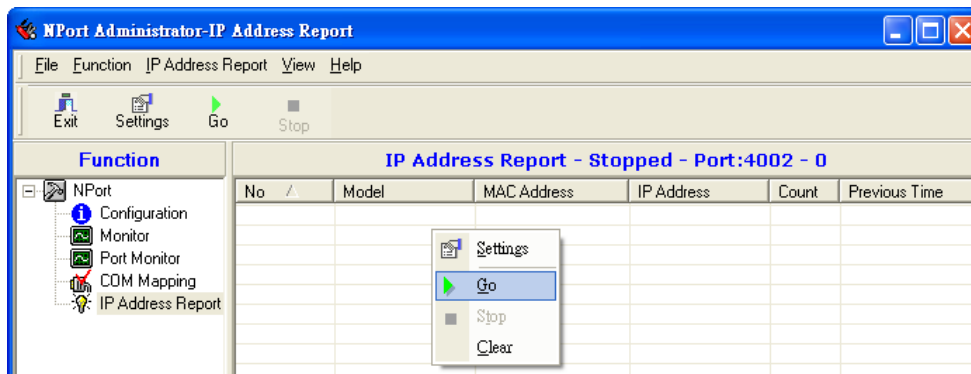

# **NPort CE Driver Manager for Windows CE**

NPort CE Driver Manager for Windows CE applies to the **NPort 5000 and NPort IA5000 Series** only.

The following topics are covered in this chapter:

- **Overview**
- **Installing NPort CE Driver Manager**
- **Using NPort CE Driver Manager**

# Overview




## ATTENTION

Before installing and the configuring the NPort Administration suite, make sure your user privilege is set as system administrator.

# Installing NPort CE Driver Manager

1. Copy "NPortCab.cab" to Windows CE and start to install driver by double clicking on it.
2. Click on "OK" to complete the installation when the following screen appears.

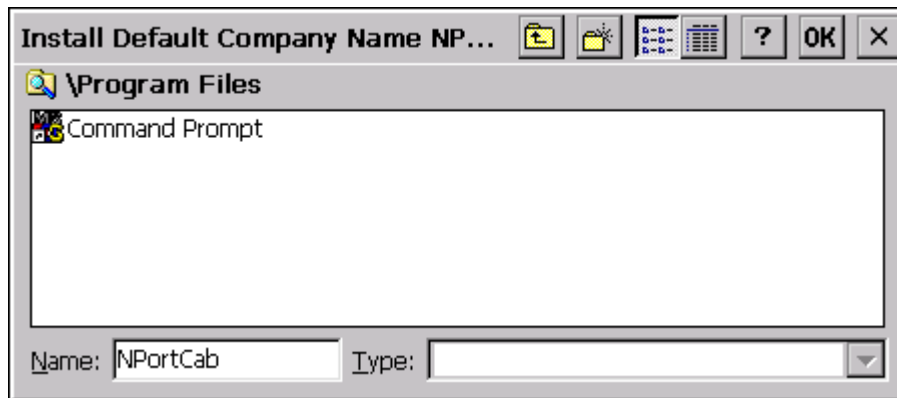


3. Driver installation is now complete and the "NPortCab.cab" icon disappears from the screen. This is normal when installing drivers in Windows CE.


# Using NPort CE Driver Manager

After you install NPort CE Driver Manager, you can set up the NPort's serial ports as remote COM ports for your Windows CE. Make sure that the serial port(s) on your NPort are set to Real COM mode when mapping COM ports with NPort CE Driver Manager.


1. Go to **Start → Programs → NPort CE Driver Manager**.

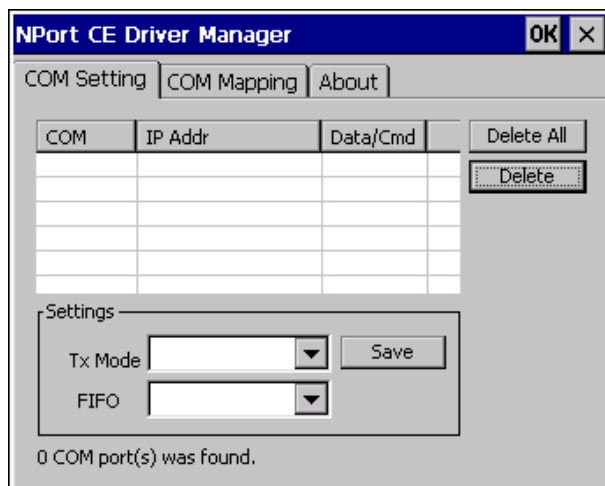


- Click on the **COM Mapping** page and then the "Search" button to scan for NPort servers

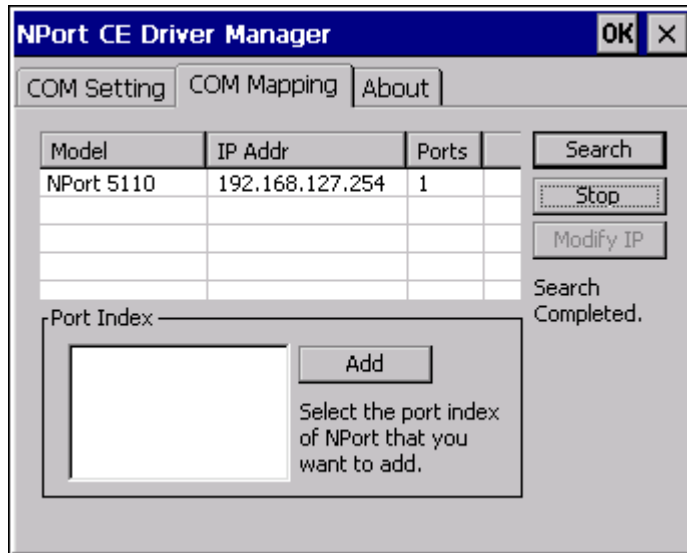


- All NPort servers that were located will appear in the NPort CE Driver Manager window. Click on the server whose COM ports you would like to map to and then select the port index. Note that multiple selections are allowed.
- Select the port(s) at the Port Index and then click on the "Add" button to map to the COM Port(s).

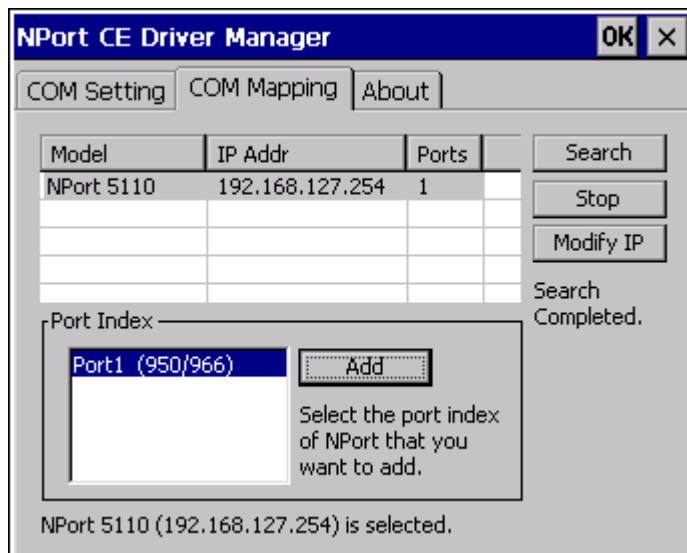

- Return to the **COM Setting** page. You should be able to see the newly mapped COM Port(s).

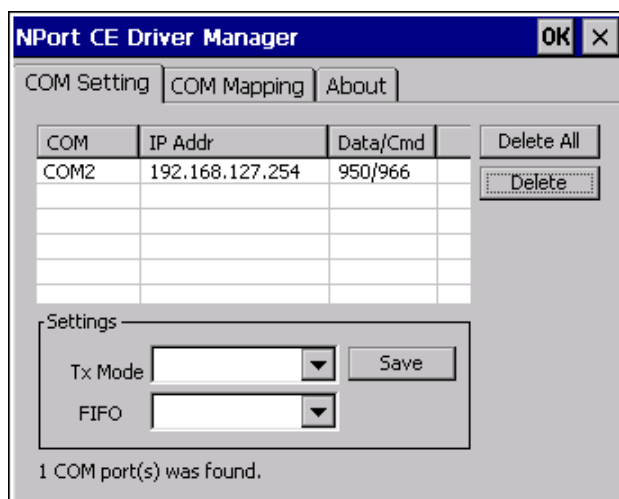

- To configure the settings for a particular COM Port, select the row of the desired port, and then modify the setting in the "Settings" panel, as shown below.

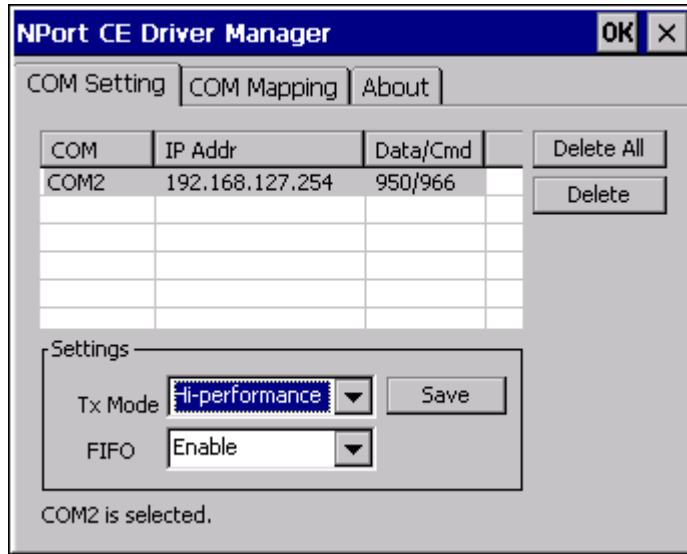

**Tx Mode**

"Hi-Performance" is the default for Tx mode. After the driver sends data to the NPort server, the driver immediately issues a "Tx Empty" response to the program. Under "Classical mode," the driver will not send the "Tx Empty" response until after confirmation is received from the NPort server's serial port. This causes lower throughput. Classical mode is recommended if you want to ensure that all data is sent out before further processing.

**FIFO**

If FIFO is disabled, the NPort server will transmit one byte each time the Tx FIFO becomes empty, and an Rx interrupt will be generated for each incoming byte. This will result in a faster response and lower throughput.

# Linux Real TTY Drivers

---

The following topics are covered in this chapter:

- ❑ **Basic Procedures**
- ❑ **Hardware Setup**
- ❑ **Installing Linux Real TTY Driver Files**
- ❑ **Mapping TTY Ports**
  - Mapping tty ports automatically
  - Mapping tty ports manually
- ❑ **Removing Mapped TTY Ports**
- ❑ **Removing Linux Driver Files**

## Basic Procedures

To map an NPort 5000 serial port to a Linux host's tty port, follow these instructions:

1. Set up the NPort 5000. After verifying that the IP configuration works and you can access the NPort 5000 (by using ping, telnet, etc.), configure the desired serial port on the NPort 5000 to Real COM mode.
2. Install the Linux Real tty driver files on the host
3. Map the NPort serial port to the host's tty port

## Hardware Setup

Before proceeding with the software installation, make sure you have completed the hardware installation. Note that the default IP address for the NPort 5000 is 192.168.127.254.

**NOTE** After installing the hardware, you must configure the operating mode of the serial port on your NPort 5000 to Real COM mode.

## Installing Linux Real TTY Driver Files

**NOTE** The newest information, please refer to readme.txt on Linux Real TTY Driver

1. Obtain the driver file from Moxa's website, at <http://www.moxa.com>. You may find it in the **Resource** section under your product page.
2. Log in to the console as a super user (root).
3. Execute `cd /` to go to the root directory.
4. Copy the driver file `npreal2xx.tgz` to the `/` directory.
5. Execute `tar xvzf npreal2xx.tgz` to extract all files into the system.
6. Execute `/tmp/moxa/mxinst`.

For RedHat AS/ES/WS and Fedora Core1, append an extra argument as follows: `# /tmp/moxa/mxinst SP1`

The shell script will install the driver files automatically.

7. After installing the driver, you will be able to see several files in the `/usr/lib/npreal2/driver` folder:

```
> mxaddsvr (Add Server, mapping tty port)
> mxdelsvr (Delete Server, unmapping tty port)
> mxloadsvr (Reload Server)
> mxmknod (Create device node/tty port)
> mxrmnod (Remove device node/tty port)
> mxuninst (Remove tty port and driver files)
```

At this point, you will be ready to map the NPort serial port to the system tty port.

## Mapping TTY Ports

Make sure that you set the operation mode of the desired NPort 5000 serial port to Real COM mode. After logging in as a super user, enter the directory `/usr/lib/npreal2/driver` and then execute `mxaddsvr` to map the target NPort serial port to the host tty ports. The syntax of `mxaddsvr` is as follows:

```
mxaddsvr [NPort IP Address] [Total Ports] ([Data port] [Cmd port])
```

The `mxaddsvr` command performs the following actions:

1. Modifies `npreal2d.cf`.
2. Creates tty ports in directory `/dev` with major & minor number configured in `npreal2d.cf`.
3. Restarts the driver.

## Mapping tty ports automatically

To map tty ports automatically, you may execute `mxaddsvr` with just the IP address and the number of ports, as in the following example:

```
# cd /usr/lib/npreal2/driver
# ./mxaddsvr 192.168.3.4 16
```

In this example, 16 tty ports will be added, all with IP 192.168.3.4, with data ports from 950 to 965 and command ports from 966 to 981.

## Mapping tty ports manually

To map tty ports manually, you may execute `mxaddsvr` and manually specify the data and command ports, as in the following example:

```
# cd /usr/lib/npreal2/driver
# ./mxaddsvr 192.168.3.4 16 4001 966
```

In this example, 16 tty ports will be added, all with IP 192.168.3.4, with data ports from 4001 to 4016 and command ports from 966 to 981.

## Removing Mapped TTY Ports

After logging in as root, enter the directory `/usr/lib/npreal2/driver` and then execute `mxdelsvr` to delete a server. The syntax of `mxdelsvr` is:

```
mxdelsvr [IP Address]
```

Example:

```
# cd /usr/lib/npreal2/driver
# ./mxdelsvr 192.168.3.4
```

The following actions are performed when executing `mxdelsvr`:

1. Modify `npreal2d.cf`.
2. Remove the relevant tty ports in directory `/dev`.
3. Restart the driver.



If the IP address is not provided in the command line, the program will list the installed servers and total ports on the screen. You will need to choose a server from the list for deletion.

## Removing Linux Driver Files

A utility is included that will remove all driver files, mapped tty ports, and unload the driver. To do this, you only need to enter the directory `/usr/lib/npreal2/driver`, then execute `mxuninst` to uninstall the driver. This program will perform the following actions:

1. Unload the driver.
2. Delete all files and directories in `/usr/lib/npreal2`
3. Delete directory `/usr/lib/npreal2`
4. Modify the system initializing script file.

## macOS TTY Drivers

---

The following topics are covered in this chapter:

- ❑ **Basic Procedures**
- ❑ **Hardware Setup**
  - Installing macOS TTY Driver Files
- ❑ **Mapping macOS TTY port**
- ❑ **Uninstalling the Driver**

## Basic Procedures

To map an NPort 5000 serial port to a Mac host's tty port, follow these instructions:

1. Set up the NPort 5000. Verify the IP configuration works by using ping, telnet, etc.
2. Install the Mac driver files on the host.
3. Search or manually input the IP address of the NPort to set up virtual COM port.


## Hardware Setup

Before proceeding with the software installation, make sure you have completed the hardware installation. Please note the default IP address for the NPort 5000 is 192.168.127.254.


## Installing macOS TTY Driver Files

**NOTE** For the newest information, please refer to readme.txt on Mac TTY Driver. Resources location of product information, release note, and readme file: /usr/local/share/NPortConnect


1. Obtain the driver file from Moxa's website, at <http://www.moxa.com>. You may find it in the Resource section under your product page.

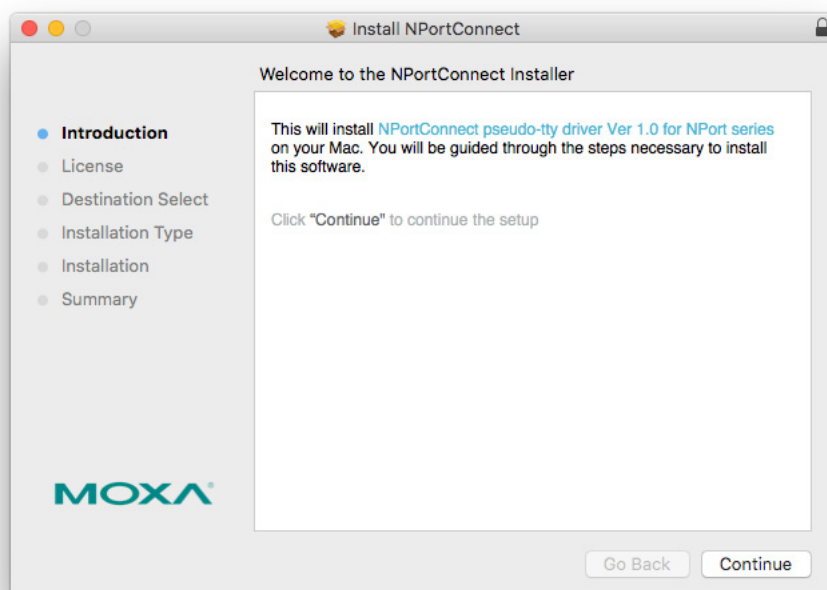


- Execute the installer package 'moxa-macOS-tty-drivers-for-macOS-10.12-or-later-v1.0.pkg'.

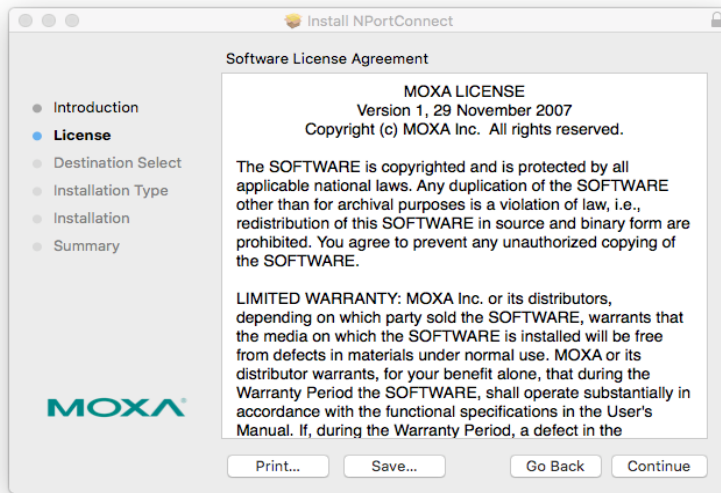


- Press **Continue** when the **Introduction** window opens to proceed with installation.

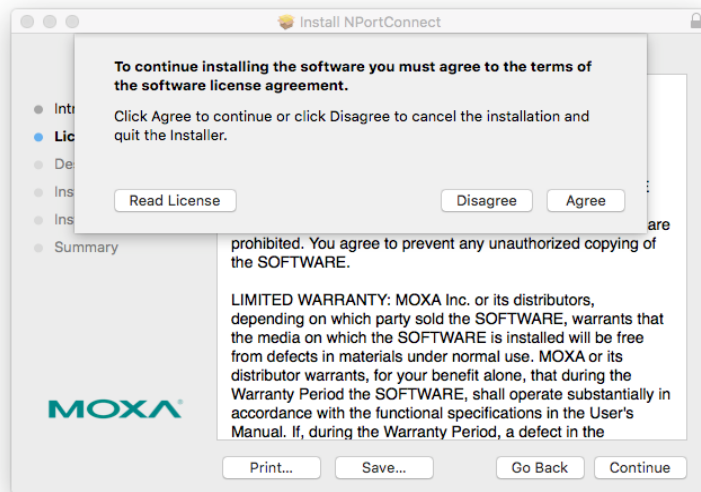


- Press **Continue** in the **Destination Select** window

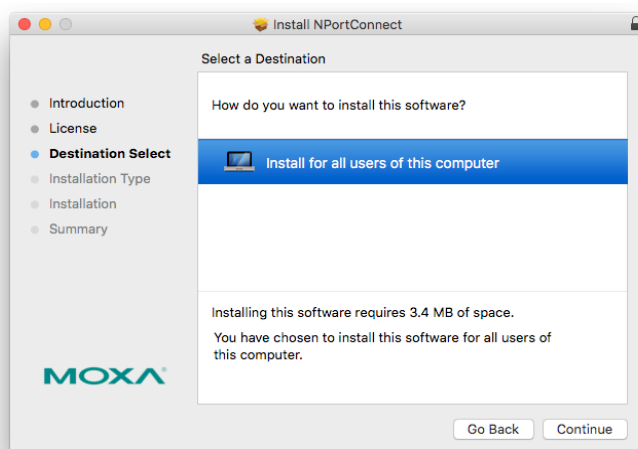


5. Click **Install** to start the installation in the default directory, or select an alternative location.

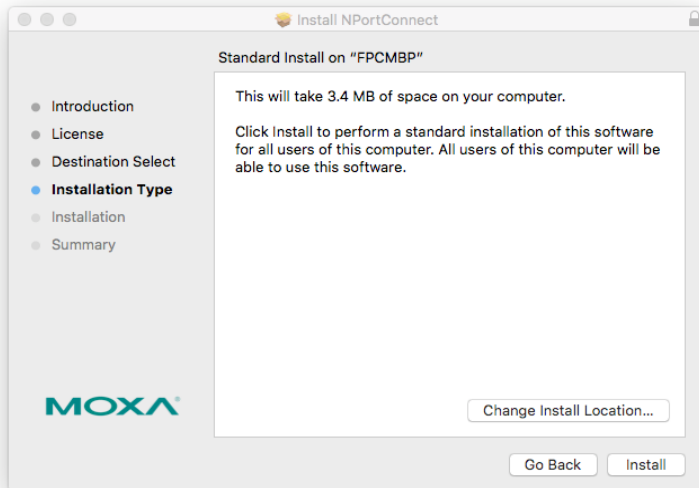


6. Key in your system login username and password to confirm the authentication.

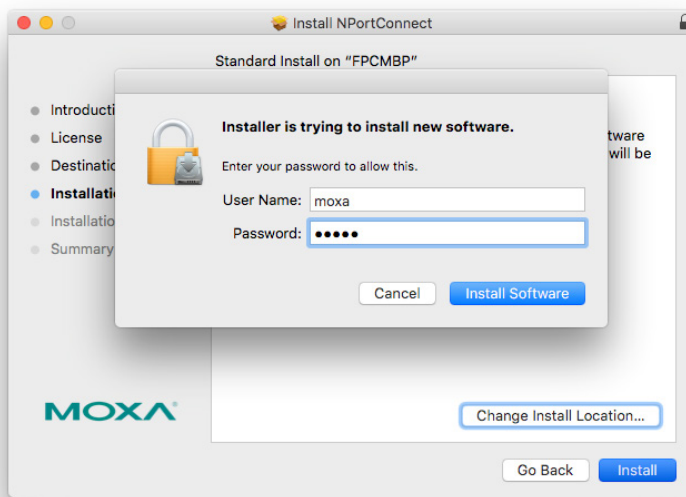

7. The Installation window reports the progress of the installation.

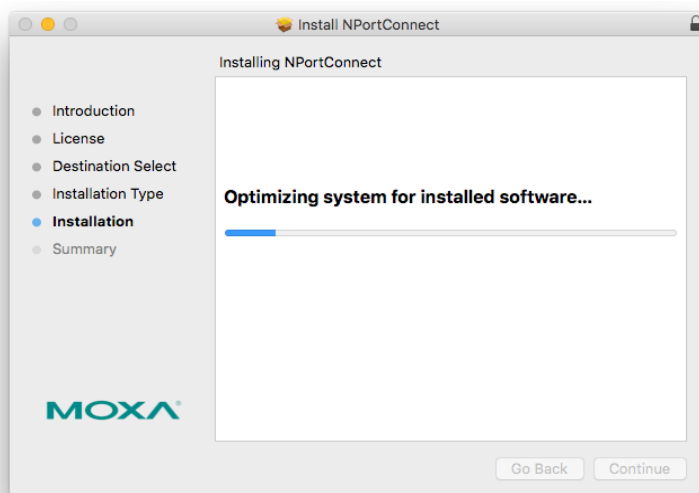

8. Click **Close** to complete the installation of the NPort macOS tty driver.

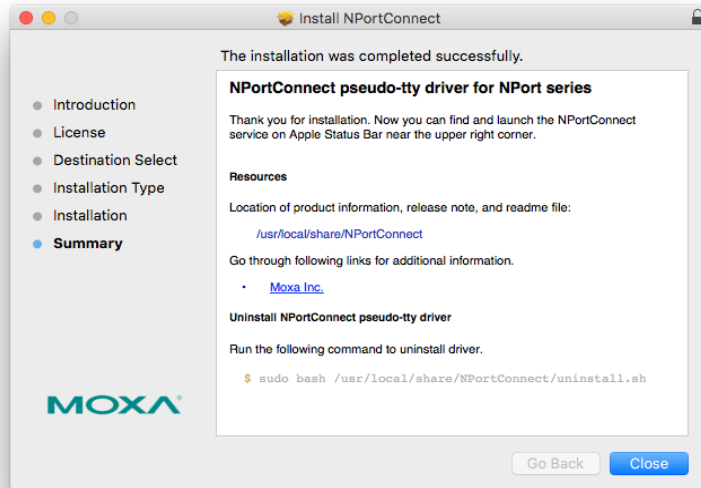


## Mapping macOS TTY port


1. In the menu bar, a **NPortConnect** icon should appear after the installation is completed.




2. Click on the **NPortConnect** icon and select **NPort Mapping** for the port mapping function.

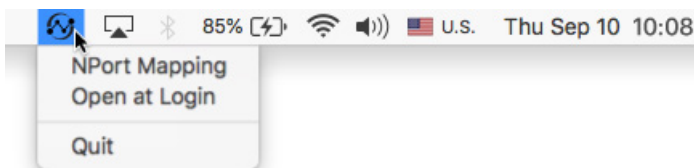


3. Click on **+ Add** to enter the tty port setup.

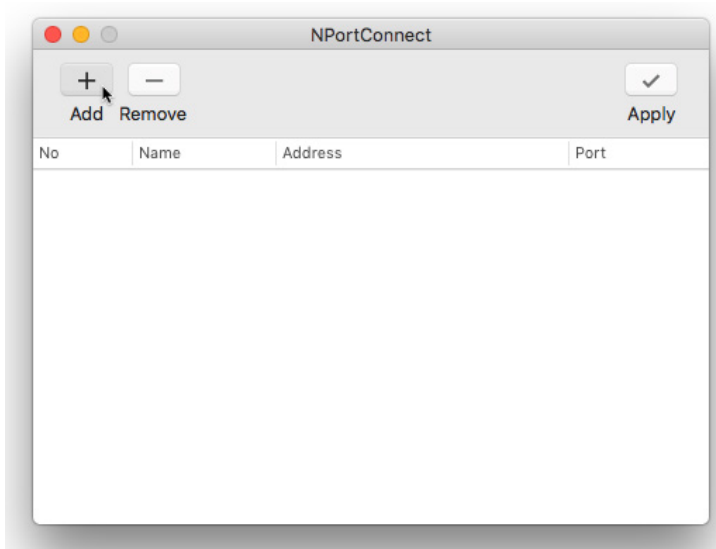


4. Click **Search** to find the NPort that is already setup in the **Hardware Setup** procedure. The **Search** function is broadcast search to locate all the NPort units that are connected to the same LAN as your Mac. Since the Broadcast Search function searches by MAC address and not IP address, all NPort units connected to the LAN will be located, regardless of whether or not they are part of the same subnet as the host. Or, you can input the IP address manually to find the specific NPort.

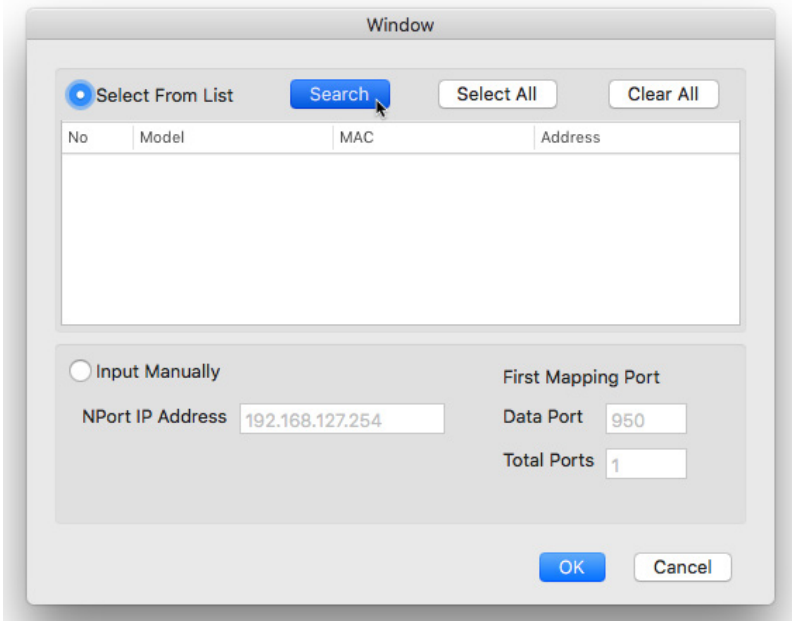


5. Once search is completed, all the NPort found would appear on the list.

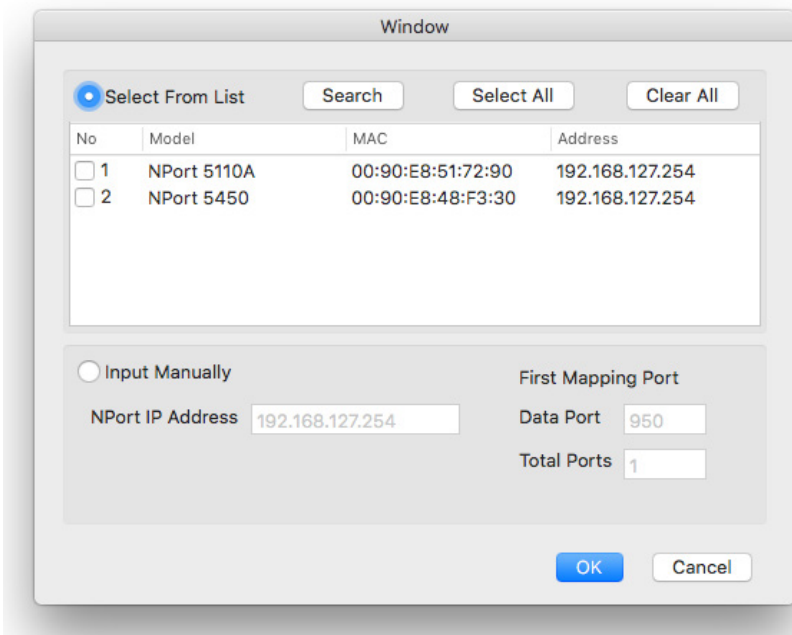


5. Select the model types that are for the tty port mapping and click **OK**.

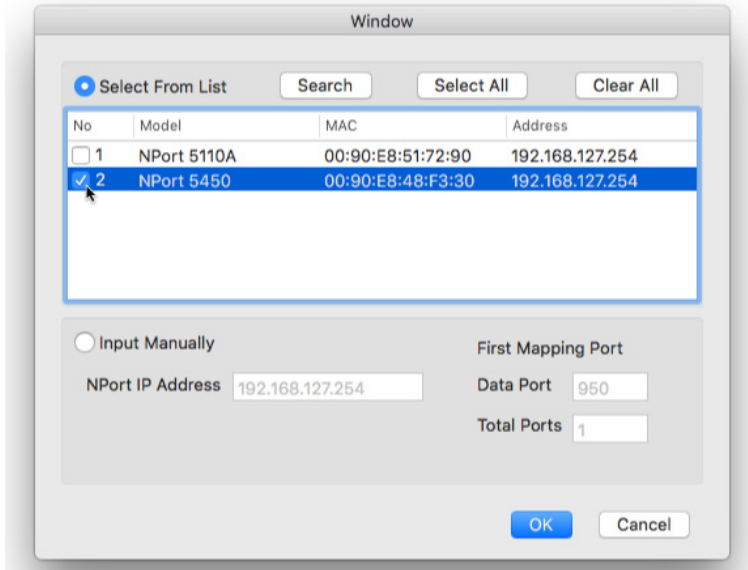

7. NPortConnect would auto assign the tty name and corresponding port number to the IP address of the selected NPort.

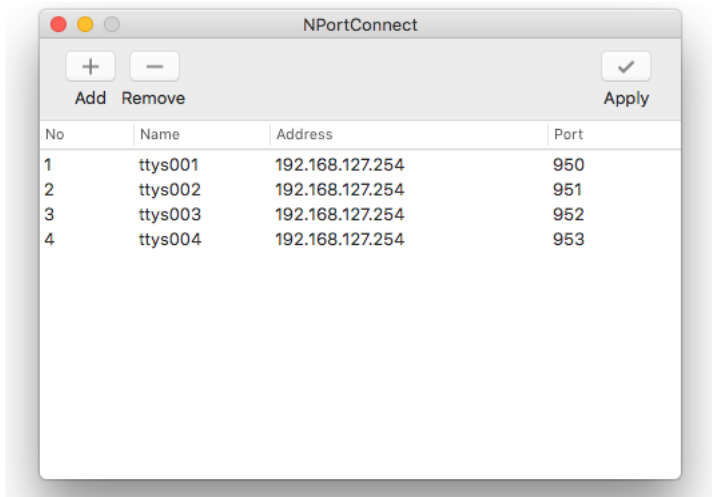


8. The tty name and port number are editable. Please note that these changed values are only for mapping configuration and would not change the values in the NPort settings.

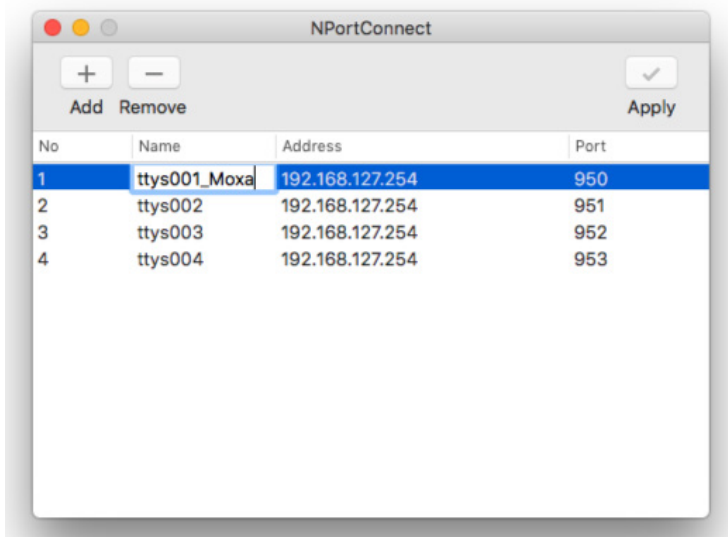



9. When everything is set, click **Apply** to save the configuration.

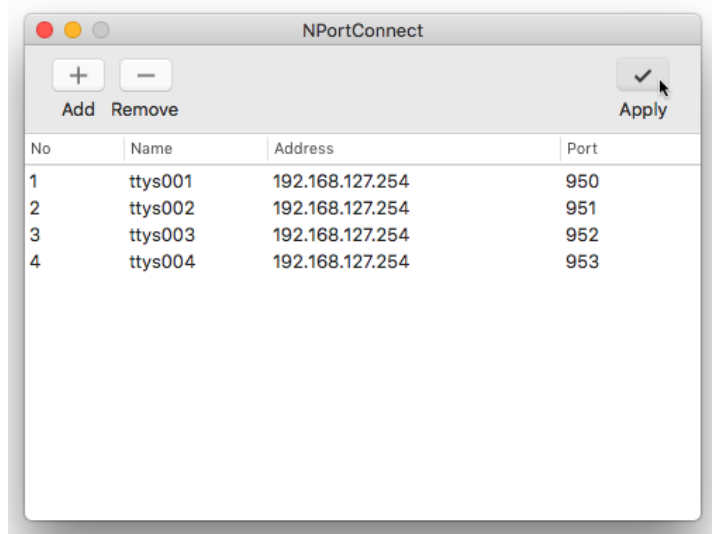

## Uninstalling the Driver

Run the following command to uninstall driver:

```
$ sudo bash /usr/local/share/NPortConnect/uninstall.sh
```

# 10

## IP Serial LIB

---

The following topics are covered in this chapter:

□ **Overview**

- What is IP Serial Library?
- Why Use IP Serial Library?
- How to Install IP Serial Library

□ **IP Serial LIB Function Groups**

□ **Example Program**

# Overview

## What is IP Serial Library?

IP Serial Library is a Windows library with frequently used serial command sets and subroutines. IP Serial Library is designed to reduce the complexity and poor efficiency of serial communication over TCP/IP. For example, Telnet can only transfer data, but it can't monitor or configure the serial line's parameters.

## Why Use IP Serial Library?


For programmers familiar with serial communication, IP Serial Library provides well-designed function calls that have the same style as Moxa's PComm Library.

IP Serial Library is amazingly simple and easy to understand. By including it in your VB, C, or Delphi programming environment, you can program your own TCP/IP application with the ability to control serial communication parameters.

The NPort serial device server uses 2 TCP ports for communication between the NPort and host computer's Real COM driver. The NPort uses a data port and command port to provide pure data transfer without decode and encode. Compared to using only one TCP port to control serial communication (such as RFC 2217), IP Serial Library uses a command port to communicate with the NPort from the user's program. IP Serial Library not only runs with excellent efficiency but also runs without any decode or encode problems.

## How to Install IP Serial Library

IP Serial Lib comes with the NPort Administration Suite. Refer to the IPSerial directory for more detail about the function definitions.

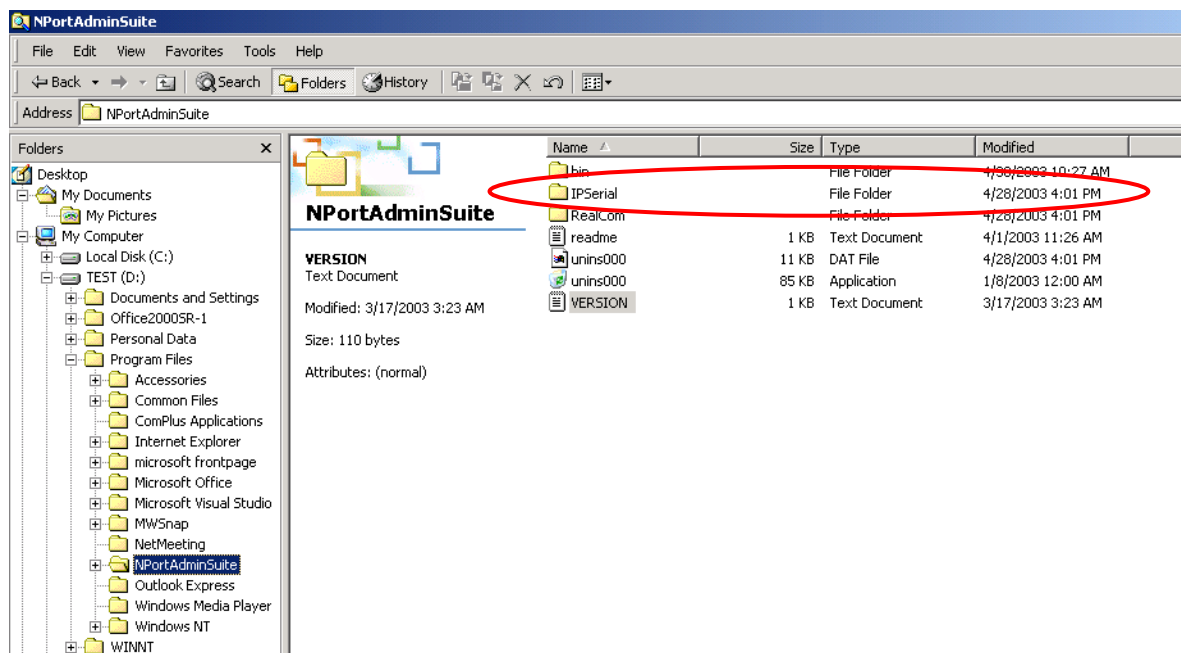

## IP Serial LIB Function Groups

| Server Control   | Port Control  | Input/Output Data  | Port Status Inquiry              | Miscellaneous  |
|--|---|--|----------------------------------|--|
| nsio_init<br>nsio_end<br>nsio_resetserver<br>nsio_checkalive | nsio_open<br>nsio_close<br>nsio_ioctl<br>nsio_flowctrl<br>nsio_DTR<br>nsio_RTS<br>nsio_lctrl<br>nsio_baud<br>nsio_resetport | nsio_read<br>nsio_SetReadTimeouts<br>nsio_write<br>nsio_SetWriteTimeouts | nsio_lstatus<br>nsio_data_status | nsio_break<br>nsio_break_on<br>nsio_break_off<br>nsio_breakcount |

## Example Program

```

char NPort 5100A-Nip="192.168.1.10";
char buffer[255];
int port = 1;
int portid;
nsio_init();
portid = nsio_open(NPort 5100Aip, port);
nsio_ioctl(portid, B9600, (BIT_8 | STOP_1 |
P_NONE) );
sleep(1000);
nsio_read(port, buffer, 200);
nsio_close(portid);
nsio_end();

/*data buffer, 255 chars */
/*1st port */
/* port handle */
/*initial IP Serial Library */
/*1st port, NPort 5100A IP=192.168.1.10
*/
/*set 9600, N81 */
/* wait for 1000 ms for data */
/* read 200 bytes from port 1 */
/* close this serial port */
/* close IP Serial Library */

```

## Android API Instructions

---

The following topics are covered in this chapter:


- ❑ **Overview**
  - How to Start MxNPortAPI
- ❑ **MxNPortAPI Function Groups**
- ❑ **Example Program**

## Overview

If you want to remote control your serial devices on an Android platform, then the MxNPortAPI is a simple application programming tool that you can use. The MxNPortAPI helps programmers develop an Android application to access the device server by TCP/IP.

The MxNPortAPI provides frequently used serial command sets like port control, input/output, etc., and the style of developed Android application is similar to MOXA Driver Manager. For more details of the provided functions, please refer the "MxNPortAPI Function Groups" section.

This MxNPortAPI is layered between the Android application and Android network manager framework. This Android library is compatible with Java 1.7, Android 3.1 (Honeycomb - API version 12), and later versions.

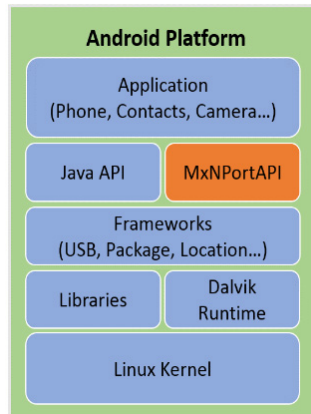


## How to Start MxNPortAPI


You can download the MxNPortAPI from Moxa's website at <http://www.moxa.com>, and develop the application program in popular OS, such as Windows, Linux, or Mac. (You may find it in the **Resource** section under your product page.)

(You can refer the Android studio website to see the system requirements for development environment: <https://developer.android.com/studio/index.html?hl=zh-tw#Requirements>).

To start your application program, please unzip the MxNPortAPI file and refer to the index (.html) under the Help directory.

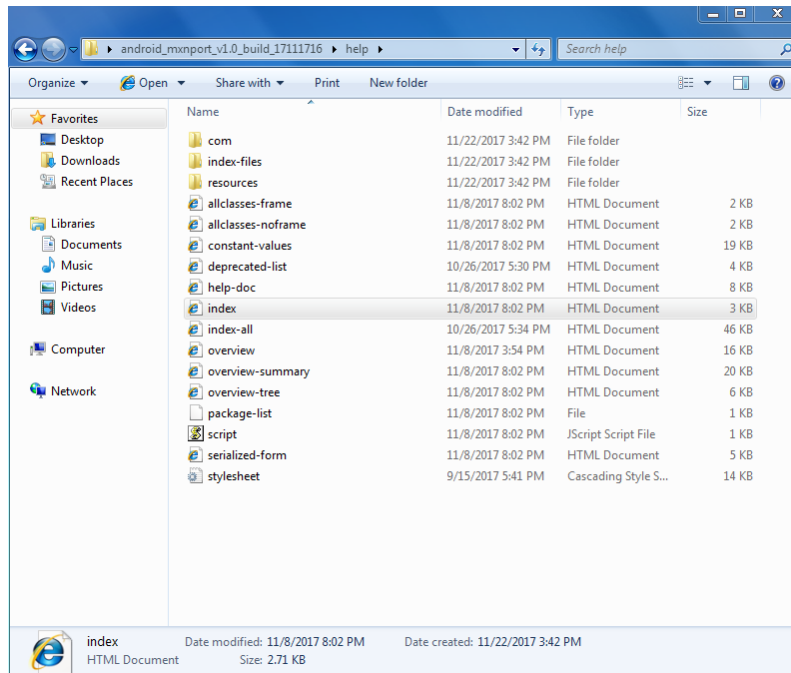

For more details about the installation, please refer to the Overview section.

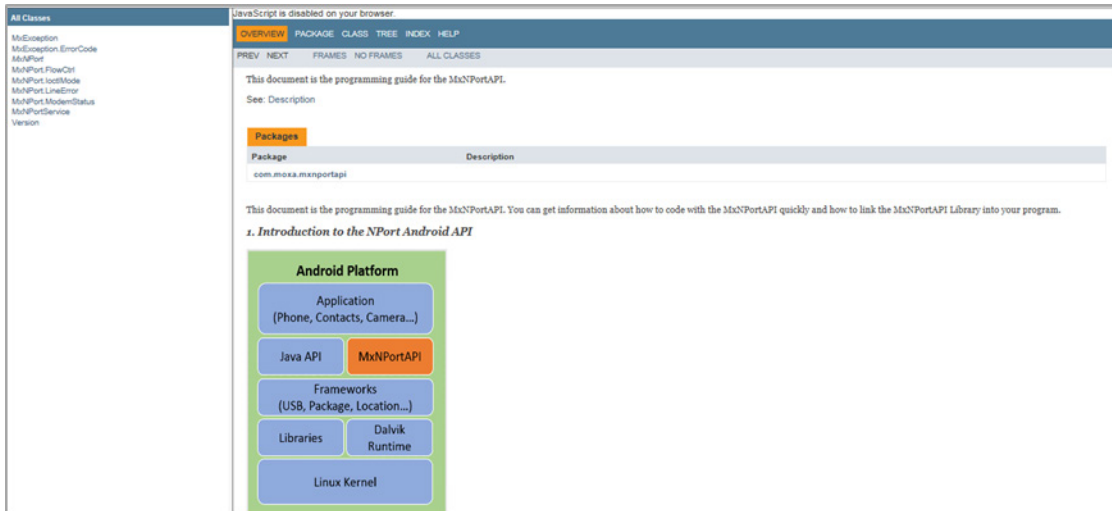

## MxNPortAPI Function Groups

The supported functions in this API are listed below:

| Port Control | Input/Output | Port Status Inquiry | Miscellaneous |
|--------------|--------------|---------------------|---------------|
| open         | read         | getBaud             | setBreak      |
| close        | write        | getFlowCtrl         |               |
| setIoctlMode |              | getIoctlMode        |               |
| setFlowCtrl  |              | getLineStatus       |               |
| setBaud      |              | getModemStatus      |               |
| setRTS       |              | getOQueue           |               |
| setDTR       |              |                     |               |
| flush        |              |                     |               |

## Example Program

To make sure this API is workable with the device server on an Android platform, see the example program below:

```
Thread thread = new Thread()
{
    @Override
    public void run() {
        /* Enumerate and initialize NPorts on system */
        List<MxNPort> NPortList = MxNPortService.getNPortInfoList();
        if(NPortList!=null){

            MxNPort.IoctlMode mode = new MxNPort.IoctlMode();
            mode.baudRate = 38400;
            mode.dataBits = MxNPort.DATA_BITS_8;
            mode.parity = MxNPort.PARITY_NONE;
            mode.stopBits = MxNPort.STOP_BITS_1;

            MxNPort mxNPort = NPortList.get(0); /* Get first NPort device */
            try {
                byte[] buf = {'H','e','l','l','o',' ','W','o','r','l','d'};
                mxNPort.open(); /*open port*/
                mxNPort.setIoctlMode(mode); /*serial parameters setting*/
                mxNPort.write(buf, buf.length); /*write data*/
                mxNPort.close(); /*close port*/
            } catch (MxException e){
                /*Error handling*/
            }
        }
    }
};
thread.start();
```



## Introduction to LCM Display

---

Typically, you will use either NPort Administrator or the web console to configure the **NPort 5600-8-DT series (standard temperature models)**, **NPort 5600 series (standard temperature models)** and **NPort 5410/5430 series (standard temperature models)**. These are not the only options for configuration. For basic onsite configuration, you can use the LCM console built into the device server, without requiring a connection to the network or a laptop.


In this chapter, we will introduce the basic operation and menu options of LCM display.

The following topics are covered in this chapter:

- **Basic Operation**
- **Detailed Menu Options**

# Basic Operation

If the NPort is working properly, the LCM panel will display a green color. The red Ready LED will also light up, indicating that the NPort is receiving power. After the red Ready LED turns to green, you will see a display similar to:

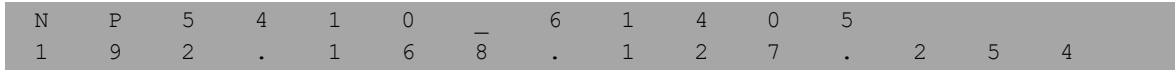

This is where

- NP5410 is the NPort’s name
- 61405 is the NPort’s serial number
- 192.168.127.254 is the NPort’s IP address


There are four push buttons on the NPort’s nameplate. Going from left to right, the buttons are:

| Button | Name        | Action  |
|--------|-------------|---|
| menu   | menu        | activates the main menu, or returns to a lower level                      |
| △      | up cursor   | scrolls up through a list of items shown on the LCM panel’s second line   |
| ▽      | down cursor | scrolls down through a list of items shown on the LCM panel’s second line |
| sel    | select      | selects the option listed on the LCM panel’s second line                  |

The buttons are manipulated in a manner similar to the way a modern cellular phone operates. As you move through the various functions and setting options, note that the top line shows the current menu or submenu name, and the bottom line shows the submenu name or menu item which is activated by pressing the SEL button.

# Detailed Menu Options

The best way to explain all of the NPort’s LCM functions is to refer to the tree graph shown in the next page. There are three main levels—1, 2, and 3—with each level represented by a separate column. The first thing to remember is that the menu button is used to move back and forth between the LCM panel’s default screen, and main menu screen:

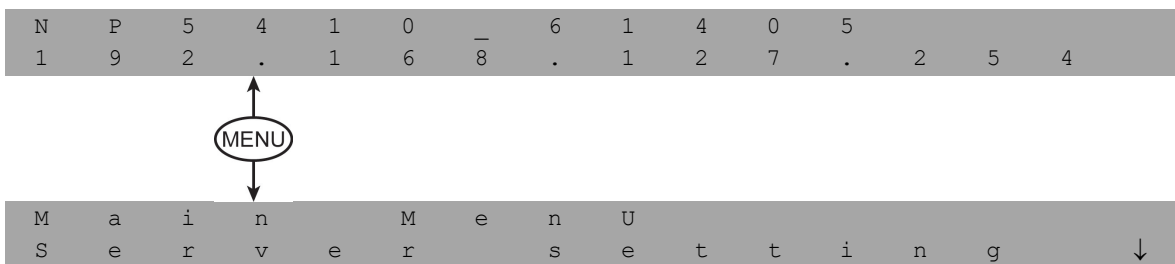

In addition, you only need to remember to:

- Use the SEL button to move up one level (i.e., left to right on the tree graph)
- Use the MENU button to move down one level (i.e., right to left on the tree graph)
- Use the cursor keys, △ and ▽, to scroll between the various options within a level (i.e., up and down on the tree graph).

As you use the buttons to operate the LCM display, you will notice that with very few exceptions, moving up one level causes the bottom line of the display to move to the top line of the display. You will also notice that the bottom three options in level 2, and all of the options in level 3 have either a C or D attached. The meaning is as follows:

- C = configurable

I.e., you are allowed to change the setting of this option

- D = display only

I.e., the setting for this option is displayed, but it cannot be changed (This does NOT necessarily mean that the number does not change; only that you cannot change it)

|           |                 |  |  |   |   |  |
|-----------|-----------------|--|--|---|---|--|
| Main Menu |                 |  |  |   |   |  |
|           | Server setting  | Serial number<br>Server name<br>Firmware ver<br>Model name   |  |   |   | D<br>C<br>D<br>D   |
|           | Network setting | Ethernet status<br>MAC address<br>IP config<br>IP address<br>Netmask<br>Gateway<br>DNS server 1<br>DNS server 2                    |  |   |   | D<br>D<br>C<br>C<br>C<br>C<br>C<br>C   |
|           | Serial set      | Select port<br>Baudrate<br>Data bit<br>Stop bit<br>Parity<br>Flow control<br>Tx/Rx fifo<br>Interface<br>Tx/Rx bytes<br>Line status |  |   |   | C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>D<br>D   |
|           | Op Mode set     | Select port<br>Select mode<br>[mode]   |  |   |   | C<br>C   |
|           |                 | Real COM<br>Alive timeout<br>Max connection<br>Delimiter 1<br>Delimiter 2<br>Force Tx  | TCP server<br>Alive timeout<br>Inact. time<br>Max connection<br>Delimiter 1<br>Delimiter 2<br>Force Tx<br>Local TCP port<br>Command port | TCP client<br>Alive timeout<br>Inact. time<br>Delimiter 1<br>Delimiter 2<br>Force Tx<br>Dest IP-1<br>TCP port-1<br>Dest IP-2<br>TCP port-2<br>Dest IP-3<br>TCP port-3<br>Dest IP-4<br>TCP port-4<br>TCP connect | UDP svr/cli<br>Delimiter 1<br>Delimiter 2<br>Force Tx<br>Dest IP start-1<br>Dest IP end-1<br>Dest port-1<br>Dest IP start-2<br>Dest IP end-2<br>Dest port-2<br>Dest IP start-3<br>Dest IP end-3<br>Dest port-3<br>Dest IP start-4<br>Dest IP end-4<br>Dest port-4<br>Local port | C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C<br>C |
|           | Console         | Web console<br>Telnet console  |  |   |   | C<br>C   |
|           | Ping            |  |  |   |   | C  |
|           | Save/Restart    |  |  |   |   | C  |

The part of the LCM operation that still requires some explanation is how to edit the configurable options. In fact, you will only encounter two types of configurable options.

The first type involves entering numbers, such as IP addresses, Netmasks, etc. In this case, you change the number one digit at a time. The up cursor ( $\Delta$ ) is used to decrease the highlighted digit, the down cursor ( $\nabla$ ) is used to increase the highlighted digit, and the SEL button is used to move to the next digit. When the last digit has been changed, pressing SEL simply enters the number into the NPort's memory. The second type of configurable option is when there are only a small number of options from which to choose (although only one option will be visible at a time). Consider the PARITY attribute under PORT SETTING as an example. Follow the tree graph to arrive at the following PARITY screen. The first option, NONE, is displayed, with a down arrow all the way to the right. This is an indication that there are other options from which to choose.

```
P   a   r   i   t   Y
N   o   n   e                                     ↓
```

Press the down cursor button once to see Odd as the second option.

```
P   a   r   i   t   Y
O   d   d                                       ↑
                                                ↓
```

Press the down cursor button again to see Even as the third option.

```
P   a   r   i   t   Y
E   v   e   n                                       ↑
                                                ↓
```

Press the down cursor button again to see Space as the fourth option.

```
P   a   r   i   t   Y
M   a   r   k                                       ↑
                                                ↓
```

Press the down cursor button yet again to see the last option, Space.

```
P   a   r   i   t   Y
S   p   a   c   e                                       ↑
```

To choose the desired option, press the SEL button when the option is showing on the screen.

# A

## Pinouts and Cable Wiring

---

The following topics are covered in this appendix:

▣ **Port Pinout Diagrams**



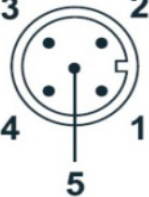
- Ethernet Port Pinouts
- Serial Port Pinouts

▣ **Cable Wiring Diagrams**


- Ethernet Cables
- Serial Cables





# Port Pinout Diagrams

## Ethernet Port Pinouts
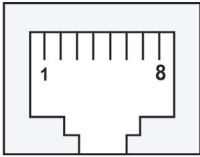
| Ethernet RJ45   |                 | Ethernet M12 (For NPort 5000AI-M12 only) |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
|---|-----------------|--|---|-----|---|-----|---|-----|---|-----|---|--|-----|----|---|-----|---|-----|---|-----|---|-----|---|-----|-------------|---|----------|---|--------------|---|----------|---|--------------|---|-----------------|
| <table border="1"> <thead> <tr> <th>Pin</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Tx+</td> </tr> <tr> <td>2</td> <td>Tx-</td> </tr> <tr> <td>3</td> <td>Rx+</td> </tr> <tr> <td>6</td> <td>Rx-</td> </tr> </tbody> </table> | Pin             | Signal                                   | 1 | Tx+ | 2 | Tx- | 3 | Rx+ | 6 | Rx- |  | <p><b>Ethernet M12:</b></p> <table border="1"> <thead> <tr> <th>PIN</th> <th>TX</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>TD+</td> </tr> <tr> <td>2</td> <td>RD+</td> </tr> <tr> <td>3</td> <td>TD-</td> </tr> <tr> <td>4</td> <td>RD-</td> </tr> </tbody> </table>  <p>Housing: shield</p> | PIN | TX | 1 | TD+ | 2 | RD+ | 3 | TD- | 4 | RD- | <p><b>Power M12:</b></p>  <table border="1"> <thead> <tr> <th>PIN</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Input V+</td> </tr> <tr> <td>2</td> <td>Not assigned</td> </tr> <tr> <td>3</td> <td>Input V-</td> </tr> <tr> <td>4</td> <td>Not assigned</td> </tr> <tr> <td>5</td> <td>Function ground</td> </tr> </tbody> </table> | PIN | Description | 1 | Input V+ | 2 | Not assigned | 3 | Input V- | 4 | Not assigned | 5 | Function ground |
| Pin   | Signal          |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 1   | Tx+             |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 2   | Tx-             |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 3   | Rx+             |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 6   | Rx-             |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| PIN   | TX              |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 1   | TD+             |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 2   | RD+             |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 3   | TD-             |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 4   | RD-             |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| PIN   | Description     |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 1   | Input V+        |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 2   | Not assigned    |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 3   | Input V-        |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 4   | Not assigned    |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |
| 5   | Function ground |  |   |     |   |     |   |     |   |     |   |  |     |    |   |     |   |     |   |     |   |     |   |     |             |   |          |   |              |   |          |   |              |   |                 |

## Serial Port Pinouts
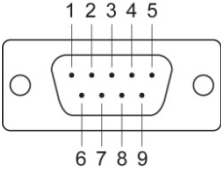
|                              | Pin Assignment  |        | Applicable Products |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
|------------------------------|---|--------|---------------------|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|--|
| DB9 Male RS-232 Port Pinouts | <table border="1"> <thead> <tr> <th>Pin</th> <th>RS-232</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>DCD</td> </tr> <tr> <td>2</td> <td>RxD</td> </tr> <tr> <td>3</td> <td>TxD</td> </tr> <tr> <td>4</td> <td>DTR</td> </tr> <tr> <td>5</td> <td>GND</td> </tr> <tr> <td>6</td> <td>DSR</td> </tr> <tr> <td>7</td> <td>RTS</td> </tr> <tr> <td>8</td> <td>CTS</td> </tr> </tbody> </table> | Pin    | RS-232              | 1 | DCD | 2 | RxD | 3 | TxD | 4 | DTR | 5 | GND | 6 | DSR | 7 | RTS | 8 | CTS |  | <p>NPort 5110, NPort 5150, NPort 5110A, NPort 5150A, NPort P5150A, NPort_5000AI-M12, NPort 5210A, NPort 5250A, NPort 5410, NPort 5410/5450/5450I, NPort 5610-8-DT, 5650-8-DT, 5650I-8-DT, 5610-8-DTL/DTL-T, 5650-8-DTL/DTL-T, and 5650I-8-DTL/DTL-T, NPort IA5150/5250 NPort IA5150A/5250A</p> |
|                              | Pin   | RS-232 |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
|                              | 1   | DCD    |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
|                              | 2   | RxD    |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
|                              | 3   | TxD    |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
|                              | 4   | DTR    |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
|                              | 5   | GND    |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
|                              | 6   | DSR    |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
|                              | 7   | RTS    |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
| 8                            | CTS   |        |                     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |     |   |  |
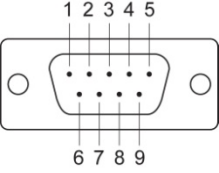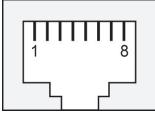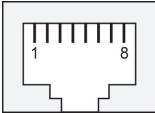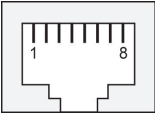
| DB9 Male RS-422/485 Port Pinouts  | <table border="1"> <thead> <tr> <th>Pin</th> <th>RS-422 / 4-wire RS-485</th> <th>2-wire RS-485</th> </tr> </thead> <tbody> <tr><td>1</td><td>TxD-(A)</td><td>-</td></tr> <tr><td>2</td><td>TxD+(B)</td><td>-</td></tr> <tr><td>3</td><td>RxD+(B)</td><td>Data+(B)</td></tr> <tr><td>4</td><td>RxD-(A)</td><td>Data-(A)</td></tr> <tr><td>5</td><td>GND</td><td>GND</td></tr> <tr><td>6</td><td>-</td><td>-</td></tr> <tr><td>7</td><td>-</td><td>-</td></tr> <tr><td>8</td><td>-</td><td>-</td></tr> </tbody> </table>   | Pin                    | RS-422 / 4-wire RS-485 | 2-wire RS-485        | 1             | TxD-(A) | -   | 2   | TxD+(B) | -   | 3   | RxD+(B) | Data+(B) | 4 | RxD-(A) | Data-(A) | 5   | GND  | GND   | 6   | -   | -     | 7   | -    | -     | 8 | -   | -    |   | <p>NPort 5130, NPort 5150, NPort 5130A, NPort 5150A, NPort P5150A, NPort_5000AI-M12, NPort 5250A, NPort 5450/5450I, 5650-8-DT, 5650I-8-DT, 5650-8-DTL/DTL-T, and 5650I-8-DTL/DTL-T, NPort IA5150/5250, NPort IA5250A</p> |     |     |     |   |     |     |     |  |                                      |
|---|--|------------------------|------------------------|----------------------|---------------|---------|-----|-----|---------|-----|-----|---------|----------|---|---------|----------|-----|------|-------|---|---|-------|-----|------|-------|---|-----|------|---|--|-----|-----|-----|---|-----|-----|-----|--|--------------------------------------|
|   | Pin  | RS-422 / 4-wire RS-485 | 2-wire RS-485          |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 1  | TxD-(A)                | -                      |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 2  | TxD+(B)                | -                      |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 3  | RxD+(B)                | Data+(B)               |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 4  | RxD-(A)                | Data-(A)               |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 5  | GND                    | GND                    |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 6  | -                      | -                      |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 7  | -                      | -                      |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 8   | -  | -                      |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| <p><b>Note: The NPort IA5150A Series's DB9 ports only support RS-232 signals.</b></p> |  |                        |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 8-pin RJ45 RS-232 Port Pinouts  | <table border="1"> <thead> <tr> <th>Pin</th> <th>RS-232</th> </tr> </thead> <tbody> <tr><td>1</td><td>DSR</td></tr> <tr><td>2</td><td>RTS</td></tr> <tr><td>3</td><td>GND</td></tr> <tr><td>4</td><td>TxD</td></tr> <tr><td>5</td><td>RxD</td></tr> <tr><td>6</td><td>DCD</td></tr> <tr><td>7</td><td>CTS</td></tr> <tr><td>8</td><td>DTR</td></tr> </tbody> </table>  | Pin                    | RS-232                 | 1                    | DSR           | 2       | RTS | 3   | GND     | 4   | TxD | 5       | RxD      | 6 | DCD     | 7        | CTS | 8    | DTR   |  | <p>NPort 5210/5210I, NPort 5610-8-DT-J, NPort 5610, NPort 5650-8-DT-J</p> |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | Pin  | RS-232                 |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 1  | DSR                    |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 2  | RTS                    |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 3  | GND                    |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 4  | TxD                    |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 5  | RxD                    |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 6  | DCD                    |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 7   | CTS  |                        |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 8   | DTR  |                        |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 8-pin RJ45 RS-422/485 Port Pinouts  | <table border="1"> <thead> <tr> <th>Pin</th> <th>RS-422 4-wire RS-485</th> <th>2-wire RS-485</th> </tr> </thead> <tbody> <tr><td>1</td><td>---</td><td>---</td></tr> <tr><td>2</td><td>---</td><td>---</td></tr> <tr><td>3</td><td>TxD+</td><td>---</td></tr> <tr><td>4</td><td>TxD-</td><td>---</td></tr> <tr><td>5</td><td>RxD-</td><td>Data-</td></tr> <tr><td>6</td><td>RxD+</td><td>Data+</td></tr> <tr><td>7</td><td>GND</td><td>GND</td></tr> <tr><td>8</td><td>---</td><td>---</td></tr> </tbody> </table>   | Pin                    | RS-422 4-wire RS-485   | 2-wire RS-485        | 1             | ---     | --- | 2   | ---     | --- | 3   | TxD+    | ---      | 4 | TxD-    | ---      | 5   | RxD- | Data- | 6   | RxD+  | Data+ | 7   | GND  | GND   | 8 | --- | ---  |  | <p>NPort 5630</p>  |     |     |     |   |     |     |     |  |                                      |
|   | Pin  | RS-422 4-wire RS-485   | 2-wire RS-485          |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 1  | ---                    | ---                    |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 2  | ---                    | ---                    |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 3  | TxD+                   | ---                    |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 4  | TxD-                   | ---                    |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 5  | RxD-                   | Data-                  |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 6  | RxD+                   | Data+                  |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 7   | GND  | GND                    |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 8   | ---  | ---                    |                        |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 8-pin RJ45 RS-232/422/485 Port Pinouts  | <table border="1"> <thead> <tr> <th>Pin</th> <th>RS-232</th> <th>RS-422 4-wire RS-485</th> <th>2-wire RS-485</th> </tr> </thead> <tbody> <tr><td>1</td><td>DSR</td><td>---</td><td>---</td></tr> <tr><td>2</td><td>RTS</td><td>TxD+</td><td>---</td></tr> <tr><td>3</td><td>GND</td><td>GND</td><td>GND</td></tr> <tr><td>4</td><td>TxD</td><td>TxD-</td><td>---</td></tr> <tr><td>5</td><td>RxD</td><td>RxD+</td><td>Data+</td></tr> <tr><td>6</td><td>DCD</td><td>RxD-</td><td>Data-</td></tr> <tr><td>7</td><td>CTS</td><td>---</td><td>---</td></tr> <tr><td>8</td><td>DTR</td><td>---</td><td>---</td></tr> </tbody> </table> | Pin                    | RS-232                 | RS-422 4-wire RS-485 | 2-wire RS-485 | 1       | DSR | --- | ---     | 2   | RTS | TxD+    | ---      | 3 | GND     | GND      | GND | 4    | TxD   | TxD-  | ---   | 5     | RxD | RxD+ | Data+ | 6 | DCD | RxD- | Data-   | 7  | CTS | --- | --- | 8 | DTR | --- | --- |  | <p>NPort 5650, NPort 5650-8-DT-J</p> |
|   | Pin  | RS-232                 | RS-422 4-wire RS-485   | 2-wire RS-485        |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 1  | DSR                    | ---                    | ---                  |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 2  | RTS                    | TxD+                   | ---                  |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 3  | GND                    | GND                    | GND                  |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 4  | TxD                    | TxD-                   | ---                  |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 5  | RxD                    | RxD+                   | Data+                |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
|   | 6  | DCD                    | RxD-                   | Data-                |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 7   | CTS  | ---                    | ---                    |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |
| 8   | DTR  | ---                    | ---                    |                      |               |         |     |     |         |     |     |         |          |   |         |          |     |      |       |   |   |       |     |      |       |   |     |      |   |  |     |     |     |   |     |     |     |  |                                      |


| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">Terminal Block RS-232 &amp; RS-422/485 Pinouts</p> |  | <p>NPort 5230</p>       |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
|---|--|-------------------------|---------------|-----------------------|-----|---|---------|---|-----|---------|-----|----------|---------|---|----------|---------|-----|-----|-----|---|
| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">Terminal Block RS-422/485 Port Pinouts</p>         | <table border="1" data-bbox="368 936 975 1160"> <thead> <tr> <th>Pin</th> <th>2-wire RS-485</th> <th>RS-422, 4-wire RS-485</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>-</td> <td>TxD+(B)</td> </tr> <tr> <td>2</td> <td>-</td> <td>TxD-(A)</td> </tr> <tr> <td>3</td> <td>Data+(B)</td> <td>RxD+(B)</td> </tr> <tr> <td>4</td> <td>Data-(A)</td> <td>RxD-(A)</td> </tr> <tr> <td>5</td> <td>GND</td> <td>GND</td> </tr> </tbody> </table> | Pin                     | 2-wire RS-485 | RS-422, 4-wire RS-485 | 1   | - | TxD+(B) | 2 | -   | TxD-(A) | 3   | Data+(B) | RxD+(B) | 4 | Data-(A) | RxD-(A) | 5   | GND | GND | <p>NPort 5230A, NPort IA5150, NPort IA5150A</p> |
| Pin   | 2-wire RS-485  | RS-422, 4-wire RS-485   |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 1   | -  | TxD+(B)                 |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 2   | -  | TxD-(A)                 |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 3   | Data+(B)   | RxD+(B)                 |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 4   | Data-(A)   | RxD-(A)                 |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 5   | GND  | GND                     |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">Terminal Block RS-422/485 Pinouts</p>              |  | <p>NPort 5430/5430I</p> |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">Console Port Pinouts</p>                           | <table border="1" data-bbox="683 1491 890 1816"> <thead> <tr> <th>Pin</th> <th>RS-232</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>DSR</td> </tr> <tr> <td>2</td> <td>RTS</td> </tr> <tr> <td>3</td> <td>GND</td> </tr> <tr> <td>4</td> <td>TxD</td> </tr> <tr> <td>5</td> <td>RxD</td> </tr> <tr> <td>6</td> <td>DCD</td> </tr> <tr> <td>7</td> <td>CTS</td> </tr> <tr> <td>8</td> <td>DTR</td> </tr> </tbody> </table>                    | Pin                     | RS-232        | 1                     | DSR | 2 | RTS     | 3 | GND | 4       | TxD | 5        | RxD     | 6 | DCD      | 7       | CTS | 8   | DTR | <p>Applies only to DT models.</p>               |
| Pin   | RS-232   |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 1   | DSR  |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 2   | RTS  |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 3   | GND  |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 4   | TxD  |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 5   | RxD  |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 6   | DCD  |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 7   | CTS  |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |
| 8   | DTR  |                         |               |                       |     |   |         |   |     |         |     |          |         |   |          |         |     |     |     |   |





|                                      |                 |                         |                         |  |              |                         |                   |
|--------------------------------------|-----------------|-------------------------|-------------------------|--|--------------|-------------------------|-------------------|
| Power Input and Relay Output Pinouts |                 |                         |                         |  |              |                         | NPort IA5150/5250 |
|                                      | Shielded Ground | V2+<br>DC Power input 1 | V2-<br>DC Power input 1 | Relay output                             | Relay output | V1+<br>DC Power input 2 |                   |
| Power Input and Relay Output Pinouts |                 |                         |                         |  |              |                         | NPort IA5000A     |
|                                      | Shielded Ground | PWR1<br>DC Power Input  | PWR2<br>DC Power Input  | RELAY<br>Normal Open/Close, Relay output |              |                         |                   |



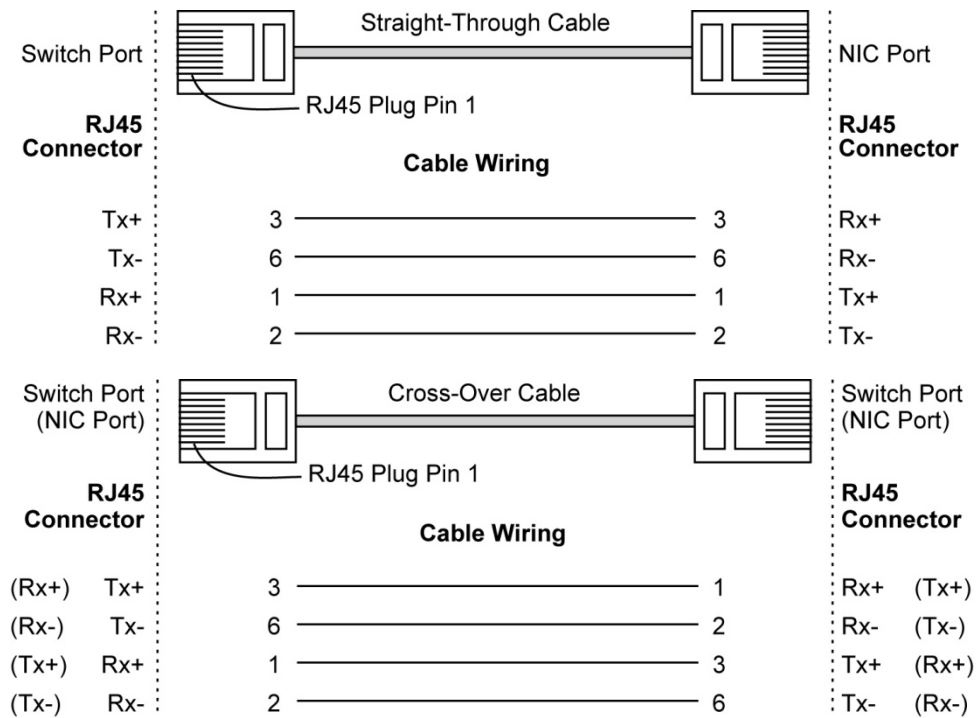









## Cable Wiring Diagrams


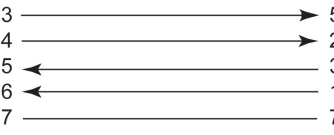

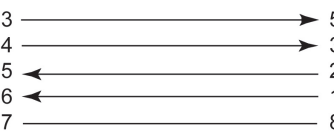

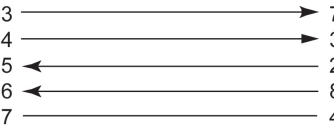

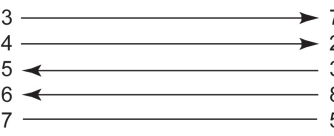
### Ethernet Cables


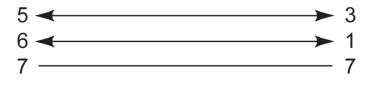

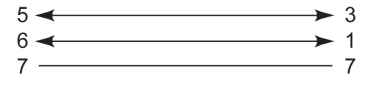
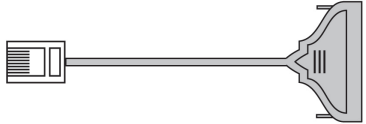
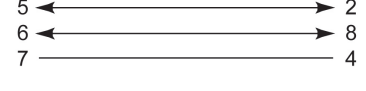

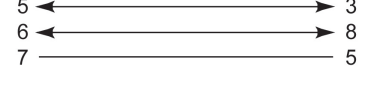






# Serial Cables




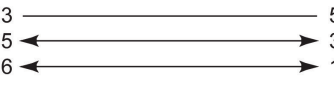



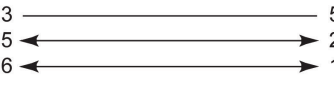



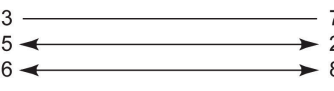



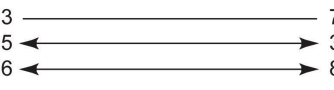
| Serial Cable Wiring Diagrams     |          |  |                       |
|----------------------------------|----------|--|-----------------------|
| Female DB9 to Male DB9 (RS-232)  | Male DB9 | Female DB9   | Male DB9 Female DB9   |
|                                  | NPort    |  | RS-232 Device         |
|                                  | 9 pins   | <b>Cable Wiring</b>  | 9 pins                |
|                                  | DCD 1    | ←————→   | 1 DCD                 |
|                                  | RxD 2    | ←————→   | 2 TxD                 |
|                                  | TxD 3    | ————→  | 3 RxD                 |
|                                  | DTR 4    | ————→  | 4 DSR                 |
|                                  | GND 5    | ————→  | 5 GND                 |
|                                  | DSR 6    | ←————  | 6 DTR                 |
|                                  | RTS 7    | ————→  | 7 CTS                 |
|                                  | CTS 8    | ←————  | 8 RTS                 |
| Female DB9 to Male DB25 (RS-232) | Male DB9 | Female DB9   | Male DB25 Female DB25 |
|                                  | NPort    |  | RS-232 Device         |
|                                  | 9 pins   | <b>Cable Wiring</b>  | 25 pins               |
|                                  | DCD 1    | ←————→   | 8 DCD                 |
|                                  | RxD 2    | ←————→   | 3 TxD                 |
|                                  | TxD 3    | ————→  | 2 RxD                 |
|                                  | DTR 4    | ————→  | 20 DSR                |
|                                  | GND 5    | ————→  | 7 GND                 |
|                                  | DSR 6    | ←————  | 6 DTR                 |
|                                  | RTS 7    | ————→  | 4 CTS                 |
|                                  | CTS 8    | ←————  | 5 RTS                 |

| NPort 5210, NPort 5610/5650 (RS-232) |           |   |   |   |
|--------------------------------------|-----------|---|---|---|
| 8-pin RJ45 to DB9 Female (RS-232)    | RJ45 Port | RJ45 Connector  | Female DB9  | Male DB9  |
|                                      | NPort     |    |    |    |
|                                      | 8 pins    | Cable Wiring  |   | 9 pins  |
|                                      | DSR       | 1   | ←   | 4   |
|                                      | RTS       | 2   | →   | 8   |
|                                      | GND       | 3   | →   | 5   |
|                                      | TxD       | 4   | →   | 2   |
|                                      | RxD       | 5   | ←   | 3   |
|                                      | DCD       | 6   | ←   | 1   |
|                                      | CTS       | 7   | ←   | 7   |
|                                      | DTR       | 8   | →   | 6   |
|                                      |           |   |   | RS-232 Device   |
| 8-pin RJ45 to DB9 Male (RS-232)      | RJ45 Port | RJ45 Connector  | Male DB9  | Female DB9  |
|                                      | NPort     |    |    |    |
|                                      | 8 pins    | Cable Wiring  |   | 9 pins  |
|                                      | DSR       | 1   | ←   | 6   |
|                                      | RTS       | 2   | →   | 7   |
|                                      | GND       | 3   | →   | 5   |
|                                      | TxD       | 4   | →   | 3   |
|                                      | RxD       | 5   | ←   | 2   |
|                                      | DCD       | 6   | ←   | 1   |
|                                      | CTS       | 7   | ←   | 8   |
|                                      | DTR       | 8   | →   | 4   |
|                                      |           |   |   | RS-232 Device   |
| 8-pin RJ45 to DB25 Female (RS-232)   | RJ45 Port | RJ45 Connector  | Female DB25   | Male DB25   |
|                                      | NPort     |  |  |  |
|                                      | 8 pins    | Cable Wiring  |   | 25 pins   |
|                                      | DSR       | 1   | ←   | 20  |
|                                      | RTS       | 2   | →   | 5   |
|                                      | GND       | 3   | →   | 7   |
|                                      | TxD       | 4   | →   | 3   |
|                                      | RxD       | 5   | ←   | 2   |
|                                      | DCD       | 6   | ←   | 8   |
|                                      | CTS       | 7   | ←   | 4   |
|                                      | DTR       | 8   | →   | 6   |
|                                      |           |   |   | RS-232 Device   |
| 8-pin RJ45 to DB25 Male (RS-232)     | RJ45 Port | RJ45 Connector  | Male DB25   | Female DB25   |
|                                      | NPort     |  |  |  |
|                                      | 8 pins    | Cable Wiring  |   | 25 pins   |
|                                      | DSR       | 1   | ←   | 6   |
|                                      | RTS       | 2   | →   | 4   |
|                                      | GND       | 3   | →   | 7   |
|                                      | TxD       | 4   | →   | 2   |
|                                      | RxD       | 5   | ←   | 3   |
|                                      | DCD       | 6   | ←   | 8   |
|                                      | CTS       | 7   | ←   | 5   |
|                                      | DTR       | 8   | →   | 20  |
|                                      |           |   |   | RS-232 Device   |
















| <b>NPort 5630 (RS-422/4-wire RS-485)</b>                       |  |  |  |
|--|--|--|--|
| <p><b>8-pin RJ45 to DB9 Female (RS-422/4-wire RS-485)</b></p>  | <p>RJ45 Port</p> <p><b>NPort 5630</b></p>                            | <p>RJ45 Connector</p> <p style="text-align: center;">Female DB9</p>     | <p>Male DB9</p> <p><b>RS-422/4-wire RS-485 Device</b></p>            |
|  | <p>8 pins</p> <p style="text-align: center;"><b>Cable Wiring</b></p> |  | <p>9 pins</p>  |
|  | <p>TxD+ 3</p> <p>TxD- 4</p> <p>RxD- 5</p> <p>RxD+ 6</p> <p>GND 7</p> |   | <p>RxD+ 5</p> <p>RxD- 2</p> <p>TxD- 3</p> <p>TxD+ 1</p> <p>GND 7</p> |
| <p><b>8-pin RJ45 to DB9 Male (RS-422/4-wire RS-485)</b></p>    | <p>RJ45 Port</p> <p><b>NPort 5630</b></p>                            | <p>RJ45 Connector</p> <p style="text-align: center;">Male DB9</p>       | <p>Female DB9</p> <p><b>RS-422/4-wire RS-485 Device</b></p>          |
|  | <p>8 pins</p> <p style="text-align: center;"><b>Cable Wiring</b></p> |  | <p>9 pins</p>  |
|  | <p>TxD+ 3</p> <p>TxD- 4</p> <p>RxD- 5</p> <p>RxD+ 6</p> <p>GND 7</p> |   | <p>RxD+ 5</p> <p>RxD- 3</p> <p>TxD- 2</p> <p>TxD+ 1</p> <p>GND 8</p> |
| <p><b>8-pin RJ45 to DB25 Female (RS-422/4-wire RS-485)</b></p> | <p>RJ45 Port</p> <p><b>NPort 5630</b></p>                            | <p>RJ45 Connector</p> <p style="text-align: center;">Female DB25</p>  | <p>Male DB25</p> <p><b>RS-422/4-wire RS-485 Device</b></p>           |
|  | <p>8 pins</p> <p style="text-align: center;"><b>Cable Wiring</b></p> |  | <p>25 pins</p>   |
|  | <p>TxD+ 3</p> <p>TxD- 4</p> <p>RxD- 5</p> <p>RxD+ 6</p> <p>GND 7</p> |   | <p>RxD+ 7</p> <p>RxD- 3</p> <p>TxD- 2</p> <p>TxD+ 8</p> <p>GND 4</p> |
| <p><b>8-pin RJ45 to DB25 Male (RS-422/4-wire RS-485)</b></p>   | <p>RJ45 Port</p> <p><b>NPort 5630</b></p>                            | <p>RJ45 Connector</p> <p style="text-align: center;">Male DB25</p>    | <p>Female DB25</p> <p><b>RS-422/4-wire RS-485 Device</b></p>         |
|  | <p>8 pins</p> <p style="text-align: center;"><b>Cable Wiring</b></p> |  | <p>25 pins</p>   |
|  | <p>TxD+ 3</p> <p>TxD- 4</p> <p>RxD- 5</p> <p>RxD+ 6</p> <p>GND 7</p> |   | <p>RxD+ 7</p> <p>RxD- 2</p> <p>TxD- 3</p> <p>TxD+ 8</p> <p>GND 5</p> |

| <b>NPort 5630 (2-wire RS-485)</b>                |  |   |   |
|--|--|---|---|
| <b>8-pin RJ45 to DB9 Female (2-wire RS-485)</b>  | <p>RJ45 Port</p> <p><b>NPort 5630</b></p>          | <p>RJ45 Connector</p>  <p>Female DB9</p>   | <p>Male DB9</p> <p><b>2-wire RS-485 Device</b></p>    |
|  | <p>8 pins</p> <p>Data-</p> <p>Data+</p> <p>GND</p> | <p><b>Cable Wiring</b></p>                 | <p>9 pins</p> <p>Data-</p> <p>Data+</p> <p>GND</p>    |
| <b>8-pin RJ45 to DB9 Male (2-wire RS-485)</b>    | <p>RJ45 Port</p> <p><b>NPort 5630</b></p>          | <p>RJ45 Connector</p>  <p>Female DB9</p>   | <p>Male DB9</p> <p><b>2-wire RS-485 Device</b></p>    |
|  | <p>8 pins</p> <p>Data-</p> <p>Data+</p> <p>GND</p> | <p><b>Cable Wiring</b></p>                 | <p>9 pins</p> <p>Data-</p> <p>Data+</p> <p>GND</p>    |
| <b>8-pin RJ45 to DB25 Female (2-wire RS-485)</b> | <p>RJ45 Port</p> <p><b>NPort 5630</b></p>          | <p>RJ45 Connector</p>  <p>Female DB25</p> | <p>Male DB25</p> <p><b>2-wire RS-485 Device</b></p>   |
|  | <p>8 pins</p> <p>Data-</p> <p>Data+</p> <p>GND</p> | <p><b>Cable Wiring</b></p>               | <p>25 pins</p> <p>Data-</p> <p>Data+</p> <p>GND</p>   |
| <b>8-pin RJ45 to DB25 Male (2-wire RS-485)</b>   | <p>RJ45 Port</p> <p><b>NPort 5630</b></p>          | <p>RJ45 Connector</p>  <p>Male DB25</p>  | <p>Female DB25</p> <p><b>2-wire RS-485 Device</b></p> |
|  | <p>8 pins</p> <p>Data-</p> <p>Data+</p> <p>GND</p> | <p><b>Cable Wiring</b></p>               | <p>25 pins</p> <p>Data-</p> <p>Data+</p> <p>GND</p>   |

| NPort 5650 (RS-422/4-wire RS-485)                       |  |   |   |
|---|--|---|---|
| <b>8-pin RJ45 to DB9 Female (RS-422/4-wire RS-485)</b>  | RJ45 Port<br>NPort 5650<br><br>8 pins<br>TxD+<br>GND<br>TxD-<br>RxD+<br>RxD- | RJ45 Connector<br><br>Female DB9<br><br><b>Cable Wiring</b><br>2 → 8<br>3 → 5<br>4 → 2<br>5 ← 3<br>6 ← 1   | Male DB9<br>RS-422/<br>4-wire RS-485<br>Device<br><br>9 pins<br>RxD+<br>GND<br>RxD-<br>TxD+<br>TxD-     |
| <b>8-pin RJ45 to DB9 Male (RS-422/4-wire RS-485)</b>    | RJ45 Port<br>NPort 5650<br><br>8 pins<br>TxD+<br>GND<br>TxD-<br>RxD+<br>RxD- | RJ45 Connector<br><br>Male DB9<br><br><b>Cable Wiring</b><br>2 → 7<br>3 → 5<br>4 → 3<br>5 ← 2<br>6 ← 1     | Female DB9<br>RS-422/<br>4-wire RS-485<br>Device<br><br>9 pins<br>RxD+<br>GND<br>RxD-<br>TxD+<br>TxD-   |
| <b>8-pin RJ45 to DB25 Female (RS-422/4-wire RS-485)</b> | RJ45 Port<br>NPort 5650<br><br>8 pins<br>TxD+<br>GND<br>TxD-<br>RxD+<br>RxD- | RJ45 Connector<br><br>Female DB25<br><br><b>Cable Wiring</b><br>2 → 5<br>3 → 7<br>4 → 3<br>5 ← 2<br>6 ← 8 | Male DB25<br>RS-422/<br>4-wire RS-485<br>Device<br><br>25 pins<br>RxD+<br>GND<br>RxD-<br>TxD+<br>TxD-   |
| <b>8-pin RJ45 to DB25 Male (RS-422/4-wire RS-485)</b>   | RJ45 Port<br>NPort 5650<br><br>8 pins<br>TxD+<br>GND<br>TxD-<br>RxD+<br>RxD- | RJ45 Connector<br><br>Male DB25<br><br><b>Cable Wiring</b><br>2 → 4<br>3 → 7<br>4 → 2<br>5 ← 3<br>6 ← 8  | Female DB25<br>RS-422/<br>4-wire RS-485<br>Device<br><br>25 pins<br>RxD+<br>GND<br>RxD-<br>TxD+<br>TxD- |

| <b>NPort 5650 (2-wire RS-485)</b>                |   |  |  |
|--|---|--|--|
| <b>8-pin RJ45 to DB9 Female (2-wire RS-485)</b>  | <p>RJ45 Port</p> <p><b>NPort 5650</b></p>    | <p>RJ45 Connector</p> <p>Female DB9</p>      | <p>Male DB9</p> <p><b>2-wire RS-485 Device</b></p> <p>9 pins</p>     |
|  | <p>8 pins</p> <p>GND 3</p> <p>Data+ 5</p> <p>Data- 6</p>  | <p><b>Cable Wiring</b></p>    | <p>5</p> <p>3</p> <p>1</p> <p>GND</p> <p>Data+</p> <p>Data-</p>      |
| <b>8-pin RJ45 to DB9 Male (2-wire RS-485)</b>    | <p>RJ45 Port</p> <p><b>NPort 5650</b></p>    | <p>RJ45 Connector</p> <p>Male DB9</p>        | <p>Female DB9</p> <p><b>2-wire RS-485 Device</b></p> <p>9 pins</p>   |
|  | <p>8 pins</p> <p>GND 3</p> <p>Data+ 5</p> <p>Data- 6</p>  | <p><b>Cable Wiring</b></p>    | <p>5</p> <p>2</p> <p>1</p> <p>GND</p> <p>Data+</p> <p>Data-</p>      |
| <b>8-pin RJ45 to DB25 Female (2-wire RS-485)</b> | <p>RJ45 Port</p> <p><b>NPort 5650</b></p>    | <p>RJ45 Connector</p> <p>Female DB25</p>    | <p>Male DB25</p> <p><b>2-wire RS-485 Device</b></p> <p>25 pins</p>   |
|  | <p>8 pins</p> <p>GND 3</p> <p>Data+ 5</p> <p>Data- 6</p>  | <p><b>Cable Wiring</b></p>    | <p>7</p> <p>2</p> <p>8</p> <p>GND</p> <p>Data+</p> <p>Data-</p>      |
| <b>8-pin RJ45 to DB25 Male (2-wire RS-485)</b>   | <p>RJ45 Port</p> <p><b>NPort 5650</b></p>  | <p>RJ45 Connector</p> <p>Male DB25</p>   | <p>Female DB25</p> <p><b>2-wire RS-485 Device</b></p> <p>25 pins</p> |
|  | <p>8 pins</p> <p>GND 3</p> <p>Data+ 5</p> <p>Data- 6</p>  | <p><b>Cable Wiring</b></p>    | <p>7</p> <p>3</p> <p>8</p> <p>GND</p> <p>Data+</p> <p>Data-</p>      |

**Cable Wiring for NPort 5600-8-DT/DTL Series**


| Serial Cable Wiring Diagrams        |       |   |   |    |   |  |   |               |
|-------------------------------------|-------|---|---|----|---|--|---|---------------|
| <b>RS-232 Cables</b>                | NPort |    |    |    |    |    |    | Serial Device |
|                                     |       | RJ45  | DB9(F)  |    | DB9(M)  | DB25(M)  | DB25(F)   |               |
|                                     | DSR   | 1   | 6   | ←  | 4   | 6  | 20  | DTR           |
|                                     | RTS   | 2   | 7   | →  | 8   | 4  | 5   | CTS           |
|                                     | GND   | 3   | 5   | —  | 5   | 7  | 7   | GND           |
|                                     | TxD   | 4   | 3   | →  | 2   | 2  | 3   | RxD           |
|                                     | RxD   | 5   | 2   | ←  | 3   | 3  | 2   | TxD           |
|                                     | DCD   | 6   | 1   | ←  | 1   | 8  | 8   | DCD           |
|                                     | CTS   | 7   | 8   | ←  | 7   | 5  | 4   | RTS           |
| DTR                                 | 8     | 4   | →   | 6  | 20  | 6  | DSR   |               |
| <b>RS-422, 4-wire RS-485 Cables</b> | NPort |    |    |    |    |    |    | Serial Device |
|                                     |       | RJ45  | DB9(F)  |    | DB9(M)  | DB25(M)  | DB25(F)   |               |
|                                     | TxD+  | 2   | 2   | →  | 3   | 3  | 2   | RxD+          |
|                                     | GND   | 3   | 5   | —  | 5   | 7  | 7   | GND           |
|                                     | TxD-  | 4   | 1   | →  | 1   | 8  | 8   | RxD-          |
|                                     | RxD+  | 5   | 3   | ←  | 2   | 2  | 3   | TxD+          |
| RxD-                                | 6     | 4   | ←   | 6  | 20  | 6  | TxD-  |               |
| <b>2-wire RS-485 Cables</b>         | NPort |  |  |    |  |  |  | Serial Device |
|                                     |       | RJ45  | DB9(F)  |    | DB9(M)  | DB25(M)  | DB25(F)   |               |
|                                     | GND   | 3   | 5   | —  | 5   | 7  | 7   | GND           |
|                                     | Data+ | 5   | 3   | ←→ | 2   | 2  | 3   | Data+         |
| Data-                               | 6     | 4   | ←→  | 6  | 20  | 6  | Data-   |               |




## Pin Assignments for DB9 and DB25 Connectors

### Pin Assignments for DB9 Male and Female Connectors

**DB9 Male Connector**

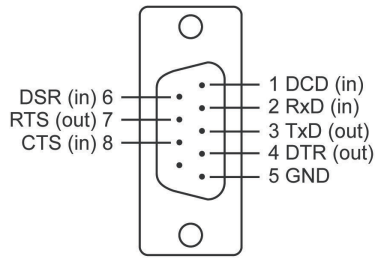


**DB9 Female Connector**

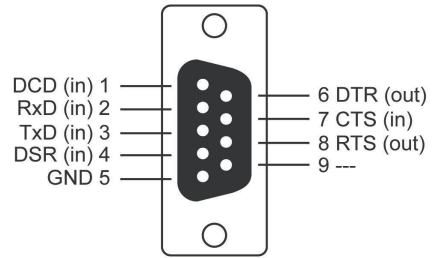


### Pin Assignments for DB25 Male and Female Connectors

**DB25 Male Connector**

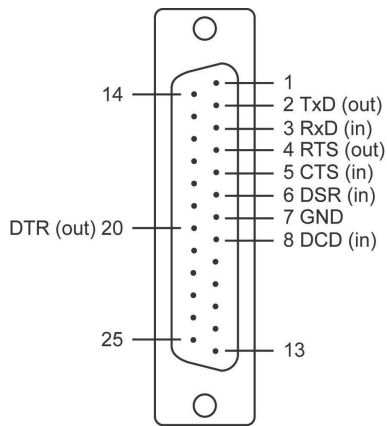

**DB25 Female Connector**

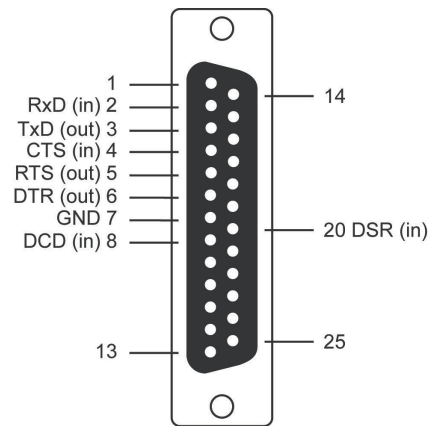

# B

## Adjustable Pull High/low Resistors for the RS-485 Port

In some critical environments, you may need to add termination resistors to prevent the reflection of serial signals. When using termination resistors, it is important to set the pull high/low resistors correctly so that the electrical signal is not corrupted. Since there is no resistor value that works for every environment, DIP switches or Jumpers are used to set the pull high/low resistor values for each RS-485 port.




### ATTENTION

Do not use the 1 k $\Omega$  setting on NPorts when using the RS-232 interface. Doing so will degrade the RS-232 signals and shorten the maximum allowed communication distance.

### NPort 5130/5150 Series (Jumpers)

**To set a termination resistor to 150 k $\Omega$ ,** make sure that the two jumpers (JP3 and JP4) assigned to the serial port are not shorted by jumper caps. This is the default setting.


**To set a termination resistor to 1 k $\Omega$ ,** make sure that the two jumpers (JP3 and JP4) assigned to the serial port are shorted by jumper caps.

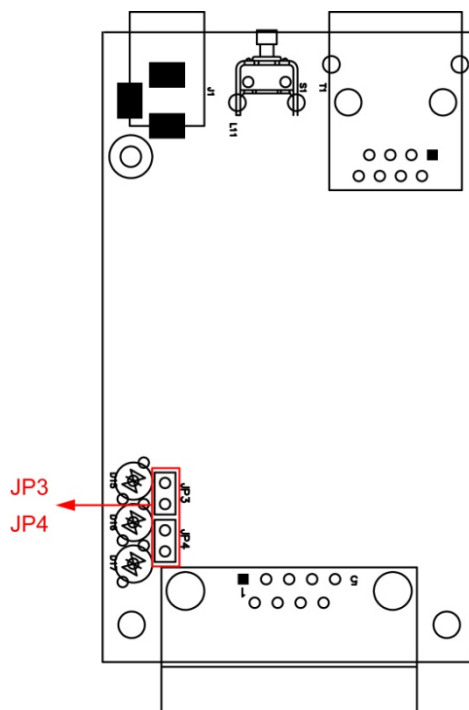



**NPort 5130A/5150A (Jumpers)**

To set a pull high/low resistor to 150 kΩ, make sure that the two jumpers (JP3 and JP4) assigned to the serial port are not shorted by jumper caps. This is the default setting.

To set a pull high/low resistor to 1 kΩ, make sure that the two jumpers (JP3 and JP4) assigned to the serial port are shorted by jumper caps.

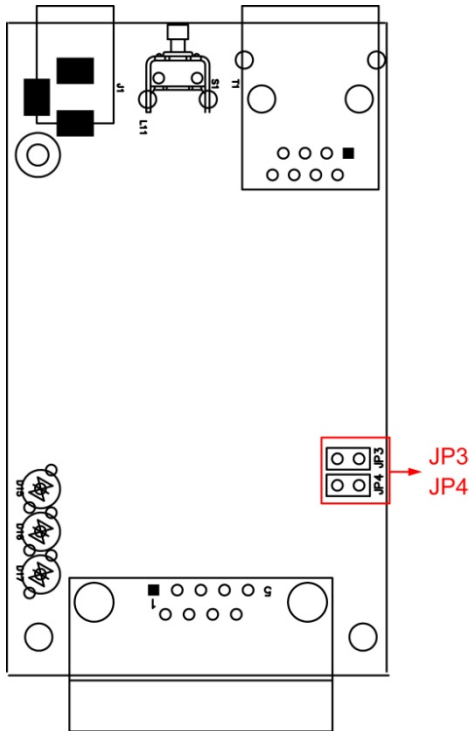

**NPort P5150A (DIP Switches)**

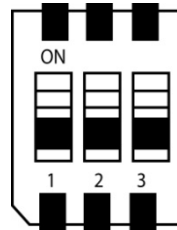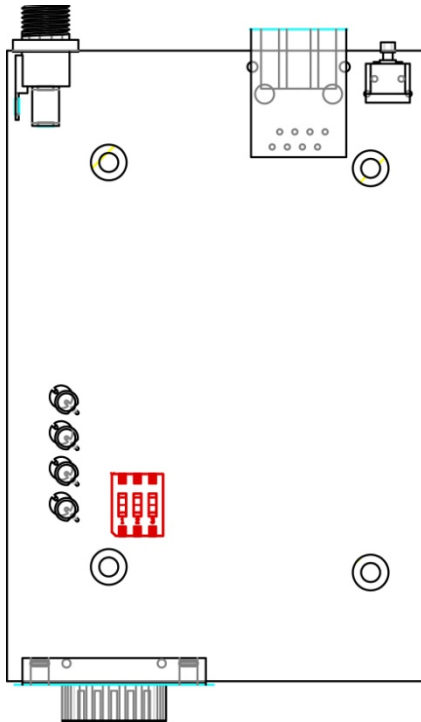


| SW  | 1                  | 2                 | 3          |
|-----|--------------------|-------------------|------------|
|     | Pull-high resistor | Pull-low resistor | Terminator |
| ON  | 1 kΩ               | 1 kΩ              | 120 Ω      |
| OFF | 150 kΩ*            | 150 kΩ*           | —*         |

\* Default

**NPort 5400 Series (DIP Switches)**

To set the pull high/low resistors to 150 KΩ, make sure both of the assigned DIP switches are in the OFF position. This is the default setting.

To set the pull high/low resistors to 1 KΩ, make sure both of the assigned DIP switches are in the ON position.

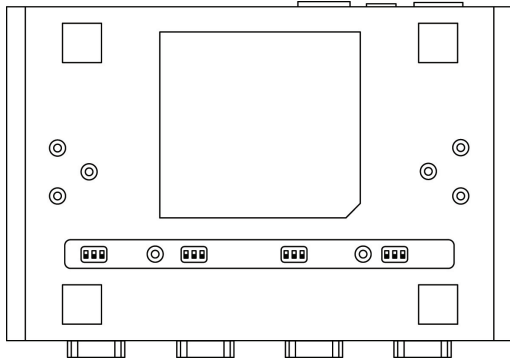

**Pull high/low resistors for the RS-485 Port**

| SW             | 1         | 2        | 3          |
|----------------|-----------|----------|------------|
|                | Pull High | Pull Low | Terminator |
| ON             | 1 KΩ      | 1 KΩ     | 120 Ω      |
| Default<br>OFF | 150 KΩ    | 150 KΩ   | ---        |


**NPort 5650 Series (DIP Switches)**

**Pull high/low resistors for the RS-485 Port**

| SW             | 1         | 2        | 3          |
|----------------|-----------|----------|------------|
|                | Pull High | Pull Low | Terminator |
| ON             | 1 KΩ      | 1 KΩ     | 120 Ω      |
| Default<br>OFF | 150 KΩ    | 150 KΩ   | ---        |


To set the pull high/low resistors to 150 KΩ, make sure both of the assigned DIP switches are in the OFF position. This is the default setting.

To set the pull high/low resistors to 1 K $\Omega$ , make sure both of the assigned DIP switches are in the ON position.

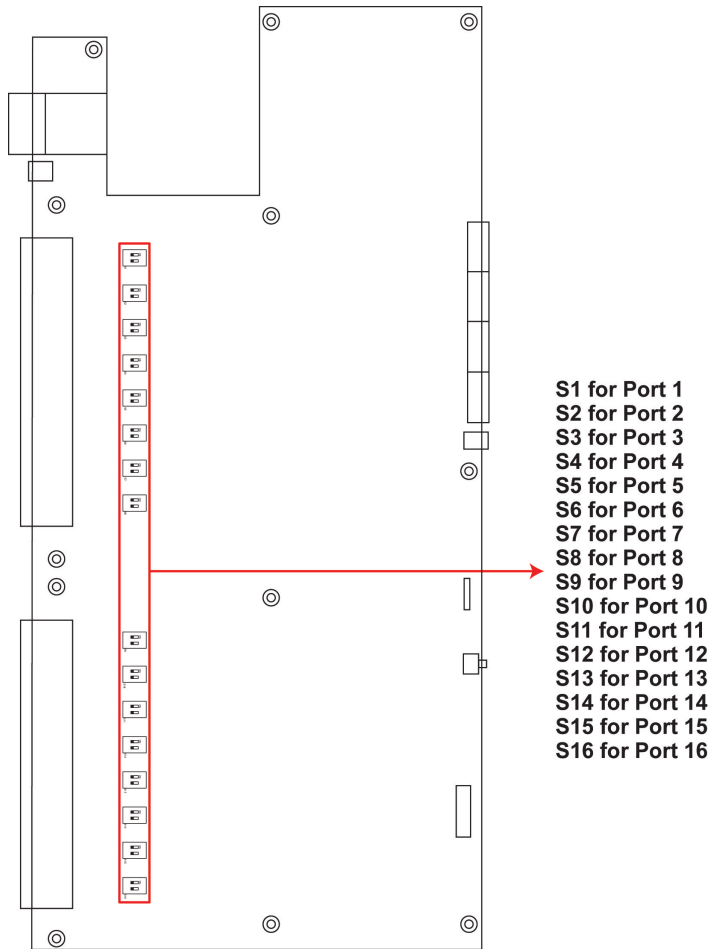


**NPort 5600-8-DT/DTL Series (DIP Switches)**

**NPort 5600-8-DT:** Use the DIP switches on the bottom panel to configure each device port's pull high/low resistors. You will need to unscrew the DIP switch cover to access the DIP switches.

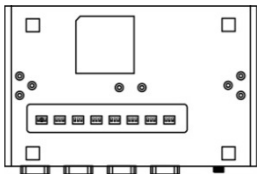



- **NPort 5600-8-DTL:** Remove the top cover to access the DIP switches used to configure each device port's pull high/low resistors (note that SW4 is reserved for future use).

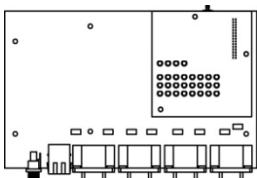

The pull high/low resistor values for each device port are set as follows:

|                |                |                |              |
|----------------|----------------|----------------|--------------|
| SW             | 1              | 2              | 3            |
|                | Pull High      | Pull Low       | Terminator   |
| ON             | 1 K $\Omega$   | 1 K $\Omega$   | 120 $\Omega$ |
| Default<br>OFF | 150 K $\Omega$ | 150 K $\Omega$ | -            |

**NPort 5230A/5250A (DIP Switches)**

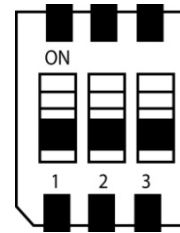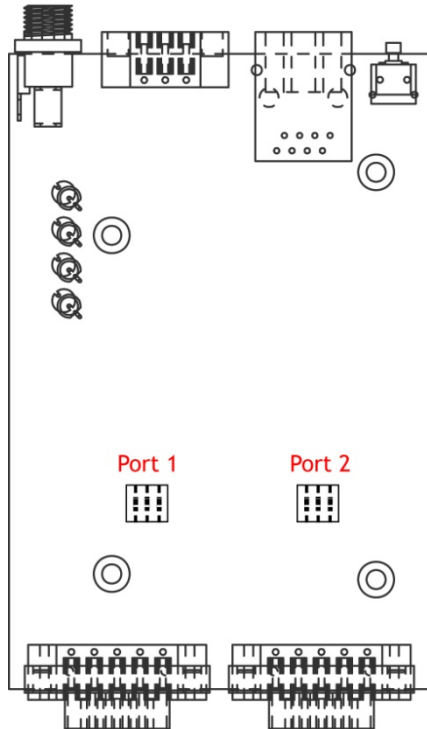


|     |                    |                   |              |
|-----|--------------------|-------------------|--------------|
| SW  | 1                  | 2                 | 3            |
|     | Pull-high resistor | Pull-low resistor | Terminator   |
| ON  | 1 K $\Omega$       | 1 K $\Omega$      | 120 $\Omega$ |
| OFF | 150 K $\Omega$ *   | 150 K $\Omega$ *  | -*           |

\* Default


**NPort IA5000 Series**

When setting up your RS-485 and RS-422 networks, you should use termination resistors to prevent signal reflections. The NPort IA5000 Series does not come with pull high/low resistors and terminators, so you will need to obtain and configure the termination yourself. The following figures illustrate how to properly configure termination for a 2-wire RS-422/RS485 network, and a 4-wire RS485 network. You will usually only need to install termination resistors (typically 120  $\Omega$ ) on the first and last devices on your network.

**Setting up terminators for a 2-wire RS422/RS485 network**

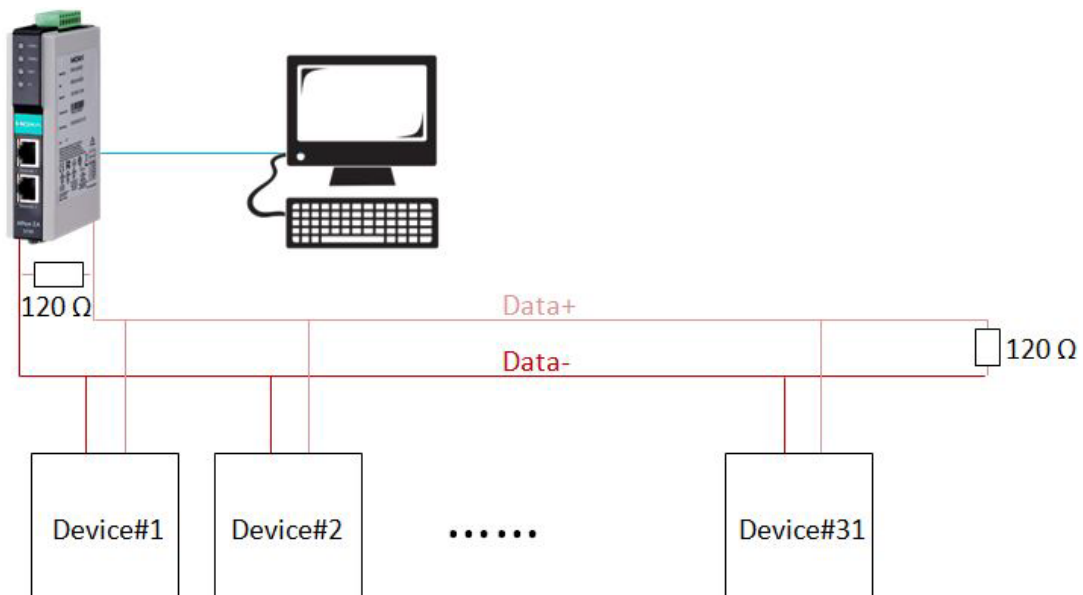


**Setting up terminators for a 4-wire RS485 network**

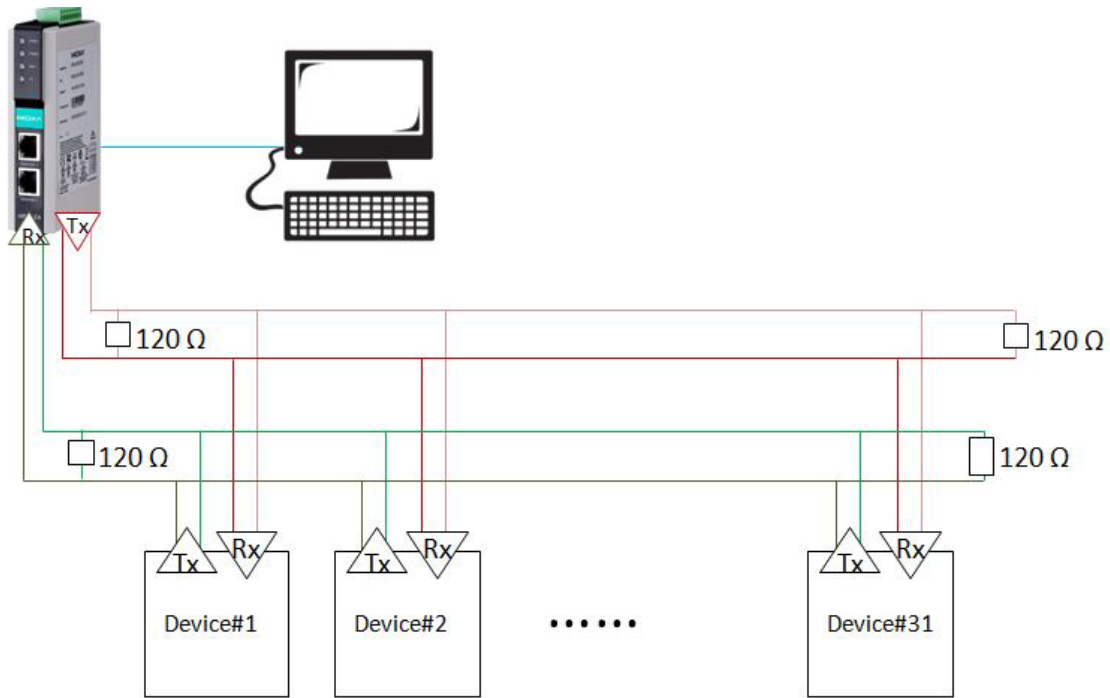

**NPort IA5000A Series (DIP Switches)**

The DIP switches are located on the PCB board; you will need to take off the covers to access them. To set the pull-high resistor to 150 KΩ, flip DIP1 to "OFF," and then set the pull-low resistor to 150 KΩ, and then flip DIP2 to "OFF." To set the pull-high resistor to 1 KΩ, flip DIP1 to "ON," and then set the pull-low resistor to 1 KΩ, and then flip DIP2 to "ON." Make sure that DIP3 is "ON" to enable the 120Ω terminator. The default settings for the pull-high and pull-low resistors, and the terminators are all at "OFF."

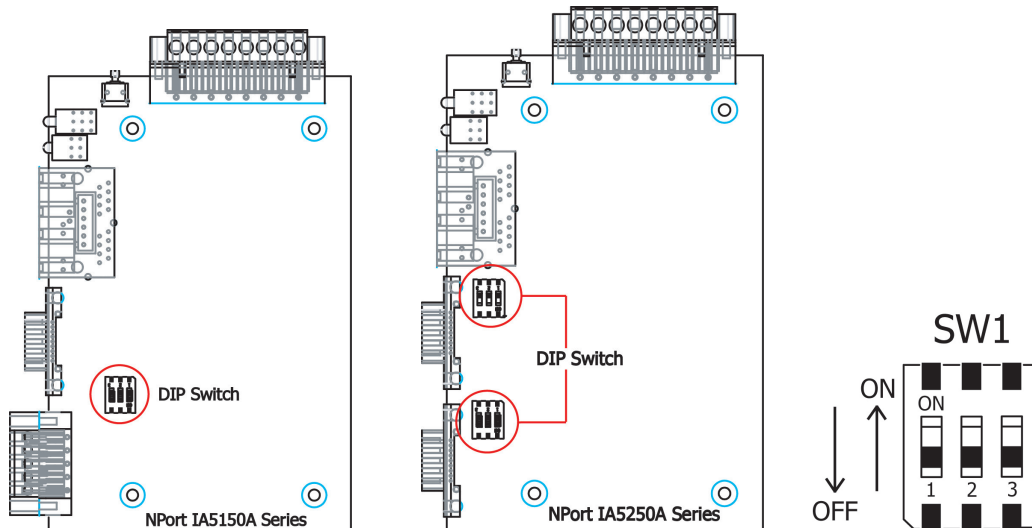

## Well-Known Port Numbers

---

In this appendix, which is included for your reference, we provide a list of well-known port numbers that may cause network problems if you set the NPort to one of these ports. Refer to RFC 1700 for well-known port numbers, or refer to the following introduction from the IANA.

The port numbers are divided into three ranges: the well-known Ports, the Registered Ports, and the Dynamic and/or Private Ports.

- The Well-Known Ports range from 0 through 1023.
- The Registered Ports range from 1024 through 49151.
- The Dynamic and/or Private Ports range from 49152 through 65535.

The well-known ports are assigned by the IANA, and on most systems, can only be used by system processes or by programs executed by privileged users. The following table shows famous port numbers among the well-known port numbers. For more details, please visit the IANA website at <http://www.iana.org/assignments/port-numbers>.

| TCP Socket | Application Service                   |
|------------|---------------------------------------|
| 0          | reserved                              |
| 1          | TCP Port Service Multiplexor          |
| 2          | Management Utility                    |
| 7          | Echo                                  |
| 9          | Discard                               |
| 11         | Active Users (sysstat)                |
| 13         | Daytime                               |
| 15         | Netstat                               |
| 20         | FTP data port                         |
| 21         | FTP CONTROL port                      |
| 23         | Telnet                                |
| 25         | SMTP (Simple Mail Transfer Protocol)  |
| 37         | Time (Time Server)                    |
| 42         | Host name server (names server)       |
| 43         | Whois (nickname)                      |
| 49         | (Login Host Protocol) (Login)         |
| 53         | Domain Name Server (domain)           |
| 79         | Finger protocol (Finger)              |
| 80         | World Wide Web HTTP                   |
| 119        | Network news Transfer Protocol (NNTP) |
| 123        | Network Time Protocol                 |
| 213        | IPX                                   |
| 160 - 223  | Reserved for future use               |



| UDP Socket | Application Service                   |
|------------|---------------------------------------|
| 0          | reserved                              |
| 2          | Management Utility                    |
| 7          | Echo                                  |
| 9          | Discard                               |
| 11         | Active Users (systat)                 |
| 13         | Daytime                               |
| 35         | Any private printer server            |
| 39         | Resource Location Protocol            |
| 42         | Host name server (names server)       |
| 43         | Whois (nickname)                      |
| 49         | (Login Host Protocol) (Login)         |
| 53         | Domain Name Server (domain)           |
| 69         | Trivial Transfer Protocol (TFTP)      |
| 70         | Gopher Protocol                       |
| 79         | Finger Protocol                       |
| 80         | World Wide Web HTTP                   |
| 107        | Remote Telnet Service                 |
| 111        | Sun Remote Procedure Call (Sunrpc)    |
| 119        | Network News Transfer Protocol (NNTP) |
| 123        | Network Time Protocol (ntp)           |
| 161        | SNMP (Simple Network Mail Protocol)   |
| 162        | SNMP Traps                            |
| 213        | IPX (Used for IP Tunneling)           |

## SNMP Agents with MIB II & RS-232/422/485 Like Groups

The NPort has built-in SNMP (Simple Network Management Protocol) agent software. It supports SNMP Trap, RFC1317 RS-232 like group and RFC 1213 MIB-II. The following table lists the standard MIB-II group, as well as the variable implementation for the NPort device server.

### RFC1213 MIB-II Supported SNMP Variables:

| System MIB  | Interfaces MIB    | IP MIB                  | ICMP MIB             |
|-------------|-------------------|-------------------------|----------------------|
| SysDescr    | ifNumber          | ipForwarding            | IcmpInMsgs           |
| SysObjectID | ifIndex           | ipDefaultTTL            | IcmpInErrors         |
| SysUpTime   | ifDescr           | ipInreceives            | IcmpInDestUnreachs   |
| SysContact  | ifType            | ipInHdrErrors           | IcmpInTimeExcds      |
| SysName     | ifMtu             | ipInAddrErrors          | IcmpInParmProbs      |
| SysLocation | ifSpeed           | ipForwDatagrams         | IcmpInSrcQuenchs     |
| SysServices | ifPhysAddress     | ipInUnknownProtos       | IcmpInRedirects      |
|             | ifAdminStatus     | ipInDiscards            | IcmpInEchos          |
|             | ifOperStatus      | ipInDelivers            | IcmpInEchoReps       |
|             | ifLastChange      | ipOutRequests           | IcmpInTimestamps     |
|             | ifInOctets        | ipOutDiscards           | IcmpTimestampReps    |
|             | ifInUcastPkts     | ipOutNoRoutes           | IcmpInAddrMasks      |
|             | ifInNUcastPkts    | ipReasmTimeout          | IcmpOutMsgs          |
|             | ifInDiscards      | ipReasmReqds            | IcmpOutErrors        |
|             | ifInErrors        | ipReasmOKs              | IcmpOutDestUnreachs  |
|             | ifInUnknownProtos | ipReasmFails            | IcmpOutTimeExcds     |
|             | ifOutOctets       | ipFragOKs               | IcmpOutParmProbs     |
|             | ifOutUcastPkts    | ipFragFails             | IcmpOutSrcQuenchs    |
|             | ifOutNUcastPkts   | ipFragCreates           | IcmpOutRedirects     |
|             | ifOutDiscards     | ipAdEntAddr             | IcmpOutEchos         |
|             | ifOutErrors       | ipAdEntIfIndex          | IcmpOutEchoReps      |
|             | ifOutQLen         | ipAdEntNetMask          | IcmpOutTimestamps    |
|             | ifSpecific        | ipAdEntBcastAddr        | IcmpOutTimestampReps |
|             |                   | ipAdEntReasmMaxSize     | IcmpOutAddrMasks     |
|             |                   | IpNetToMediaIfIndex     | IcmpOutAddrMaskReps  |
|             |                   | IpNetToMediaPhysAddress |                      |
|             |                   | IpNetToMediaNetAddress  |                      |
|             |                   | IpNetToMediaType        |                      |
|             |                   | IpRoutingDiscards       |                      |

| UDP MIB                        | TCP MIB             | SNMP MIB                |
|--------------------------------|---------------------|-------------------------|
| UdpInDatagrams                 | tcpRtoAlgorithm     | snmpInPkts              |
| UdpNoPorts                     | tcpRtoMin           | snmpOutPkts             |
| UdpInErrors                    | tcpRtoMax           | snmpInBadVersions       |
| UdpOutDatagrams                | tcpMaxConn          | snmpInBadCommunityNames |
| UdpLocalAddress                | tcpActiveOpens      | snmpInASNParseErrs      |
| UdpLocalPort                   | tcpPassiveOpens     | snmpInTooBigs           |
|                                | tcpAttemptFails     | snmpInNoSuchNames       |
| <b>Address Translation MIB</b> | tcpEstabResets      | snmpInBadValues         |
| AtIfIndex                      | tcpCurrEstab        | snmpInReadOnlys         |
| AtPhysAddress                  | tcpInSegs           | snmpInGenErrs           |
| AtNetAddress                   | tcpOutSegs          | snmpInTotalReqVars      |
| AtNetAddress                   | tcpRetransSegs      | snmpInTotalSetVars      |
|                                | tcpConnState        | snmpInGetRequests       |
|                                | tcpConnLocalAddress | snmpInGetNexts          |
|                                | tcpConnLocalPort    | snmpInSetRequests       |
|                                | tcpConnRemAddress   | snmpInGetResponses      |
|                                | tcpConnRemPort      | snmpInTraps             |
|                                | tcpInErrs           | snmpOutTooBigs          |
|                                | tcpOutRsts          | snmpOutNoSuchNames      |
|                                |                     | snmpOutBadValues        |
|                                |                     | snmpOutGenErrs          |
|                                |                     | snmpOutGetRequests      |
|                                |                     | snmpOutGetNexts         |
|                                |                     | snmpOutSetRequests      |
|                                |                     | snmpOutGetResponses     |
|                                |                     | snmpOutTraps            |
|                                |                     | snmpEnableAuthenTraps   |

**RFC1317: RS-232 MIB objects**

| Generic RS-232-like Group | RS-232-like General Port Table | RS-232-like Asynchronous Port Group |
|---------------------------|--------------------------------|-------------------------------------|
| rs232Number               | rs232PortTable                 | rs232AsyncPortTable                 |
|                           | rs232PortEntry                 | rs232AsyncPortEntry                 |
|                           | rs232PortIndex                 | rs232AsyncPortIndex                 |
|                           | rs232PortType                  | rs232AsyncPortBits                  |
|                           | rs232PortInSigNumber           | rs232AsyncPortStopBits              |
|                           | rs232PortOutSigNumber          | rs232AsyncPortParity                |
|                           | rs232PortInSpeed               |                                     |
|                           | rs232PortOutSpeed              |                                     |

| The Input Signal Table | The Output Signal Table |
|------------------------|-------------------------|
| rs232InSigTable        | rs232OutSigTable        |
| rs232InSigEntry        | rs232OutSigEntry        |
| rs232InSigPortIndex    | rs232OutSigPortIndex    |
| rs232InSigName         | rs232OutSigName         |
| rs232InSigState        | rs232OutSigState        |

# Auto IP Report Protocol

The NPort Series provides several ways to configure Ethernet IP addresses. One of them is DHCP Client. When you set up the NPort to use DHCP Client to configure Ethernet IP addresses, it will automatically send a DHCP request over the Ethernet to find the DHCP Server. And then the DHCP Server will send an available IP address to the NPort. The NPort will use this IP address for a period of time after receiving it. But the NPort will send a DHCP request again to the DHCP Server. Once the DHCP Server realizes that this IP address is to be released to another DHCP Client, the NPort then will receive a different IP address. For this reason, users sometimes find that the NPort will use different IP addresses, not a fixed IP address.

In order to know what IP address the NPort is using, you need to set up parameters in Network Settings via the Web browser. The figure below is the NPort Web console configuration window. Enter the IP address and the Port number of the PC that you want to send this information to.

## Network Settings

**Network Settings**

LAN1 IP address

LAN1 Netmask

LAN1 Gateway

LAN1 IP configuration

Multi-LAN mode

LAN2 IP address

LAN2 Netmask

LAN2 Gateway

LAN2 IP configuration

DNS server 1

DNS server 2

**IP Address Report**

Auto report to IP

Auto report to IP (LAN2)

Auto report to UDP port

Auto report period  (0-99 secs)

**LLDP Settings**

LLDP  Enable  Disable

Message Transmit Interval  (5-32768 secs)

And then you can develop your own programs to receive this information from the NPort. Here is NPort's Auto IP Report Protocol. We provide an example for you to easily develop your own programs. You can find this example on Moxa's website.

### Auto IP Report Format

|                 |         |         |     |         |
|-----------------|---------|---------|-----|---------|
| "Moxa", 4 bytes | Info[0] | Info[1] | ... | Info[n] |
|-----------------|---------|---------|-----|---------|

**Info [n]**

| Field  | ID | Length | Data                               |
|--------|----|--------|------------------------------------|
| Length | 1  | 1      | Variable, Length is "Length Field" |

**ID List**

| ID Value | Description      | Length   | Note  |
|----------|------------------|----------|---|
| 1        | Server Name      | Variable | ASCII char  |
| 2        | Hardware ID      | 2        | Little-endian   |
| 3        | MAC Address      | 6        | 6 bytes MAC address. If the MAC address is "00-90-E8-01-02-03", the MAC[0] is 0, MAC[1] is 0x90(hex), MAC[2] is 0xE8(hex), and so on. |
| 4        | Serial Number    | 4, DWORD | Little-endian   |
| 5        | IP Address       | 4, DWORD | Little-endian   |
| 6        | Netmask          | 4, DWORD | Little-endian   |
| 7        | Default Gateway  | 4, DWORD | Little-endian   |
| 8        | Firmware Version | 4, DWORD | Little-endian<br>Ver1.3.4= 0x0103040  |
| 9        | AP ID            | 4, DWORD | Little-endian   |

**AP ID & Hardware ID Mapping Table**

| Product            | Device ID | AP ID      |
|--------------------|-----------|------------|
| NPort 5110         | 0x5110    | 0x80015110 |
| NPort 5130         | 0x5130    | 0x80005100 |
| NPort 5150         | 0x5150    | 0x80005100 |
| NPort 5110A        | 0x511A    | 0x80015100 |
| NPort 5130A        | 0x513A    | 0x80015100 |
| NPort 5150A        | 0x515A    | 0x80015100 |
| NPort 5210         | 0x0322    | 0x80000312 |
| NPort 5230         | 0x0312    | 0x80000312 |
| NPort 5232         | 0x0332    | 0x80000312 |
| NPort 5232I        | 0x1332    | 0x80000312 |
| NPort 5210A        | 0x521A    | 0x80015200 |
| NPort 5230AI       | 0x524A    | 0x80015200 |
| NPort 5250A        | 0x523A    | 0x80015200 |
| NPort 5250AI       | 0x526A    | 0x80015200 |
| NPort 5410         | 0x0504    | 0x80005000 |
| NPort 5430         | 0x0534    | 0x80005000 |
| NPort 5430I        | 0x1534    | 0x80005000 |
| NPort 5610-8       | 0x5618    | 0x80005610 |
| NPort 5610-16      | 0x5613    | 0x80005610 |
| NPort 5630-8       | 0x5638    | 0x80005610 |
| NPort 5630-16      | 0x5633    | 0x80005610 |
| NPort 5150AI-M12   | 0x515B    | 0x80015101 |
| NPort 5250AI-M12   | 0x525B    | 0x80015201 |
| NPort 5450AI-M12   | 0x545B    | 0x80015401 |
| NPort-IA5150       | 0x5151    | 0x80005250 |
| NPort-IA5150I      | 0x5152    | 0x80005250 |
| NPort-IA5150-S-SC  | 0x5153    | 0x80005250 |
| NPort-IA5150I-S-SC | 0x5154    | 0x80005250 |
| NPort-IA5150-M-SC  | 0x5155    | 0x80005250 |
| NPort-IA5150I-M-SC | 0x5156    | 0x80005250 |

|                    |        |            |
|--------------------|--------|------------|
| NPort-IA5250       | 0x5251 | 0x80005250 |
| NPort-IA5250I      | 0x5250 | 0x80005250 |
| NPort IA5150A      | 0x527A | 0x80005201 |
| NPort IA5150A-M-SC | 0x52BA | 0x80005201 |
| NPort IA5150AI     | 0x528A | 0x80005201 |
| NPort IA5250A      | 0x529A | 0x80005201 |
| NPort IA5250AI     | 0x52AA | 0x80005201 |
| NPort IA5450A      | 0x540A | 0x80015400 |
| NPort IA5450AI     | 0x541A | 0x80015400 |
| NPort P5150A       | 0x5157 | 0x80015100 |

## Compliance Notice

---



### **CE Warning**

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take appropriate measures.

### **Federal Communications Commission Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



### **FCC Warning**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his or her own expense.