

ioThinX 4510 Series User's Manual

Version 6.0, December 2021

www.moxa.com/product

MOXA[®]

© 2021 Moxa Inc. All rights reserved.

ioThinX 4510 Series User's Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

Copyright Notice

© 2021 Moxa Inc. All rights reserved.

Trademarks

The MOXA logo is a registered trademark of Moxa Inc.
All other trademarks or registered marks in this manual belong to their respective manufacturers.

Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document as is, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

Technical Support Contact Information

www.moxa.com/support

Moxa Americas

Toll-free: 1-888-669-2872
Tel: +1-714-528-6777
Fax: +1-714-528-6778

Moxa Europe

Tel: +49-89-3 70 03 99-0
Fax: +49-89-3 70 03 99-99

Moxa India

Tel: +91-80-4172-9088
Fax: +91-80-4132-1045

Moxa China (Shanghai office)

Toll-free: 800-820-5036
Tel: +86-21-5258-9955
Fax: +86-21-5258-5505

Moxa Asia-Pacific

Tel: +886-2-8919-1230
Fax: +886-2-8919-1231

Safety Symbols



DANGER

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a moderate risk, which, if not avoided can cause a potentially hazardous situation.



CAUTION

Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTE

Indicates a potential malfunction which, if not avoided, will not result in damage to property.

INFORMATION

This information is important for preventing errors.

Table of Contents

1. Preface	1-1
Revision History	1-2
Relevant Models	1-2
Package Contents	1-2
Usage Scenarios	1-2
Hardware and Software Requirements	1-3
Safety Precautions	1-3
Additional Resources	1-4
2. Product Overview	2-1
Technical Data	2-2
Common Specifications	2-2
Appearance	2-3
Front View	2-3
Physical Dimensions	2-3
LED Indicators	2-4
3. Hardware Installation	3-1
Wiring System and Field Power	3-2
System Power	3-3
Field Power	3-3
Wiring Ethernet Ports	3-4
Wiring Serial Port(s)	3-4
Grounding the Unit	3-4
Connecting the System Power Ground	3-5
Connecting the Field Power Ground	3-5
Mounting the Unit	3-6
Installing the Unit on a DIN Rail	3-6
Removing the Unit from a DIN Rail	3-7
Installing Covers on the Device and the Right-Most I/O Module	3-8
Removing a Cover from the Right-Most Module	3-8
Horizontal Installation	3-9
Powering on the Unit	3-9
4. Software Tools	4-1
Preparing Software Tools	4-2
Connecting Web Console	4-2
Preparing IOxpress Utility	4-2
Preparing Moxa CLI Configuration Tool	4-2
Web Console	4-3
Dashboard	4-4
System	4-7
Security	4-10
Network	4-14
Module	4-15
I/O	4-17
Serial Port	4-26
Internal Register	4-30
Protocol	4-32
5. Configuring the ioThink 4510	5-1
Configuring the Unit	5-2
Log In to the Unit	5-2
Configuring Module Settings	5-2
Changing Device Name	5-4
Changing the Username and Password	5-4
Configuring Service Settings	5-5
Configuring Account Settings	5-5
Configuring Network Settings	5-6
Configuring Serial Port and IR Settings	5-6
Configuring I/O Settings	5-7
Configuring Modbus Address Settings	5-7
Configuring SNMP Settings	5-8
Configuring MQTT Settings	5-8
Mass-deploying the Settings	5-9
Updating Configuration to Multiple Units	5-11
Setting Date and Time to Multiple Units	5-12
Changing IP Addresses to Multiple Devices	5-13
Changing the Device Name of Multiple Devices	5-13
Retrieving the System Log from Multiple Devices	5-14
Getting a Self-signed Certificate from Multiple Devices	5-14

Monitoring & Operating the Unit	5-15
Monitoring Module & I/O Status	5-15
Monitoring Connection Status	5-16
Exiting Safe Mode Status.....	5-17
Maintaining the Unit.....	5-17
Backing up Configuration Files	5-17
Updating the Firmware.....	5-18
Restarting the Unit	5-18
Loading Factory Default Settings	5-19
6. Tutorials.....	6-1
How to Use Modbus TCP to Connect to the ioThinX 4510 Series	6-2
Using Modbus TCP via Modbus Poll	6-2
How to Use RESTful API to Connect to the ioThinX 4510 Series.....	6-7
Using RESTful API via Postman	6-7
Send a GET request and a PUT request	6-9
How to Use MQTT to Connect to the ioThinX 4510 Series	6-11
Broker Settings on the Computer	6-11
Set Up MQTT on the ioThinX 4510	6-11
Publisher and Subscriber Settings.....	6-14
How to Connect ioThinX 4510 to an MQTT Broker over TLS	6-16
Broker Settings on the Computer	6-16
Client (publisher) setting	6-20
Client (subscriber) setting	6-20
A. Appendix.....	A-1
Network Port Usage	A-2
Modbus/TCP Slave Rules.....	A-2
Supported Function Code	A-2
Exception Code	A-2
System Registers	A-2
45MR-1600 (-T), 16 DIs Registers	A-3
45MR-1601 (-T), 16 DIs Registers	A-4
45MR-2404 (-T), 4 Relays Registers	A-4
45MR-2600 (-T), 16 DOs Registers	A-5
45MR-2601 (-T), 16 DOs Registers	A-5
45MR-2606 (-T), 8 DIs, 8 DOs Registers	A-6
45MR-3800 (-T), 8 AIs Registers	A-7
45MR-3810 (-T), 8 AIs Registers	A-7
45MR-4420 (-T), 4 AOs Registers.....	A-8
45MR-6600 (-T), 6 RTDs Registers	A-8
45MR-6810 (-T), 8 TCs Registers	A-9
45MR-7210(-T), System and Field Power Input Registers	A-9
SNMP Rules	A-9
RESTful API Rules.....	A-10
Supported Request Method.....	A-10
GET Request Components	A-10
PUT Request Components.....	A-10
RESTful API List	A-10
Exception Code	A-12
MQTT Rules.....	A-13
Publish Topic	A-13
Subscribe Topic.....	A-16
Troubleshooting.....	A-17
Forgot username & password.....	A-17
Forgot IP address of the unit.....	A-17
Failed to update firmware.....	A-18
Failed to update configuration	A-18
Failed to access the unit through IP address & IOxpress.....	A-18
Failed to enter System Ready Mode	A-19
Import Self-Signed Certificate	A-19
Return Value of a System Error	A-23

1

Preface

In this chapter, we explain the scope of and how to use this document.

The following topics are covered in this chapter:

- ❑ **Revision History**
- ❑ **Relevant Models**
- ❑ **Package Contents**
- ❑ **Usage Scenarios**
- ❑ **Hardware and Software Requirements**
- ❑ **Safety Precautions**
- ❑ **Additional Resources**

Revision History

Version	Change	Date
v1.0	First Release	2018-11-12
v2.0	1. Added 45MR-7210 2. Added MQTT 3. Added HTTPS 4. Added more mass deploy functions in IOxpress	2019-05-10
v2.1	1. Added power calculation links	2019-08-22
v3.0	1. Added 45MR-4420 2. Added SNMP Trap and Inform	2019-09-11
v4.0	1. Added SP/FP description 2. Added Modbus TCP, RESTful , MQTT tutorial	2020-02-10
v5.0	1. Modify description of HTTPS 2. Add LLDP 3. Add system error code 4. Modify profile information of Modbus RTU 5. Update content of Access IP 6. Update content of the RESTful API rule	2021-02-25
v6.0	1. Modified common specifications 2. Modified limitation of HTTPS web 3. Modified Modbus RTU device profile 4. Added remote syslog	2021-11-24

Relevant Models

This document is only applicable to the models listed below.

Model Name	Description
ioThinx 4510	Advanced I/O, Ethernet network adapter, 3-in-1 serial port(s), -20 to 60°C operating temperature
ioThinx 4510-T	Advanced I/O, Ethernet network adapter, 3-in-1 serial port(s), -40 to 75°C operating temperature

Package Contents

The following items are included in the product package.

- The ioThinx 4510 device
- Quick installation guide (Printed)
- Warranty card

Usage Scenarios

The ioThinx 4510 Series can be used for the following applications:

1. PLC I/O expansion


The ioThinx 4510 Series can be used to expand the number of I/O points on a PLC.

2. Remote I/O

The ioThinx 4510 Series can be accessed by master software, such as SCADA software, using IT or OT protocols to collect I/O data.

3. Modbus Gateway

The ioThinx 4510 Series has one or more serial ports to connect serial devices. It collects serial data using a Modbus RTU master protocol, which can be accessed by a PLC or master software with IT or OT protocols.

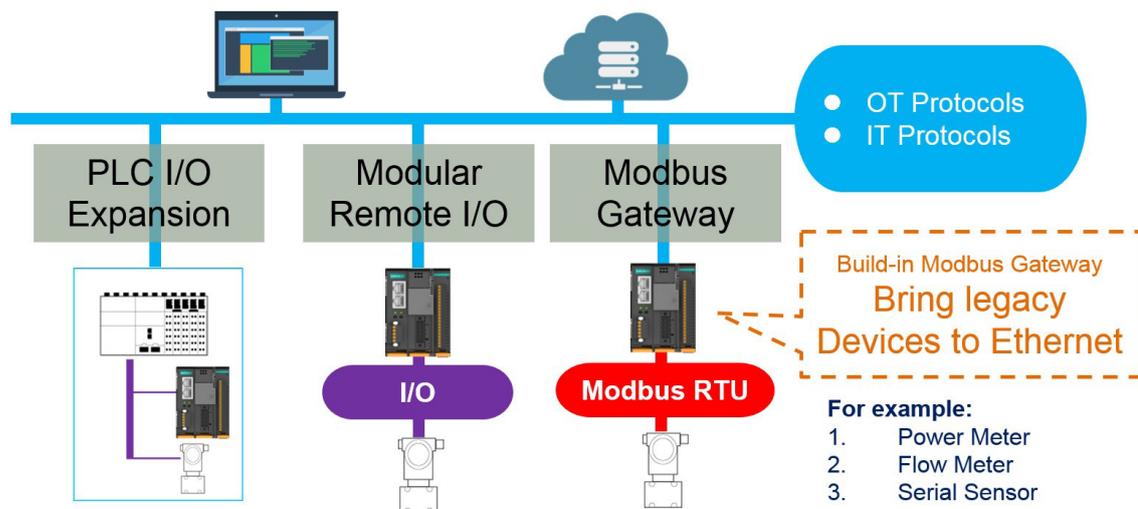

Hardware and Software Requirements

You will need the following hardware and software to use the ioThinx 4510 Series.

- A power source that provides 12 to 48 VDC, and power wires
- A PC running a Windows OS with Chrome installed and an Ethernet cable
- 45MR modules, if available
- IOxpress software utility (optional)
- Moxa CLI Configuration Tool (optional)

Safety Precautions

Please observe the following safety precautions when installing and using the ioThinx 4510 Series:



DANGER

Never work on the device while the power source is switched on. Disconnect all power sources to the device before performing installation, repair, or maintenance work.



DANGER

Disconnect the power when you want to remove or replace components, or disconnect equipment unless the area is known to be free of ignitable substances.

- If you connect or disconnect the Removable Terminal Block when field power is applied, an electrical arc can occur. This could cause an explosion when installed in hazardous locations. Ensure that power is removed or the area is nonhazardous before installation.
- If you connect or disconnect wiring while the power is on, an electrical arc can occur. This could cause an explosion in hazardous environments. Ensure that power is removed or the area is nonhazardous before installation.
- Do not disconnect the unit unless the power has been disconnected or the area is known to be nonhazardous. In a hazardous area, the unit must be powered down before removing it.

**WARNING**

This unit is sensitive to Electrostatic Discharge, which can cause internal damage and affect operations. Follow these guidelines when you handle this unit:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wristband.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- Use a static-safe workstation, if available.
- Store the device in appropriate static-safe packaging when not in use.

**WARNING**

Check the voltage supplied by the power source. Make sure the voltage provided by the power source matches the voltage required by the device.

**WARNING**

Check the voltage or current of the sensors or loads. Make sure the voltage and/or current indicated on the sensors or loads corresponds to the specifications of your 45M module before you connect the device.

**WARNING**

Connect your device to an earthed ground.

**CAUTION**

Do not use the device if the device is already damaged. Replace defective or damaged devices to ensure that your devices function properly.

**CAUTION**

Do not attempt to repair the device yourself. If your device needs to be repaired, return the device to Moxa's customer service department. Attempting to repair the device yourself could invalidate the device's warranty.

Additional Resources

Refer to the following documents for additional information.

- Datasheets for the following products:
 - ioThinx 4510 Series
 - ioThinx 4500 Series (45MR) Modules
- User's Manual for the following products:
 - ioThinx 4500 (45MR) Module Series
 - Moxa CLI Configuration Tool

Product Overview

In this chapter, we give an overview of each ioThinX 4510 Series device.

The following topics are covered in this chapter:

▣ **Technical Data**

- Common Specifications

▣ **Appearance**

- Front View
- Physical Dimensions

▣ **LED Indicators**

Technical Data

Common Specifications

Input/Output Interface

Expansion Slots: Up to 32

Note 1: Compatible with the ioThinX 4500 Series (45MR) Modules only

Note 2: 8 slots are the maximum when web service and two of the following three protocols—SNMP, Modbus TCP, and Modbus RTU—are enabled simultaneously

Ethernet Interface

10/100BaseT(X) Ports (RJ45 connector): 2, 1 MAC address (Ethernet bypass)

Ethernet Software Features

Industrial Protocols:

Modbus TCP Server (Slave)

Functions supported: 1, 2, 3, 4

Max. number of connections: 10 connections

Note: Maximum connections refer to the number of connections when only Modbus is enabled

RESTful API

Supported request method: PUT, GET, OPTIONS

Web interface: HTTP, HTTPS

SNMP

Functions supported: SNMP v1/v2c/v3 , SNMP v1/v2c/v3 Trap, SNMP v2c/v3 Inform

Max. number of events: 64 events (Inform, Trap or Inform + Trap)

MQTT

Mode: Publisher/Subscriber of MQTT, V3.1.1

QoS level: QoS 0, 1, 2

Secure transmission: TLS (1.2) encryption

Max. number of data tags: 256 data tags

Modbus Serial Interface

Industrial Protocols: Modbus RTU Client (Master)

Connector: Spring-type Euroblock terminal

No. of Ports: 1 x RS-232/422 or 2 x RS-485 (2 wire)

System Power Parameters

Connector: Spring-type Euroblock terminal

Input Voltage: 12 to 48 VDC

Field Power Parameters

Connector: Spring-type Euroblock terminal

Input Voltage: 12/24 VDC

Physical Characteristics

Dimensions: 42.3 x 99 x 75 mm (1.67 x 3.9 x 2.95 in)

Installation: DIN-rail mounting

Wiring:

Serial cable, 16 to 28 AWG

Power cable, 12 to 18 AWG

Environmental Limits


Operating Temperature:

ioThinX 4510: -20 to 60°C (-4 to 140°F)

ioThinX 4510-T: -40 to 75°C (-40 to 167°F)


Appearance

Front View

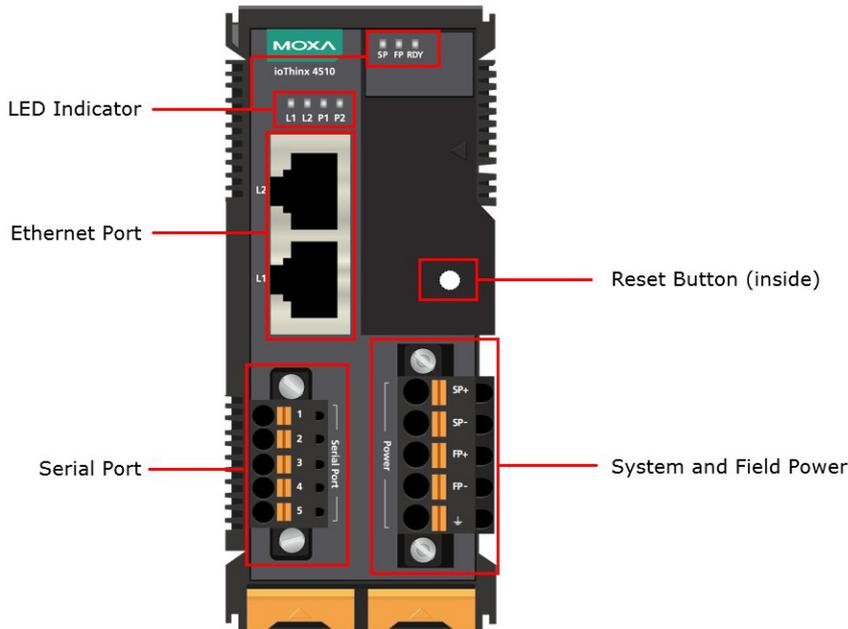

Physical Dimensions

Unit: mm (inch)

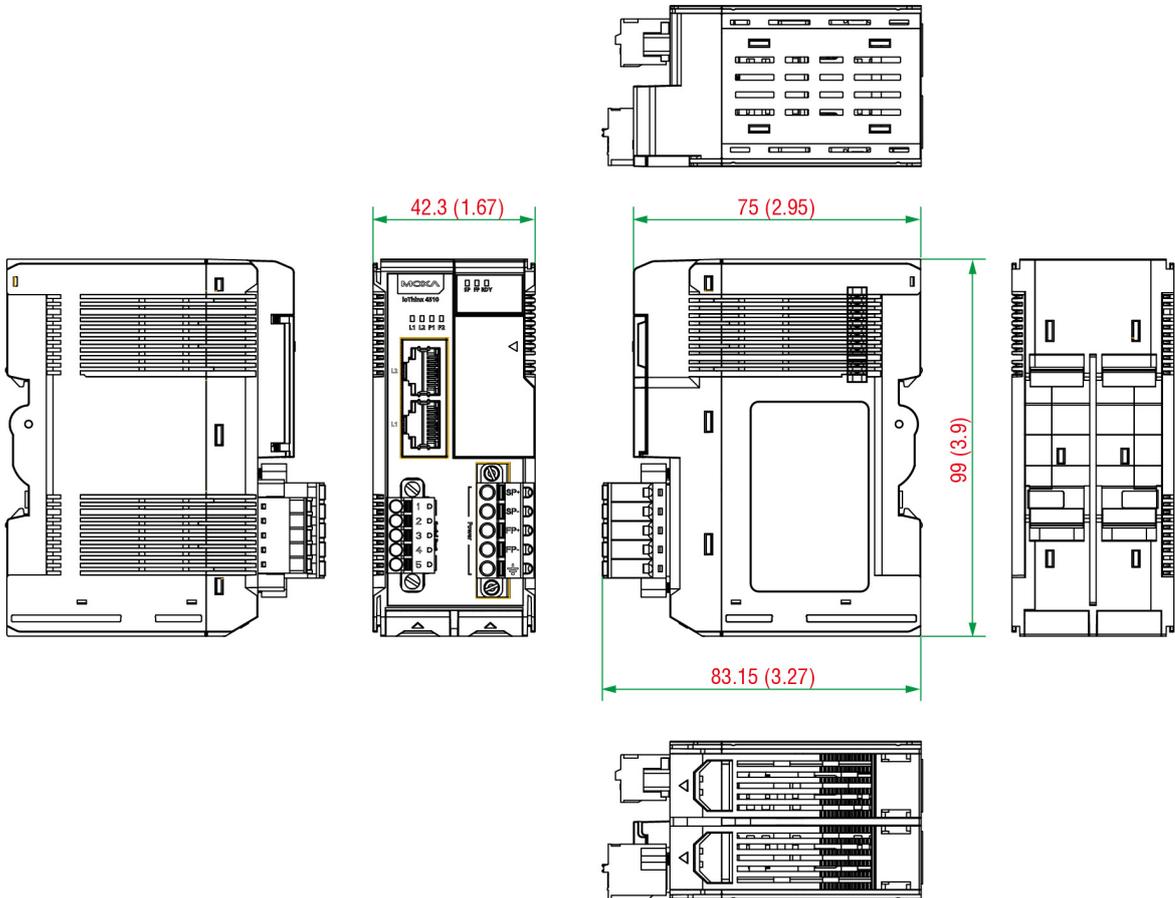

LED Indicators



Labeling	Indication	LED Qty	LED Color	LED Action
SP	System Power	1	Green	On: power on Off: power off
FP	Field Power	1	Green	On: power on Off: power off
RDY	System (Kernel)	1	Green/Red	Green: system ready Green slow blinking: booting up Red: system error or module mismatch Red slow blinking: loading factory default settings, upgrading firmware, or system recovery Red fast blinking: safe mode Off: power off
L1/L2	Ethernet	1 for each	Green/Amber	Green: 100 Mbps Amber: 10 Mbps Blinking: data transmitting Off: disconnected
P1/P2	Serial	1 for each	Green/Amber	Green: Tx Amber: Rx Non-simultaneous blinking: data transmitting Off: disconnected or no data transmitting

NOTE DO NOT DISCONNECT THE POWER OR NETWORK CABLE when the RDY LED is blinking slowly.

INFORMATION Refer to **Failed to Enter System Ready Mode** in the troubleshooting section for addition information about the system recovery process.

Hardware Installation

In this chapter, we describe how to install the ioThinX 4510 Series devices.

The following topics are covered in this chapter:

❑ **Wiring System and Field Power**

- System Power
- Field Power

❑ **Wiring Ethernet Ports**

❑ **Wiring Serial Port(s)**

❑ **Grounding the Unit**

- Connecting the System Power Ground
- Connecting the Field Power Ground

❑ **Mounting the Unit**

- Installing the Unit on a DIN Rail
- Removing the Unit from a DIN Rail
- Installing Covers on the Device and the Right-Most I/O Module
- Removing a Cover from the Right-Most Module
- Horizontal Installation


❑ **Powering on the Unit**

Wiring System and Field Power


Wire range: 12 to 18 AWG (ferrule diameter: 2.0 to 1.0 mm)

Wire strip length: 12 to 13 mm

Unit: mm (in.)

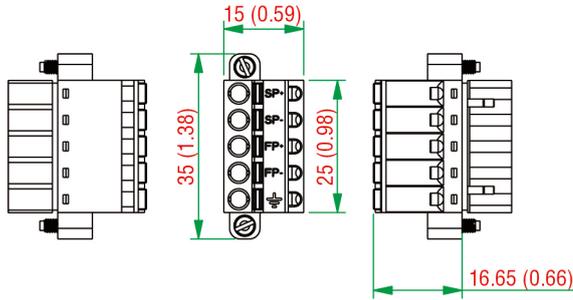


The device requires two sets of power inputs. One is for the system (internal logic circuit), and the other is for field I/O circuits.

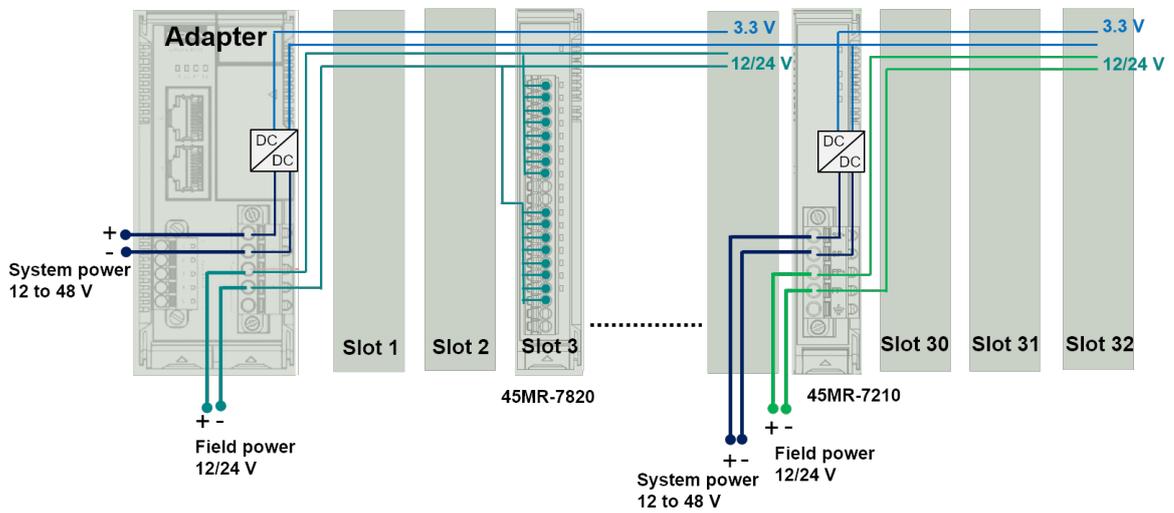

NOTE All I/O points have 3 kV VDC or 2 kVrms isolation with the system. We recommended using different power supplies to ensure that the system power and field power are isolated from each other.

System Power

This device requires a 12 to 48 VDC system power input. The system power powers this device and the expansion modules via an internal bus, which is galvanically connected to the system power supply.

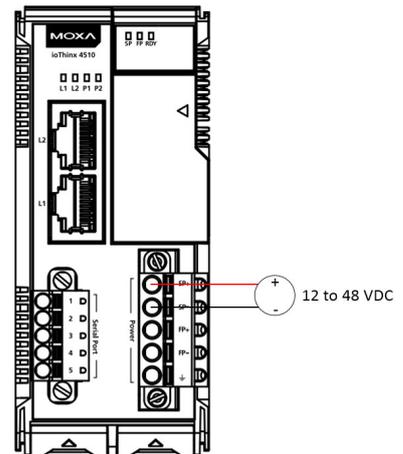

The amount of system current required to support an expansion module is 1 A. If more modules and more power consumption is needed, an additional power module (45MR-7210) is required. Below is an example:

- 10 x 45MR-1600 (59.4 mA) = 594 mA
- 5 x 45MR-3810 (187 mA) = 935 mA

The total system current is 1.594 A, which is greater than 1 A. Therefore, an additional 45MR-7210 is needed.


NOTE Install the 45MR-7210 to the lefthand side of the module where the power consumption would be exceeded.

NOTE To avoid damaging your devices, reset all power supplies connected to this device and 45MR-7210 modules at the same time.

NOTE Click the following link to see how many 45MR-7210 power modules you will need to support your ioThinx 4500 series application: <http://iothinxcalculator.moxa.com>

Field Power


This device provides a field power input of 12/24 VDC that passes directly through the expansion modules and provides a maximum current output of 2 A.

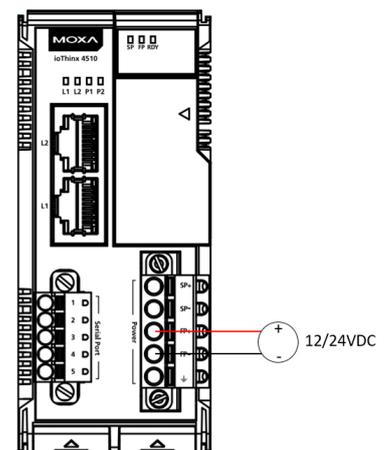

NOTE The 12/24 VDC field power supply can be connected directly to 45MR modules. If more connection points are needed, purchase 45MR-7820 (8 x FP+ and 8 x FP-) modules.

Wiring Ethernet Ports

The maximum cable length of a 10/100BaseT connection is usually stated as 100 m (350 feet), but the actual limit for your application could be longer or shorter depending on the amount of electrical noise in the environment. To minimize the amount of noise, Ethernet cables should not run parallel to power cables or other types of cables that generate electrical noise. The following diagram and table shows the pin assignments for the RJ45 Ethernet ports:

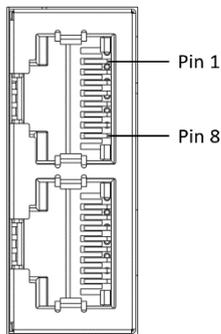


Pin	Media Direct Interface Signal
1	Tx+ (transmit)
2	Tx- (transmit)
3	Rx+ (receive)
4	Not used
5	Not used
6	Rx- (receive)
7	Not used
8	Not used

Wiring Serial Port(s)

Wire range: 16 to 28 AWG
 (Ferrule diameter: 1.2 to 0.3 mm)
 Wire strip length: 9.0 mm

Unit: mm (inch)

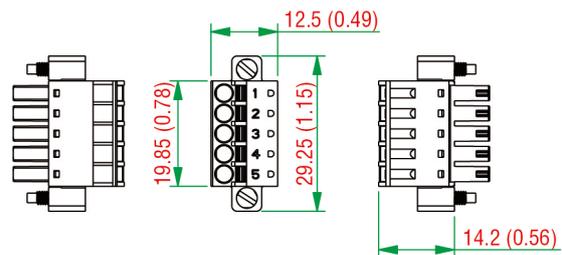

Pin	RS-232	RS-422	RS-485 (P1/P2)
1	TXD	TXD+	DATA1+
2	RXD	TXD-	DATA1-
3	RTS	RXD+	DATA2+
4	CTS	RXD-	DATA2-
5	GND	GND	GND

NOTE Connect the signal common pin (e.g., GND pin on the serial port pin assignment) between each of the serial device units. For insulated wire (shielding cable) that is used to reduce electrical noise, connect the cable shield drain wire to the chassis ground.


NOTE To ensure that wires are securely connected to terminal block connectors, strip 7 to 9 mm of insulation off the ends of the wires before connecting them to the terminal block.

Grounding the Unit

This device has two ground pins. One pin is for system power and the other pin is for field power.

Connecting the System Power Ground

The system power ground connector is at the back of the unit. Once the device has been installed on a DIN rail, the system power ground connector will connect to the DIN rail.

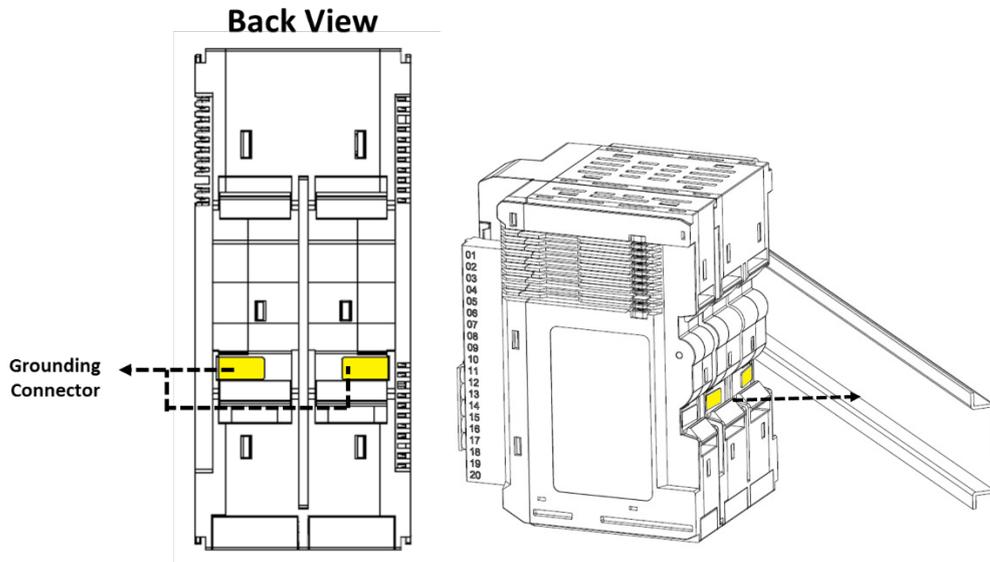


CAUTION

For surge protection, connect the DIN rail to earth ground.

Connecting the Field Power Ground

Connect the field power ground pin (\perp) to your field power ground.

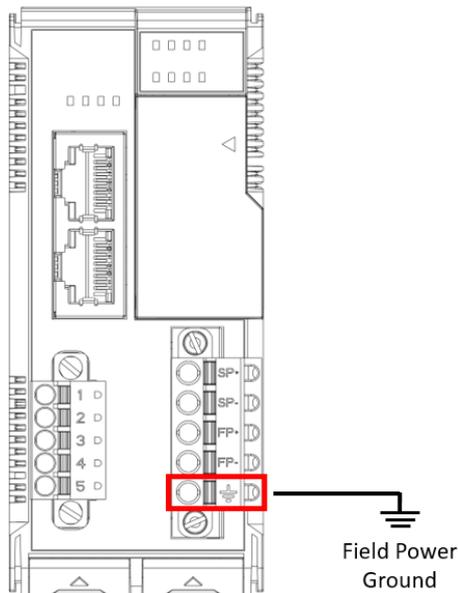

**CAUTION**

Be sure to note the maximum possible current for each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If currents exceed the maximum rating, the wires will overheat, which could cause serious damage to your equipment. For safety reasons, we recommend using 2 mm diameter wire to connect to the power supply (e.g., 12 AWG).

Mounting the Unit

In this section, we describe how to mount the device on a DIN rail and how to unmount the device from a DIN rail.


**DANGER**

Never install the device while the power source is switched on.


Installing the Unit on a DIN Rail

Take the following steps to install the unit on a DIN rail.

Step 1: Hook the mounting clip of the unit onto the DIN rail, and then lower the clip onto the DIN rail. At least 55 mm of space above the DIN rail should be kept free to ensure that the installation can be done correctly.

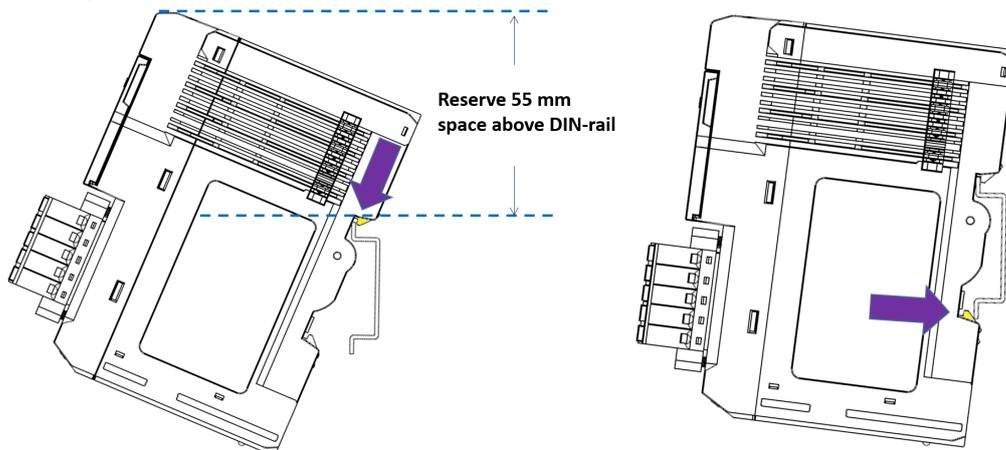

Step 2: Push the unit towards the DIN rail until the end of the mounting clip snaps into place.

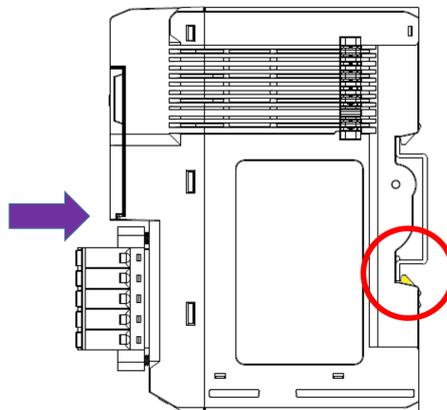


INFORMATION When the I/O module is inserted into the correct position, the connection between the internal bus and the previous module is established.


Removing the Unit from a DIN Rail

Take the following steps to remove the unit from a DIN rail.

Step 1: Use your finger to pull the release tab on the lower part of the module.

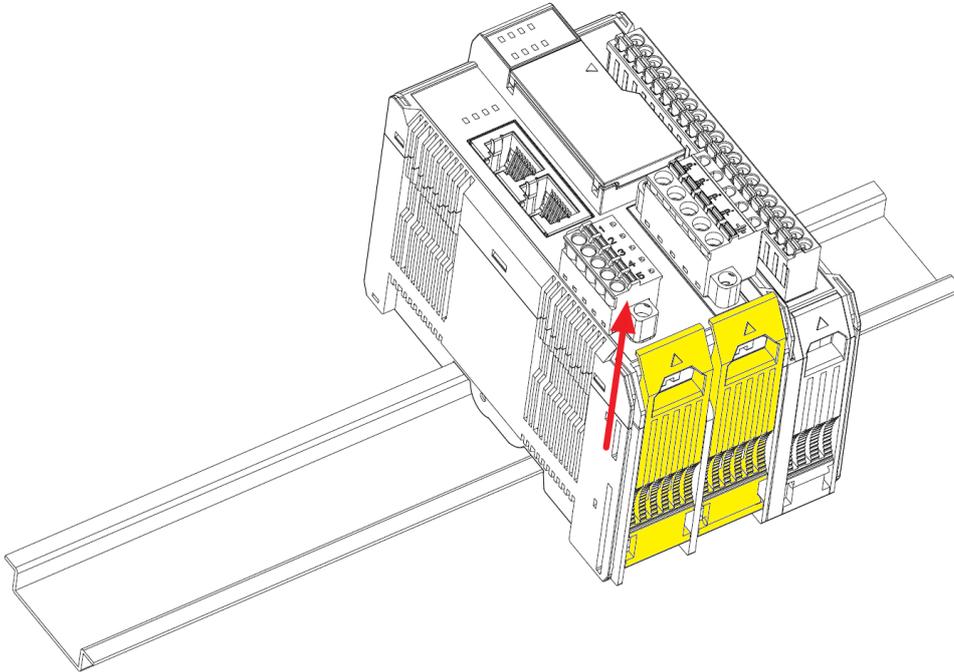


Step 2: Press the release tab (item 1 in the figure) and then remove the CPU module from the DIN rail (item 2 in the figure).

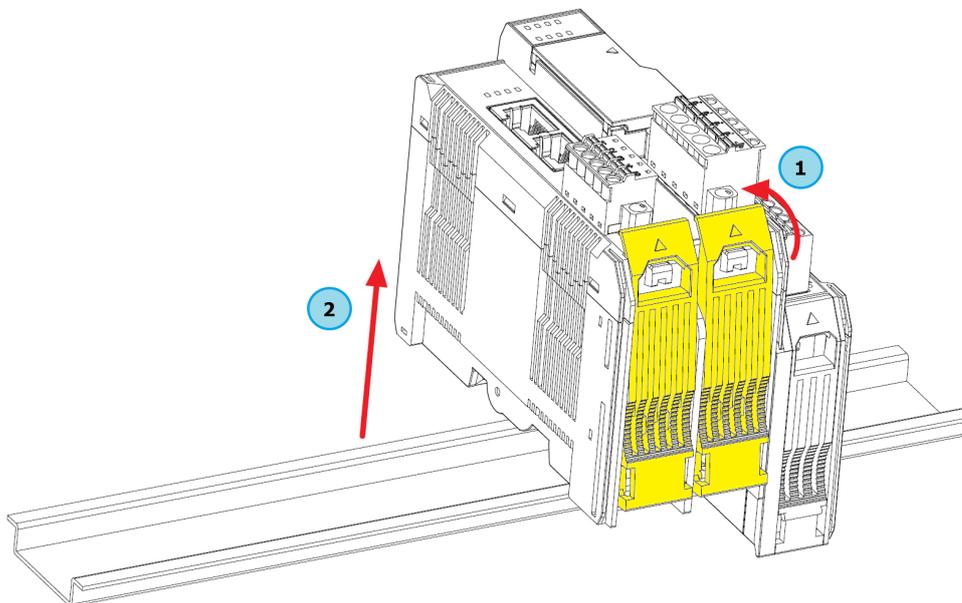

NOTE Disconnect all connections, including Ethernet, serial, and power cables, from the device before removing the device from the DIN rail.

Installing Covers on the Device and the Right-Most I/O Module


Insert the covers on the left side of the device and on the right side of the I/O module that is installed furthest to the right. Make sure the covers cover the internal bus of the module.

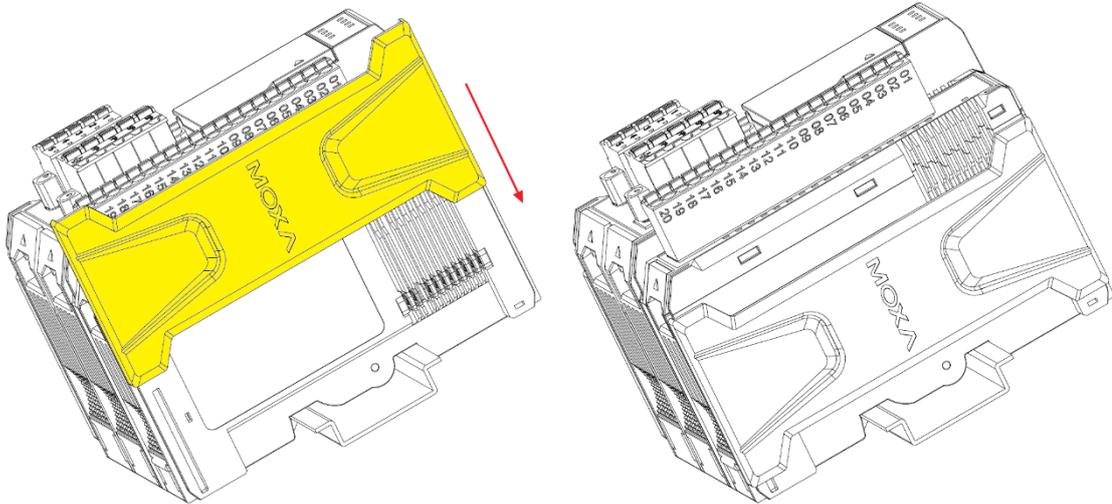

NOTE The covers provide protection against electrostatic discharge.


Removing a Cover from the Right-Most Module

Before adding a new module to the right-most module, remove the cover first. Place your hand on the cover and slide it up as indicated in the diagram below.

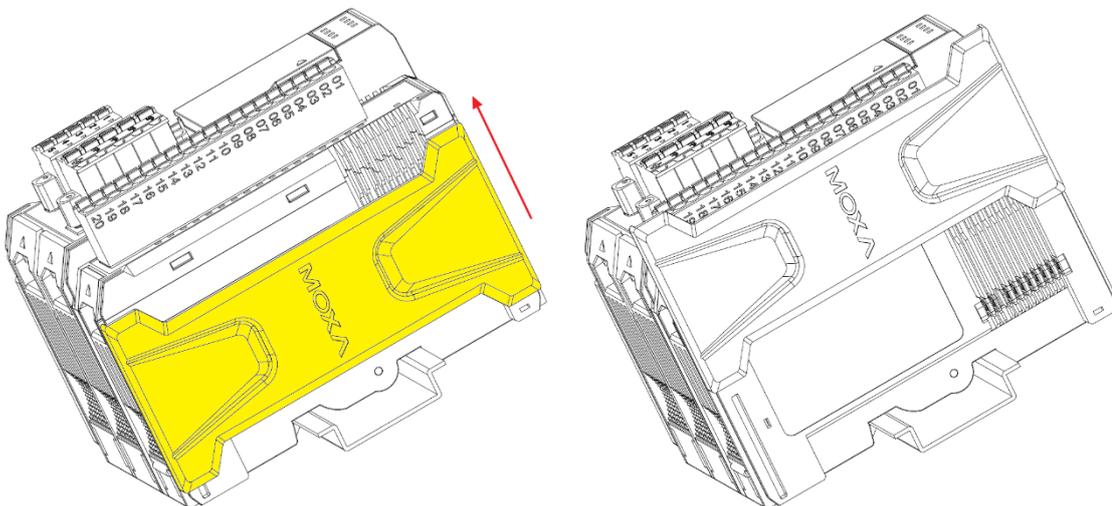

Horizontal Installation

Before installing the device, ensure there is enough space around the device so that it can dissipate heat. In order to ensure the device works properly, we suggest reserving the space shown in the figure below.

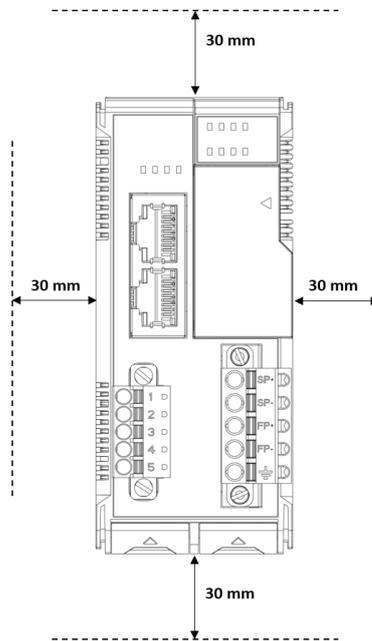

CAUTION

DO NOT install the device vertically, as the fan-less heat dissipation design will not perform as intended.

Powering on the Unit

After turning on the power supply, it will take 5 to 10 seconds for the operating system to boot up. The green Ready LED will illuminate continuously until the operating system is ready.

Software Tools

In this chapter, we introduce which software tools can be used with this device.

The following topics are covered in this chapter:

▣ **Preparing Software Tools**

- Connecting Web Console
- Preparing IOxpress Utility
- Preparing Moxa CLI Configuration Tool

▣ **Web Console**

- Dashboard
- System
- Security
- Network
- Module
- I/O
- Serial Port
- Internal Register
- Protocol

Preparing Software Tools

Connecting Web Console

The Web Console is already embedded in this device. Use the web console to check the device status, configure settings, or update the firmware of the device. Follow the steps below to connect to the web console.

1. Connect the device to your PC through an Ethernet cable.
2. Power on the unit.
3. Open a web browser (Chrome is recommended) on your PC, and type the default IP address shown on the model label of the unit.

INFORMATION Type in the IP address (if the IP address is not set by default). If the IP address is not available, use the IOxpress utility to search for the device, or load the factory default settings by holding down the RESET button to access the device through the default IP address.

Preparing IOxpress Utility

The IOxpress Utility can be downloaded from the Moxa website at www.moxa.com. After downloading the file, unzip it and run setup.exe. The installation program will guide you through the installation process.

Refer to the **Mass-deploying the Settings** section for detailed instructions.

NOTE The ioThinX 4510 Series is only compatible with IOxpress v2.2 or later.

Preparing Moxa CLI Configuration Tool

Moxa CLI Configuration Tool (MCC_Tool) can be downloaded from the Moxa website at www.moxa.com. After downloading the file, unzip it and run setup.exe. The installation program will guide you through the installation process.

It is a command line tool that provides the following functions to manage field devices.

- Report firmware versions
- Upgrade firmware
- Import/export configuration files
- Change password

Management tasks can be performed according to which devices the user requires (1 for single device or 1 for multiple devices) and across different subnet networks.

Refer to **Moxa CLI Configuration Tool** User's Manual for detailed instructions.

Web Console

The Web Console is the main software tool to configure, monitor, and operate a device. If mass deploying to multiple devices is required, use IOxpress utility instead.



The Web Console is divided into three regions:

1. **Title Panel:** It provides Login, Save & Restart, and Logout functions.
2. **Menu panel:** It provides access to configure the functions or services.
3. **Web page panel:** The web page associated with the function selected in the Menu panel.

INFORMATION Whenever any configuration is modified, the **Save & Restart** will become red and blink. Click **Save & Restart** to make the changes effective.

Save & Restart | Logout


NOTE For security reasons, click **Logout** when no longer accessing this device. DO NOT leave the web console unattended.

Dashboard

The dashboard provides information about the system, modules, I/Os, and the connection status. It also allows you to exit the safe mode status or to change the I/O status.

System Information

The one page system information provides detailed information for this device. For information regarding modules and I/Os, click **Module & I/O** to get the detailed information. For the status of external connections, click **Connection** to get the detailed information.

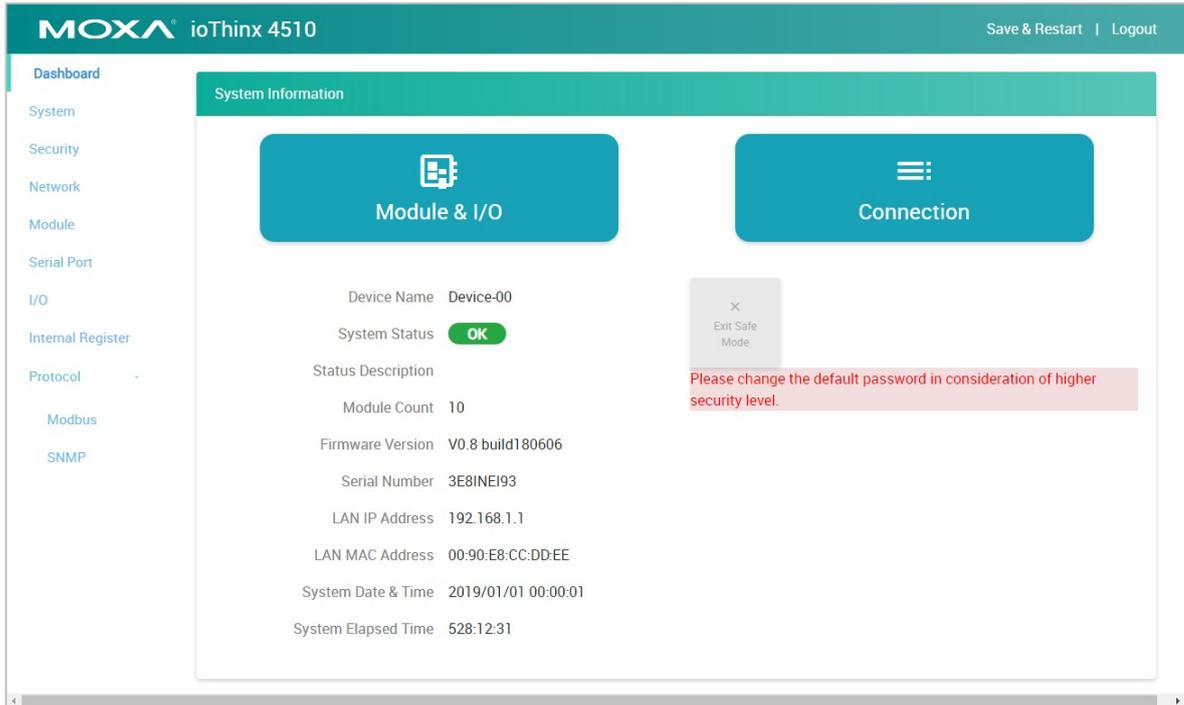

Exit Safe Mode: Manually exit the safe mode status of this device. Refer to the **Security** section for more information about the Safe Mode function.

Module & I/O

The **Module & I/O** provides information about modules and I/Os status. It also allows you to change the I/O status.

Module Drop-Down List: It lists all of the I/O modules of this device. Select the specific module for its module and I/O information.



Locate: Identify the physical location of the module and the module’s status LED will blink green.



DI Channel (DI Mode): It shows the status of this channel. No operation is allowed.

No.	Name	Mode	Value	Trigger	Filter	Status	Operation
0	DI-00	DI	--	--	500 us	On	--

DI Channel (Counter Mode): It shows the status of this channel. Type a value between 0 and 4294967295, and then click **SET** to set the current counter value. Click **RUN** or **PAUSE** to change the counter status.

No.	Name	Mode	Value	Trigger	Filter	Status	Operation
0	DI-00	Counter	65535	Rising edge	500000 us	Running	<input type="text" value="65535"/> SET PAUSE

DO Channel (DO Mode): It shows the status of this channel. Click **ON** or **OFF** to change the DO status.

No.	Name	Mode	ON Width	OFF Width	Pulse Count	Status	Operation
0	DO-00	DO	--	--	--	On	OFF

DO Channel (Pulse Mode): It shows the status of this channel. Click **START** or **STOP** to change the pulse output status.

No.	Name	Mode	ON Width	OFF Width	Pulse Count	Status	Operation
0	DO-00	Pulse	500 us	500 us	10	Start	STOP

Relay Channel: It shows the status of this channel. Click **ON** or **OFF** to change the relay status.

No.	Name	Mode	Status	Operation
0	RELAY-00	Relay	On	OFF

AI Channel: It shows the status of this channel. Click **RESET** to reset the minimum and maximum values.

No.	Name	Scaled Range	Value	Min	Max	Min/Max
0	AI-00	0.000 - 20.000 mA	11.000 mA	8.000 mA	16.000 mA	RESET

AO Channel: It shows the status of this channel. Key in the value and click **SET** to set the output value.

#	Name	Scaled Range	Status	Value	Operation
0	45MR-4420-0@AO-00	4.000 - 20.000 mA	OK	4.000 mA	<input type="text" value="4.000"/> SET

NOTE The AO channel **Status** will change to **Fault** when the channel is open in current mode, when the channel is short in voltage mode, or when field power is not connected.

RTD Channel: It shows the status of this channel. Click **RESET** to reset the minimum and maximum values. Apply the reference temperature value in the calibration field and click **SET** to start the RTD sensor calibration; each calibration requires approximately 30 seconds per channel.

#	Name	Sensor Type	Value	Min	Max	Min/Max	Calibration
0	45MR-6600-0@RTD-00	PT 100	0.000 C	0.000 C	0.025 C	RESET	<input type="text" value="0"/> SET

TC Channel: It shows the status of this channel. Click **RESET** to reset the minimum and maximum values. Apply the reference temperature value in the calibration field and click **SET** to start the TC sensor calibration; each calibration requires approximately 30 seconds per channel.

#	Name	Sensor Type	Value	Min	Max	Min/Max	Calibration
0	45MR-6810-0@TC-00	K TYPE	0.000 C	0.000 C	0.000 C	RESET	<input type="text" value="0"/> SET

SP Channel: It shows the status of this channel. No operation is allowed.


#	Name	Status
0	45MR-7210-0@SP-00	Good

FP Channel: It shows the status of this channel. No operation is allowed.

#	Name	Status
0	45MR-7210-0@FP-00	Under Limit

Connection

The connection page shows the connection status from other hosts. This information can assist you with managing your devices.

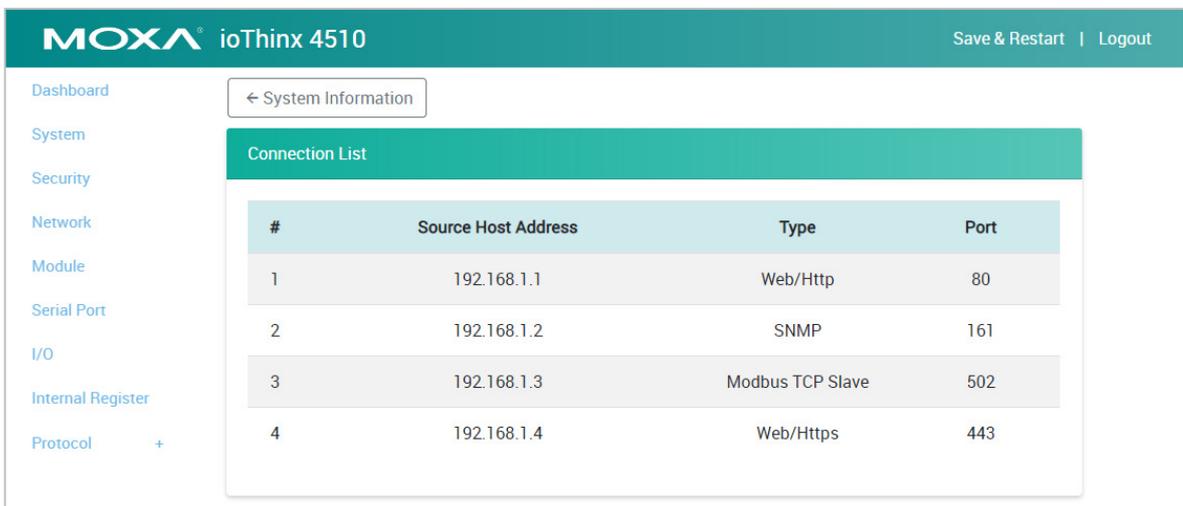

MOXA ioThinx 4510 Save & Restart | Logout

Dashboard | System Information

System Information

Connection List

#	Source Host Address	Type	Port
1	192.168.1.1	Web/Http	80
2	192.168.1.2	SNMP	161
3	192.168.1.3	Modbus TCP Slave	502
4	192.168.1.4	Web/Https	443

System

This section introduces the functions of the device's system.

Device Settings

Device Name: Set the name of this device (max length = 16, '.' is not allowed).

Language: Select the language of the web console.

Time Settings

System Date & Time: Select the date for the device. Click **Set Time** to set the time of the device.


Enable NTP Server: Click the checkbox to enable date and time synchronization with the NTP sever.

NTP Server: Set the URL or IP address of the NTP server.

Sync Interval: Set the synchronization interval with the NTP sever (unit: min(s), 1 to 43200, default = 1440).

INFORMATION This device does not have a battery. Therefore, if the device is powered off, the system date and time will have to be set again. If the NTP server is not available, set the date and time of the device after rebooting.

Watchdog

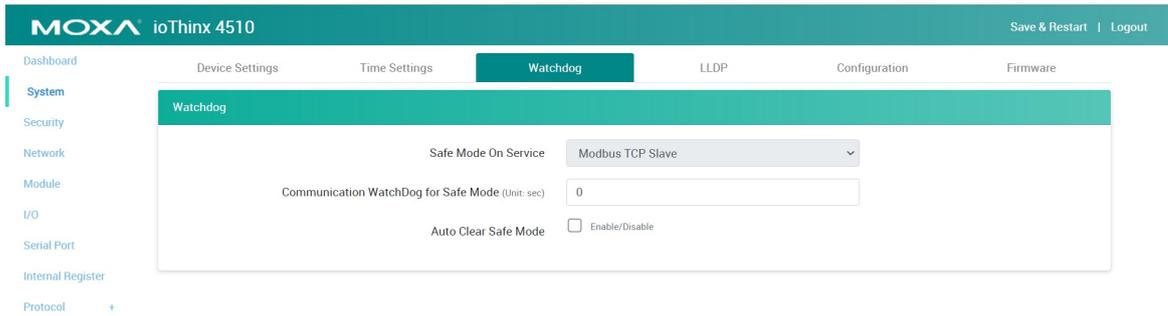

Safe Mode on Service: Select the service that you want to link the watchdog to in order to keep monitoring the connection status (option: Modbus TCP Slave).

Communication Watchdog for Safe Mode: The timeout value when the master of **Safe Mode on Service** is disconnected (unit: sec(s), 0 to 65535, 0 is disable).

Auto Clear Safe Mode: Click the checkbox to enable or disable automatically clearing the safe mode status.

Once the communication watchdog is timeout, the safe mode will be enabled. The behavior of ioThinx 4510 and 45MR modules are listed below:

	ioThinx 4510	45MR modules
Behavior	<ul style="list-style-type: none"> Wait for Modbus/TCP Master’s re-connection Output channels cannot be controlled via any access e.g. RESTful API or web console 	<ul style="list-style-type: none"> Input channels: no change Output channels: set the channel status according to pre-defined safe mode settings
LED status	RDY: Red fast blinking	Status: Red fast blinking (applied to the modules which have output channels only)

Once the connection is recovered, the behavior of the ioThinx 4510 and 45MR modules are listed below.

1. Auto Clear Safe Mode: Enabled


	ioThinx 4510	45MR modules
Behavior	Recovered to normal status	Recovered to normal status
LED status	RDY: Green	Status: Green

2. Auto Clear Safe Mode: Disabled

	ioThinx 4510	45MR modules
Behavior	Status will remain on safe mode until the safe mode flag is cleared.	Status will remain on safe mode until the safe mode flag is cleared.
LED status	RDY: Red fast blinking until the error flag is cleared manually	Status: Red fast blinking until the error flag is cleared manually


NOTE If auto clear safe mode is disabled in the watchdog configuration, once the Modbus connection reconnects, click the **Exit Safe Mode** button on the dashboard or type **0** in the **watchdogAlarmFlagClear** register through Modbus to exit safe mode status. Otherwise, output channels cannot be controlled via any access method, such as RESTful API and web console.

LLDP

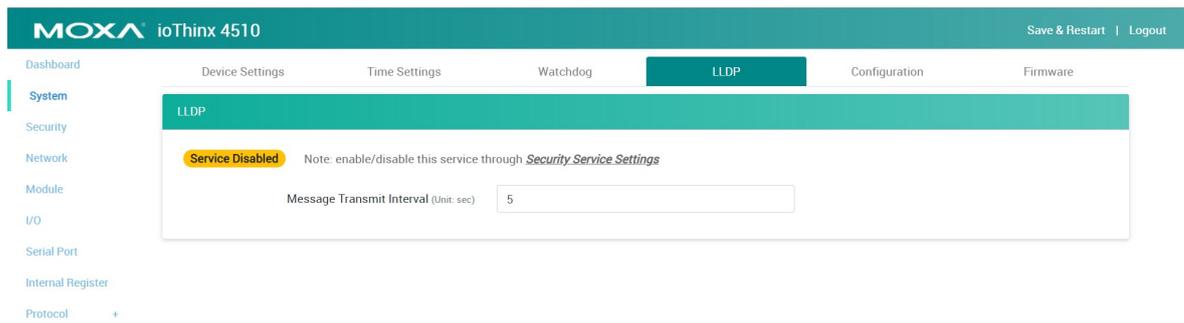


Message Transmit Interval: Set up interval time for message transmission via LLDP protocol.

The default status of LLDP is disabled. Please make sure the LLDP service is enabled in the Security Service Settings.

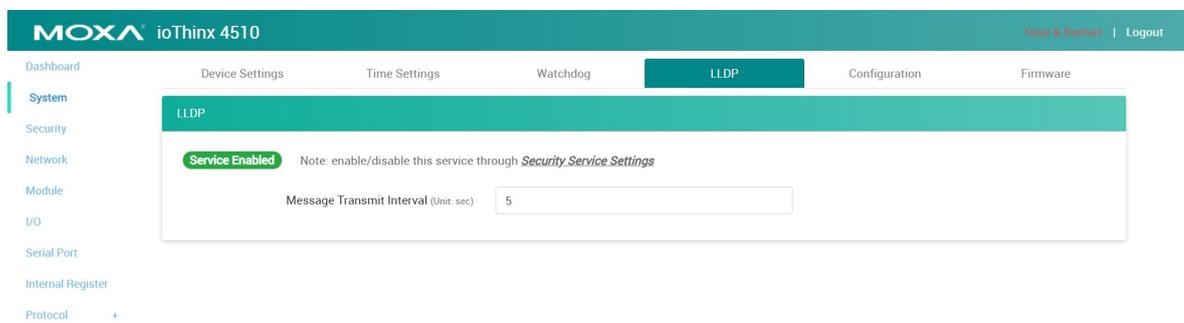

Configuration

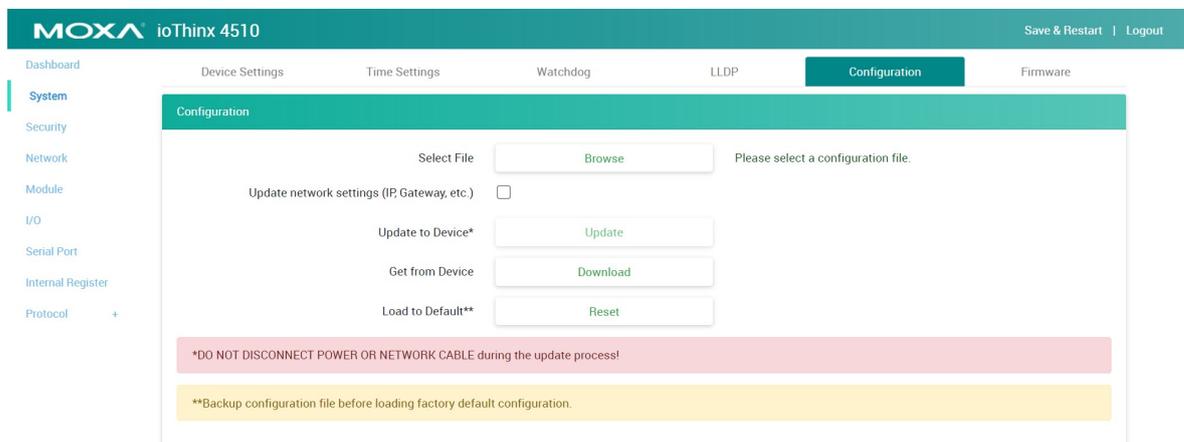

Select File: Click **Browse** to select a configuration file to update the device.

Update network settings (IP, Gateway, etc.): Click the checkbox if the network settings need to be updated.

Update to Device: Click **Update** to update the firmware to the device.


Get from Device: Get the configuration file of the device.

Load to Default: Load the factory default settings of the current firmware version.

NOTE Do not disconnect the power or network cable during the update process.

INFORMATION Back up the configuration file before loading the factory default configurations.

Firmware

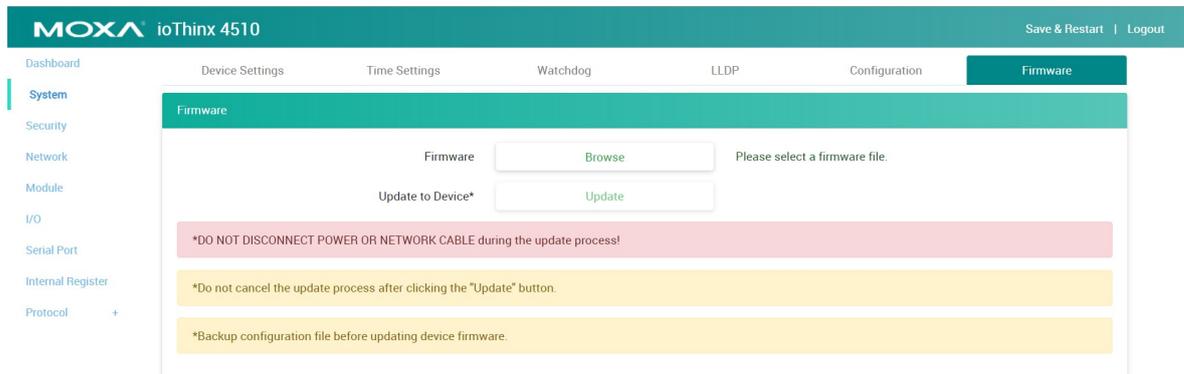

The screenshot shows the MOXA ioThinx 4510 web interface. The top navigation bar includes 'MOXA ioThinx 4510' and 'Save & Restart | Logout'. The left sidebar lists various settings categories: Dashboard, System, Security, Network, Module, I/O, Serial Port, Internal Register, and Protocol. The main content area is titled 'Firmware' and contains the following elements:

- A 'Firmware' label with a 'Browse' button and the text 'Please select a firmware file.'
- An 'Update to Device*' label with an 'Update' button.
- A pink warning box: '*DO NOT DISCONNECT POWER OR NETWORK CABLE during the update process!'
- A yellow note box: '*Do not cancel the update process after clicking the "Update" button.'
- Another yellow note box: '*Backup configuration file before updating device firmware.'

Firmware: Click **Browse** to select a firmware file to update the device.

Update to Device: Click **Update** to update the firmware to the device.

NOTE Do not disconnect the power or network cable during the update process.

NOTE This device supports firmware automatic recovery function. If the firmware in the device is corrupted, the system will load the backup firmware automatically to overwrite the corrupted one. When the system is in recovery mode, the RDY LED will slowly blink red. DO NOT DISCONNECT the power cable when the recovery process is underway. After the recovery process is complete, you can update the firmware again.



CAUTION

If you downgrade the device to firmware version v1.0.0, IOxpress will not be able to access the device. In this case, please connect to the device via a web service instead.

INFORMATION The update process cannot be canceled after "Update" is clicked.

INFORMATION Back up the configuration file before updating the device firmware.

NOTE Configurations saved when using v1.0/v1.1 firmware may not be compatible with v1.2 firmware. Please back up the configuration file before upgrading the firmware.


Security

The **Security** section allows you to manage the security policy of the device.

NOTE Do not expose the device to the public Internet without any security protection. To increase the security of the device, we suggest configuring security settings prior to other settings.

Service Settings

Enable/disable services to prevent unwanted access. The default configuration has Web Server via HTTP and IOxpress/MCC Tool/MXIO enabled.

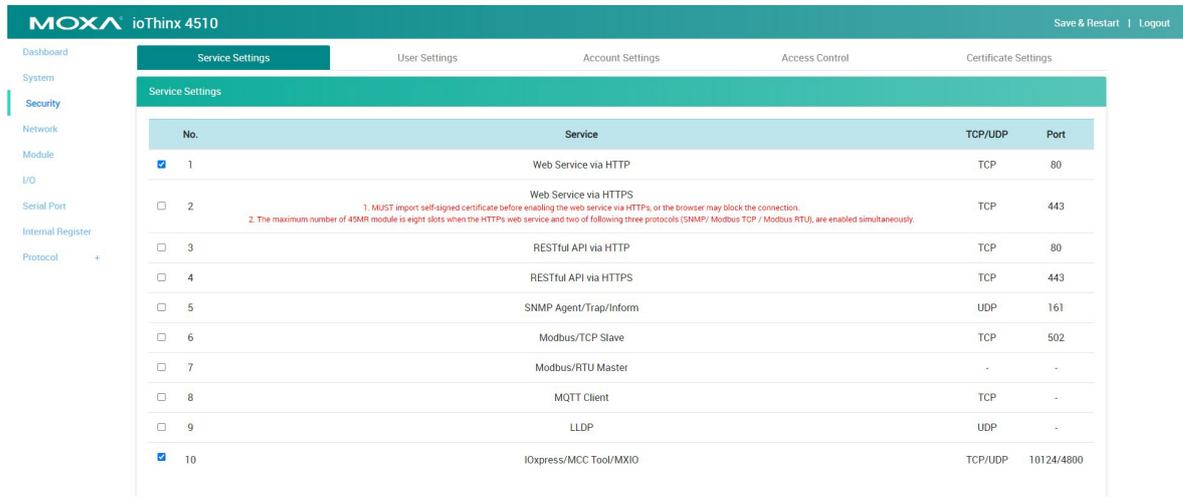

Because of the device limitation, the service combinations vary under different scenarios (HTTP web or HTTPS web).

Please see the use conditions as follows.

	MQTT	Restful API via HTTP, Restful API via HTTPS	SNMP	Modbus TCP	Modbus RTU	LLDP	IOxpress/MCC Tool/MXIO	MXview/MXconfig	Slots of 45MR Module
HTTP Web	One of these three protocols can be used			✓	✓	✓	✓	✓	Up to 32
HTTPS Web	-	-	Two of following three protocols can be used			✓	✓	MXconfig only	Up to 8

- NOTE**
1. If all services are disabled, this device will no longer be accessible, and you will need to load the factory default configurations to access the device.
 2. For security reasons, we suggest disabling those services that your application will not use.
 3. Before using the web service, import the self-signed certificate via HTTPS. Otherwise, the browser may block the connection.
 4. Due to the device limitation, some services have limitations when HTTPS is enabled.
 - Eight slots are the maximum slot for the 45MR Module.
 - The maximum web browser connection is 1.

User Settings

Enable/Disable user type, or configure the username and password for Administrator, Operator, and Users.

The screenshot shows the 'User Settings' page in the MOXA ioThinx 4510 web interface. The page has a navigation menu on the left and a main content area. The main content area contains a table of user types and configuration options for the selected user type (Administrator).

No.	Type	Username	Permissions
1	Administrator	admin	Full control
2	Operator	operator	Dashboard and I/O status change
3	User	user	Dashboard

Below the table, there are configuration options for the selected user type (Administrator):

- Type: Administrator (dropdown menu)
- Enable:
- New Username: (Must be 1-30 characters. Cannot include spaces, but letters, numbers, and symbols are allowed.)
- Admin Password:
- New Password: (Must be 4-16 characters. Letters, numbers, and symbols are allowed. Must include at least one number and one symbol.)
- Confirm Password:

Type: Select a user type to change the username and password.

Enable: Enable or disable the type you select.

New Username: It allows you to change the username of the selected user type (Must be 1 to 30 characters in length. Letters, numbers, and symbols are allowed, but not spaces).

Admin Password: Type the password for the administrator to gain authorization to make changes.

New Password: It allows you to change the password of the selected user type (Must be 4 to 16 characters in length and include at least one number and one symbol. Letters, numbers, and symbols are allowed but spaces are not).

Confirm Password: Type in your new password again.

NOTE Change the default password in order to enhance security when you first login.

INFORMATION The default username is admin, and the default password is moxa.

Account Settings

The screenshot shows the 'Account Settings' page in the MOXA ioThinx 4510 web interface. The page has a navigation menu on the left and a main content area. The main content area contains configuration options for user accounts.

- Idle Timeout (unit: min(s)):
- Retry Failure Threshold (unit: time(s)):
- Lockout Time (unit: min(s)):
- Login Failure Message:
- System Use Notification:
- Enable Local SysLog:
- Local SysLog: (Max: 2000 records)
- Enable Remote SysLog:
- Remote SysLog Server: IP
- Remote SysLog Facility:
- Remote SysLog Severity:

Idle Timeout: The timeout value when the user account is idle (unit: min(s), 0 to 1440 mins, default: 5 mins) Note: 0 for disabled.

Retry Failure Threshold: The maximum number of retries for the user account to log in (unit: time(s), 1 to 10 times, default: 5 times).

Lockout Time: The timeout value for when the user account will be locked due to reaching the retry failure threshold (unit: min(s), 1 to 60 mins, default: 5 mins).

Login Failure Message: Create the message shown on the login webpage after the user account fails to log in (character limit = 200).

System Use Notification: Define the message shown on the login webpage when the user account connects to the Web Console (character limit = 200).

Local SysLog: Users can download the system log by clicking the export button. You can access the most recent 2,000 records. The device will overwrite the oldest data when the memory is full.

Remote SysLog: the ioThinx 4510 can send the system log message to the log server. Each message is labeled with a facility code and is assigned a severity level.

Remote SysLog Server: Choose an IP address or domain name for the remote log server.

Remote SysLog Facility: The remote sysLog facility is one information field associated with a syslog message.

Remote SysLog Severity: Ranked in order of severity, listed from most severe to least severe.

Access Control

Use IP Address/Netmask combinations to control which devices can access the device.

<input type="checkbox"/>	No.	IP Address	Netmask
<input type="checkbox"/>	1	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	2	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	3	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	4	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	5	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	6	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	7	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	8	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	9	0 . 0 . 0 . 0	255 . 255 . 255 . 0
<input type="checkbox"/>	10	0 . 0 . 0 . 0	255 . 255 . 255 . 0

Enable access for a range of IP addresses by specifying the IP address and netmask, as follows:

To allow access for a specific IP address

Enter the IP address in the IP Address field and 255.255.255.255 in the Netmask field.

To allow access for hosts on a specific subnet


Enter 0 as the last digit in both the IP Address field and Netmask field (e.g., 192.168.1.0 and 255.255.255.0).

Refer to the following table for more details about the configuration.

Allowable Hosts	Input Format
192.168.1.120	192.168.1.120/255.255.255.255
192.168.1.1 to 192.168.1.254	192.168.1.0/255.255.255.0
192.168.0.1 to 192.168.255.254	192.168.0.0/255.255.0.0
192.168.1.1 to 192.168.1.126	192.168.1.0/255.255.255.128
192.168.1.129 to 192.168.1.254	192.168.1.128/255.255.255.128

Certificate Settings


The ioThinx 4510 will generate a self-signed certificate based on the IP address. Users can download the certificate by clicking the **Export** button, and then import the certificate through the browser to enhance security.

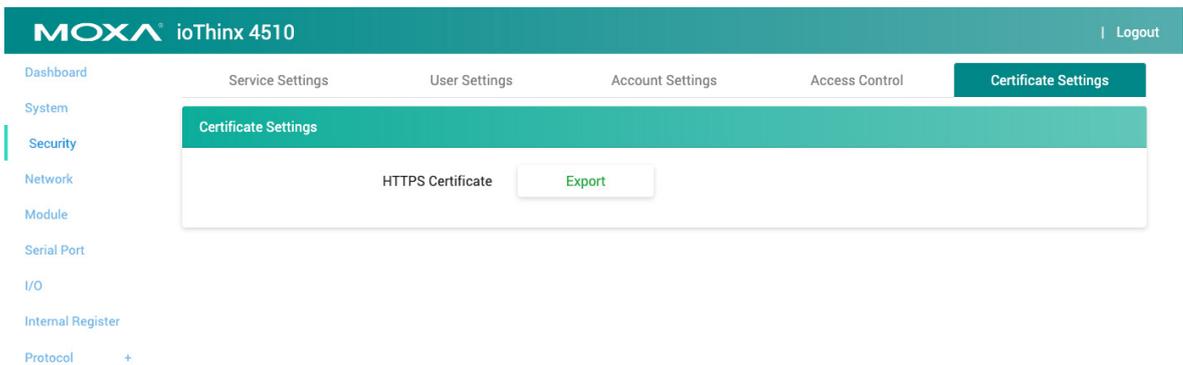

Network

This section introduces the Network settings function.

LAN Settings

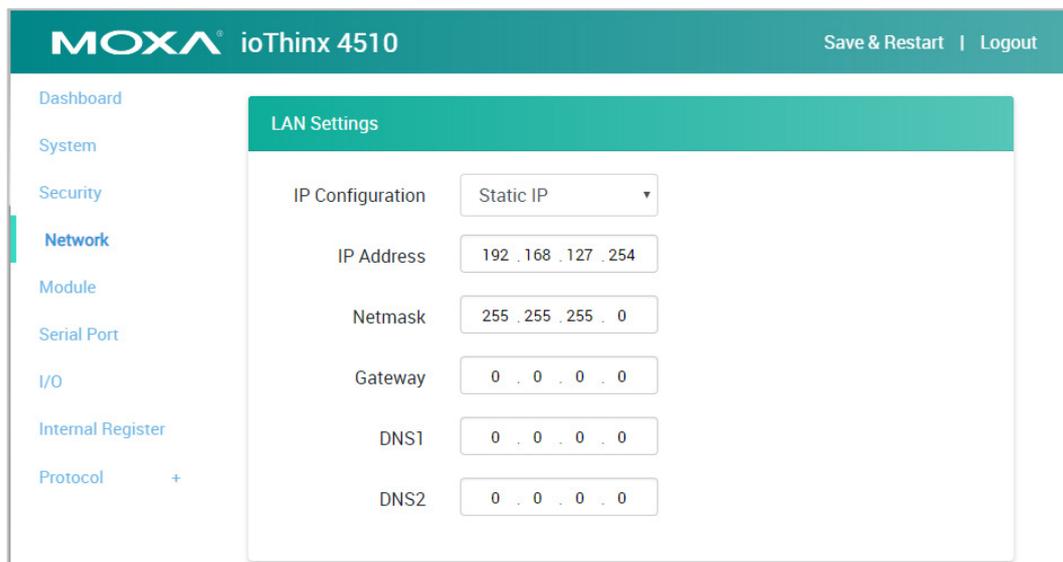

IP Configuration: Configure the following settings if **Static IP** is selected. If **DHCP** is selected, the following settings are not allowed (option: Static IP or DHCP).

IP Address: Set the IP address of the device (0 to 255).

Netmask: Define the logical subdivision of an IP network and specify the network's available hosts (0 to 255).

Gateway: Define the router that can route the network traffic to the other network or Internet (0 to 255).

DNS1 and DNS2: Define DNS server(s) that can translate URL to IP address (0 to 255).


INFORMATION The IP address of the device must be unique. Two devices in the network cannot share the same IP address as it causes an IP address conflict.

Module

This section introduces the Module settings function.



Edit: Click this button to enter edit mode.

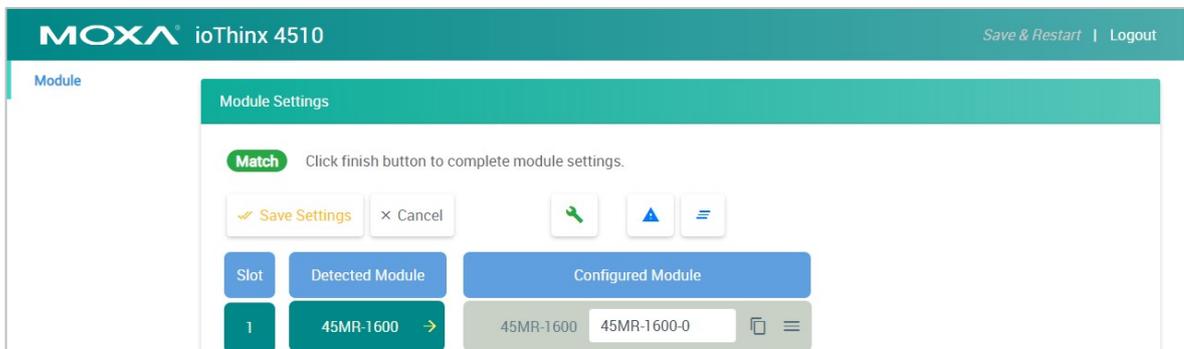

Save Settings: This button only appears in edit mode. Click this button to finish module settings and exit edit mode.

Cancel: This button only appears in edit mode. Click this button to cancel module settings and exit edit mode.


Auto Matching : Click this button to automatically match all configured modules with all detected modules.

Load Default : Click this button to load the default settings of all configured modules.

Reload : Click this button to reload the module settings before entering edit mode.

Slot: The slot position of the detected module.

Detected Module: The physical module detected by the system. The yellow arrow allows you to insert the specific module into the configured module.

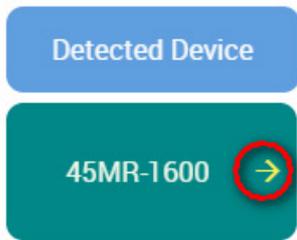


Configured Module: The module settings for the detected module. A unique module name is required in the textbox (max. length = 16, "." character is not allowed).



The delete icon appears when you place your mouse over the place indicated below. It allows you to delete the configured module.



The drag icon allows you to drag the configured module and drop it to the position you need.

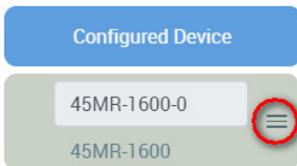

NOTE The detected module should match the configured module. Otherwise, the Web Console will not allow you to configure other settings.


NOTE The detected module should match the configured module. Otherwise, the Web Console will not allow you to click **Finish**.

INFORMATION Use **Auto Matching** to quickly match the configured module with the detected module.

INFORMATION Once the setting of a configured module is changed, the configured module will be highlighted by an orange rectangle.



INFORMATION If the configured module does not match the detected module, the configured module will be highlighted by a red rectangle.

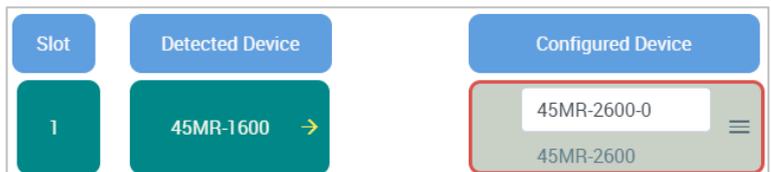

I/O


This section introduces the I/O and IR (Internal Register) settings functions.

I/O Settings

Module Drop-Down List: It lists all the I/O modules of this device. Select the specific module for I/O configuration.



Digital Input Channel Settings

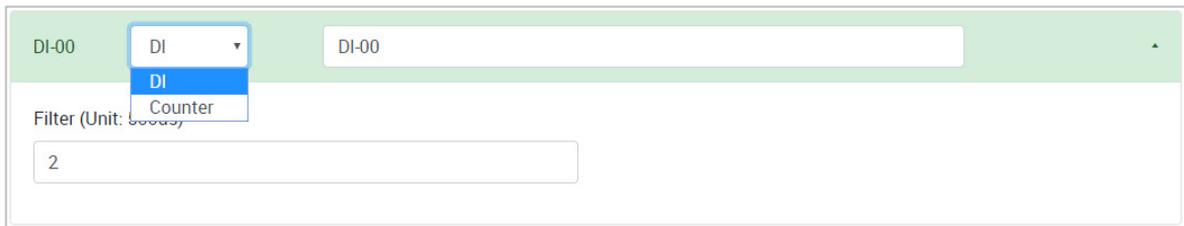

Channel Mode Drop-Down List: It lists all of the channel modes, which can be operated by this channel. Select **DI** or **Counter** mode for each channel (option: DI or Counter).

Channel Name: The channel name is used for representing this channel (max. length = 16, "." character is not allowed).


INFORMATION Every channel in each module must have a different name.

DI Mode



Filter: Software filtering is used to avoid switch bounces (unit: 500µs, 0 to 65535).

Counter Mode

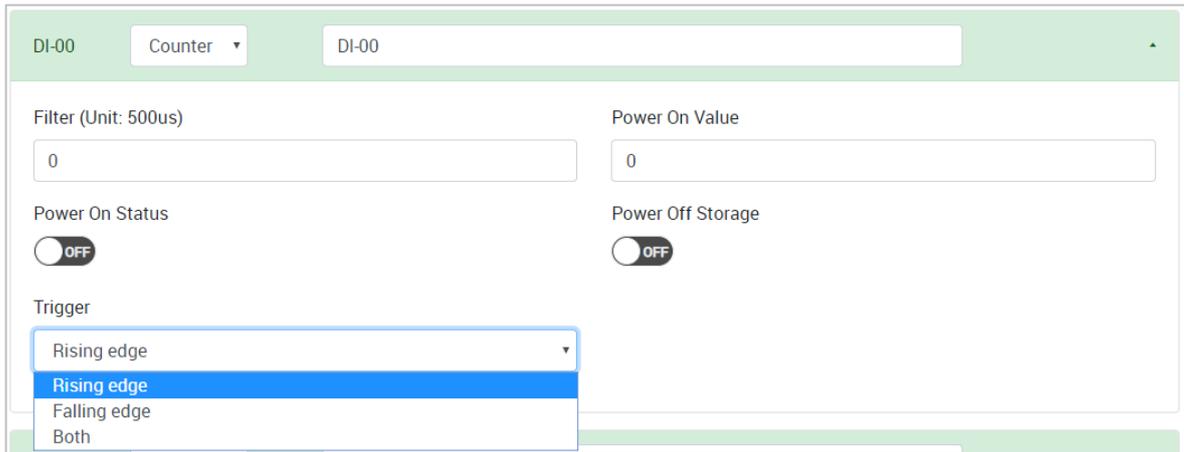

Filter: Software filtering is used to avoid switch bounces (unit: 500µs, 0 to 65535).

Power on Value: The initial counter value upon powering up (0 to 4294927695).


Power on Status: The counter status upon powering up (option: ON or OFF).

Power off Storage: Save counter value to memory during powering off. The saved value will be the initial value upon next powering up (option: ON or OFF).

Trigger: The channel accepts limit or proximity switches and counts events according to the ON/OFF status. When **Rising edge** is selected, the counter value increases when the attached switch is pushed. When **Falling edge** is selected, the counter value increases when the switch is released. When **Both** is selected, the counter value increases when the attached switch is pushed or released (option: Rising edge, Falling edge, or Both).

NOTE Not all DI channels support counter mode. Refer to the **ioThinx 4500 Series (45MR) Modules** datasheet for detailed specifications.


Digital Output Channel Settings

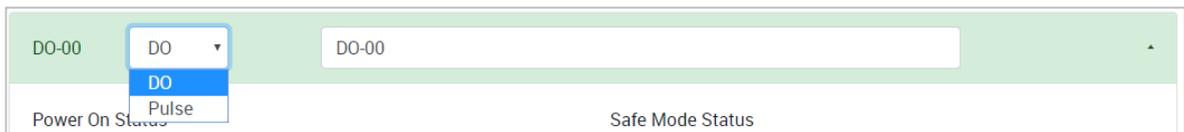

Channel Mode Drop-Down List: It lists all of the channel modes, which can be operated by this channel. Select **DO** or **Pulse** mode for each channel (option: DO or Pulse).

Channel Name: The channel name is used for representing this channel (max. length = 16, "." character is not allowed).

DO Mode

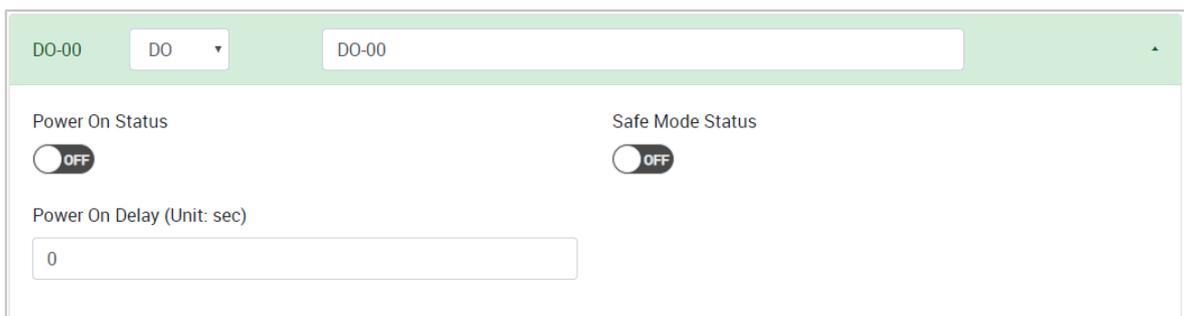

Power on Status: The DO status upon powering up (option: ON or OFF).

Safe Mode Status: The DO status when the device is in safe mode (option: ON or OFF).

Power on Delay: The time delay before triggering **Power on Status** after powering up (unit: sec(s), 0 to 65535).

Pulse Mode

DO-00 Pulse ▾ DO-00

Power On Status

OFF

Power On Delay (Unit: sec)

ON Width (Unit: 500us)

Safe Mode Status

OFF

Pulse Count

OFF Width (Unit: 500us)


Power on Status: The Pulse status upon powering up (option: ON or OFF).

Safe Mode Status: The Pulse status when the device is in safe mode (option: ON, OFF, or Hold Last).

Power on Delay: The time delay before triggering **Power on Status** after powering up (unit: sec(s), 0 to 65535).

Pulse Count: The number of pulses per triggering (0 to 4294967295, "0" for continuous pulse output).

On Width/Off Width: The high and low level widths of a pulse (unit: 500µs, 1 to 65535).

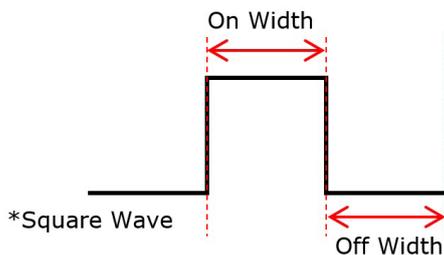

NOTE Not all DO channels support pulse mode. Refer to the **ioThinX 4500 Series (45MR) Modules** datasheet for detailed specifications.

Relay Channel Settings

Relay-00 Relay ▾ RELAY-00

Power On Status

OFF

Power On Delay (Unit: sec)

Safe Mode Status

OFF

Channel Name: The channel name is used for representing this channel (max. length = 16, "." character is not allowed).

Power on Status: The Relay status upon powering up (option: ON or OFF).

Safe Mode Status: The Relay status when the device is in safe mode (option: ON or OFF).

Power on Delay: The time delay before triggering **Power on Status** after powering up (unit: sec(s), 0 to 65535).

Analog Input Channel Settings

Current Module

AI-00	4-20 mA burnout	AI-00
Measured Min Value	Measured Max Value	Unit

Voltage Module

AI-00	0-10 V	AI-00
Measured Min Value	Measured Max Value	Unit

Channel Mode Drop-Down List: It lists all of the channel modes, which can be operated by this channel. Select **0-20 mA**, **4-20 mA burnout**, or **4-20 mA** mode for each channel of the current module. Select **0-10 V** or **±10 V** mode for each channel of the voltage module.

Channel Name: The channel name is used for representing this channel (max. length = 16, "." character is not allowed).

Disable Mode


AI-07	4-20 mA burnout	AI-07
Measured Min Value	Measured Max Value	Unit

The AI channel can be disabled. It only allows you to disable channels one-by-one. When a channel has been disabled, the sample rate of the remaining channels will be increased automatically.

0-20 mA/4-20 mA burnout/4-20 mA/0-10 V/±10 V Mode


AI-00	4-20 mA burnout	AI-00
Burnout Value (Unit: mA)		
2.000		
1 st Point Measured Value	2 nd Point Measured Value	Unit
4.000	20.000	mA
1 st Point Scaled Value	2 nd Point Scaled Value	Scaled Unit
4.000	20.000	mA

Burnout Value (only for 4-20 mA burnout mode): The 4–20 mA burnout mode is shown in the diagram below.

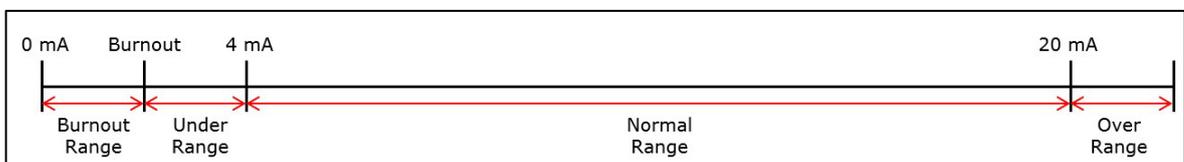

The Burnout Value (default = 2 mA) is definable (unit: mA, 0.000 to 4.000). When input values are in the burnout range, raw data will register as 0000h to indicate that the analog input has burned out. The definition of raw data can be found in the table below.

Range	Modbus Data
$0.000 \leq AI < \text{Burnout Value}$	0x0000h
$\text{Burnout Value} \leq AI \leq 20.000 \text{ mA}$	Raw Data
$AI > 20.000 \text{ mA}$	0xFFFFh

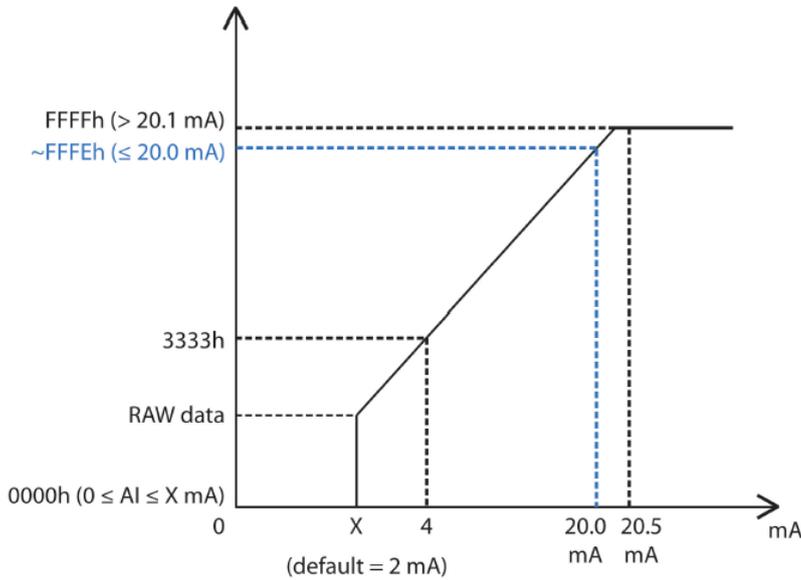

1st Point Measured Value: The 1st point value in the range of channel mode to be scaled to the **1st Point Scaled Value** (unit: mA, 4.000 to 20.000).

2nd Point Measured Value: The 2nd point value in the range of channel mode to be scaled to the **2nd Point Scaled Value** (unit: mA, 4.000 to 20.000).


Unit: The unit of the measured value.

1st Point Scaled Value: The scaled value of the 1st point (-4294967295 to 4294967295).

2nd Point Scaled Value: The scaled value of the 2nd point (-4294967295 to 4294967295).

Scaled Unit: The unit of the scaled value (max. length = 8, "." character is not allowed).

Analog Output Channel Settings

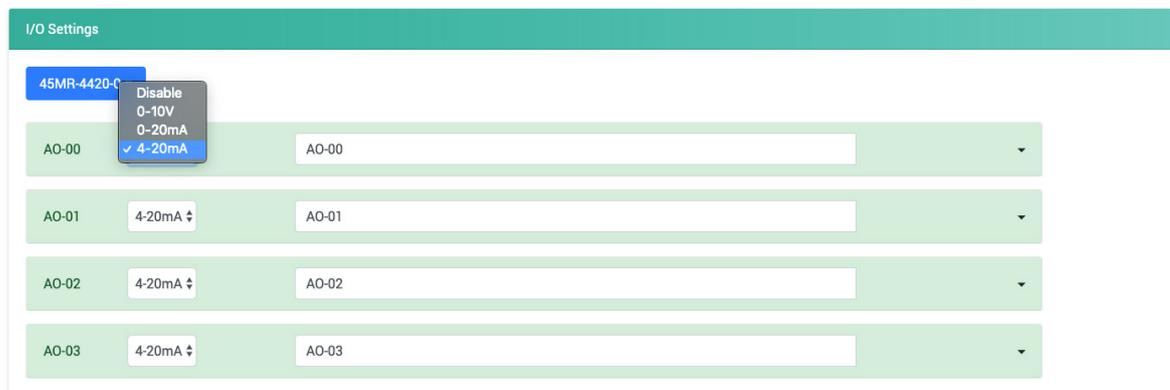

Channel Mode Drop-down List: It lists all of the channel modes which can be operated by this channel. Select **Disable**, **0-10 V**, **0-20 mA**, or **4-20 mA** for each channel.

Channel Name: The channel name is used to represent this channel (max. length = 16, "." character is not allowed).

Disable Mode

Disable the AO channel. Channels must be disabled one-by-one.

0-10 V/0-20 mA/4-20 mA Mode

1st Point Output Value: The 1st point value in the range of channel mode to be scaled to the **1st Point Scaled Value** (range: 0-20 mA mode: 0.000 to 20.000, 4-20 mA mode: 4.000 to 20.000, 0-10V mode: 0.000 to 10.000).

2nd Point Output Value: The 2nd point value in the range of channel mode to be scaled to the **2nd Point Scaled Value** (range: 0-20 mA mode: 0.000 to 20.000, 4-20 mA mode: 4.000 to 20.000, 0-10V mode: 0.000 to 10.000).

Unit: The unit of the output value.

1st Point Scaled Value: The scaled value of the 1st point (range: -4294967295 to 4294967295).

2nd Point Scaled Value: The scaled value of the 2nd point (range: -4294967295 to 4294967295).

Scaled Unit: The unit of the scaled value (max. length = 8, "." character is not allowed).

Power On Scaled Value: The AO scaled value upon powering on.

Safe Mode Status: There are two options for defining the safe mode value: **User Define** and **Hold Last**.

Safe Mode Value: The safe mode AO scaled value when the Safe Mode Status is set to User Define.

RTD Channel Settings

RTD-00	PT100	RTD-00
RTD-01	PT100	RTD-01
RTD-02	PT100	RTD-02
RTD-03	PT100	RTD-03
RTD-04	PT100	RTD-04
RTD-05	PT100	RTD-05

Sensor Type Drop-Down List: It lists all of the sensor types, which can be connected to this channel. Select the sensor type for each channel (option: PT50, PT100, PT200, PT500, PT1000, 310 ohms, 620 ohms, 1250 ohms, 2200 ohms, JPT100, JPT200, JPT500, JPT1000, NI100, NI200, NI500, NI1000, NI120, or Disable).

Disable Mode

I/O Settings

45MR-6600-0

RTD-00	PT 50	RTD-00
RTD-01	PT 100	RTD-01
RTD-02	PT 200	RTD-02
RTD-03	PT 500	RTD-03
RTD-04	PT 1000	RTD-04
RTD-05	PT 100	RTD-05

The RTD channel can be disabled. You may only disable channels one-by-one. When a channel has been disabled, the sample rate of the remaining channels will be increased automatically.

Channel Name: The channel name is used for representing this channel (max. length = 16, "." character is not allowed).

RTD-00	PT 100	RTD-00
1 st Point Measured Value	2 nd Point Measured Value	Unit
-200.000	850.000	C
1 st Point Scaled Value	2 nd Point Scaled Value	Scaled Unit
-200.000	850.000	C

1st Point Measured Value: The 1st point value in the range of channel mode to be scaled to the **1st Point Scaled Value** (acceptable input value depends on the type of sensor).

2nd Point Measured Value: The 2nd point value in the range of channel mode to be scaled to the **2nd Point Scaled Value** (acceptable input value depends on the type of sensor).

Unit: The unit of the measured value.

1st Point Scaled Value: The scaled value of the 1st point (-4294967295 to 4294967295).

2nd Point Scaled Value: The scaled value of the 2nd point (-4294967295 to 4294967295).


Scaled Unit: The unit of the scaled value (max. length = 8, "." character is not allowed).

TC Channel Settings

TC-00	K Type	TC-00
TC-01	J Type	TC-01
TC-02	K Type	TC-02
TC-03	T Type	TC-03
	E Type	
	R Type	
	S Type	
	B Type	
	N Type	
	±78.126 mV	
	±39.062 mV	
	±19.532 mV	


Sensor Type Drop-Down List: It lists all of the sensor types, which can be connected to this channel. Select the sensor type for each channel (option: J Type, K Type, T Type, E Type, R Type, S Type, B Type, N Type, ±19.532 mV, ±39.062 mV, ±78.126 mV, or Disable).

Disable Mode

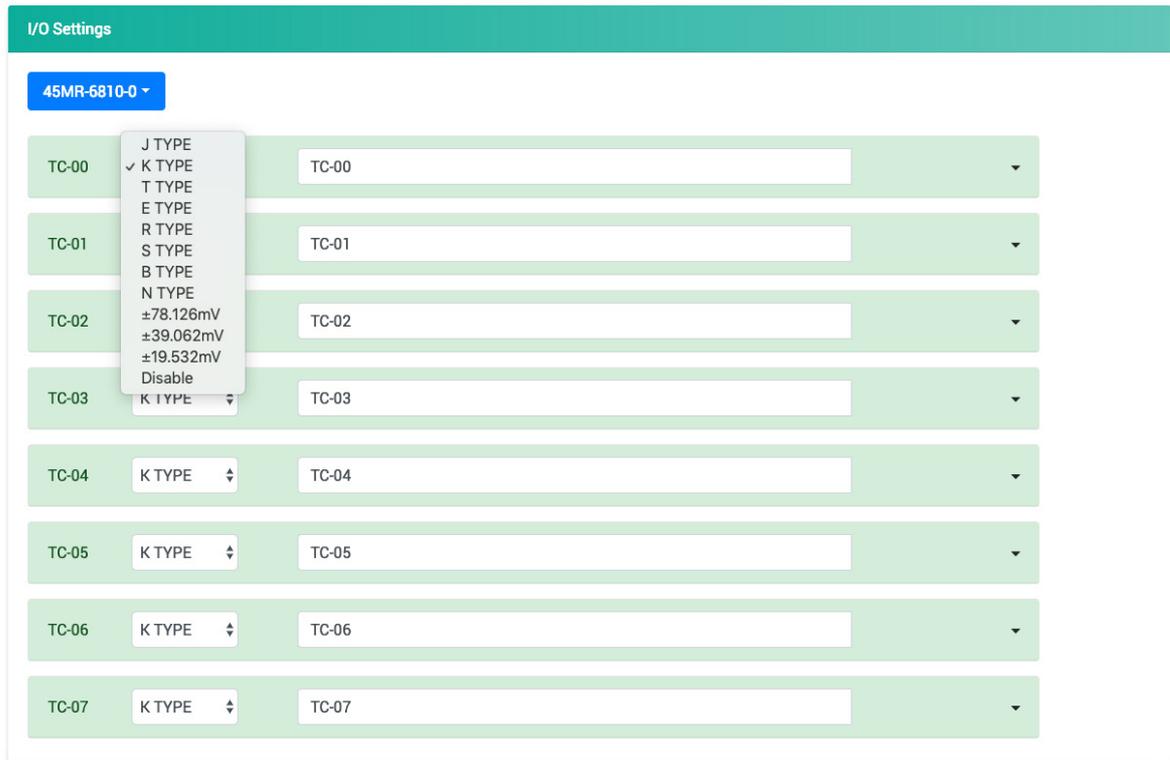

The TC channel can be disabled. You may only disable channels one-by-one. When a channel has been disabled, the sample rate of the remaining channels will be increased automatically.

Channel Name: The channel name is used for representing this channel (max. length = 16, "." character is not allowed).

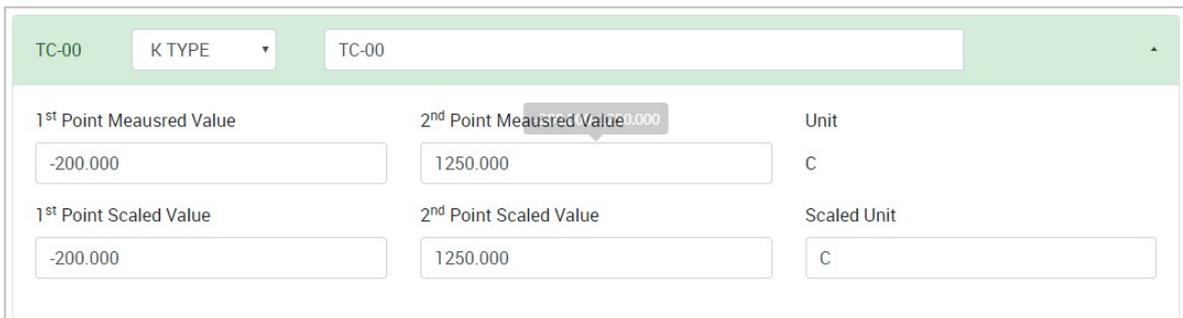

1st Point Measured Value: The 1st point value in the range of the channel mode to be scaled to the **1st Point Scaled Value** (acceptable input value depends on the type of sensor).

2nd Point Measured Value: The 2nd point value in the range of the channel mode to be scaled to the **2nd Point Scaled Value** (acceptable input value depends on the type of sensor).

Unit: The unit of the measured value.

1st Point Scaled Value: The scaled value of the 1st point (-4294967295 to 4294967295).

2nd Point Scaled Value: The scaled value of the 2nd point (-4294967295 to 4294967295).

Scaled Unit: The unit of the scaled value (max. length = 8, "." character is not allowed).

System Power (SP) channel Setting

Channel Name: The channel name is used for representing this channel (max. length = 16, "." character is not allowed).

System Power Lower Limit Value: When the system power voltage drops below the limit, the system power alarm will be triggered.

Field Power (FP) channel Setting

Channel Name: The channel name (FP-00) is used to represent this channel (max. length = 16, "." character is not allowed).

Serial Port

This section introduces the serial port settings function.

The ioThinx 4510 serial port only supports Modbus RTU master in southbound communications. The retrieved data and/or the exception code from the Modbus RTU slave will be stored in the ioThinx 4510's internal register.

Three steps are required to complete the serial port settings:

- Port Setting
- Device Setting
- New Profile Setting.

Port 1/Port 2

Click the tab to configure the settings of Port 1 or Port 2.

NOTE The Port 2 tab is only available when the **Mode** of the Port 1 is **RS-485 2-Wire**.

The screenshot shows the MOXA ioThinx 4510 web interface. The top navigation bar includes 'Save & Restart' and 'Logout'. The left sidebar lists various system settings. The main content area is titled 'Port 1' and 'Port 2'. The 'Port Settings' section is expanded, showing the following configuration:

Parameter	Value
Mode	RS-485 2-Wire
Baudrate	9600
Parity	NONE
Data Bits	8
Stop Bits	1
Flow Control	None

Mode: The standard of the serial device connected to this port (option: RS-232, RS-422, or RS-485 2-Wire).

Baudrate: The data transmission rate (option: 300, 1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200 bps).

Parity: The method of detecting errors in transmission (option: Even, Odd, or None).

Data Bits: The data bits in each character (option: 5, 6, 7, or 8).

Stop Bits: The stop bits sent at the end of every character (option: 1 or 2).


Flow Control: The handshaking method (option: None, RTC/CTS, or XON/XOFF).

Modbus RTU Device

The screenshot shows the 'ModbusRTUDev_1' configuration page. The 'Device Setting' section is active, showing the following configuration:

Parameter	Value
Enable Device	<input checked="" type="checkbox"/>
Device Name	ModbusRTUDev_1
Device ID	1
Delay between Polls (Unit: 100ms)	10
Polling Timeout (Unit: 100ms)	30
Polling Retries	3

Device Drop-Down List: It shows the device name of the Modbus RTU devices. Select one of the devices to configure its settings. The green icon shows that data collection from the device is enabled.

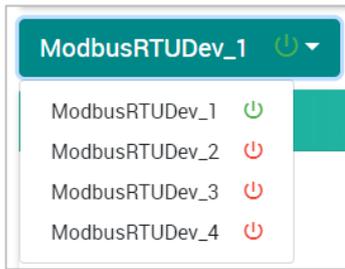

Enable Device: Click the checkbox to enable data collection from the device. The icon beside the Modbus device in the **Device Drop-Down List** will change from red to green after being enabled.

Device Name: Name of the Modbus device (max. length = 16; "." character is not allowed).

Device ID: The device ID of this Modbus device (options: 1 to 247; default: 1).

Advanced Button: Click this button to show/hide the following settings.

Delay between Polls: The delay time after polling the Modbus register(s) of the Modbus device (unit: 100 ms; 100 to 3600000; 0 disabled; default: 10).


Polling Timeout: The timeout value when polling data from the Modbus device (unit: 100 ms; 0 to 30000; default: 30).

Polling Retries: The maximum number of retries after a polling timeout occurs (options: 0 to 10; default: 3).

NOTE A maximum of four Modbus RTU devices can be connected to one serial port when the RS-485 mode is selected.

Modbus RTU Device Profile

Click **Add New Profile** to create a profile of the selected device.

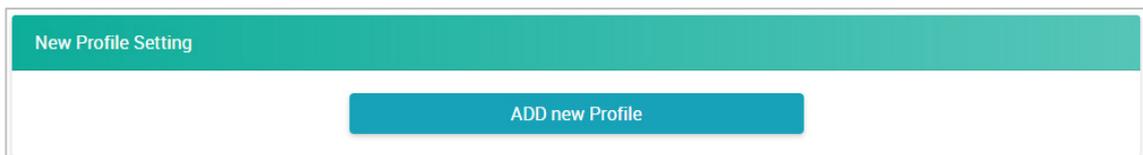

After creating a new profile, configure the settings of the profile.

Profile Name: Name the profile of the Modbus device (max. length = 16; "." character is not allowed).

Point Type: Set the corresponding Modbus point type setting (option: 01: Coil Status (R/W), 02: Input Status (R), 03: Holding Register (R/W), or 04: Input Register (R))

Start Address: Define the start address of this Modbus tag (0 to 65535).

Length: Define the length of the coil (1 to 48) or the register (1 to 48).

Scan Rate: Define how quickly to poll the profile data (unit: 100 ms; 100 to 3600000; default: 10).

IR Type: Set the internal register data type (option: BOOL, WORD, DWORD, FLOAT, UWORD, or UDWORD).

IR Start Index: Set the start number of the internal register for storing data. It only allows you to select available internal registers, depending on the length you define.

Swapped Value: Select a data conversion option.

IR Type	Option
WORD	Byte swap
DWORD	1. Word swap and byte swap 2. Byte swap 3. Word swap
FLOAT	1. Word swap and byte swap 2. Byte swap 3. Word swap
UWORD	Byte Swap
UDWORD	1. Word swap and byte swap 2. Byte swap 3. Word swap

Exception Code Setting - WORD IR Index: Set the internal register for exception code. It only allows you to select one of the available internal registers.

Delete this Profile: Click this button to delete this profile.

NOTE The maximum number of Modbus RTU device profiles that can be created is as follows.

- RS 232: 1 serial port/1 device/4 profiles
- RS 422: 1 serial port/4 devices/16 profiles
- RS 485: 2 serial port/8 devices/32 profiles


NOTE The UWORD and UDWORD are available from the v1.4 firmware and later versions.

Internal Register


This section introduces functions of Internal Register settings.

The Internal Registers, which store the data retrieved from the Modbus/RTU master, can be mapped to the supported northbound protocols, such as Modbus/TCP, RESTful API, and MQTT.


Each block represents one internal register location. Internal registers that are being used are indicated with a corresponding color bar at the top of the register, as shown below.

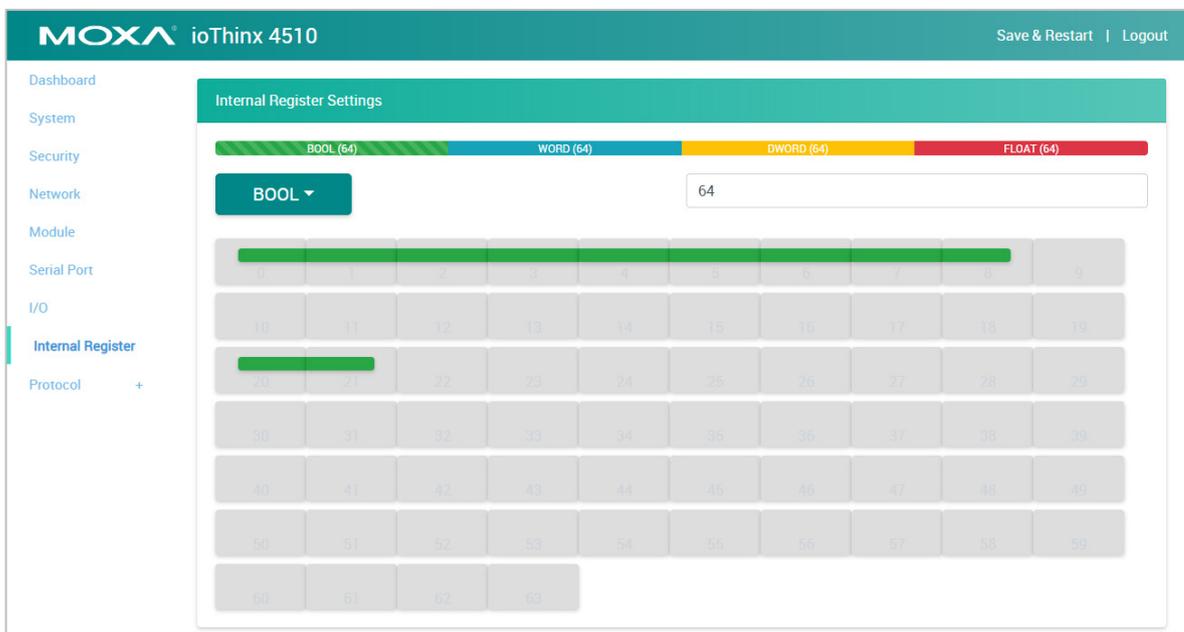

IR Type Drop-Down List: It lists all of the IR types. Select the IR type to modify or view its settings.

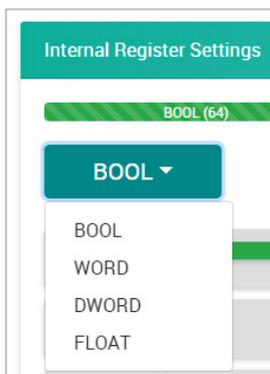

IR Quantity: Apply a number to adjust the quantity of the selected IR type. The total available IR quantity is 256.

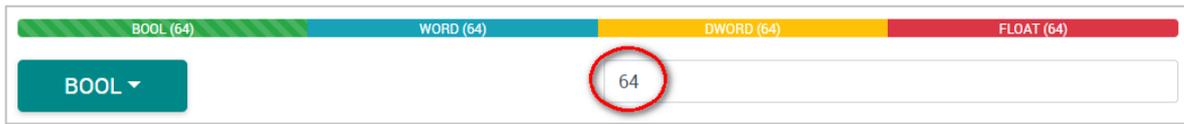


The default services allocated are BOOL, WORD, DWORD and FLOAT. If you need to use UWORD or UDWORD, you need to decrease the IR quantity of the current service and re-allocate the IR quantity to UWORD or UDWORD.

For example, you can decrease the IR quantity of BOOL to 32, and then assign to UWORD.


Example - Release IR from BOOL



Example - Re-allocate IR to UWORD

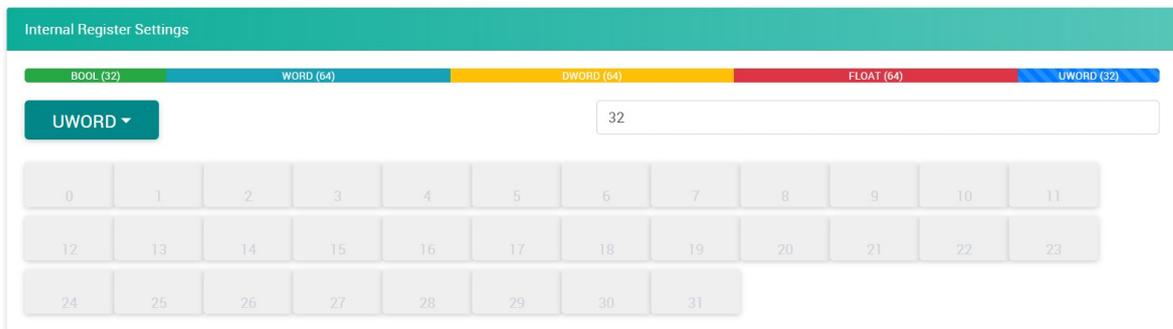

IR Information: The IR status window will pop-up after you click one of the IR blocks. The name is used for representing this internal register (max. length = 16, "." character is not allowed).

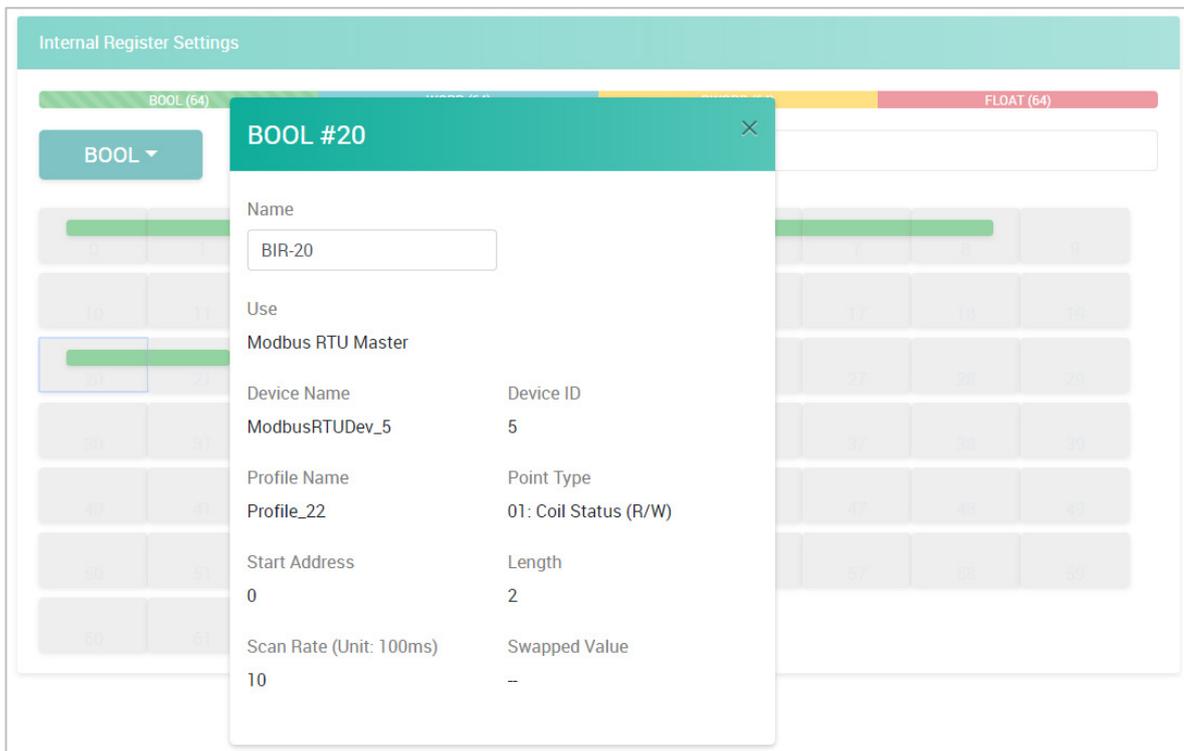


Protocol

This section introduces the protocol settings functions.

Modbus TCP Slave

The **Modbus TCP Slave** section shows the definition of the device’s Modbus registers. It allows you to define your own data point type or address of the Modbus registers. The point type and address of a register can be default, existing configuration, or user-defined.

Load Default: Click this button to load default settings of all Modbus registers.

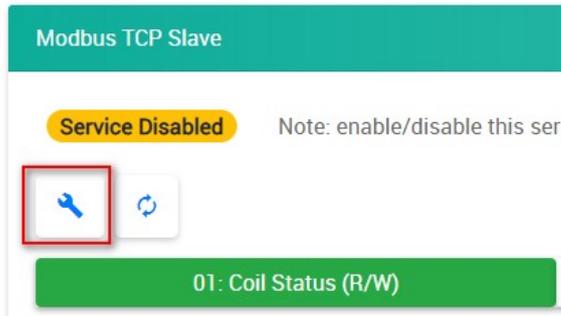

Reload Configuration: Click this button to reload the configuration settings of all Modbus registers.



Filter: Type characters into the textbox to filter the items in the Modbus Table.

Modbus TCP Slave

Service Disabled Note: enable/disable this service through *Security Service Settings*

Filter

01: Coil Status (R/W) 02: Input Status (R) 03: Holding Register (R/W) 04: Input Register (R)

#	Slot	Module Name	Parameter	Point Type	Start Address (DEC)	Start Register (DEC)	Length	Data Type
1	R-00	ioThinx4510	watchdogAlarmFlagClear	01	44800	044801	1	BOOL
2	R-00	ioThinx4510	birValue	01	2560	002561	64	BOOL

Point Type Category: Click **01: Coil Status (R/W)**, **02: Input Status (R)**, **03: Holding Register (R/W)**, or **04: Input Register (R)** tab to see the registers under the specific point type.



Point Type Drop-Down List: Select the point type of the parameter when it needs to move to the other point type. After you select the other point type, the parameter will disappear in the current-viewed category and will move to the point type category you just selected (option: 01, 02, 03, or 04).

01: Coil Status (R/W)		02: Input Status (R)		03: Holding Reg	
#	Slot	Module Name	Parameter	Point Type	
1	R-00	ioThinx4510	INTERNAL_REGISTER_BOOL	<div style="border: 1px solid black; padding: 2px;"> 01 01 02 03 04 </div>	

Start Address Textbox: Change the value of the Start Address in the textbox (0 to 65535 or leave it blank). When there is no value in the textbox, it will be displayed in light yellow. When it conflicts with another register, it will be displayed in red. Revise the value to prevent address conflict. You can use the **Sort** function to see where there is a conflict of addresses.

#	Slot	Module Name	Parameter	Point Type	Start Address (DEC)	Start Register (DEC)	Length	Data Type
1	R-04	45MR-2601-0	doStatus	01		--	16	BOOL
2	R-03	45MR-2600-0	doStatus	01	32	000001	16	BOOL
3	R-05	45MR-2606-0	doStatus	01	32	000033	8	BOOL

Sort: The default-sorted column is the **Slot** from the lowest to highest slot number. Click the green arrow to change the sorting method. Click the gray arrows on the other columns to sort that specific column.

#	Slot	Module Name	Parameter	Point Type	Start Address (DEC)	Start Register (DEC)	Length	Data Type
1	R-00	ioThinx4510	SYS_WATCHDOG_ALARM_FLAG_CLEAR	01	44800	044801	1	BOOL
2	R-00	ioThinx4510	INTERNAL_REGISTER_BOOL	01	2560	02561	1	BOOL

INFORMATION Enable/disable this service through **Security** → **Service Settings**.

INFORMATION In the event that a conflict address value is entered, whenever you click on a different point type tab, the previous configurations will be restored to avoid the conflict.

INFORMATION Refer to **Modbus/TCP Slave Rules** for the available Modbus register.

SNMP

In the SNMP page, settings are divided into three tabs: SNMP, SNMP Trap/Inform, and Event Settings.

SNMP Settings

Version: Select one of the SNMP version options (option: v1 and v2c, v3 only, or v1 and v2c and v3), through which the SNMP Manager can access the SNMP agent of the device.

Contact: Type the contact of the SNMP server (max length = 30).

Location: Type the physical location of the SNMP server (max length = 30).

INFORMATION Enable/disable this service through **Security** → **Service Settings**.

SNMPv1, SNMPv2c Settings

Read Community: Type the community string matching for read authentication (max length = 30, default = "public").

Write Community: Type the community string matching for write authentication (max length = 30, default = "private").

SNMPv3 Settings – Read Only

SNMPv3 Settings – Read Only	
Username	<input type="text" value="v3ro"/>
Authentication Protocol	<input type="text" value="MD5"/>
Authentication Password	<input type="password" value="*****"/>
Privacy Protocol	<input type="text" value="CBC-DES"/>
Privacy Password	<input type="password" value="*****"/>

Username: Type the username for SNMP v3 settings (min. length = 1; max length = 30; A to Z, a to z, 0 to 9, symbols, spaces and .()[]{}\/\@"@;: symbols are not allowed, default = "v3ro").

Authentication Protocol: Select **Disable**, **MD5**, **SHA1**, **SHA-224**, or **SHA-256** for the authentication protocol setting (default: MD5).

Authentication Password: Type the password for the authentication password settings (min. length = 8; max length = 16; A to Z, a to z, 0 to 9, symbols, at least one symbol and one number, spaces and .()[]{}\/\@"@;: symbols are not allowed, default = "moxa-123").

Privacy Protocol: Select **Disable**, **CBC-DES**, or **AES-128** for privacy protocol setting (default: CBC-DES).

Privacy Password: Type the password for the privacy password settings (min. length = 8; max length = 16; A to Z, a to z, 0 to 9, symbols, at least one symbol and one number, spaces and .()[]{}\/\@"@;: symbols are not allowed, default = "moxa-123").

SNMPv3 Settings – Read/Write

SNMPv3 Settings – Read/Write	
Username	<input type="text" value="v3rw"/>
Authentication Protocol	<input type="text" value="MD5"/>
Authentication Password	<input type="password" value="*****"/>
Privacy Protocol	<input type="text" value="CBC-DES"/>
Privacy Password	<input type="password" value="*****"/>

Username: Type the username for the SNMP v3 settings (min. length = 1; max length = 30; A to Z, a to z, 0 to 9, symbols, spaces and .()[]{}\/\@"@;: symbols are not allowed, default = "v3rw").

Authentication Protocol: Select **Disable**, **MD5**, **SHA1**, **SHA-224**, or **SHA-256** for the authentication protocol settings (default: MD5).

Authentication Password: Type the password for the authentication password settings (min. length = 8; max length = 16; A to Z, a to z, 0 to 9, symbols, at least one symbol and one number, spaces and .()[]{}\/\@"@;: symbols are not allowed, default = "moxa-123").

Privacy Protocol: Select **Disable**, **CBC-DES**, or **AES-128** for privacy protocol settings (default: CBC-DES).

Privacy Password: Type the password for the privacy password settings (min. length = 8; max length = 16; A to Z, a to z, 0 to 9, symbols, at least one symbol and one number, spaces and .()[]{}\/\@"@;: symbols are not allowed, default = "moxa-123").

INFORMATION Refer to **SNMP Rules** for detailed SNMP OID information.

SNMP Trap and SNMP Inform

Trap/Inform Settings

Service Disabled (Invalid IP) Note: enable/disable this service through [Security Service Settings](#)

SNMP Trap	<input type="text" value="v1"/>		
SNMP Inform	<input type="text" value="v2c"/>		
1st Server IP	<input type="text" value="0.0.0.0"/>	2nd Server IP	<input type="text" value="0.0.0.0"/>
1st Server Port	<input type="text" value="162"/>	2nd Server Port	<input type="text" value="162"/>

SNMP Trap: Select one of the SNMP version options (option: v1, v2c, or v3), through which the SNMP server can receive the SNMP Trap from the SNMP agent.

SNMP Inform: Select one of the SNMP version options (option: v2c or v3), through which the SNMP server can receive the SNMP Inform from the SNMP agent.

IP: Type the IP address of the SNMP server.

NOTE If the IP is 0.0.0.0, the ioThinx 4510 will not update the SNMP Trap/Inform to the server.

Port: Enter the port of the SNMP server(default = 162).

SNMPv1 And SNMPv2c

1st Server Trap Community	<input type="text" value="public"/>	2nd Server Trap Community	<input type="text" value="public"/>
---------------------------	-------------------------------------	---------------------------	-------------------------------------

Trap Community: Type the community string matching for read authentication (max length = 30, default = "public").

SNMPv3

1st Server Username	<input type="text" value="v3"/>	2nd Server Username	<input type="text" value="v3"/>
1st Server Authentication Protocol	<input type="text" value="MD5"/>	2nd Server Authentication Protocol	<input type="text" value="MD5"/>
1st Server Authentication Password	<input type="text" value="....."/>	2nd Server Authentication Password	<input type="text" value="....."/>
1st Server Privacy Protocol	<input type="text" value="CBC-DES"/>	2nd Server Privacy Protocol	<input type="text" value="CBC-DES"/>
1st Server Privacy Password	<input type="text" value="....."/>	2nd Server Privacy Password	<input type="text" value="....."/>
1st Server Engine ID Format	<input type="text" value="ASCII"/>	2nd Server Engine ID Format	<input type="text" value="ASCII"/>
1st Server Engine ID	<input type="text" value="moxa-123"/>	2nd Server Engine ID	<input type="text" value="moxa-123"/>

Username: Type the username for the SNMP v3 settings (min. length = 1; max length = 30; A to Z, a to z, 0 to 9, symbols, spaces and .()[]{}"/\@"@;: symbols are not allowed, default = "v3").

Authentication Protocol: Select **Disable**, **MD5**, **SHA1**, **SHA-224**, or **SHA-256** for the authentication protocol settings (default = MD5).

Authentication Password: Type the password for the authentication password settings (min. length = 8; max length = 16; A to Z, a to z, 0 to 9, symbols, at least one symbol and one number, spaces and .()[]{}"/\@"@;: symbols are not allowed, default = "moxa-123").

Privacy Protocol: Select **Disable**, **CBC-DES**, or **AES-128** for privacy protocol settings (default = CBC-DES).

Privacy Password: Type the password for the privacy password settings (min. length = 8; max length = 16; A to Z, a to z, 0 to 9, symbols, at least one symbol and one number, spaces and .()[]{}"/\'"@;: symbols are not allowed, default = "moxa-123").

Engine ID format: Select **ASCII** or **HEX** for the engine ID (default = ASCII).

Engine ID: Type the engine ID to use (max length = 32 (ASCII) / 64 (HEX), default = "moxa-123")

NOTE In HEX format, please add a "0" for single-digit engine IDs. (e.g. "3" should be "03").

Event Settings

#	Module Name	Channel Name	Mode/Range	Trigger	Value	Hysteresis	Alert Type	Specific ID
1	45MR-2606-0	DI-01	DI	On Change	--	--	SNMP TRAP	1
2	45MR-3800-0	AI-00	4,000 - 20,000	Greater	4,000	0,000	SNMP Inform	1

[ADD NEW ALERT \(2/64\)](#)

Each row in this page represents one monitored event.

Click the exit delete icon to delete the event:



Click the duplicate icon to duplicate the event:



The ioThinx 4510 supports a maximum of 64 events. Click **ADD NEW ALERT** to create a new event.

Module Name: Select a module. Only input modules will be listed here.

Channel Name: Select the channel you want to monitor the event.

Trigger: Select the event trigger type. For Digital Input, there are three options, **On Change**, **ON to OFF**, and **OFF to ON**. For Analog Input, the two trigger options are **Greater** and **Less**.


Value: Type the threshold value of the trigger. This is only used for Analog Input events.

Hysteresis: Type the hysteresis value of the trigger. This is only used for Analog Input events.


For illustration purposes, consider the following example where we set the AI-00 channel's trigger value to be greater than 5 with a hysteresis of 1, and also smaller than 5 with a hysteresis of 1.

#	Module Name	Channel Name	Mode/Range	Trigger	Value	Hysteresis	Alert Type	Specific ID
1	45MR-3800-0	AI-00	4,000 - 20,000	Greater	5,000	1,000	SNMP TRAP	1
2	45MR-3800-0	AI-01	4,000 - 20,000	Less	5,000	1,000	SNMP TRAP	1

When Trigger = Greater, Value = 5, and Hysteresis = 1, the SNMP trap will only be triggered if the analog signal fluctuates from 4 to 5, as depicted in Scenario 1 below. However, if we change the settings to Value = 5 and Hysteresis = 2, the SNMP trap will only be triggered if the analog signal fluctuates from 3 to 5.

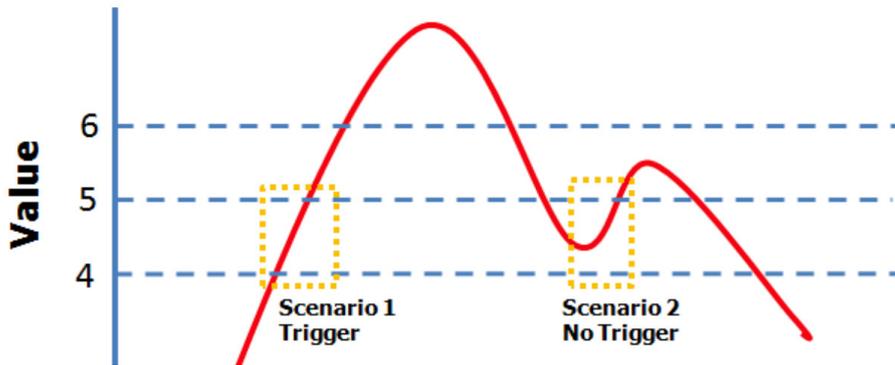


When Trigger = Less, Value = 5, and Hysteresis = 1, the SNMP trap will only be triggered if the analog signal fluctuates from 6 to 5, as depicted in Scenario 1 below. However, if we change the settings to Value = 5 and Hysteresis = 2, the SNMP trap will only be triggered if the analog signal fluctuates from 7 to 5.

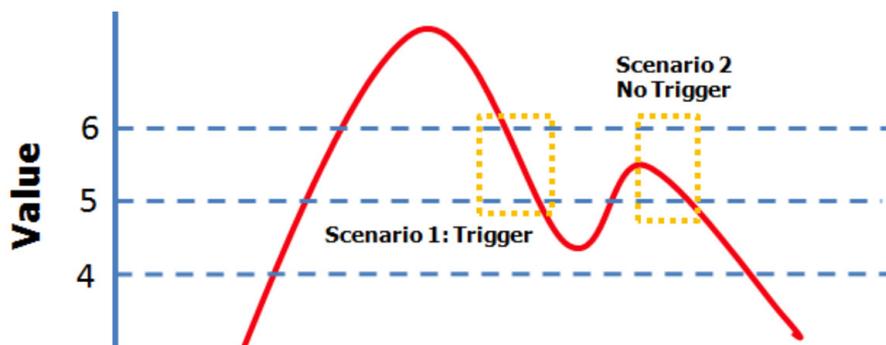

MQTT

The ioThinx 4510 supports MQTT version 3.1.1. In this section we introduce the MQTT settings. The MQTT configuration page has two channels: **Connection Settings** and **Topic Settings**.

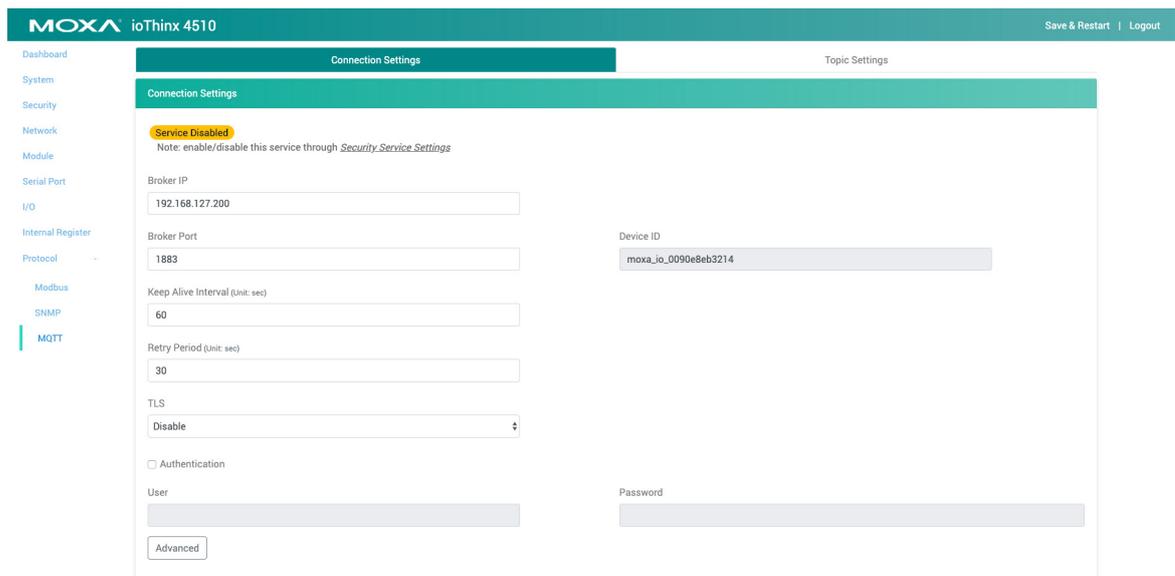

Connection Settings

Broker IP Specifies the broker IP name.

Broker Port: Specifies the broker port in this column.

Authentication: Select the Authentication checkbox to enable the username and password settings. The username and password are used when an MQTT client connects to a broker.

Keep Alive Interval: Keep alive is designed to ensure that a connection between the MQTT client and broker exists. The ioThinx 4510 will send the keep alive packets to the broker at designated intervals.

Device ID: The Device ID is used by the broker to identify each client that is connected to it. The ioThinx 4510's Device ID is unique and cannot be changed. The ID consists of the prefix **moxa_io_** followed by the MAC address of the ioThinx 4510.

TLS: The ioThinx 4510 uses TLS to encrypt MQTT transmissions. You may enable or disable TLS.



WARNING

If TLS encryption is disabled, ***the username and password will be transmitted in plain text.***

Advanced

Click the Advanced button to view the Last Will & Testament Settings.

Advanced

Last Will & Testament

<p>Last Will Topic</p> <div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">ioThinx_4510/read/lastwill</div>	<p>Last Will Message</p> <div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">Device is offline</div>
<p>Last Will QoS</p> <div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">0</div>	<p>Retained</p> <div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">Disable</div>

Last Will Topic: The "topic" of the last will message that will be sent to the broker. This item is not configurable.

Last Will Message: The message that will be sent to the broker when the connection between the ioThinx 4510 and the broker is disconnected. This item is not configurable.

Last Will QoS: The ioThinx supports three QoS levels:

- QoS 0 (at most once): Data is delivered without acknowledgement. This level of QoS provides best-effort delivery but without guarantee.
- QoS 1 (at least once): Data is delivered with acknowledgement. In this case, when the ioThinx 4510 sends data, it expects to receive an Ack back from broker. With this level of QoS, data may be delivered multiple times.
- QoS 2 (exactly once): Data is delivered exactly once using a "four-part-handshake". This level of QoS is the most reliable, but is generally slower than QoS 0 and QoS 1.

Retained: The broker will save messages that are not delivered to a subscriber who is offline when the message is first delivered, and then resend the message when the subscriber comes back online.

Topic Settings

All the topics provided by the ioThinx 4510 will be listed here. The topics are default disabled. User needs to select which topics are needed to be enabled. The topic which can be published or subscribed are listed in the page **Publication** or **Subscription**, respectively.

The screenshot displays the 'Topic Settings' page for the ioThinx 4510. The interface includes a navigation menu on the left, a top header with 'MOXA ioThinx 4510' and 'Save & Restart | Logout', and a main content area. The 'Batch Edit' section is highlighted with an orange box, showing controls for 'Enable', 'Disable', 'QoS', and 'Retained'. The 'Topic Table' is highlighted with a blue box, showing a list of topics with columns for '#', 'Enable', 'Slot', 'Channel', 'Topic', 'QoS', 'Retained', 'Trigger', and 'Condition'. A filter bar at the top right allows filtering by 'Value', 'Attribute', 'Enable', or 'Disable', with a search box and a result count of 132.

Filter: The ioThinx 4510 has a filter function in the top right corner of the subscribe page that allows users to find topics more easily. Click the **Value/Attribute/Enable/Disable** buttons and then type a keyword to find a topic within several seconds. The number of filtered topics will be shown as well.

Value/Attribute: The following most frequently used IO data will be filtered by **Value**. Other IO data, which is not listed, will be filtered by **Attribute**.

- diStatus
- diCounterValue
- diCounterStauts
- doStatus
- doPulseStatus
- relayStatus
- relayCurrentCount
- aiStatus
- aiValueScaled
- aoStatus
- aoValueScaled
- rtdStatus
- rtdValueScaled
- tcStatus
- tcValueScaled

Enable/Disable: Filter out the enabled or disabled topic.

Textbox: Type in the topic that you would like to filter.

Batch Edit: The ioThinx 4510 supports the **Enable/Disable/QoS/Retain/Trigger** function for batch editing. When the batch edit function is clicked, all filtered topics will be set. If the topic does not support the batch edit function (e.g., the topic does not support On Change but the user batch edits all), the edit will be skipped by the topic.

NOTE The ioThinX 4510 only supports 256 topics. If there are more than 256 filtered topics, the enable button will be disabled.

Topic Table: All data that can be published or subscribed are listed in the table on the Publisher or Subscriber page.

Slot: The slot associated with the data.

Channel: The channel associated with the data.

Topic: Topics include the following items:

- Publish: {deviceName}/read/{ioName}/{parameters}
- Subscribe: {deviceName}/write/{ioName}/{parameters}
 - **{deviceName}:** the device name which user specified in **Device Setting** Page
 - **{ioName}:** the {ioName} is in the format {moduleName@channelName}. User can specify the module name in **Module** page and channel name in **I/O** pages, respectively.
 - **{Parameters}:** the parameters is indicated the data which will be accessed by MQTT. Please refer to the Appendix for the detail description about data.

QoS: The QoS of each topic. It shares the same level with Slot/Channel/Topic.

Retain: Enables the retain function to force the broker to keep the latest data and send it to subscribers when subscribers are back online.

Trigger and Condition: Determines how the topic will be published.

- Interval: The topic will be published at specific intervals.
- OnChange: The topic will be published when the change criteria are met:
 - For Digital Input, the topic will be published when the value changes.
 - For Analog Input, the topic will be published when a specific percentage of the data changes compared with previous update. The percentage refers to the full range.

NOTE Setting a short interval may result in an unsuccessful publish.

Configuring the ioThinX 4510

The following topics are covered in this chapter:

□ **Configuring the Unit**

- Login to the Unit
- Configuring Module Settings
- Changing Device Name
- Changing Username & Password
- Configuring Service Settings
- Configuring Account Settings
- Configuring Network Settings
- Configuring Serial Port & IR Settings
- Configuring I/O Settings
- Configuring Modbus Address Settings
- Configuring SNMP Settings
- Configuring MQTT Settings

□ **Mass-deploying the Settings**

- Updating Configuration to Multiple Units
- Setting Date and Time to Multiple Units
- Changing IP Addresses to Multiple Devices
- Changing the Device Name of Multiple Devices
- Retrieving the System Log from Multiple Devices
- Getting a Self-signed Certificate from Multiple Devices

□ **Monitoring & Operating the Unit**

- Monitoring Module & I/O Status
- Monitoring Connection Status
- Exiting Safe Mode Status

□ **Maintaining the Unit**

- Backing up Configuration Files
- Updating the Firmware
- Restarting the Unit
- Loading Factory Default Settings

Configuring the Unit


This section explains how to configure this device through the web console from the beginning. If you require additional information, please refer to Preparing Software Tools before reading this section.

Log In to the Unit

Follow the steps to log in to the unit.

Step 1: Open your web browser and type the default IP address of the device, 192.168.127.254.

Step 2: On the login page, type the default username/password (admin/moxa) to log in to the Web Console.

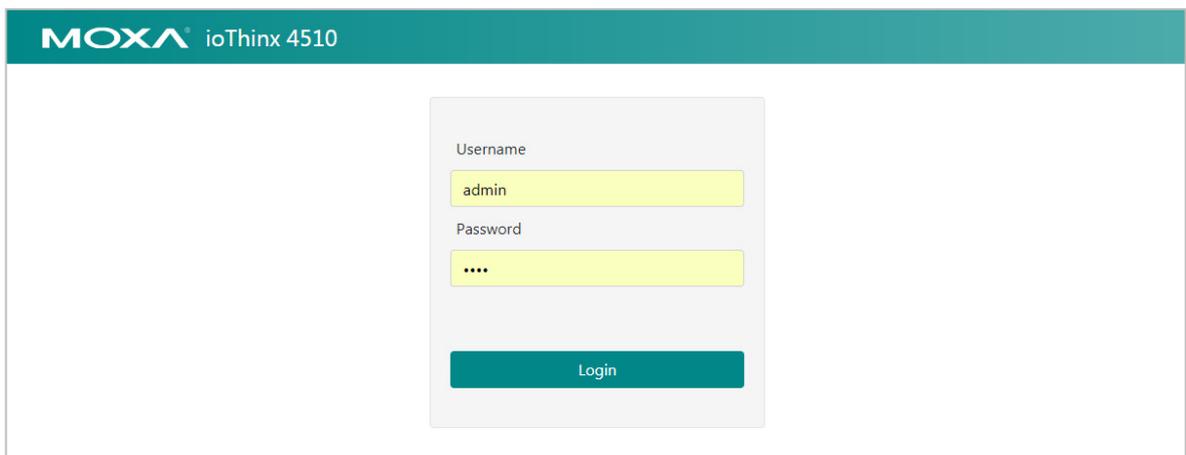


The image shows the login page of the MOXA ioThinx 4510 web console. The page has a teal header with the MOXA logo and 'ioThinx 4510'. The main content area is white and contains a login form with the following fields and buttons:

- Username:** A text input field containing the text 'admin'.
- Password:** A password input field with masked characters '....'.
- Login:** A teal button labeled 'Login'.

Configuring Module Settings

After you have logged in, you can see the dashboard or the module settings page. If the detected module matches the configured module, you will see the **Dashboard** as below. Then click **Module** in the Menu panel to go to the module settings page.

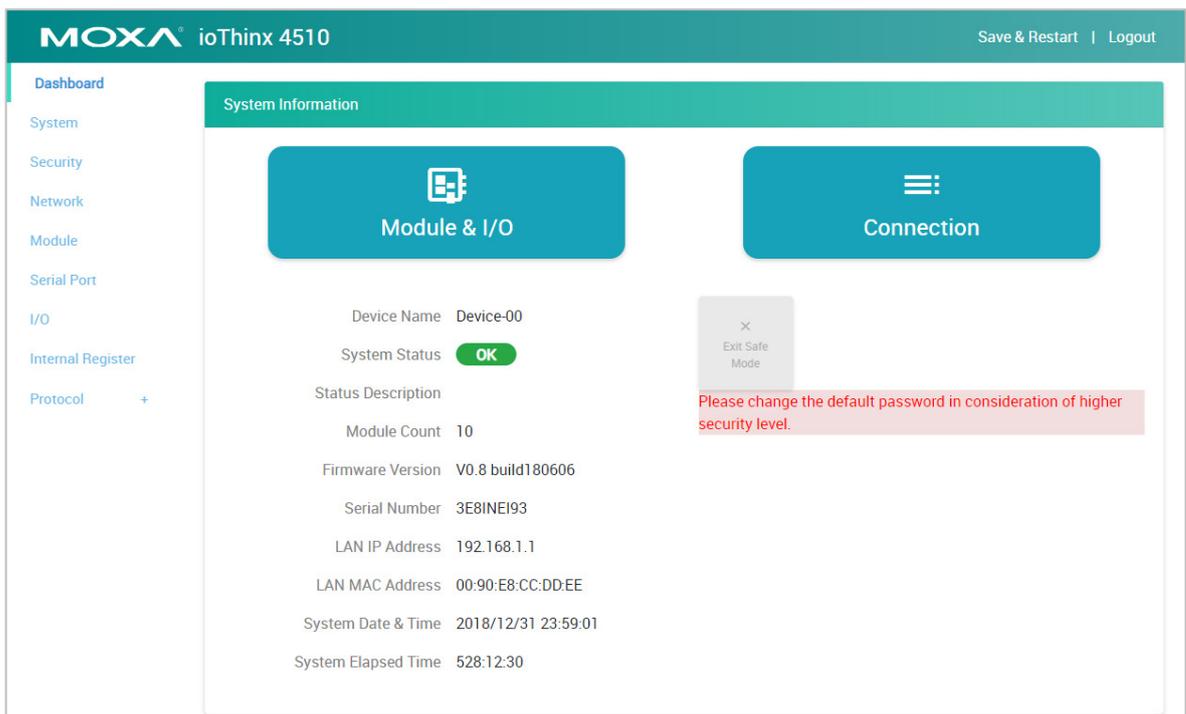

The image shows the dashboard of the MOXA ioThinx 4510 web console. The page has a teal header with the MOXA logo, 'ioThinx 4510', and 'Save & Restart | Logout'. The main content area is white and contains a sidebar menu on the left and a main content area on the right.

Sidebar Menu:

- Dashboard
- System
- Security
- Network
- Module
- Serial Port
- I/O
- Internal Register
- Protocol +

Main Content Area:


- System Information:** A teal header for the main content area.
- Module & I/O:** A teal button with a gear icon.
- Connection:** A teal button with a list icon.
- System Status:** A green button labeled 'OK'.
- Status Description:** A table of system information:

Field	Value
Device Name	Device-00
System Status	OK
Status Description	
Module Count	10
Firmware Version	V0.8 build180606
Serial Number	3E8INEI93
LAN IP Address	192.168.1.1
LAN MAC Address	00:90:E8:CC:DD:EE
System Date & Time	2018/12/31 23:59:01
System Elapsed Time	528:12:30


Exit Safe Mode: A grey button labeled 'Exit Safe Mode' with a close icon.

Warning: A red banner at the bottom right of the main content area reads: "Please change the default password in consideration of higher security level."

If you see the module settings page as opposed to the dashboard, click **Edit** to enter the edit mode and start editing the module settings.

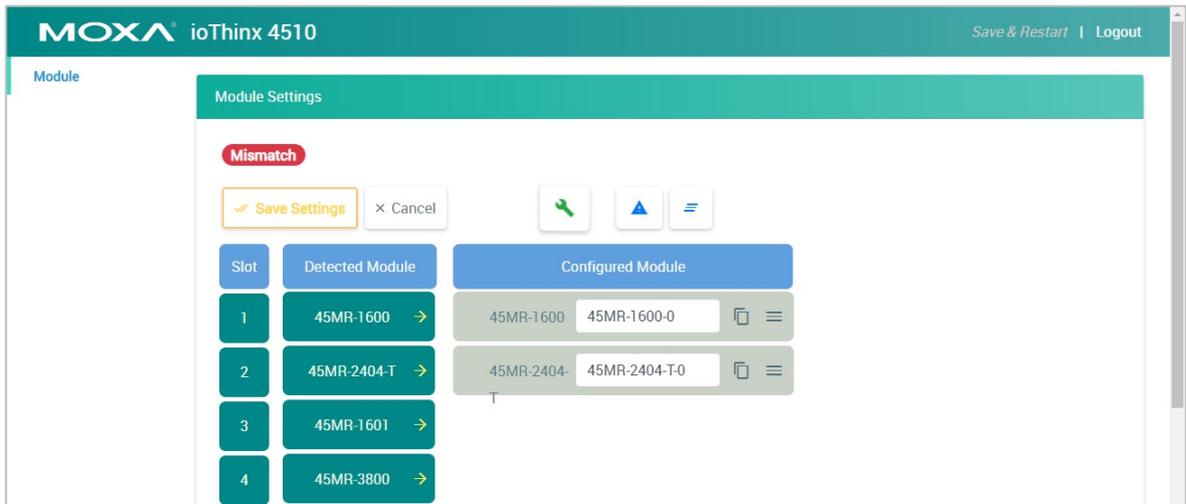


In edit mode, if any detected modules and configured modules do not match, then the configured modules will be highlighted as shown below.

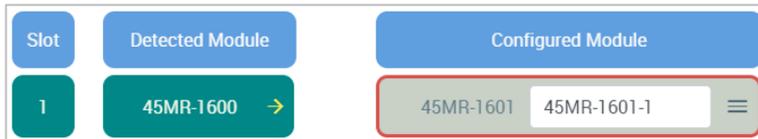


Click **Auto Matching** to match the conflicted modules.

If not, you can use the "Auto Match" function or swap the module to change the module sequence.

If you want to rearrange the 45MR modules automatically, you can click "Auto Match".

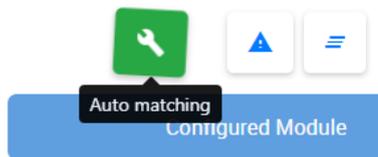


If you want to change configurations, you can use the swap function. To swap the module sequence, move the point to the module, click the left button on the mouse and hold it. After the module color changes to green, you can move it to change the position of the module.

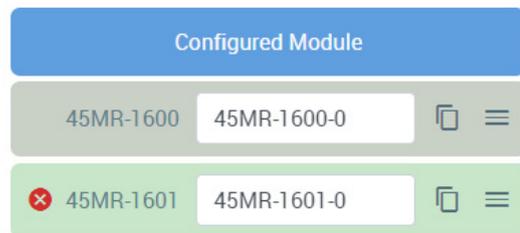


Changing Device Name

Set the name of this device through **System → Device Settings**. We recommend choosing a unique name for the device to easily differentiate it from other devices.

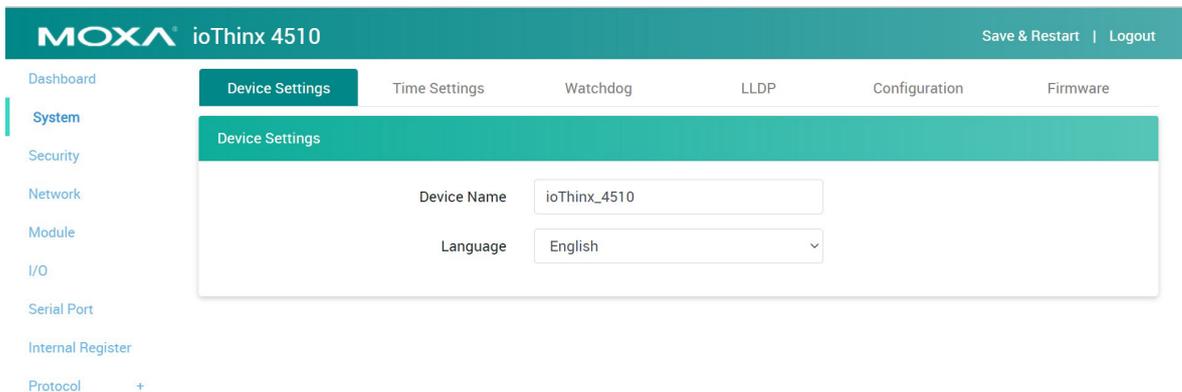

Changing the Username and Password

To have higher levels of security, we recommend changing the username and password after your first login. Click **Security → User Settings** as shown in the screenshot below.

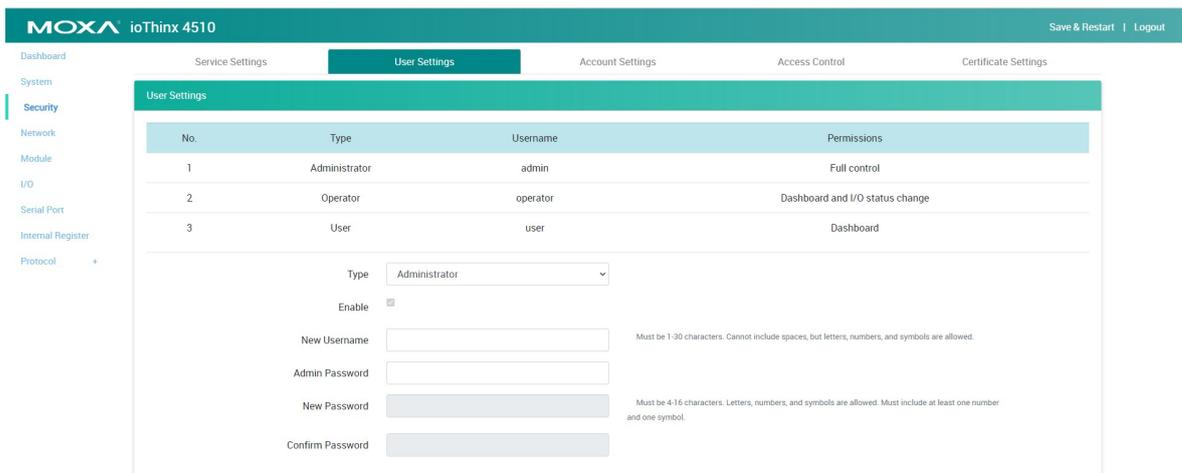

INFORMATION The default username is admin, and the default password is moxa.

Configuring Service Settings

Click **Security** on the menu panel to enter the security settings page as shown below. For service settings, the user can enable or disable the service control access.


No.	Service	TCP/UDP	Port
<input checked="" type="checkbox"/> 1	Web Service via HTTP	TCP	80
<input type="checkbox"/> 2	Web Service via HTTPS <small>1. MUST import self-signed certificate before enabling the web service via HTTPS, or the browser may block the connection. 2. The maximum number of 45MR module is eight slots when the HTTP's web service and two of following three protocols (SNMP / Modbus TCP / Modbus RTU), are enabled simultaneously.</small>	TCP	443
<input type="checkbox"/> 3	RESTful API via HTTP	TCP	80
<input type="checkbox"/> 4	RESTful API via HTTPS	TCP	443
<input type="checkbox"/> 5	SNMP Agent/Trap/Inform	UDP	161
<input type="checkbox"/> 6	Modbus/TCP Slave	TCP	502
<input type="checkbox"/> 7	Modbus/RTU Master	-	-
<input type="checkbox"/> 8	MQTT Client	TCP	-
<input type="checkbox"/> 9	LLDP	UDP	-
<input checked="" type="checkbox"/> 10	IOxpress/MCC Tool/MXIO	TCP/UDP	10124/4800

Configuring Account Settings

For account settings, you can modify the parameters and define the login failure message and system usage notifications. If you want to know the access history, the ioThinx 4510 Series supports access log export, which can store up to 1000 records.


Configuring Network Settings

Click **Network** on the menu panel to enter the network settings page as shown below. The ioThinx 4510 Series supports Ethernet daisy-chain topology with one MAC address. For this LAN port, it supports static IP and DHCP mode. The user can configure it via the LAN settings.

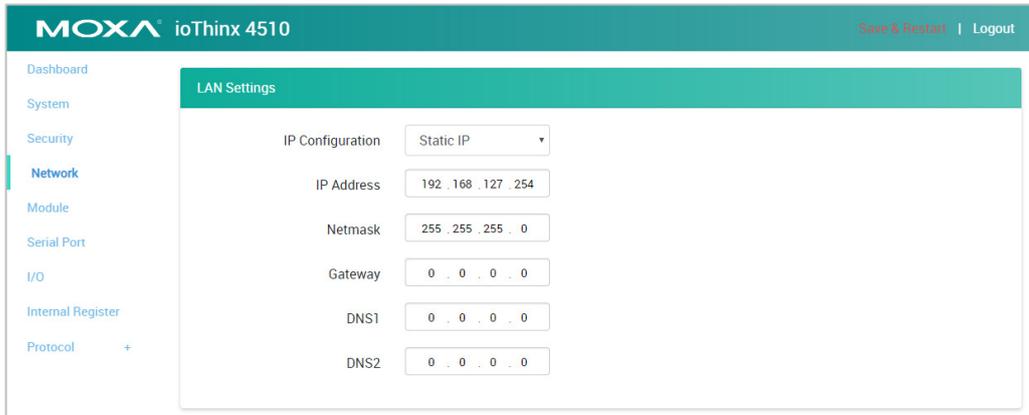


Configuring Serial Port and IR Settings

Click **Serial Port** on the menu panel to enter the serial port settings page. For more detailed information, please refer to the **Serial Port** section in Chapter 4.

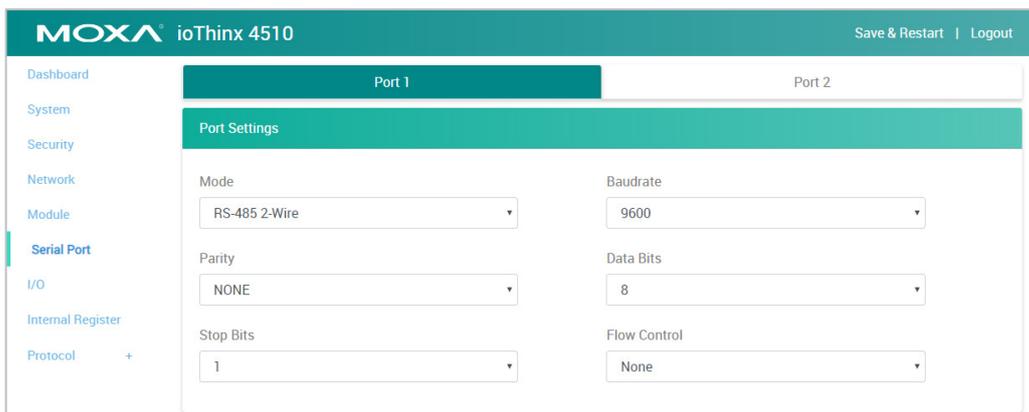

Click **Internal Register** on the menu panel to enter the internal register settings page. For more detailed information, please refer to the **Internal Register** section in Chapter 4.

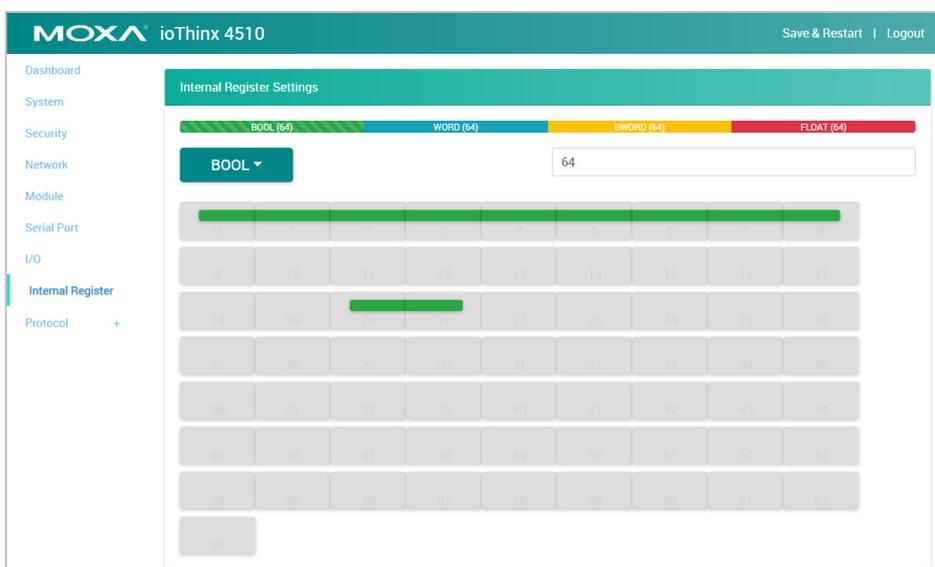


Configuring I/O Settings

Click **I/O** on the menu panel to enter the I/O settings page. For more detailed information, please refer to the **I/O Settings** section in Chapter 4.



Configuring Modbus Address Settings

Click **Modbus** on the menu panel to enter the Modbus TCP Slave setting page. On this page, you can see all of the Modbus TCP addresses categorized by coil status, input status, holding register, and input register.

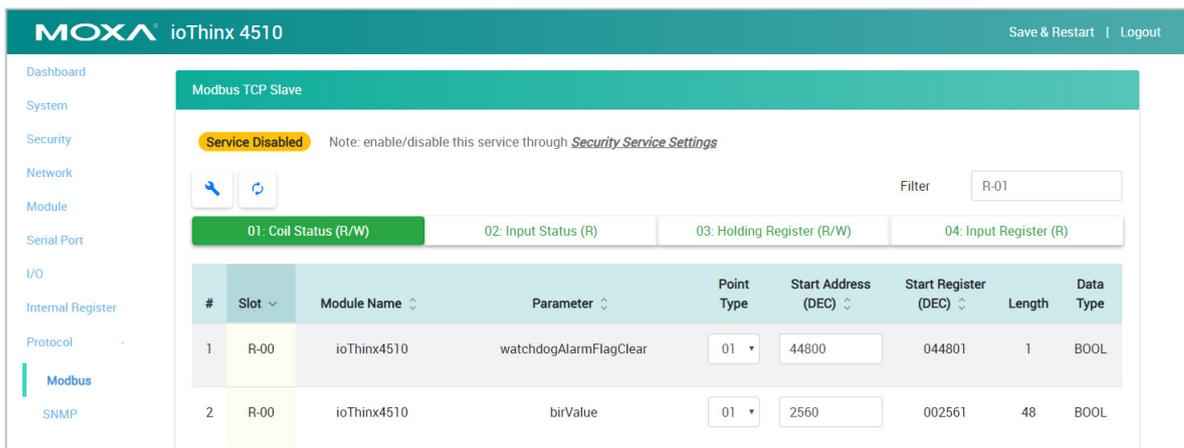

To change Modbus addresses, you can click **Reload default Modbus address**, **Reload current device address**, or manually modify the addresses.

Configuring SNMP Settings

Click **SNMP** on the menu panel to enter the SNMP settings page as shown below.

The screenshot shows the web interface for configuring SNMP settings. The top navigation bar includes 'MOXA ioThinx 4510' and 'Save & Restart | Logout'. The left sidebar lists various system settings, with 'SNMP' highlighted. The main content area is titled 'SNMP Settings' and contains a 'Service Disabled' warning. Below this, there are input fields for 'Version' (a dropdown menu showing 'v1 and v2c'), 'Contact', and 'Location'. A second section, 'SNMPv1, SNMPv2c Settings', contains input fields for 'Read Community' (set to 'public') and 'Write Community' (set to 'private').

The ioThinx 4510 Series supports SNMP, SNMP Trap, and SNMP Inform. After configuring these settings, please download the mib file from Moxa's website. For detailed information on the structure of the mib file, please refer to the **SNMP** chapter.

Configuring MQTT Settings

Click **MQTT** on the menu panel to enter the MQTT settings page, as shown below.

The screenshot shows the web interface for configuring MQTT connection settings. The top navigation bar includes 'MOXA ioThinx 4510' and 'Save & Restart | Logout'. The left sidebar lists various system settings, with 'MQTT' highlighted. The main content area is titled 'Connection Settings' and contains a 'Service Disabled' warning. Below this, there are input fields for 'Broker IP' (192.168.127.200), 'Broker Port' (1883), 'Keep Alive Interval (unit: sec)' (60), 'Retry Period (unit: sec)' (30), 'TLS' (a dropdown menu set to 'Disable'), 'Device ID' (moxa_io_0090e8eb3214), 'User', and 'Password'. There is also an 'Advanced' button.

The ioThinx 4510 supports generic MQTT, and after configuring it, the ioThinx 4510 will connect the MQTT broker automatically. For detailed information about topics and payloads, refer to the MQTT section in Chapter 4.

Mass-deploying the Settings

The mass-deploying function can be performed by IOxpress utility. IOxpress is a Windows utility, and the system requirements are listed below:

OS	Microsoft Windows 2000, XP or later
CPU	Intel Pentium 4 CPU or higher
RAM	Min. 512 MB, 1024 MB is recommended
Network	10/100 Ethernet

NOTE The ioThinx 4510 Series is only compatible with IOxpress v2.4 or later.

INFORMATION To get the latest version of IOxpress, please download it from www.moxa.com


You can change IP addresses, update configurations, change the device name, and set the date and time to multiple units by IOxpress. Before starting to use the mass-deploying function, please complete the following steps to search for all devices first.

Step 1: Make sure the IOxpress service is enabled in **Security** → **Service Settings**.


No.	Service	TCP/UDP	Port
<input checked="" type="checkbox"/> 1	Web Service via HTTP	TCP	80
<input type="checkbox"/> 2	Web Service via HTTPS <small>MUST import the self-signed certificate before enabling the web service via https, or the browsers may block the connection</small>	TCP	443
<input type="checkbox"/> 3	RESTful API via HTTP	TCP	80
<input type="checkbox"/> 4	RESTful API via HTTPS	TCP	443
<input type="checkbox"/> 5	SNMP Agent	UDP	161
<input type="checkbox"/> 6	Modbus/TCP Slave	TCP	502
<input type="checkbox"/> 7	Modbus/RTU Master	-	-
<input type="checkbox"/> 8	MQTT Client	TCP	-
<input checked="" type="checkbox"/> 9	IOxpress/MCC Tool/MXIO	TCP/UDP	10124/4800

Step 2: Connect the devices by Ethernet cables and then power them on.

Step 3: Open IOxpress, go to the **Device Library** and click **Device** → **Search** in the menu.

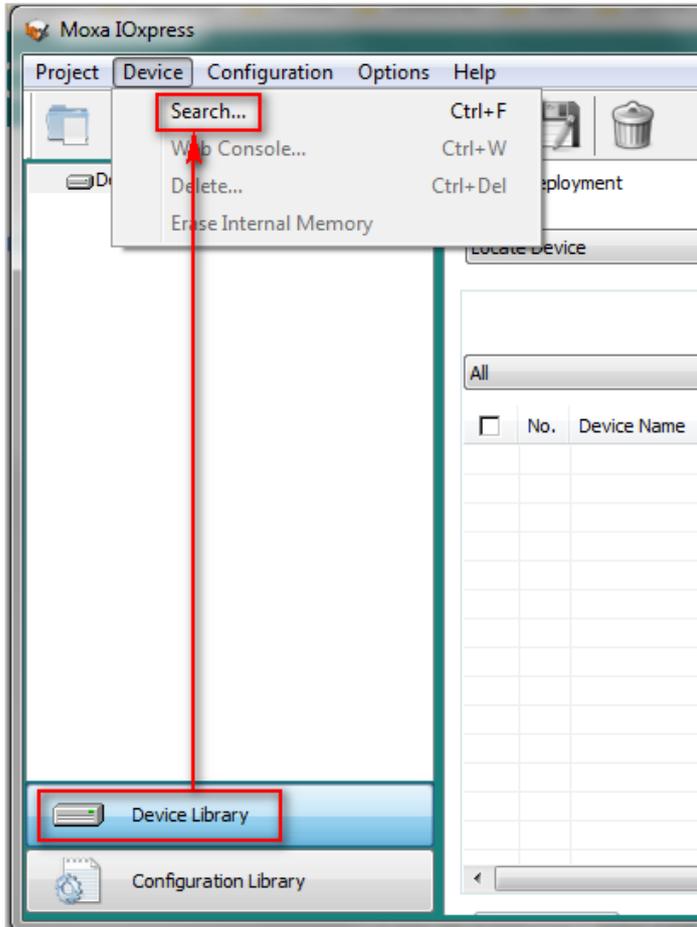

Step 4: In the **Search for Devices** window, choose the product series you would like to search for in the **By Product Series** dropdown menu, and then click **Submit**. IOxpress will start to search the devices and list them in the table.

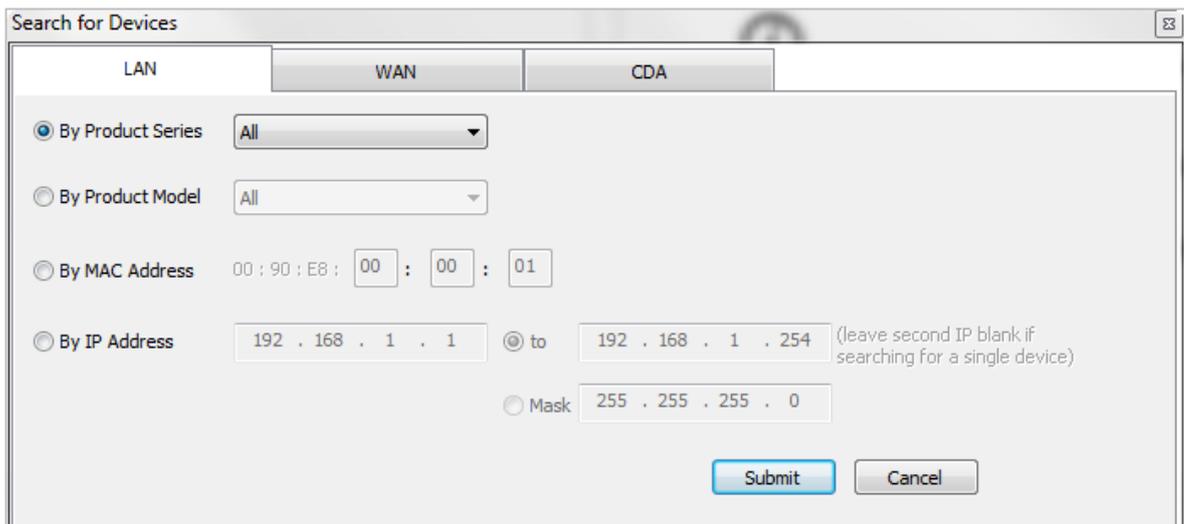


NOTE If the devices cannot be found, check the network setting of the devices.

Updating Configuration to Multiple Units


IOxpress supports updating configuration of multiple units. Follow the steps to complete this task.

Step 1: Export the configuration file of a device through the web console. Refer to **Backing up Configuration Files** for more details.

Step 2: Select **Update Configuration to Device** in the dropdown menu.

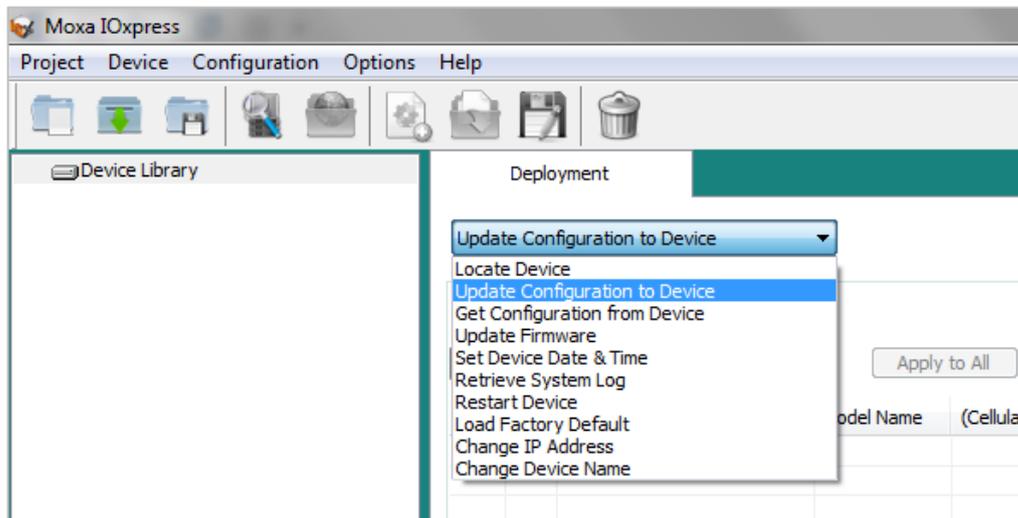

Step 3: Click the **File** column of the selected device in the table and then choose the configuration file from Step 1.

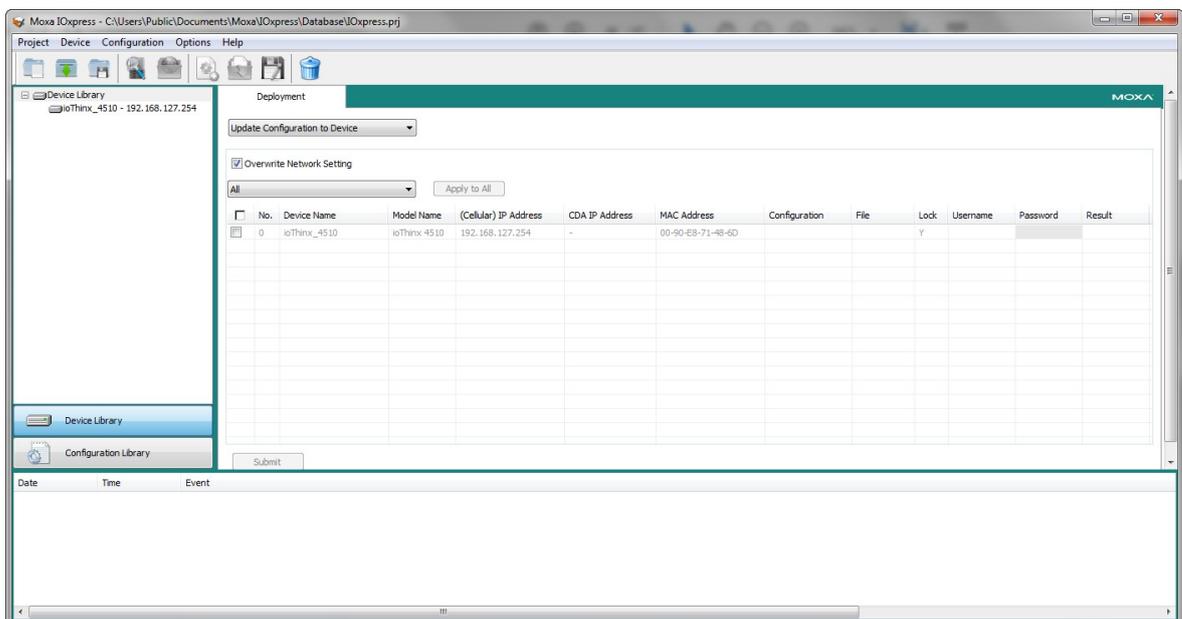

Step 4: Select the device(s), type the **username** and **password**, and then click **Submit**. Then, IOxpress will start to execute the task on the selected devices. A message stating that the action was successful will show up in the **Result** column if the process is successfully completed.


INFORMATION Click **Apply to All** if the selected devices have the same settings.

INFORMATION Back up the configuration before updating to a new configuration.

Setting Date and Time to Multiple Units

The IOxpress supports setting the date and time of multiple units. Follow these steps to complete this task.


Step 1: Select **Set Device Date & Time** in the dropdown button

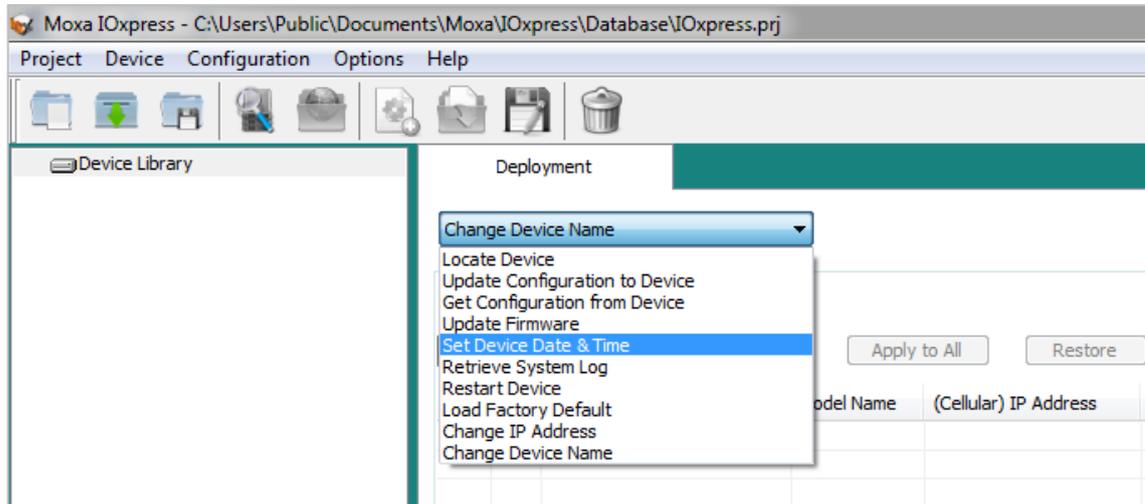

Step 2: Select either **Sync with PC** or **Manual Setting**. For manual setting, type the Local Date and Time, which will be set on the device(s).

Step 3: Select the device(s), type the **username** and **password**, and then click **Submit**. IOxpress will start to execute the task on the selected devices. A message stating that the action was successful will show up in the **Result** column if the process is successfully completed.


INFORMATION Click **Apply to All** if the selected devices have the same settings.

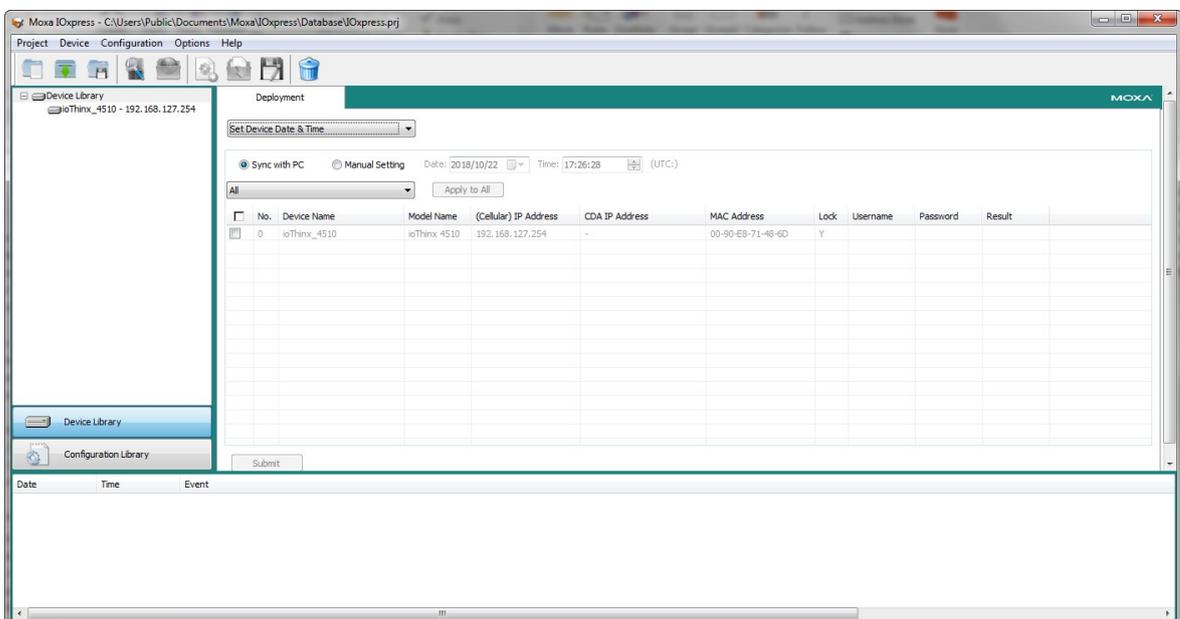

Changing IP Addresses to Multiple Devices

IOxpress supports changing IP addresses for multiple devices:

Step 1: Select **Change IP Address** in the dropdown button list.

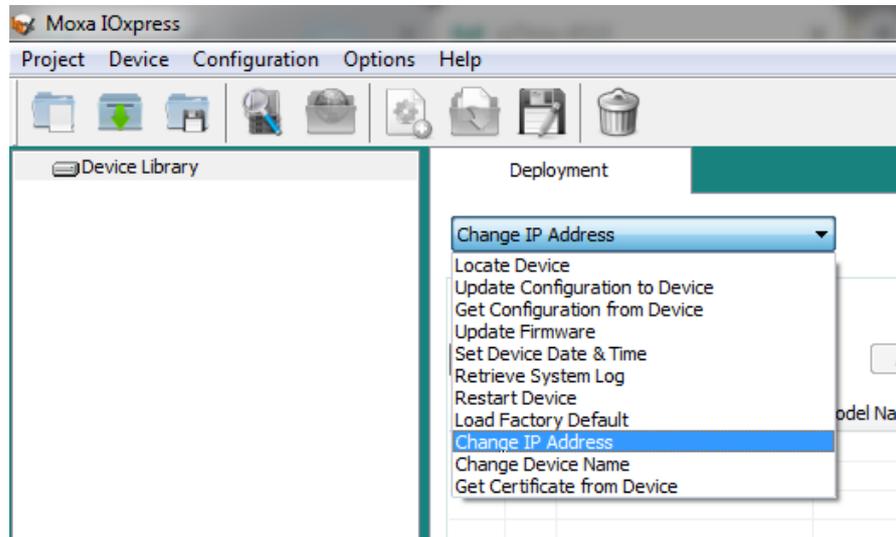


Step 2: Select the device(s), change the IP address, type the **username** and **password**, and then click **Submit**. IOxpress will start to execute the task on the selected devices. A message indicating success will appear in the **Result** column if the process was completed successfully.

Changing the Device Name of Multiple Devices

IOxpress supports changing the device name of multiple devices:

Step 1: Select **Change Device Name** from the dropdown list.

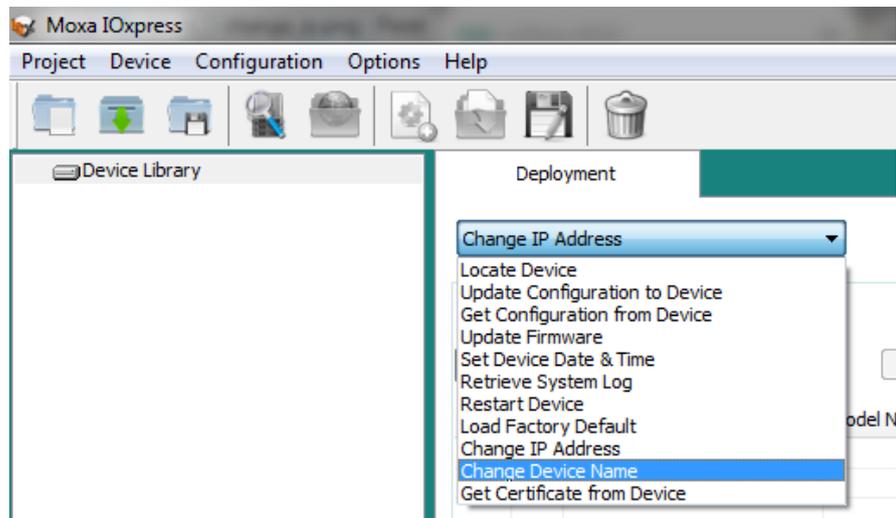


Step 2: Select the device(s), change the device name, type the **username** and **password**, and then click **Submit**. IOxpress will start to execute the task on the selected devices. A message indicating success will appear in the **Result** column if the process was completed successfully.


Retrieving the System Log from Multiple Devices

IOxpress supports retrieving the system log from multiple devices.

Step 1: Select **Retrieve System Log** from the dropdown list.

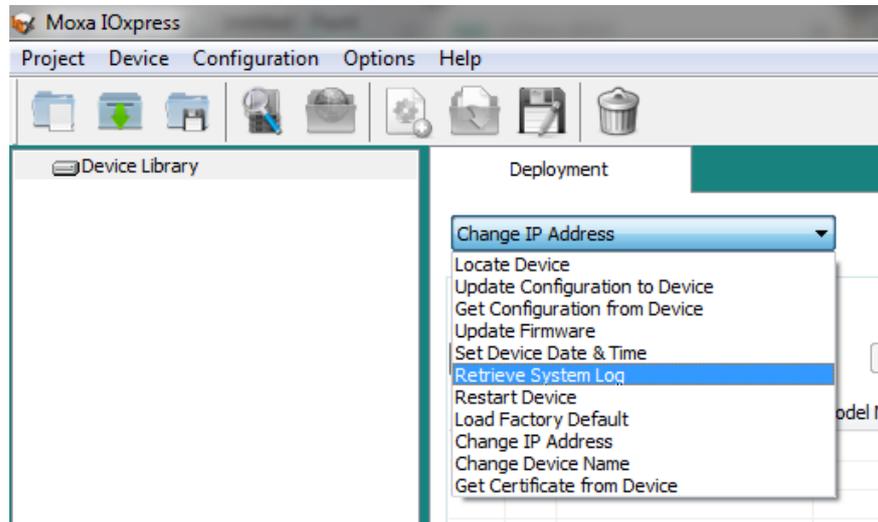

Step 2: Specify the folder location.

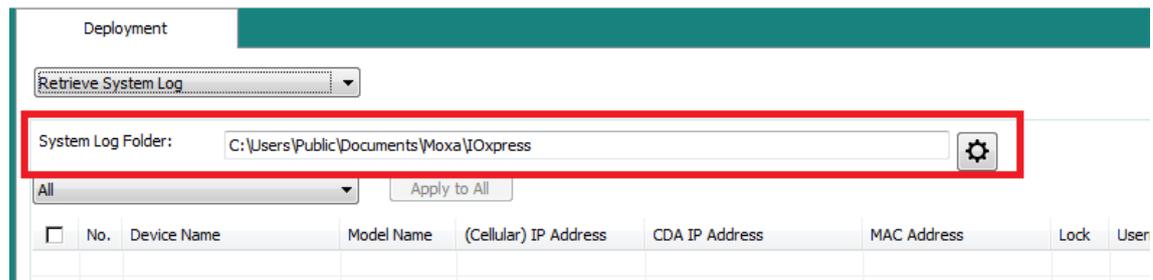


Step 3: Select the device(s), type the **username** and **password**, and then click **Submit**. IOxpress will start to execute the task on the selected devices. A message indicating success will appear in the **Result** column if the process is completed successfully.

Getting a Self-signed Certificate from Multiple Devices

IOxpress supports getting self-signed certificates from multiple devices.

Step 1: Select **Retrieve System Log** from the dropdown list.

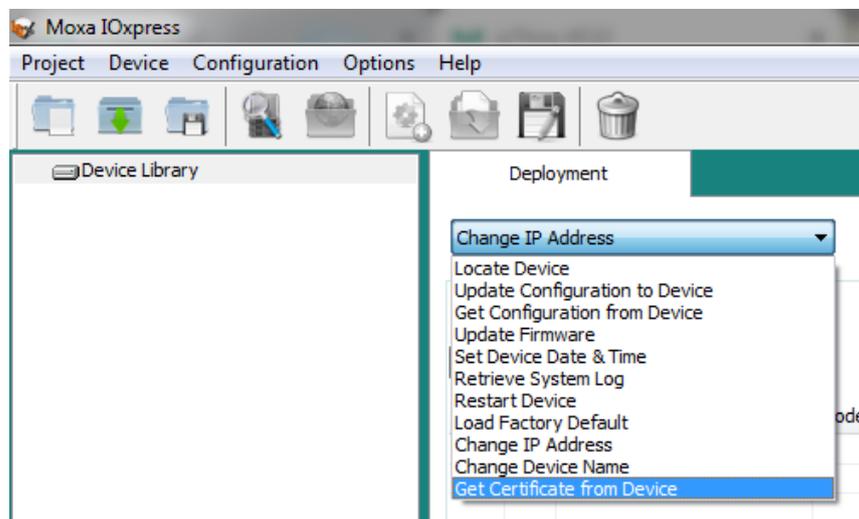

Step 2: Specify the folder location.

Step 3: Select the device(s), type the **username** and **password**, and then click **Submit**. IOxpress will start to execute the task on the selected devices. A message indicating success will appear in the **Result** column if the process is completed successfully.

Monitoring & Operating the Unit


To monitor and operate the device, go to the **Dashboard** of the Web Console.

INFORMATION The ioThinx 4510 Series supports three different user profiles (Administrator, Operator, and User). Refer to **User Settings** for the permission information of each profile.

NOTE For the device with firmware v1.3 and before, the HTTPS web service can only be used for configuration purposes; it cannot be used to monitor or operate the unit.


Monitoring Module & I/O Status

Under the **Dashboard** of the web console, click **Module & I/O** to go to the module and I/O status web page.

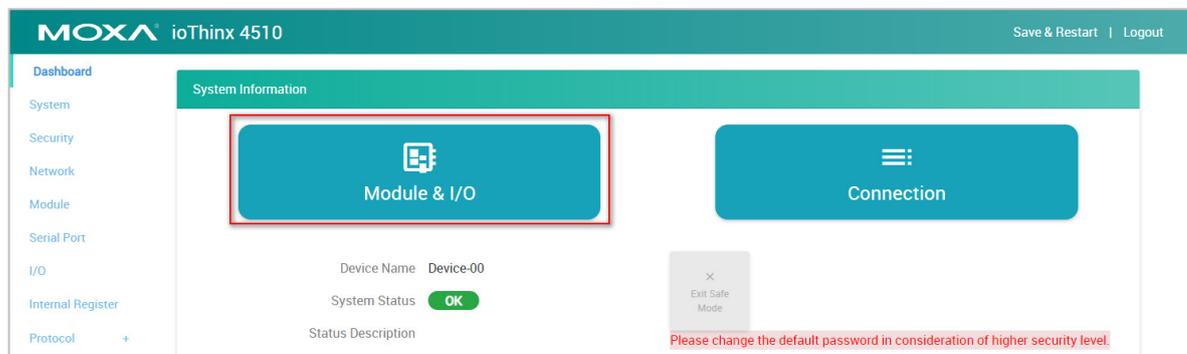

The upper side of this page shows the module status, including **Slot** position, module **Status**, **Firmware Version**, **Module Name**, **Model Name**, and **Serial Number**. Click **Locate** to identify the physical location of the module. The module's LED will blink green.

The lower side of the page shows the I/O status and allows you to operate the status of the output channels, such as DO, Pulse, or Relay channels. Refer to the **Module & I/O** section for detailed information.

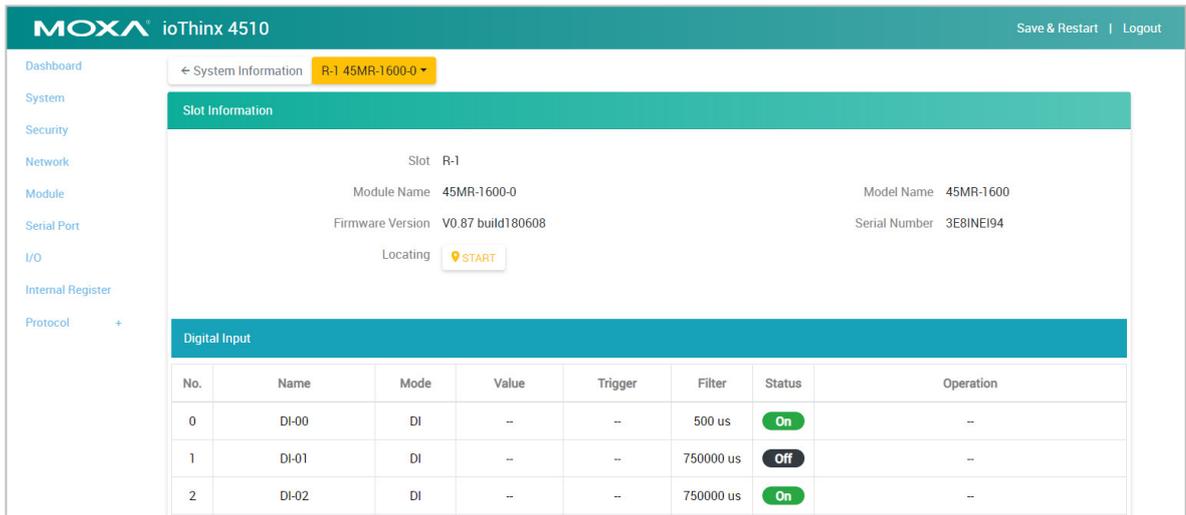


Monitoring Connection Status

Under the **Dashboard** of the web console, click the **Connection** button to go to the connection status web page.



The connection status page lists the connection information from other hosts.

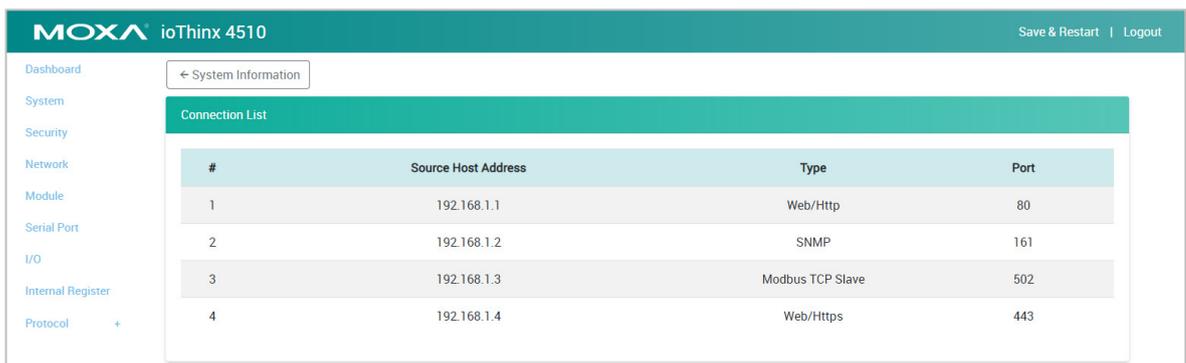

NOTE Some browsers may create more than one Web Https connection at the beginning. Once the connection is established, the browsers will only keep one and drop the others. Thus, it is normal that more than one Web Https connection is listed in the table at the beginning.


Updating the Firmware

Follow the steps to update the firmware to the device.

Step 1: Go to the configuration page via **Menu** → **System** → **Firmware**

Step 2: Click the **Browse** button to select a firmware file to update

Step 3: Click the **Update** button to start the update process

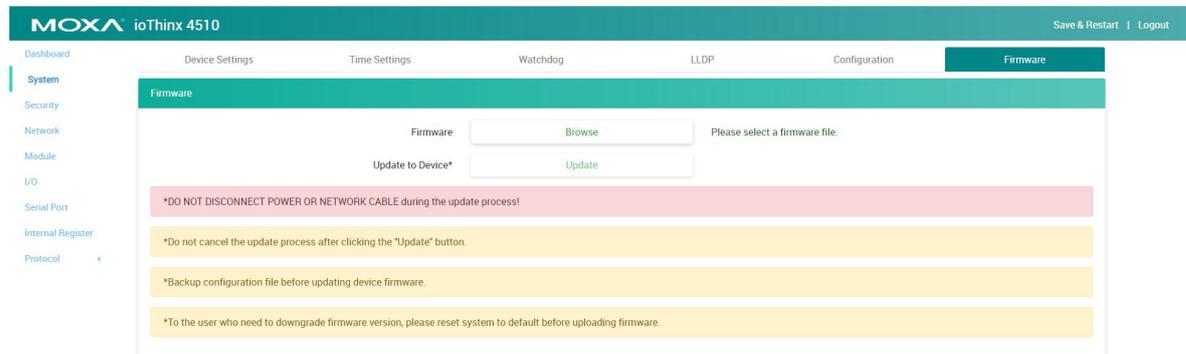

NOTE When the device is updating, do not turn the power off as it might corrupt the device.


NOTE The firmware cannot be updated via HTTPS. For those users who have security concerns, we suggest to use the manageability utility, IOxpress, to update firmware.

NOTE Performing a firmware update will delete the configurations in the device. Back up the configurations before performing the firmware update.


Restarting the Unit

This device will restart automatically after the firmware and configurations have been updated. The user can also restart the device manually.

Step 1: Click **Save & Restart** on the right upper corner of the page.

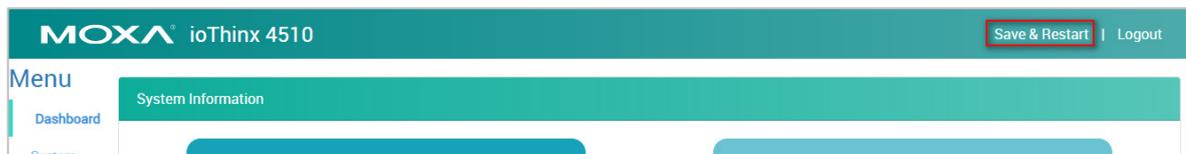

Step 2: The device will confirm that you want to perform a restart. Click **Restart Device** to restart the device.

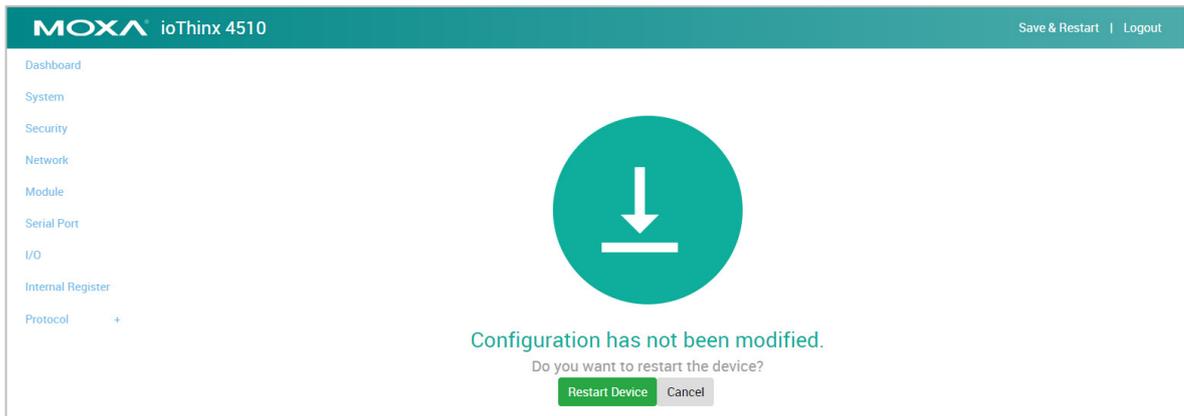

INFORMATION This device does not have a battery. Therefore, if the device is powered off, the system date and time will have to be set again. If the NTP server is not available, set the date and time of the device after rebooting.


Loading Factory Default Settings

There are three ways to restore the device to factory default settings.

1. Follow the steps to load the factory default settings from the web console.

Step 1: Go to the configuration page via **Menu** → **System** → **Configuration**


Step 2: Click **Reset** located under **Load to Default** and then the device will return to default settings.

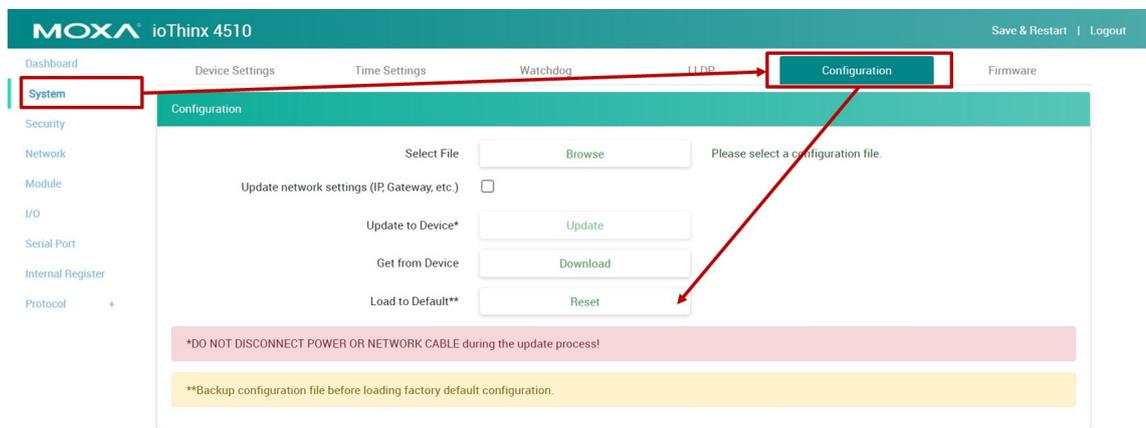

NOTE Loading the factory default settings will delete the configurations from this device. Please back up the configurations before loading the factory default settings.

2. Follow the steps to load the factory default settings from IOexpress.


Step 1: Select **Load Factory Default** from the dropdown menu.

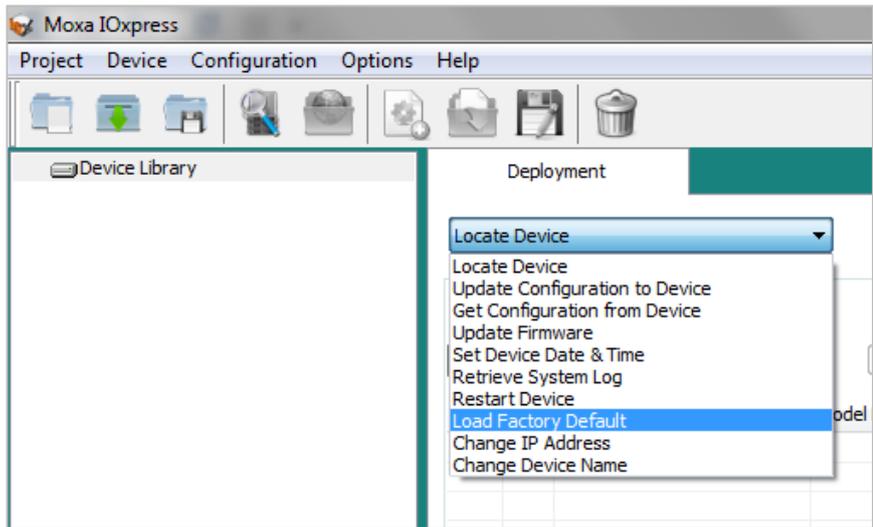

Step 2: Select the device(s), type the **username** and **password**, and then click **Submit**. IOexpress will start to perform the task on the selected devices. A message indicating success will appear in the **Result** column when the process has been completed.

INFORMATION Click **Apply to All** if the selected devices have the same settings.

3. Hold down the RESET button for 10 seconds to load factory default settings. The system will load the default settings and then restart the device. The system is ready when the RDY LED turns green.

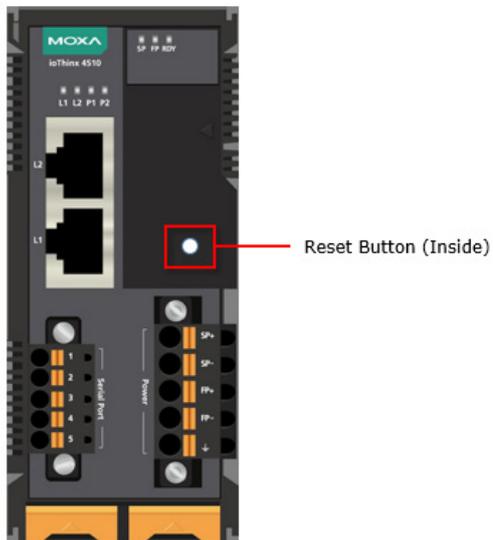

The following topics are covered in this chapter:

- ❑ **How to Use Modbus TCP to Connect to the ioThinx 4510 Series**
 - Using Modbus TCP via Modbus Poll
- ❑ **How to Use RESTful API to Connect to the ioThinx 4510 Series**
 - Using RESTful API via Postman
 - Send a GET request and a PUT request
- ❑ **How to Use MQTT to Connect to the ioThinx 4510 Series**
 - Broker Settings on the Computer
 - Set Up MQTT on the ioThinx 4510
 - Publisher and Subscriber Settings
- ❑ **How to Connect ioThinx 4510 to an MQTT Broker over TLS**
 - Broker Settings on the Computer
 - Client (publisher) setting
 - Client (subscriber) setting

How to Use Modbus TCP to Connect to the ioThinx 4510 Series

Using Modbus TCP via Modbus Poll

Introduction to Modbus Poll


Please refer to the following web page for information about Modbus Poll:

https://www.modbustools.com/modbus_poll.html



Modbus Poll
IP address: 192.168.127.200

Modbus TCP

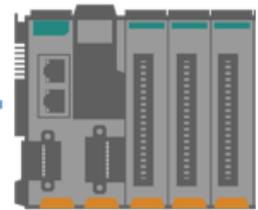

Moxa ioThinx 4510
IP address: 192.168.127.254

Enable Modbus/TCP Slave Service on the ioThinx 4510

1. Log in to the ioThinx 4510

Step 1: Open your web browser and type the default IP address of the device: 192.168.127.254.

Step 2: On the login page, type the default username/password (admin/moxa) to log in to the Web Console.

2. Enable Modbus/TCP slave service.


MOXA ioThinx 4510 Save & Restart | Logout

Dashboard | **Service Settings** | User Settings | Account Settings | Access Control | Certificate Settings

System | **Security** | Network | Module | Serial Port | I/O | Internal Register | Protocol +


No.	Service	TCP/UDP	Port
<input checked="" type="checkbox"/> 1	Web Service via HTTP	TCP	80
<input type="checkbox"/> 2	Web Service via HTTPS	TCP	443
MUST import the self-signed certificate before enabling the web service via https, or the browsers may block the connection			
<input checked="" type="checkbox"/> 3	RESTful API via HTTP	TCP	80
<input checked="" type="checkbox"/> 4	RESTful API via HTTPS	TCP	443
<input type="checkbox"/> 5	SNMP Agent	UDP	161
<input checked="" type="checkbox"/> 6	Modbus/TCP Slave	TCP	502

3. Click **Save & Restart** in the top right of the page and then click **Save and Restart** in the center of the page.

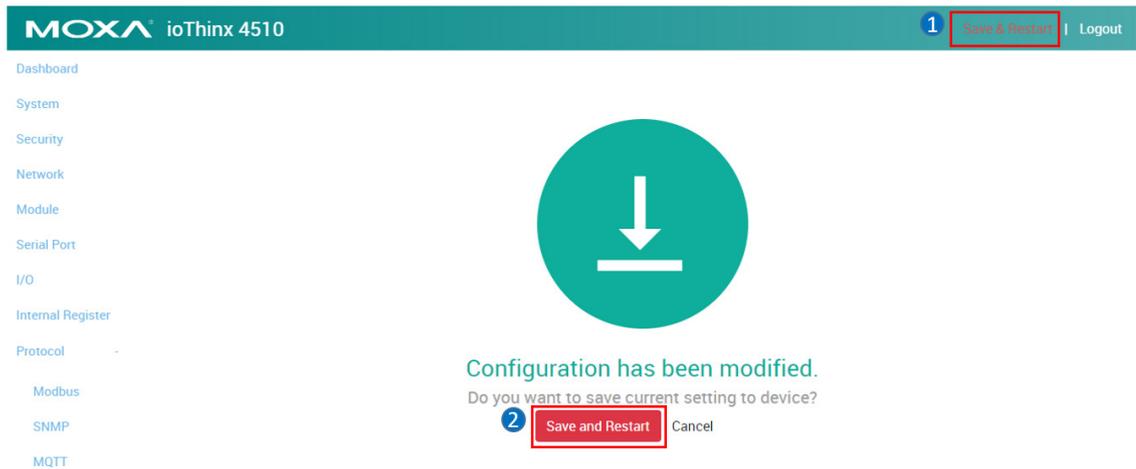


Set Up a Connection on Modbus Poll

1. Select **Connect** on **Modbus Poll's Connection** panel.

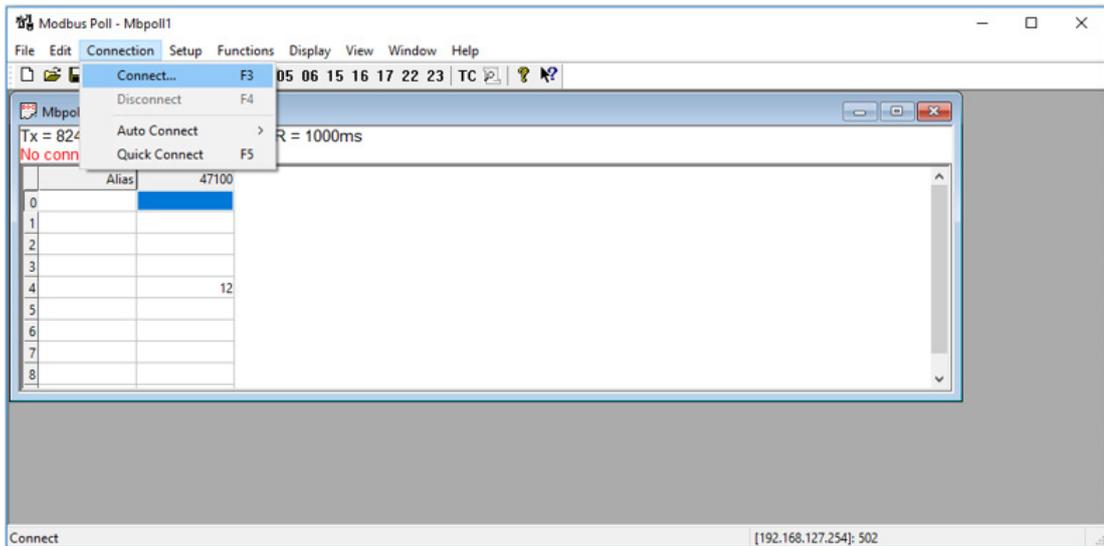


2. Enter the IP address of the device (default IP: 192.168.127.254).

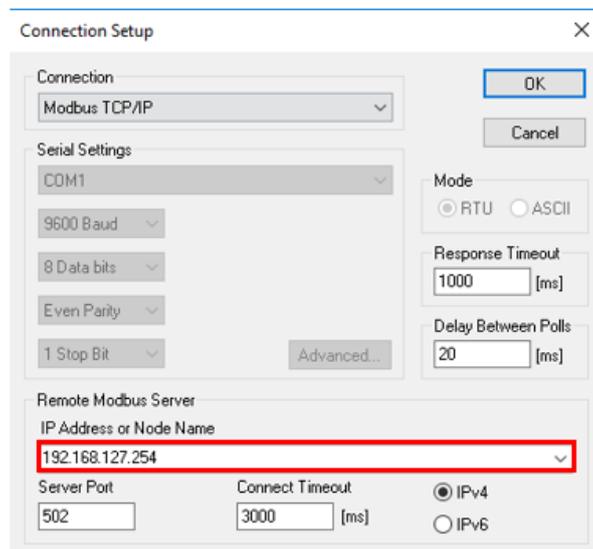


Write Single Coil: Use Modbus Poll to turn on an ioThinx 4510 DO channel

1. Select **Read/Write Definition** under the **Setup** menu.

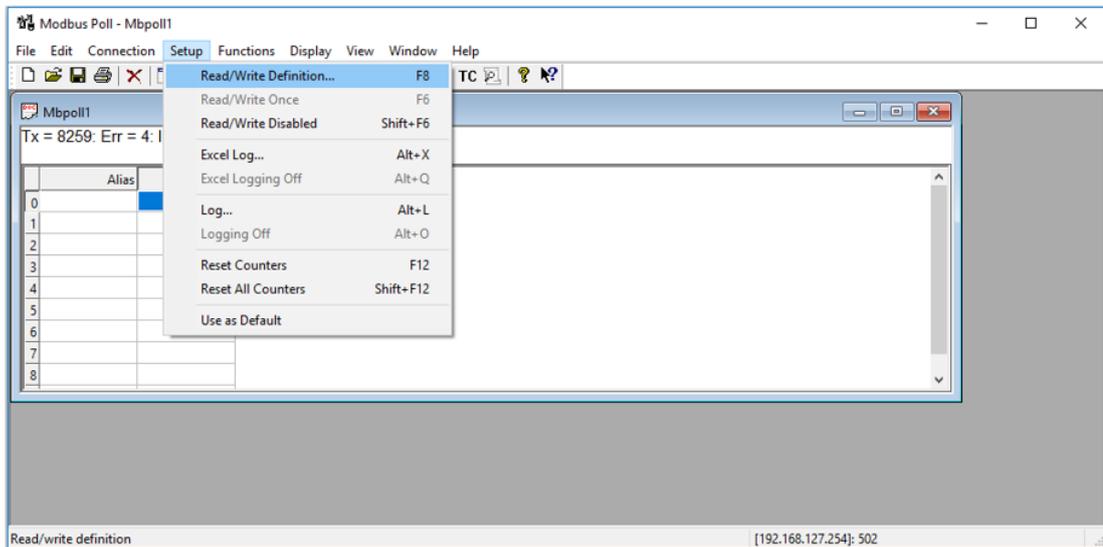


2. Select the **function code 05 Write Single Coil** and then enter **0**, the start **Address** of the DO channel.

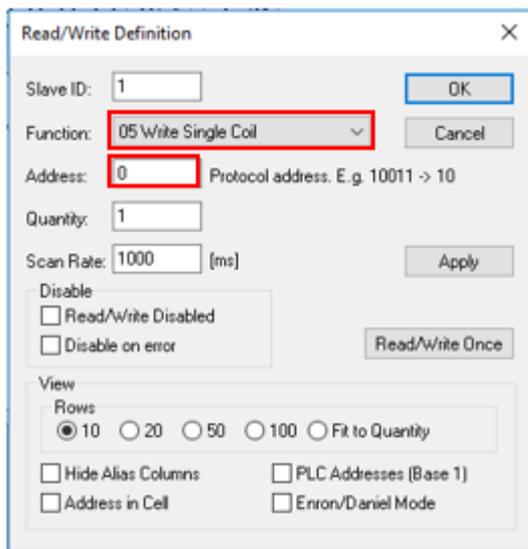


NOTE Take the following steps to check the **Start Address** of the device in the web console.


1. Open the web console and then click **Modbus** in the left panel. On this page, the Modbus TCP addresses are categorized as **Coil Status**, **Input Status**, **Holding Register**, and **Input Register**.

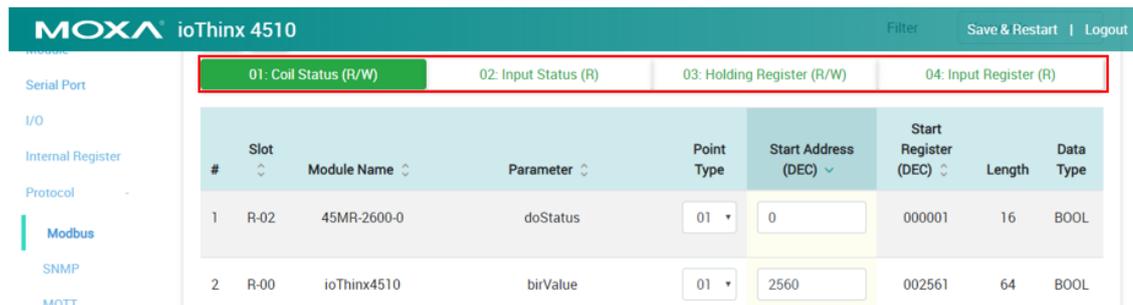


2. Type the text "doStatus" in the filter to find the **Start Address** of the DO channel.

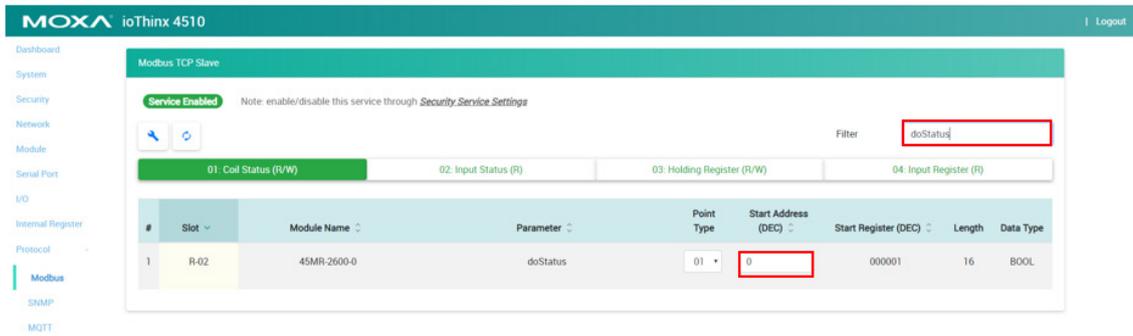

NOTE You can also manually modify the addresses if needed. To do so, click **Save & Restart** in the top right of the page after changing the **Start Address**.

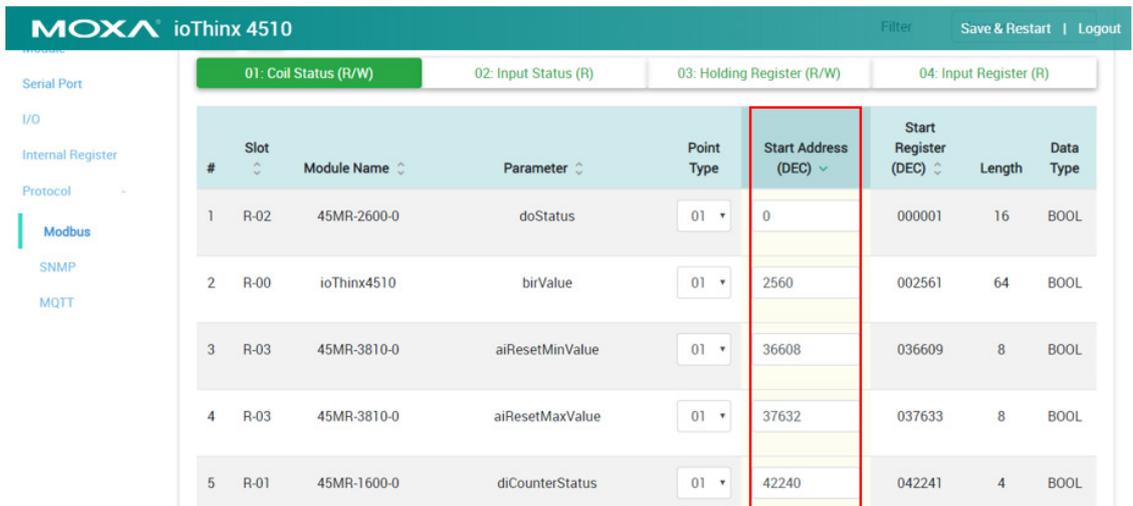

3. Change the DO-00 value from 0 to 1; DO-00 will respond by turning on the LED.

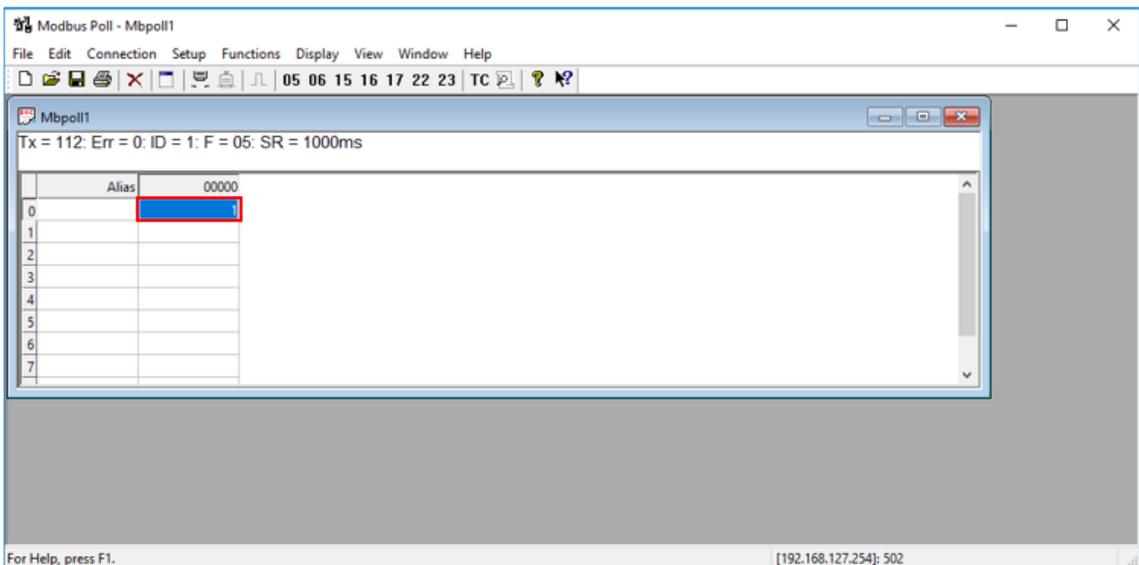

Read Coils: Use Modbus Poll to read the ioThinX 4510 DO channel status.

1. Select **Read/Write Definition** in the **Setup** panel.
2. Select the **function** code **01 Read Coils** and enter **0**, the start **Address** of the DO channel.

Read/Write Definition

Slave ID: 1

Function: 01 Read Coils (0x)

Address: 0 Protocol address. E.g. 11 -> 10

Quantity: 10

Scan Rate: 1000 [ms]

Disable

Read/Write Disabled

Disable on error

Read/Write Once

View

Rows

10 20 50 100 Fit to Quantity

Hide Alias Columns PLC Addresses (Base 1)

Address in Cell Error/Daniel Mode

3. The status will be shown in the table; when the DO-00 channel is turned on, the value should be 1).

Modbus Poll - Mbpoll1

File Edit Connection Setup Functions Display View Window Help

05 06 15 16 17 22 23 TC ?

Mbpoll1

Tx = 37; Err = 0; ID = 1; F = 01; SR = 1000ms

	Alias	00000
0		1
1		0
2		0
3		0
4		0
5		0
6		0
7		0
8		0

For Help, press F1. [192.168.127.254]: 502

How to Use RESTful API to Connect to the ioThinx 4510 Series

Using RESTful API via Postman


Introduction to Postman

For information about Postman, please refer to the following web page: <https://www.getpostman.com/>. Step-by-step procedures on how to use Postman are described below.



Postman(RESTful API client)
IP address: 192.168.127.200

RESTful API

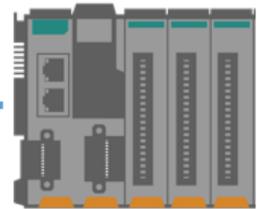

Moxa ioThinx 4510
IP address: 192.168.127.254

Enable the RESTful API service on the ioThinx 4510

1. Log in to the ioThinx 4510

Step 1: Open your web browser and type the default IP address of the device: 192.168.127.254.


Step 2: On the login page, type the default username/password (admin/moxa) to log in to the Web Console.

2. Click **Security** in the left menu and then select **RESTful API via HTTP** Service Settings.

The screenshot shows the Moxa ioThinx 4510 web console interface. The left sidebar contains a menu with 'Security' selected. The main content area displays the 'Service Settings' page, which includes a table of services and their configurations. The service 'RESTful API via HTTP' (No. 3) is highlighted with a red box.


No.	Service	TCP/UDP	Port
<input checked="" type="checkbox"/> 1	Web Service via HTTP	TCP	80
<input type="checkbox"/> 2	Web Service via HTTPS	TCP	443
MUST import the self-signed certificate before enabling the web service via https, or the browsers may block the connection			
<input checked="" type="checkbox"/> 3	RESTful API via HTTP	TCP	80
<input type="checkbox"/> 4	RESTful API via HTTPS	TCP	443
<input type="checkbox"/> 5	SNMP Agent	UDP	161
<input type="checkbox"/> 6	Modbus/TCP Slave	TCP	502
<input type="checkbox"/> 7	Modbus/RTU Master	-	-
<input type="checkbox"/> 8	MQTT Client	TCP	-
<input checked="" type="checkbox"/> 9	IOxpress/MCC Tool/MXIO	TCP/UDP	10124/4800

- Click **Save & Restart** in the top right corner of the page and then click Save and Restart in the center of the page.

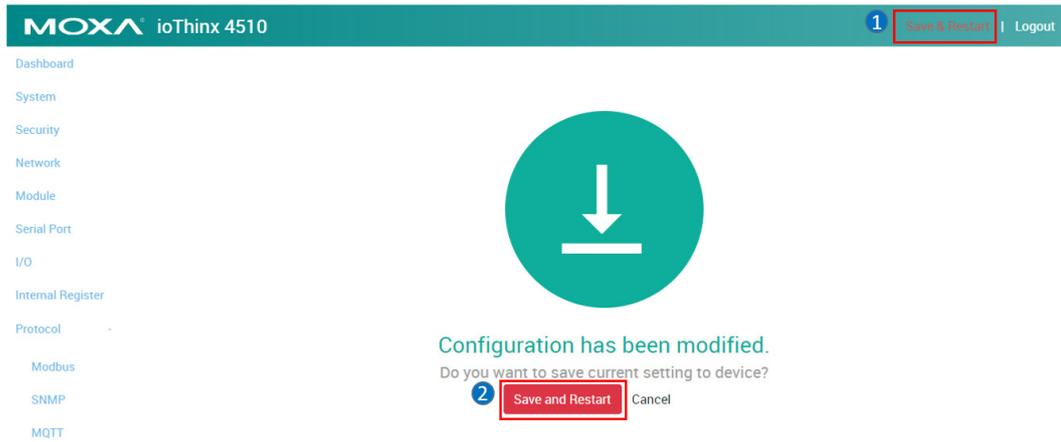


Configuring Postman

- Open Postman and create a new Request (named **GET example**).
- Create a **Collection**.
- Save** the new **Request** in the created **Collection**.
- Create another new **Request** (named **PUT example**) and save it in the created **Collection**.

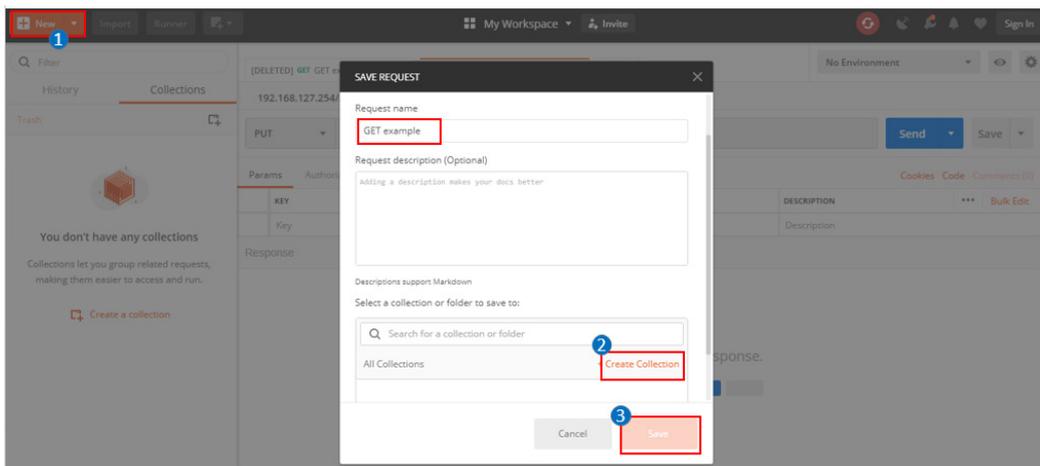

- Select the **GET method** on the **GET example** tab, and select the **PUT method** on the **PUT example** tab.

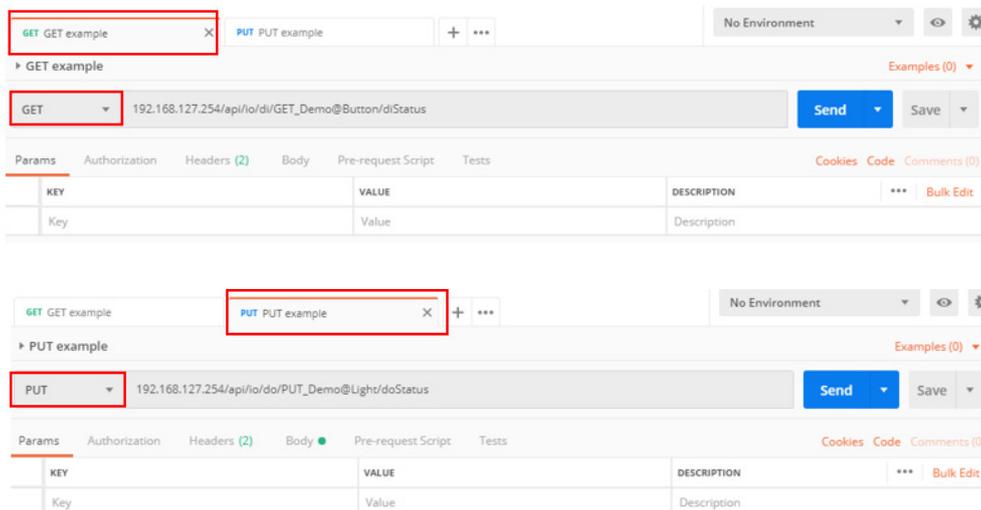

6. Create the following content in the Headers of the GET example tab and PUT example tab.
 - Content-Type: application/json
 - Accept: vdn.dac.v2

KEY	VALUE	DESCRIPTION
<input checked="" type="checkbox"/> Content-Type	application/json	
<input checked="" type="checkbox"/> Accept	vdn.dac.v2	

Send a GET request and a PUT request

RESTful API List Rules


You can check the RESTful API list here: [RESTful API Rules](#).

RESTful API	Description	Access	Format
/api/io/do{ioName}/doStatus	DO - status (0: OFF; 1: ON)	R/W	0 or 1
/api/io/do{ioName}/doPulseCount	DO - Pulse mode - count	R/W	0 to 65535
/api/io/do{ioName}/doPulseOnWidth	DO - Pulse mode - ON width (unit 500 μs)	R/W	1 to 65535
/api/io/do{ioName}/doPulseOffWidth	DO - Pulse mode - OFF width (unit 500 μs)	R/W	1 to 65535
/api/io/do{ioName}/doPulseStatus	DO - Pulse mode - status (0: Stop; 1: Start)	R/W	0 or 1


The {ioName} is composed of three elements: Module_Name, @, and I/O_Channel_Name. For example, the {ioName} associated with module name "45MR-2600-0" and DO channel name "DO-00" is 45MR-2600-0@DO-00.

NOTE The module and I/O channel name can be changed in **Module Settings** and **I/O Settings**.


1. In this demonstration, we change the name of module **45MR-1601** to **GET_Demo** and the name of **45MR-2600** to **PUT_Demo**.

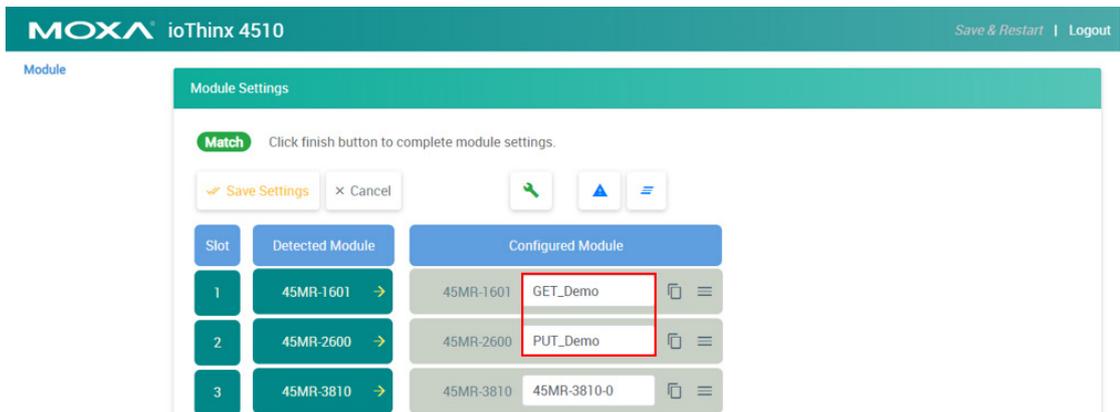

2. Change the **DI-00** channel name to **Button**.

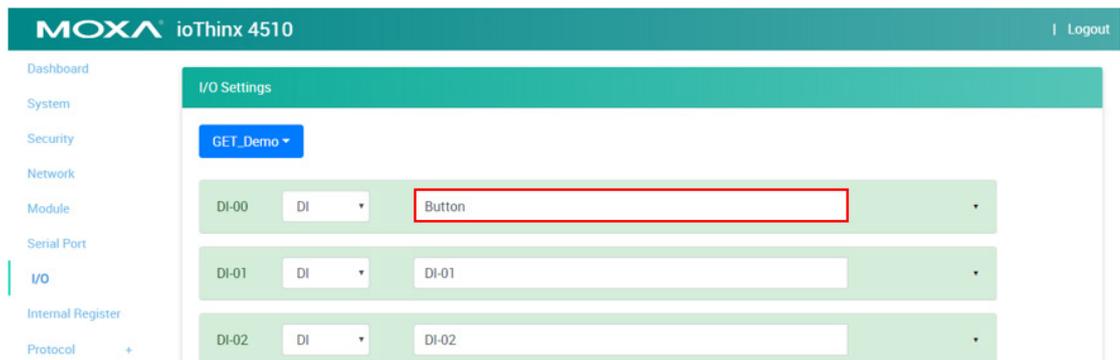


3. Change the **DO-00** channel name to **Light**.

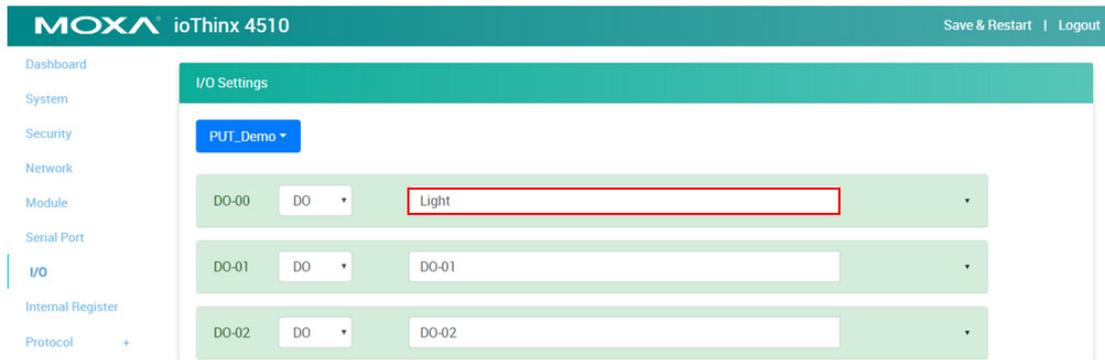


Send a GET request

1. Enter the request URL based on the IP address, file type, and API map. For this example, the request URL should be written as:
192.168.127.254/api/io/di/GET_Demo@Button/diStatus
2. Click the Send button. You should see the status code, response time, and results.

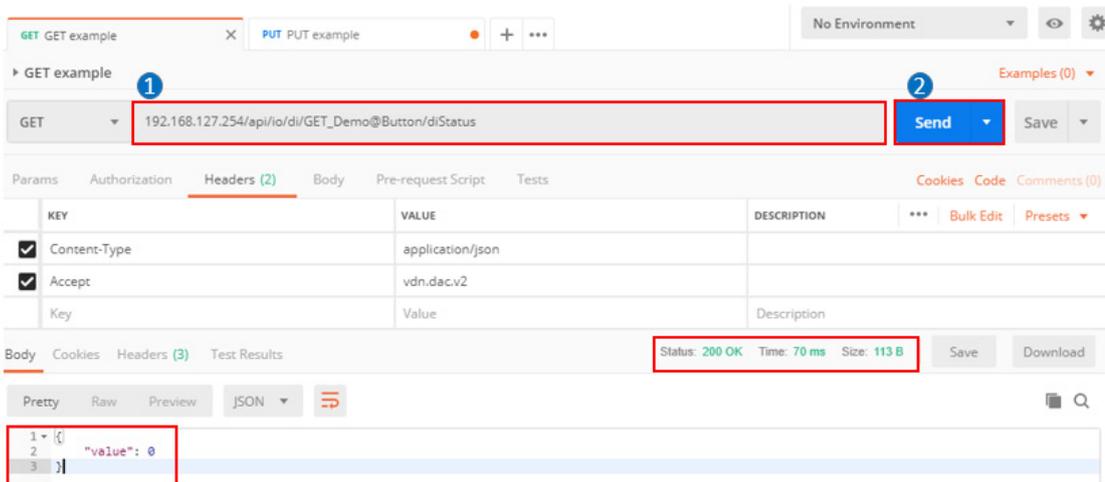

3. Press the DI0 button on the starter kit to trigger the DI-00 channel, and then click **Send** again. In response, the DI value will change.

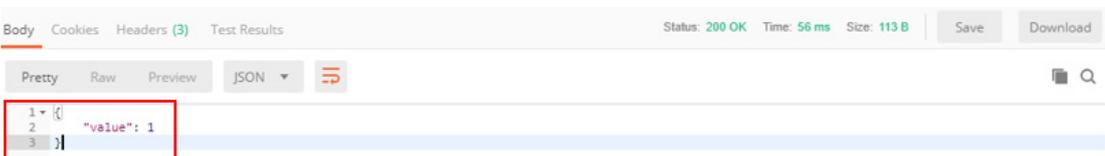

Send a PUT request


1. Enter the following request URL:
192.168.127.254/api/io/do/PUT_Demo@Light/doStatus
2. Locate the Body tag, select raw, and choose the JSON format.
3. Enter the following message:

```

1 {
2   "value": 1
3 }

```

- Click **Send**. The DO-00 channel should respond by turning the light on.

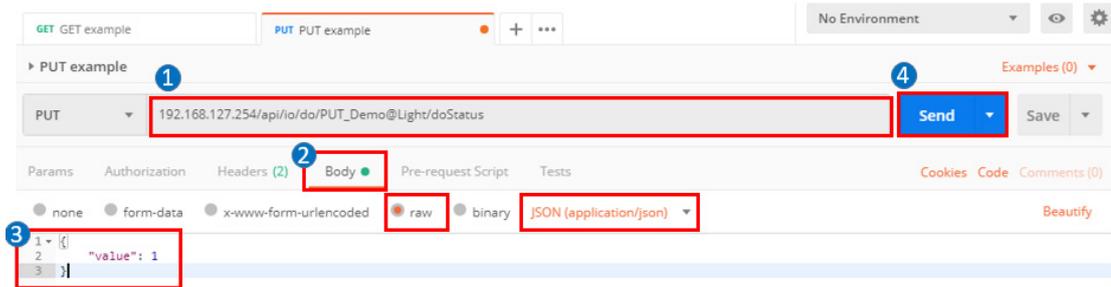


How to Use MQTT to Connect to the ioThinx 4510 Series

Broker Settings on the Computer

Introduction to Mosquitto

For information about Eclipse Mosquitto, please refer to the following web page: <https://mosquitto.org/>. Mosquitto can be used to implement versions 5.0, 3.1.1, and 3.1 of the MQTT protocol.

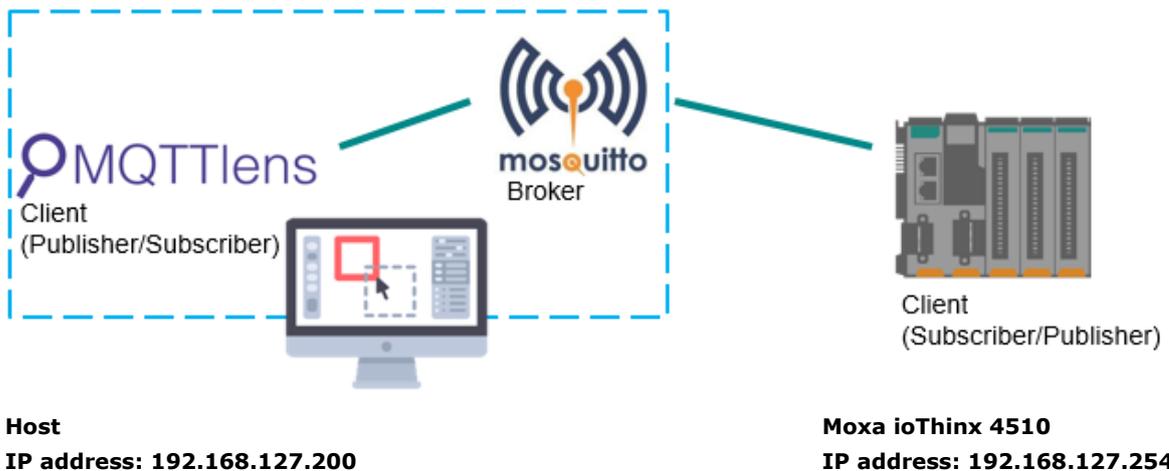

Run Mosquitto Broker from Task Manager


Type **Ctrl + Alt + Delete** to open **Task Manager**, click the **mosquitto** row to select it, and then right click in the status column and select **Start**.

Set Up MQTT on the ioThinx 4510

Enable MQTT Client Service


- Log in to the ioThinx 4510:
 - Step 1:** Open your web browser and type the default IP address of the device: 192.168.127.254.
 - Step 2:** On the login page, type the default username/password (admin/moxa) to log in to the Web Console.

- Click Security in the left menu. Select Service Settings at the top of the page and then select MQTT Client.

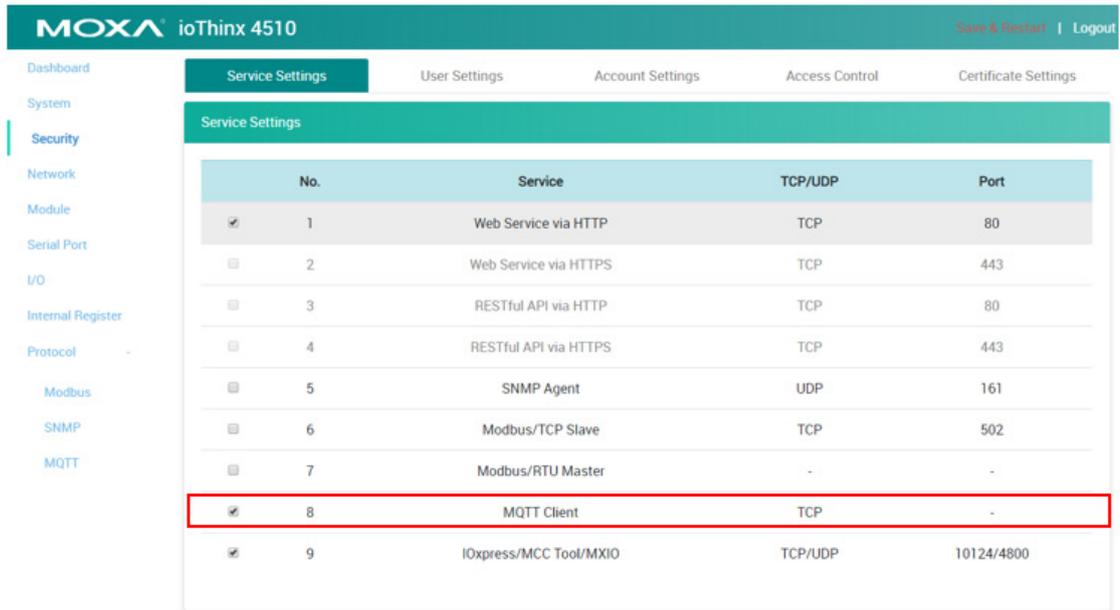



Connection and Topic Settings

- Select **MQTT** in the left menu and then set the **Broker IP** (your host's IP) under **Connection Settings**.


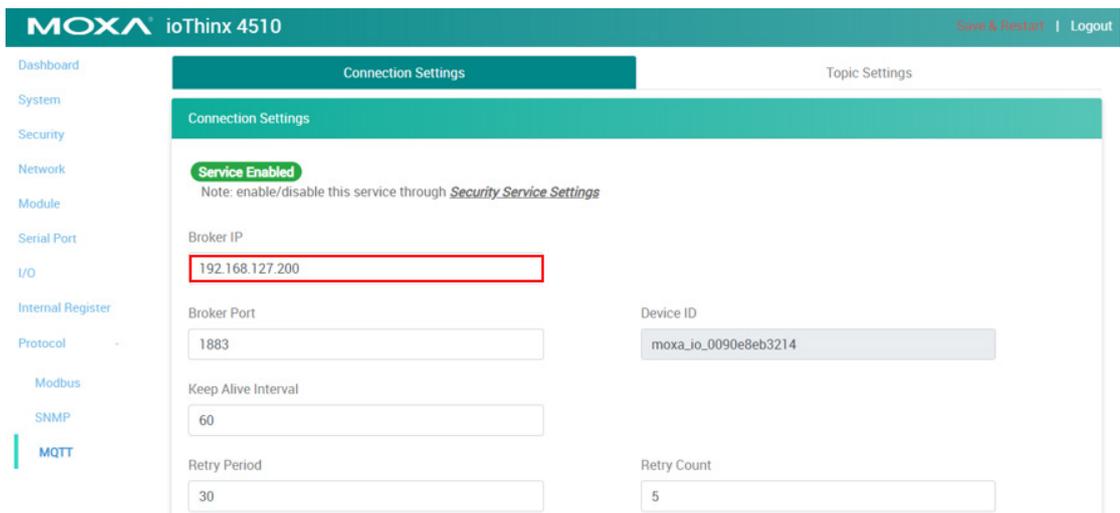


- Click **Publisher** and enable **Topic#1 (DI-00)**, and then click **Subscriber** and enable **Topic#1 (DO-00)**.

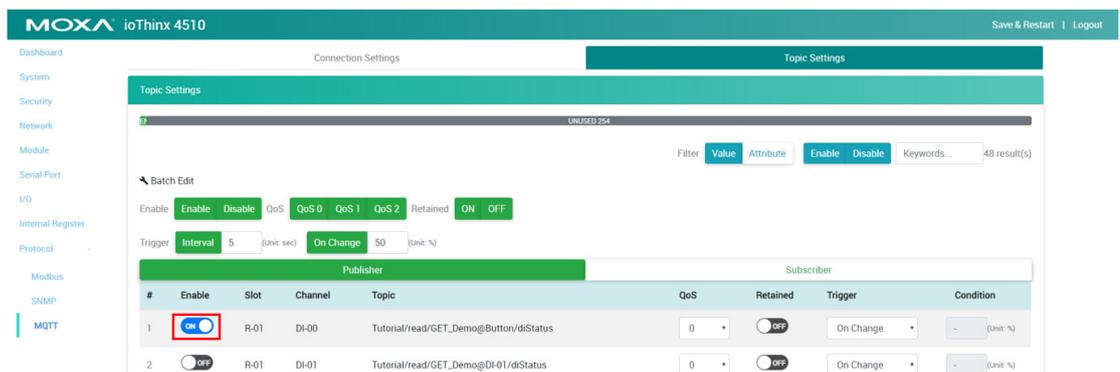

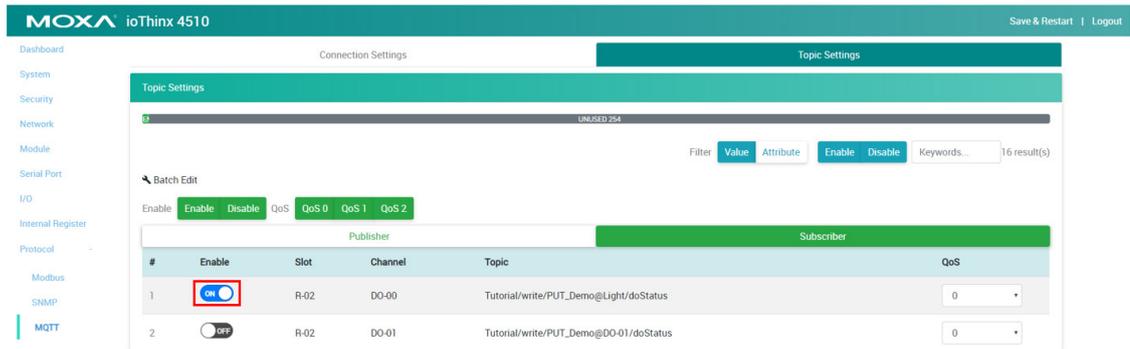


NOTE The content of the **Topic** is based on **Device Name**, **Module name**, and **I/O channel**. You can change these values in **Device Settings**, **Module Settings**, and **I/O Settings**.

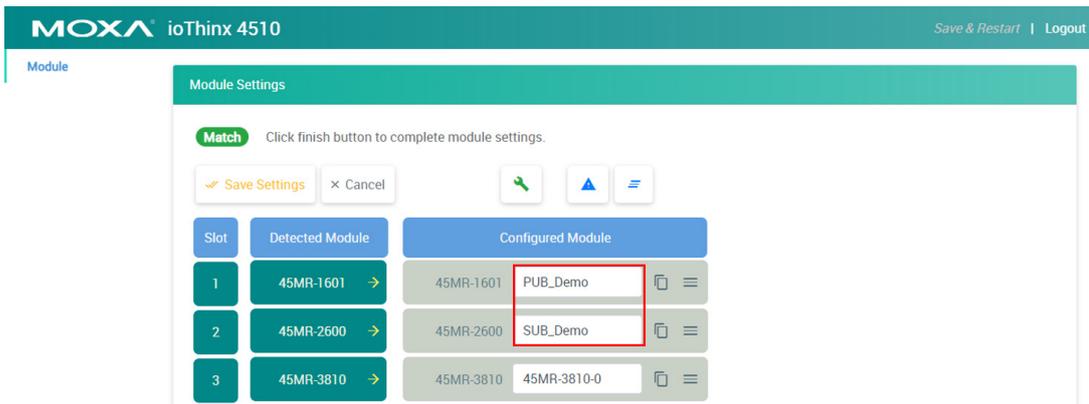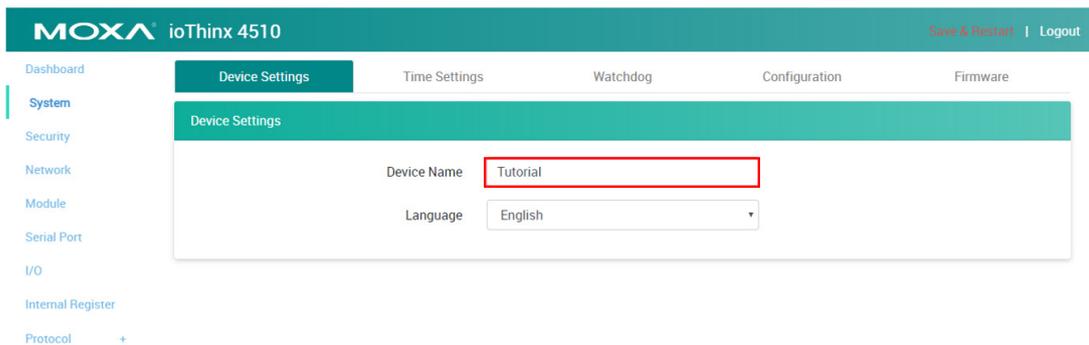

In this demonstration, we changed our **Topic #1 (DI-00 and DO-00)** as below:
 Publisher **Topic#1**(DI-00):Tutorial/read/PUB_Demo@Button/diStatus
 Subscriber **Topic#1**(DO-00):Tutorial/write/SUB_Demo@Light/doStatus

- Click **Save & Restart** in the upper-right corner, and then click **Save and Restart** in the center of the page.

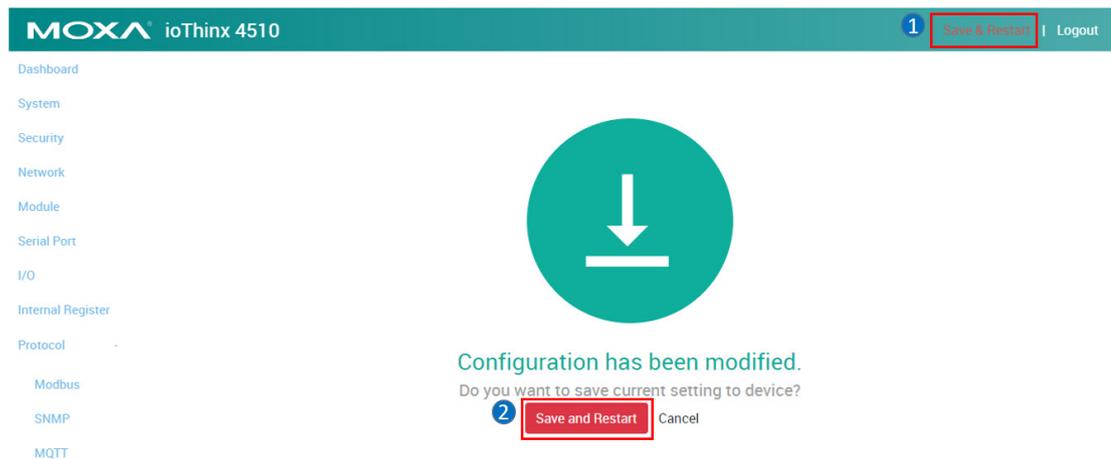

Publisher and Subscriber Settings

Introduction to MQTTLens


MQTTLens is a chrome application that supports MQTT communications. MQTTLens can be used to simulate communicating with the ioThinx 4510 via MQTT.

Configuring MQTTLens

- Add a new connection on **MQTTLens**



- Enter your **Connection name** and **Hostname** (broker IP) in the associated text input boxes.

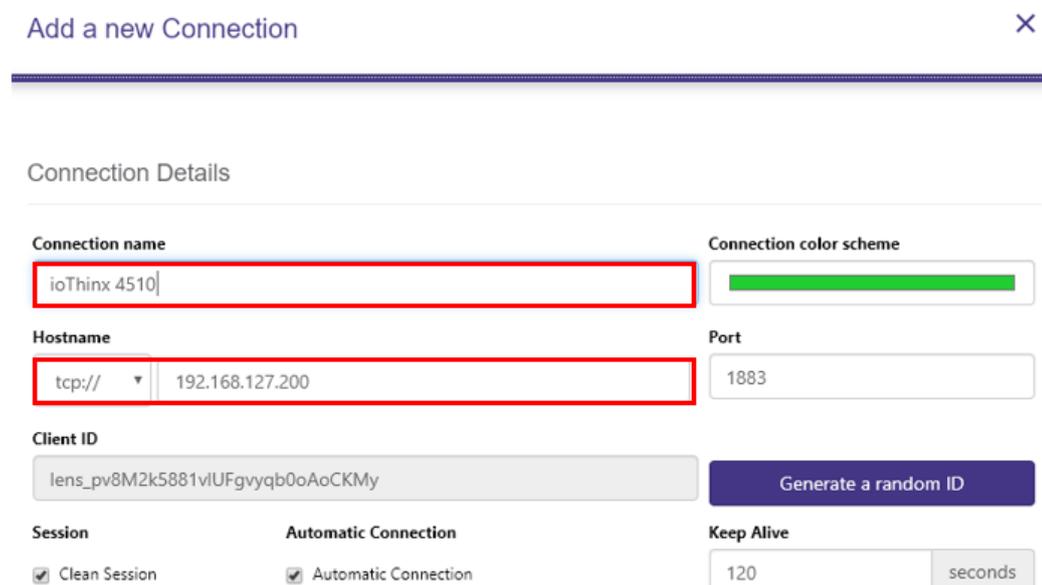

Scenario 1: Publish DI status to MQTTlens

- Publisher: ioThinx 4510
 - Subscriber: MQTTlens
1. Copy the topic from the ioThinx 4510 **MQTT publisher** tab.

Publisher					Subscriber				
#	Enable	Slot	Channel	Topic	QoS	Retained	Trigger	Condition	
1	<input checked="" type="checkbox"/>	R-01	DI-00	Tutorial/read/PUB_Demo@Button/diStatus	0	<input type="checkbox"/>	On Change	- (Unit %)	

Paste the topic into the subscribe column of the MQTTlens, and then click subscribe.



2. Press the DI0 button on the starter kit to trigger the DI-00 channel; you should see the DI value change on your subscriber.



Scenario 2: Turn on ioThinx 4510's DO channel


- Publisher: MQTTlens
 - Subscriber: ioThinx 4510
1. Copy the topic from the ioThinx 4510 **MQTT subscriber** page.

Publisher					Subscriber				
#	Enable	Slot	Channel	Topic	QoS				
1	<input checked="" type="checkbox"/>	R-02	DO-00	Tutorial/write/SUB_Demo@Light/doStatus	0				

2. Paste the Topic into the MQTTlens publish column.
3. Enter the following message:

```
Message
{
  "value":1
}
```

4. Click **Publish**. The DO-00 channel should respond by turning the light on.

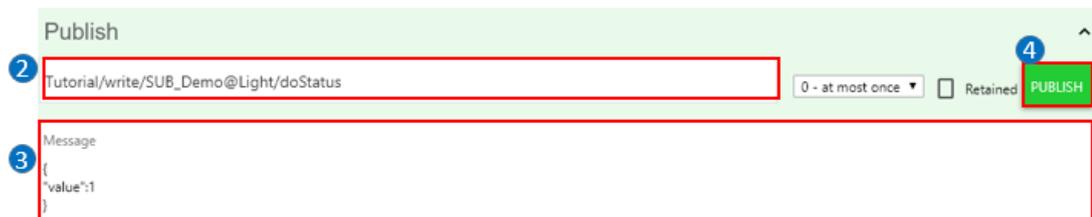


How to Connect ioThinx 4510 to an MQTT Broker over TLS

When using MQTT over TLS, the broker should support the following encryption method, which is supported by ioThinx 4510.

- MBEDTLS_TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256
- MBEDTLS_TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA256

Broker Settings on the Computer

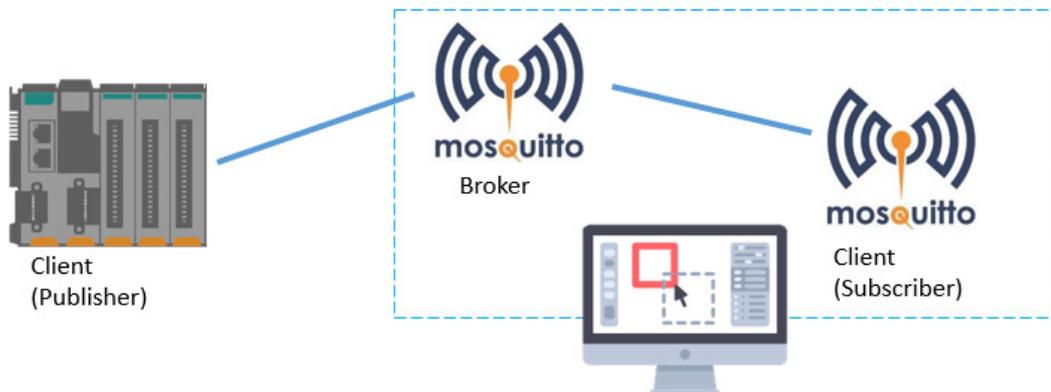


Moxa ioThinx 4510
IP address: 192.168.127.254


IP address: 192.168.127.200

Install OpenSSL


OpenSSL is a full-featured toolkit for the Transport Layer Security (TLS) and Secure Sockets Layer (SSL) protocols. User will need this for generating key.

1. Download and install OpenSSL from the website: <https://www.openssl.org/source/>
2. Set the environment variables to function OpenSSL properly on your system.

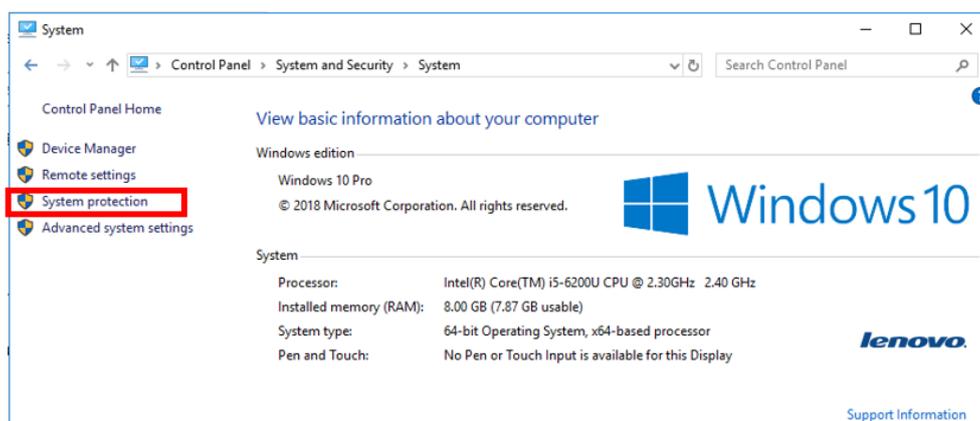


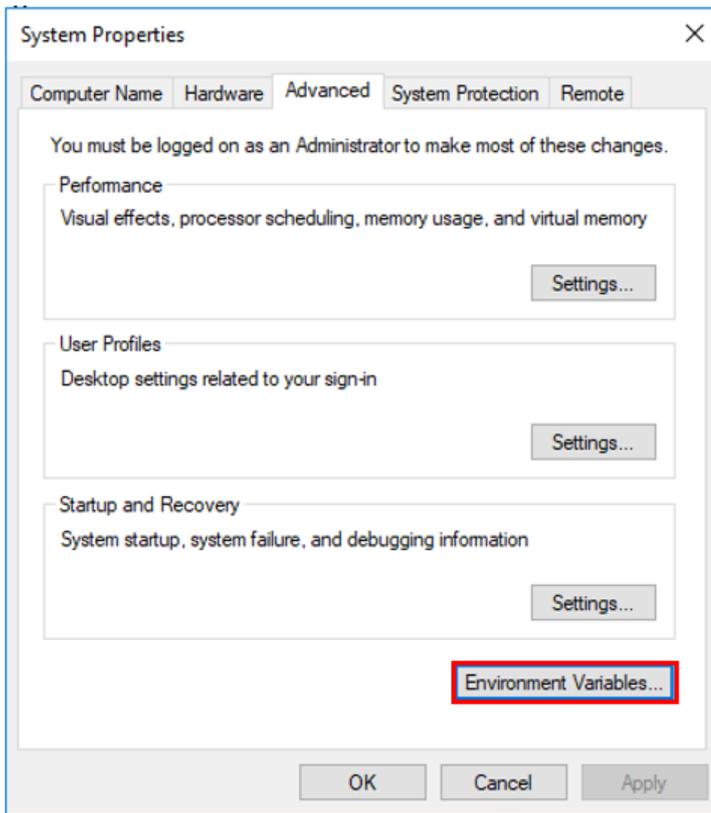

3. Select Path and click edit in the user variables section.

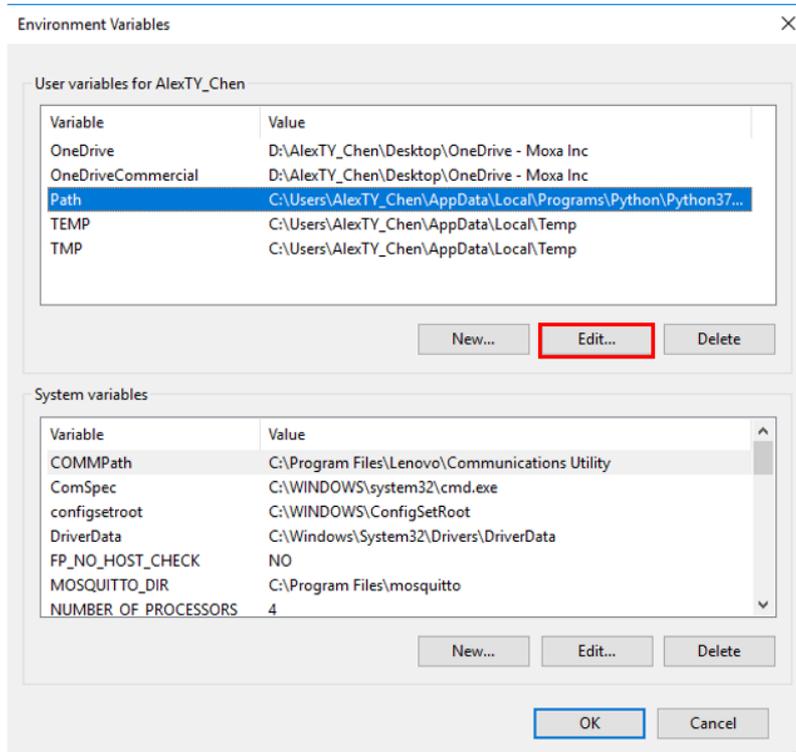

4. Create a new path for OpenSSL.

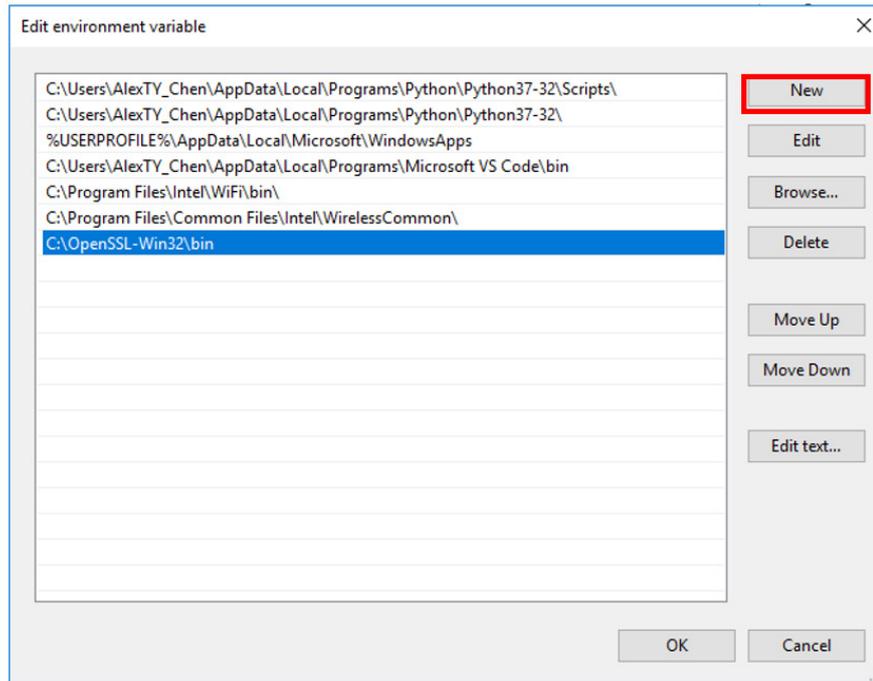

Generate Certificate

1. Run CMD (Command Prompt) as administrator
2. Generate certificate for the broker by entering below commands in cmd:
 - openssl ecparam -name prime256v1 -genkey -noout -out key.pem
 - openssl req -x509 -nodes -new -key key.pem -out ca.crt
 - openssl req -new -key key.pem -out certificate.csr
 - openssl x509 -req -in certificate.csr -CA ca.crt -CAkey key.pem -CAcreateserial -out certificate.crt

Note: the **Common Name** should be broker IP.

```

Administrator: Command Prompt
C:\Program Files\mosquitto>openssl ecparam -name prime256v1 -genkey -noout -out key.pem
C:\Program Files\mosquitto>openssl req -x509 -nodes -new -key key.pem -out ca.crt
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:TW
State or Province Name (full name) [Some-State]:Taiwan
Locality Name (eg, city) []:Taipei
Organization Name (eg, company) [Internet Widgits Pty Ltd]:Moxa Inc.
Organizational Unit Name (eg, section) []:MOC
Common Name (e.g. server FQDN or YOUR name) []:192.168.127.200
Email Address []:alexty.chen@moxa.com

C:\Program Files\mosquitto>openssl req -new -key key.pem -out certificate.csr
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:TW
State or Province Name (full name) [Some-State]:Taiwan
Locality Name (eg, city) []:Taipei

```

The files shown below will be generated. Put the files in the mosquitto folder.

Name	Date modified	Type	Size
ca.srl	11/27/2019 2:03 PM	SRL File	1 KB
certificate.crt	11/27/2019 2:03 PM	Security Certificate	1 KB
certificate.csr	11/27/2019 2:03 PM	CSR File	1 KB
ca.crt	11/27/2019 2:02 PM	Security Certificate	1 KB
key.pem	11/27/2019 2:02 PM	PEM File	1 KB

Modify mosquitto.conf

1. Open mosquitto.conf in the mosquitto folder.
2. Type in below certificate information in the #Certificate based SSL/TLS support section.
 - C:\Program Files\mosquitto\ca.crt
 - C:\Program Files\mosquitto\certificate.crt
 - C:\Program Files\mosquitto\key.pem

```

249 # -----
250 # Certificate based SSL/TLS support
251 # -----
252 # The following options can be used to enable SSL/TLS support for
253 # this listener. Note that the recommended port for MQTT over TLS
254 # is 8883, but this must be set manually.
255 #
256 # See also the mosquitto-tls man page.
257
258 # At least one of cafile or capath must be defined. They both
259 # define methods of accessing the PEM encoded Certificate
260 # Authority certificates that have signed your server certificate
261 # and that you wish to trust.
262 # cafile defines the path to a file containing the CA certificates.
263 # capath defines a directory that will be searched for files
264 # containing the CA certificates. For capath to work correctly, the
265 # certificate files must have ".crt" as the file ending and you must run
266 # "openssl rehash <path to capath>" each time you add/remove a certificate.
267 cafile C:\Program Files\mosquitto\ca.crt
268 #capath
269
270 # Path to the PEM encoded server certificate.
271 certfile C:\Program Files\mosquitto\certificate.crt
272 # Path to the PEM encoded keyfile.
273 keyfile C:\Program Files\mosquitto\key.pem
274

```

3. Add broker port 8883 to the end.

```

987 port 8883 # setting TLS port
988

```

4. Enter "mosquitto.exe -v -c mosquitto.conf" in the cmd to start broker

```


Administrator: Command Prompt - mosquitto.exe -v -c mosquitto.conf
C:\Program Files\mosquitto>mosquitto.exe -v -c mosquitto.conf
1579497626: mosquitto version 1.5.8 starting
1579497626: Config loaded from mosquitto.conf.
1579497626: Opening ipv6 listen socket on port 8883.
1579497626: Opening ipv4 listen socket on port 8883.
1579497634: New connection from 192.168.127.254 on port 8883.
1579497638: New client connected from 192.168.127.254 as moxa_io_0090e8799a5b (cl, k60).
1579497638: No will message specified.
1579497638: Sending CONNACK to moxa_io_0090e8799a5b (0, 0)

```

Client (publisher) setting

Use ioThinx 4510 to publish a message to the broker.

1. Set the Broker IP (your computer's IP) under Connection Settings. Enable TLS, the default Broker Port is 8883.

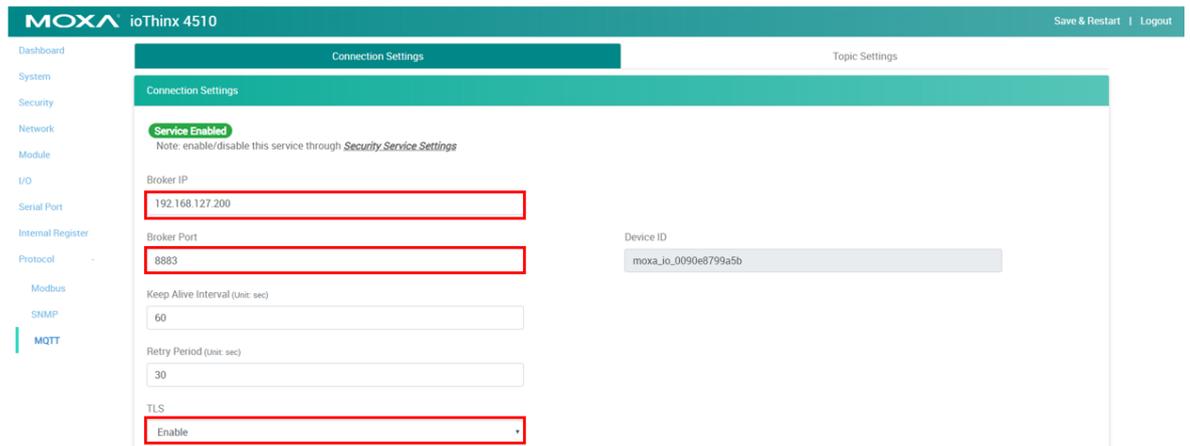

2. Click Publisher and enable Topic#1 (DI-00), then click Save and Restart.

Publisher					Subscriber			
#	Enable	Slot	Channel	Topic	QoS	Retained	Trigger	Condition
1	<input checked="" type="checkbox"/>	R-01	DI-00	Tutorial/read/PUB_Demo@Button/diStatus	0	<input type="checkbox"/>	On Change	- (Unit: %)

Client (subscriber) setting

Use **mosquitto_sub** to subscribe the topic. **mosquitto_sub** is a simple MQTT version 5/3.1.1 client that will subscribe to topics and print the messages that it receives.

Name	Date modified	Type	Size
pureadv2.dll	4/10/2019 3:51 AM	Application Extension	22 KB
Uninstall.exe	4/8/2019 4:05 PM	Application	65 KB
mosquitto.exe	3/1/2019 3:58 AM	Application	253 KB
mosquitto_pub.exe	3/1/2019 3:57 AM	Application	39 KB
mosquitto_sub.exe	3/1/2019 3:57 AM	Application	41 KB

1. Enter "mosquitto_sub.exe -h 192.168.127.200 -p 8883 -t "#" --cafile certificate.crt" in the cmd to get the message from broker
2. When trigger the DI-00 channel, the client(subscriber) will get the message.

```

Command Prompt - mosquitto_sub.exe -h 192.168.127.200 -p 8883 -t "#" --cafile certificate.crt
C:\Program Files\mosquitto>mosquitto_sub.exe -h 192.168.127.200 -p 8883 -t "#" --cafile certificate.crt
{"value":1}
{"value":0}
{"value":1}
{"value":0}

```

A

Appendix

The following topics are covered in this appendix:

❑ **Network Port Usage**

❑ **Modbus/TCP Slave Rules**

- Supported Function Code
- Exception Code
- System Registers
- 45MR-1600 (-T), 16 DIs Registers
- 45MR-1601 (-T), 16 DIs Registers
- 45MR-2404 (-T), 4 Relays Registers
- 45MR-2600 (-T), 16 DOs Registers
- 45MR-2601 (-T), 16 DOs Registers
- 45MR-2606 (-T), 8 DIs, 8 DOs Registers
- 45MR-3800 (-T), 8 AIs Registers
- 45MR-3810 (-T), 8 AIs Registers
- 45MR-4420 (-T), 4 AOs Registers
- 45MR-6600 (-T), 6 RTDs Registers
- 45MR-6810 (-T), 8 TCs Registers
- 45MR-7210(-T), System and Field Power Input Registers

❑ **SNMP Rules**

❑ **RESTful API Rules**

- Supported Request Method
- GET Request Components
- PUT Request Components
- RESTful API List
- Exception Code

❑ **MQTT Rules**

- Publish Topic
- Subscribe Topic

❑ **Troubleshooting**

- Forgot username & password
- Forgot IP address of the unit
- Failed to update firmware
- Failed to update configuration
- Failed to access the unit through IP address & IOxpress
- Failed to enter System Ready Mode

❑ **Import Self-Signed Certificate**

❑ **Return Value of a System Error**

Network Port Usage

Service Type	TCP/UDP	Port	Default
DHCP	UDP	68	Disabled
Web Server	TCP	80	Enabled
RESTful API	TCP	80	Disabled
SNMP Agent	UDP	161	Disabled
HTTPs	TCP	443	Disabled
Modbus/TCP Slave	TCP	502	Enabled
Auto Search	UDP	4800	Enabled
IOxpress/CLI	TCP	10124	Enabled

Modbus/TCP Slave Rules

Supported Function Code

Point Type	Register (decimal)	Access	Type	Supported Function Code
01: COIL STATUS	0xxxx	R/W	bit	1, 5, 15
02: INPUT STATUS	1xxxx	R	bit	2
03: HOLDING REGISTER	4xxxx	R/W	word	3, 6, 16
04: INPUT REGISTER	3xxxx	R	word	4

Exception Code

Code	Name	Comments
1	ILLEGAL FUNCTION	Function code is not valid.
2	ILLEGAL DATA ADDRESS	Data address is not valid.
3	ILLEGAL DATA VALUE	Writing value is not accepted.
4	SLAVE DEVICE FAILURE	Unrecoverable error occurred.

System Registers

01: COIL STATUS

Parameter	Description	Length	Type
boolInternalRegister	BOOL Internal Register (BIR)	48	BOOL

02: INPUT STATUS

Parameter	Description	Length	Type
watchdogAlarmFlag	Watchdog alarm flag status (0: Normal, 1: alarm)	1	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
wirValue	WORD IR - Value	48	WORD
dirValue	DWORD IR - Value	96	DWORD
firValue	FLOAT IR - Value	96	REAL

04: INPUT REGISTER

Parameter	Description	Length	Type
modbusRtuMasterDeviceStatus	Modbus/RTU Master - device status	4	WORD
modbusRtuMasterprofileErrorCode	Modbus/RTU Master - profile error code	8	WORD
deviceName	device name	8	BYTE
deviceDate	device date e.g. 2016/06/28 -> 20160628	2	DWORD
deviceTime	device local time e.g. 15:48:25 -> 154825	2	DWORD
deviceUpTime	unit: sec(s)	2	DWORD
firmwareVersion	Each byte represents ASCII code. e.g. 1.2.3 --> V1.2.3 , 11.13.12 -->V11.13.12	4	BYTE
firmwareBuildDate	Each byte represents ASCII code. E.g. 16051718 --> Build16051718	4	BYTE
serialNumber	Each byte represents ASCII code of serial number English character : e.g. TAGCB1100001	6	BYTE
lanMac	MAC address	4	BYTE
lanIp	IP address	2	BYTE
systemError	System Error	1	WORD

45MR-1600 (-T), 16 DIs Registers**01: COIL STATUS**

Parameter	Description	Length	Type
diCounterStatus	DI - Counter mode - status (0: Pause, 1: Run)	4	BOOL
diCounterOverflowFlagClear	DI - Counter mode - clear overflow flag (1: Clear)	4	BOOL

02: INPUT STATUS

Parameter	Description	Length	Type
diStatus	DI - DI mode - status (0: OFF, 1: ON)	16	BOOL
diMode	DI - mode (0: DI, 1: Counter)	16	BOOL
diCounterOverflowFlag	DI - Counter mode - overflow flag (0: Normal, 1: Overflow)	4	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
diCounterValue	DI - Counter mode - value	8	DWORD
diCounterStatusAll	DI - Counter mode - status (0: Pause, 1: Run)	1	WORD
diCounterOverflowFlagClearAll	DI - Counter mode - clear overflow flag (1: Clear)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
diStatusAll	DI - DI mode - status (0: OFF, 1: ON)	1	WORD
diCounterOverflowFlagAll	DI - Counter mode - overflow flag (0: Normal, 1: Overflow)	1	WORD
diModeAll	DI - mode (0: DI, 1: Counter)	1	WORD

45MR-1601 (-T), 16 DIs Registers

01: COIL STATUS

Parameter	Description	Length	Type
diCounterStatus	DI - Counter mode - status (0: Pause, 1: Run)	4	BOOL
diCounterOverflowFlagClear	DI - Counter mode - clear overflow flag (1: Clear)	4	BOOL

02: INPUT STATUS?

Parameter	Description	Length	Type
diStatus	DI - DI mode - status (0: OFF, 1: ON)	16	BOOL
diMode	DI - mode (0: DI, 1: Counter)	16	BOOL
diCounterOverflowFlag	DI - Counter mode - overflow flag (0: Normal, 1: Overflow)	4	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
diCounterValue	DI - Counter mode - value	8	DWORD
diCounterStatusAll	DI - Counter mode - status (0: Pause, 1: Run)	1	WORD
diCounterOverflowFlagClearAll	DI - Counter mode - clear overflow flag (1: Clear)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
diStatusAll	DI - DI mode - status (0: OFF, 1: ON)	1	WORD
diCounterOverflowFlagAll	DI - Counter mode - overflow flag (0: Normal, 1: Overflow)	1	WORD
diModeAll	DI - mode (0: DI, 1: Counter)	1	WORD

45MR-2404 (-T), 4 Relays Registers

01: COIL STATUS

Parameter	Description	Length	Type
relayStatus	Relay - Relay mode - status (0: OFF, 1: ON)	4	BOOL
relayCurrentCountReset	Relay - reset current count (1: Reset)	4	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
relayStatusAll	Relay - Relay mode - status (0: OFF, 1: ON)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
relayTotalCount	Relay - total count	8	DWORD
relayCurrentCount	Relay - current count	8	DWORD

45MR-2600 (-T), 16 DOs Registers

01: COIL STATUS

Parameter	Description	Length	Type
doStatus	DO - status (0: OFF, 1: ON)	16	BOOL
doPulseStatus	DO - Pulse mode - status (0: Stop, 1: Start)	4	BOOL

02: INPUT STATUS?

Parameter	Description	Length	Type
doMode	DO - mode (0: DO, 1: Pulse)	16	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
doStatusAll	DO - status (0: OFF, 1: ON)	1	WORD
doPulseCount	DO - Pulse mode - count	8	DWORD
doPulseOnWidth	DO - Pulse mode - ON width (unit: 500 us)	4	WORD
doPulseOffWidth	DO - Pulse mode - OFF width (unit: 500 us)	4	WORD
doPulseStatusAll	DO - Pulse mode - status (0: Stop, 1: Start)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
doModeAll	DO - mode (0: DO, 1: Pulse)	1	WORD

45MR-2601 (-T), 16 DOs Registers

01: COIL STATUS

Parameter	Description	Length	Type
doStatus	DO - status (0: OFF, 1: ON)	16	BOOL
doPulseStatus	DO - Pulse mode - status (0: Stop, 1: Start)	4	BOOL

02: INPUT STATUS?

Parameter	Description	Length	Type
doMode	DO - mode (0: DO, 1: Pulse)	16	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
doStatusAll	DO - status (0: OFF, 1: ON)	1	WORD
doPulseCount	DO - Pulse mode - count	8	DWORD
doPulseOnWidth	DO - Pulse mode - ON width (unit: 500 us)	4	WORD
doPulseOffWidth	DO - Pulse mode - OFF width (unit: 500 us)	4	WORD
doPulseStatusAll	DO - Pulse mode - status (0: Stop, 1: Start)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
doModeAll	DO - mode (0: DO, 1: Pulse)	1	WORD

45MR-2606 (-T), 8 DIs, 8 DOs Registers

01: COIL STATUS

Parameter	Description	Length	Type
doStatus	DO - status (0: OFF, 1: ON)	8	BOOL
diCounterStatus	DI - Counter mode - status (0: Pause, 1: Run)	2	BOOL
diCounterOverflowFlagClear	DI - Counter mode - clear overflow flag (1: Clear)	2	BOOL
doPulseStatus	DO - Pulse mode - status (0: Stop, 1: Start)	2	BOOL

02: INPUT STATUS?

Parameter	Description	Length	Type
diStatus	DI - DI mode - status (0: OFF, 1: ON)	8	BOOL
diMode	DI - mode (0: DI, 1: Counter)	8	BOOL
doMode	DO - mode (0: DO, 1: Pulse)	8	BOOL
diCounterOverflowFlag	DI - Counter mode - overflow flag (0: Normal, 1: Overflow)	2	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
diCounterValue	DI - Counter mode - value	4	DWORD
doStatusAll	DO - status (0: OFF, 1: ON)	1	WORD
doPulseCount	DO - Pulse mode - count	4	DWORD
doPulseOnWidth	DO - Pulse mode - ON width (unit: 500 us)	2	WORD
doPulseOffWidth	DO - Pulse mode - OFF width (unit: 500 us)	2	WORD
doPulseStatusAll	DO - Pulse mode - status (0: Stop, 1: Start)	1	WORD
diCounterStatusAll	DI - Counter mode - status (0: Pause, 1: Run)	1	WORD
diCounterOverflowFlagClearAll	DI - Counter mode - clear overflow flag (1: Clear)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
diStatusAll	DI - DI mode - status (0: OFF, 1: ON)	1	WORD
diCounterOverflowFlagAll	DI - Counter mode - overflow flag (0: Normal, 1: Overflow)	1	WORD
diModeAll	DI - mode (0: DI, 1: Counter)	1	WORD
doModeAll	DO - mode (0: DO, 1: Pulse)	1	WORD

45MR-3800 (-T), 8 AIs Registers

01: COIL STATUS

Parameter	Description	Length	Type
aiResetMinValue	AI - reset minimum value (1: Reset)	8	BOOL
aiResetMaxValue	AI - reset maximum value (1: Reset)	8	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
aiResetMinValueAll	AI - reset minimum value (1: Reset)	1	WORD
aiResetMaxValueAll	AI - reset maximum value (1: Reset)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
aiValueRaw	AI - raw value	8	WORD
aiValueRawMin	AI - minimum raw value	8	WORD
aiValueRawMax	AI - maximum raw value	8	WORD
aiValueScaled	AI - scaled value	16	REAL
aiValueScaledMin	AI - minimum scaled value	16	REAL
aiValueScaledMax	AI - maximum scaled value	16	REAL
aiStatus	AI - status (0: normal, 1: burnout, 2: over range, 3. under range)	8	WORD
aiBurnoutValueScaled	AI - scaled burnout value	16	REAL
aiMode	AI - mode (0: disable, 1: 0-10 V, 2: 0-20 mA, 3: 4-20 mA burnout, 4: 4-20 mA, 5: ±10 V)	8	WORD

45MR-3810 (-T), 8 AIs Registers

01: COIL STATUS

Parameter	Description	Length	Type
aiResetMinValue	AI - reset minimum value (1: Reset)	8	BOOL
aiResetMaxValue	AI - reset maximum value (1: Reset)	8	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
aiResetMinValueAll	AI - reset minimum value (1: Reset)	1	WORD
aiResetMaxValueAll	AI - reset maximum value (1: Reset)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
aiValueRaw	AI - raw value	8	WORD
aiValueRawMin	AI - minimum raw value	8	WORD
aiValueRawMax	AI - maximum raw value	8	WORD
aiValueScaled	AI - scaled value	16	REAL
aiValueScaledMin	AI - minimum scaled value	16	REAL
aiValueScaledMax	AI - maximum scaled value	16	REAL
aiStatus	AI - status (0: normal, 1: burnout, 2: over range, 3. under range)	8	WORD
aiBurnoutValueScaled	AI - scaled burnout value	16	REAL
aiMode	AI - mode (0: disable, 1: 0-10 V, 2: 0-20 mA, 3: 4-20 mA burnout, 4: 4-20 mA, 5: ±10 V)	8	WORD

45MR-4420 (-T), 4 AOs Registers

03: HOLDING REGISTER

Parameter	Description	Length	Type
aoValueRaw	AO - raw value	4	WORD
aoValueScaled	AO - scaled value	8	REAL

04: INPUT REGISTER

Parameter	Description	Length	Type
aoMode	AO - mode (0: disable, 1: 0-10 V, 2: 0-20 mA, 3: 4-20 mA, 4: ± 10 V)	4	WORD

45MR-6600 (-T), 6 RTDs Registers

01: COIL STATUS

Parameter	Description	Length	Type
rtdResetMinValue	RTD - reset minimum value (1: Reset)	6	BOOL
rtdResetMaxValue	RTD - reset maximum value (1: Reset)	6	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
rtdResetMinValueAll	RTD - reset minimum value (1: Reset)	1	WORD
rtdResetMaxValueAll	RTD - reset maximum value (1: Reset)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
rtdValueScaled	RTD - scaled value	12	REAL
rtdValueScaledMin	RTD - minimum scaled value	12	REAL
rtdValueScaledMax	RTD - maximum scaled value	12	REAL
rtdType	RTD - Type (0: PT50, 1: PT100, 2: PT200, 3: PT500, 4: PT1000; 14: 310 Ohm, 15: 620 Ohm, 16: 1250 Ohm, 17: 2200 Ohm; 20: JPT100, 21: JPT200, 22: JPT500, 23: JPT1000; 30: NI100, 31: NI200, 32: NI500, 33: NI1000, 34: NI120)	6	WORD
rtdStatus	RTD - Status (0: normal, 1: burnout)	6	WORD

45MR-6810 (-T), 8 TCs Registers

01: COIL STATUS

Parameter	Description	Length	Type
tcResetMinValue	TC - reset minimum value (1: Reset)	8	BOOL
tcResetMaxValue	TC - reset maximum value (1: Reset)	8	BOOL

03: HOLDING REGISTER

Parameter	Description	Length	Type
tcResetMinValueAll	TC - reset minimum value (1: Reset)	1	WORD
tcResetMaxValueAll	TC - reset maximum value (1: Reset)	1	WORD

04: INPUT REGISTER

Parameter	Description	Length	Type
tcValueScaled	TC - scaled value	16	REAL
tcValueScaledMin	TC - minimum scaled value	16	REAL
tcValueScaledMax	TC - maximum scaled value	16	REAL
tcType	TC - Type (0: J Type, 1: K Type, 2: T Type, 3: E Type, 4: R Type, 5: S Type, 6: B Type, 7: N Type, 14: ±78.126 mV, 15: ±39.062 mV, 16: ±19.532 mV)	8	WORD
tcStatus	TC - Status (0: normal, 1: burnout)	8	WORD

45MR-7210(-T), System and Field Power Input Registers

Parameters	Description	Length	Type
spStatus	SP - system power Status	1	WORD
spLowerLimitValue	SP - system power lower limit value	2	REAL
spUpperLimitValue	SP - system power upper limit value	2	REAL
fpStatus	FP - Field Power Status	1	WORD

SNMP Rules

All OIDs of this device begin with .1.3.6.1.4.1.8691.10.4510. The data can be read or written by a network management software with the following OIDs. Download the latest version of the MIB file from www.moxa.com for additional information.

OID	Type
.1.3.6.1.4.1.8691.10.4510.1	systemInfo
.1.3.6.1.4.1.8691.10.4510.2	systemPower
.1.3.6.1.4.1.8691.10.4510.3	fieldPower
.1.3.6.1.4.1.8691.10.4510.11	di
.1.3.6.1.4.1.8691.10.4510.12	do
.1.3.6.1.4.1.8691.10.4510.13	relay
.1.3.6.1.4.1.8691.10.4510.21	ai
.1.3.6.1.4.1.8691.10.4510.22	ao
.1.3.6.1.4.1.8691.10.4510.23	rtd
.1.3.6.1.4.1.8691.10.4510.24	tc
.1.3.6.1.4.1.8691.10.4510.41	internalRegister
.1.3.6.1.4.1.8691.10.4510.91	event
.1.3.6.1.4.1.8691.10.4510.92	eventTriggerType

RESTful API Rules

Supported Request Method

Request	Description
GET	The GET method is used to retrieve information from the given server using a given URI. Requests using GET should only retrieve data and should have no other effect on the data.
PUT	Replaces all the current representations of the target resource with the uploaded content.
OPTIONS	Describe the communication options for the target resource.

GET Request Components

Component	Content	Description
Request Method	GET	Use GET request to retrieve information
URL	http://{IP address}/{RESTful API}	Refer to RESTful API List
Headers	Accept: vdn.dac.v2 Content-Type: application/json	Headers are mandatory for all RESTful API requests

PUT Request Components

Component	Content	Description
Request Method	PUT	Use PUT request to replace current representation
URL	http://{IP address}/{RESTful API}	Refer to RESTful API List
Headers	Accept: vdn.dac.v2 Content-Type: application/json	Headers are mandatory for all RESTful API requests
Body	{"value":1}	Uploaded content for replacing current representation

RESTful API List

Here lists the RESTful APIs supported by this device. The {ioName} is composed with three elements, including **Module_Name**, **@**, and **I/O_Channel_Name**. For example, the {ioName} of the module name "45MR-1600-0" and the DI channel name "DI-00" is 45MR-1600-0@DI-00.

RESTful API	Description	Access	Format
/api/sysInfo	All system information	R	
/api/sysInfo/device	Device name	R	
	Device local date and time	R	yyyy/mm/dd hh:mm:ss
	Device up time	R	hh:mm:ss
	Firmware version	R	
	Serial number	R	
	System error	R	
/api/sysInfo/network	All network information	R	
/api/sysInfo/network/LAN	All LAN information	R	
/api/sysInfo/network/LAN/1	MAC address	R	xx:xx:xx:xx:xx:xx
	IP address	R	xxx.xxx.xxx.xxx
/api/io/ir/{ioName}	IR - value	R	By data type
/api/io/ir/{ioName}/irvalue	IR - value	RW	By data type
/api/io/sp/{ioName}/spStatus	SP - system power status for 45MR-7210(-T)	R	0, 1, 2

RESTful API	Description	Access	Format
/api/io/sp/{ioName}/spLowerLimitValue	SP - system power lower limit value - for 45MR-7210(-T)	R	Float
/api/io/sp/{ioName}/spUpperLimitValue	SP - system power upper limit value - 45MR-7210(-T)	R	Float
/api/io/fp/{ioName}/fpStatus	FP - field power status - for 45MR-7210(-T)	R	
/api/io/di/{ioName}/diMode	DI - mode (0: DI, 1: Counter)	R	0 or 1
/api/io/di/{ioName}/diStatus	DI - DI mode - status (0: OFF, 1: ON)	R	0 or 1
/api/io/di/{ioName}/diCounterValue	DI - Counter mode - value	R/W	0 to 4294967295
/api/io/di/{ioName}/diCounterOverflowFlag	DI - Counter mode - overflow flag (0: Normal, 1: Overflow)	R	0 or 1
/api/io/di/{ioName}/diCounterOverflowFlagClear	DI - Counter mode - clear overflow flag (1: Clear)	R/W	0 or 1
/api/io/di/{ioName}/diCounterStatus	DI - Counter mode - status (0: pause, 1: run)	R/W	0 or 1
/api/io/do/{ioName}/doMode	DO - mode (0: DO, 1: Pulse)	R	0 or 1
/api/io/do/{ioName}/doStatus	DO - status (0: OFF, 1: ON)	R/W	0 or 1
/api/io/do/{ioName}/doPulseCount	DO - Pulse mode - count	R/W	0 to 65535
/api/io/do/{ioName}/doPulseOnWidth	DO - Pulse mode - ON width (unit: 500us)	R/W	1 to 65535
/api/io/do/{ioName}/doPulseOffWidth	DO - Pulse mode - OFF width (unit: 500us)	R/W	1 to 65535
/api/io/do/{ioName}/doPulseStatus	DO - Pulse mode - status (0: Stop 1: Start)	R/W	0 or 1
/api/io/relay/{ioName}/relayTotalCount	Relay - total count	R	0 to 4294967295
/api/io/relay/{ioName}/relayCurrentCount	Relay - current count	R	0 to 4294967295
/api/io/relay/{ioName}/relayCurrentCountReset	Relay - reset current count (1: Reset)	R/W	0 or 1
/api/io/relay/{ioName}/relayStatus	Relay - Relay mode - status (0: OFF, 1: ON)	R/W	0 or 1
/api/io/ai/{ioName}/aiMode	AI - mode (0: disable 1: 0-10 V, 2: 0-20 mA, 3: 4-20 mA burnout, 4: 4-20 mA, 5: ±10 V)	R	0, 1, 2, 3, 4, 5
/api/io/ai/{ioName}/aiValueRaw	AI - raw value	R	0 to 65535
/api/io/ai/{ioName}/aiValueRawMin	AI - minimum raw value	R	0 to 65535
/api/io/ai/{ioName}/aiValueRawMax	AI - maximum raw value	R	0 to 65535
/api/io/ai/{ioName}/aiResetMinValue	AI - reset minimum value (1: Reset)	R/W	1
/api/io/ai/{ioName}/aiResetMaxValue	AI - reset maximum value (1: Reset)	R/W	1
/api/io/ai/{ioName}/aiStatus	AI - status (0: normal, 1: burnout, 2: over range, 3. under range)	R	0, 1, 2, 3
/api/io/ai/{ioName}/aiBurnoutValueScaled	AI - scaled burnout value	R	Float
/api/io/ai/{ioName}/aiValueScaled	AI - scaled value	R	Float

RESTful API	Description	Access	Format
/api/io/ai/{ioName}/aiValueScaledMin	AI - minimum scaled value	R	Float
/api/io/ai/{ioName}/aiValueScaledMax	AI - maximum scaled value	R	Float
/api/io/ao/{ioName}/aoMode	AO - mode (0: disable, 1: 0-10 V, 2: 0-20mA, 3: 4-20 mA, 4: +/-10V)	R	0, 1, 2, 3, 4
/api/io/ao/{ioName}/aoValueRaw	AO - raw value	R/W	0 to 65535
/api/io/ao/{ioName}/aoValueScaled	AO - scaled value	R/W	0 to 4294967295
/api/io/rtd/{ioName}/rtdStatus	RTD - Status (0: normal, 1: burnout)	R	0 or 1
/api/io/rtd/{ioName}/rtdMode	RTD - Type (0: PT50, 1: PT100, 2: PT200, 3: PT500, 4: PT1000; 14: 310 Ohm, 15: 620 Ohm, 16: 1250 Ohm, 17: 2200 Ohm; 20: JPT100, 21: JPT200, 22: JPT500, 23: JPT1000; 30: NI100, 31: NI200, 32: NI500, 33: NI1000, 34: NI120)	R	
/api/io/rtd/{ioName}/rtdValueScaled	RTD - scaled value	R	Float
/api/io/rtd/{ioName}/rtdValueScaledMin	RTD - minimum scaled value	R	Float
/api/io/rtd/{ioName}/rtdValueScaledMax	RTD - maximum scaled value	R	Float
/api/io/rtd/{ioName}/rtdResetMinValue	RTD - reset minimum value (1: RESET)	R/W	1
/api/io/rtd/{ioName}/rtdResetMaxValue	RTD - reset maximum value (1: RESET)	R/W	1
/api/io/tc/{ioName}/tcStatus	TC - Status (0: normal, 1: burnout)	R	0 or 1
/api/io/tc/{ioName}/tcType	TC - Type (0: J Type, 1: K Type, 2: T Type, 3: E Type, 4: R Type, 5: S Type, 6: B Type, 7: N Type, 14: ±78.126 mV, 15: ±39.062 mV, 16: ±19.532 mV)	R	
/api/io/tc/{ioName}/tcValueScaled	TC - scaled value	R	Float
/api/io/tc/{ioName}/tcValueScaledMin	TC - minimum scaled value	R	Float
/api/io/tc/{ioName}/tcValueScaledMax	TC - maximum scaled value	R	Float
/api/io/tc/{ioName}/tcResetMinValue	TC - reset minimum value (1: RESET)	R/W	1
/api/io/tc/{ioName}/tcResetMaxValue	TC - reset maximum value (1: RESET)	R/W	1

Exception Code

HTTP Status Code		Moxa Status Code/Description		User message
400	Bad Request	101	UnsupportedVersion	The content version specified in the request is not supported.
400	Bad Request	102	UnsupportedDocFormat	The document format specified in the request is not supported.

HTTP Status Code		Moxa Status Code/Description		User message
400	Bad Request	201	InvalidJsonFormat	The json format in the request is not valid.
400	Bad Request	202	InvalidNodeValue	One of the node value is invalid.
400	Bad Request	203	WrongChannelOrder	The I/O channels are disordered.
400	Bad Request	204	MissingRequiredChannel	A required channel index was not specified in the request body.
400	Bad Request	206	MissingRequiredNode	A required node was not specified in the request body.
400	Bad Request	300	ContentFailed	One of the channel contents in the request could not be set. Please refer to the detailed information.
400	Bad Request	301	ContentFailedToSet	The content in the request could not be set (invalid value).
200	OK	N/A		
404	Bad Request	N/A		
405	Method Not Allowed	N/A		

MQTT Rules

Publish Topic

Topic	Description	Category	Trigger
{deviceName}/read/device/deviceName	device name	attribute	Interval
{deviceName}/read/device/deviceLocalDateTime	device local date and time	attribute	Interval
{deviceName}/read/device/deviceUpTime	device up time	attribute	Interval
{deviceName}/read/device/firmwareVersion	firmware version	attribute	Interval
{deviceName}/read/device/serialNumber	serial number	attribute	Interval
{deviceName}/read/device/systemError	system error	attribute	Interval
{deviceName}/read/network/lanMac/1	MAC address	attribute	Interval
{deviceName}/read/network/lanIp/1	IP address	attribute	Interval
{deviceName}/read/lastWill	Last Will Topic	attribute	Interval
{deviceName}/read/{ioName}/birValue	BIR - value	attribute	both (OnChange)
{deviceName}/read/{ioName}/wirValue	WIR - value	attribute	Interval
{deviceName}/read/{ioName}/dirValue	DIR - value	attribute	Interval
{deviceName}/read/{ioName}/firValue	FIR - value	attribute	Interval
{deviceName}/read/{ioName}/spStatus	SP—for 45MR-7210(-T)—system power status	attribute	Interval
{deviceName}/read/{ioName}/spLowerLimitValue	SP—for 45MR-7210(-T)—system power lower limit value	attribute	Interval
{deviceName}/read/{ioName}/spUpperLimitValue	SP—for 45MR-7210(-T)—system power upper limit value	attribute	Interval

Topic	Description	Category	Trigger
{deviceName}/read/{ioName}/fpStatus	FP—for 45MR-7210(-T)—field power status	attribute	Interval
{deviceName}/read/{ioName}/diMode	DI - mode (0: DI, 1: Counter)	attribute	Interval
{deviceName}/read/{ioName}/diStatus	DI - DI mode - status (0: OFF, 1: ON)	value	both (OnChange)
{deviceName}/read/{ioName}/diCounterValue	DI - Counter mode - value	value	Interval
{deviceName}/read/{ioName}/diCounterOverflowFlag	DI - Counter mode - overflow flag (0: Normal, 1: Overflow)	attribute	Interval
{deviceName}/read/{ioName}/diCounterOverflowFlagClear	DI - Counter mode - clear overflow flag (1: Clear)	attribute	Interval
{deviceName}/read/{ioName}/diCounterStatus	DI - Counter mode - status (0: pause, 1: run)	value	both (OnChange)
{deviceName}/read/{ioName}/doMode	DO - mode (0: DO, 1: Pulse)	attribute	Interval
{deviceName}/read/{ioName}/doStatus	DO - status (0: OFF, 1: ON)	value	both (OnChange)
{deviceName}/read/{ioName}/doPulseCount	DO - Pulse mode - count	attribute	Interval
{deviceName}/read/{ioName}/doPulseOnWidth	DO - Pulse mode - ON width (unit: 500us)	attribute	Interval
{deviceName}/read/{ioName}/doPulseOffWidth	DO - Pulse mode - OFF width (unit: 500us)	attribute	Interval
{deviceName}/read/{ioName}/doPulseStatus	DO - Pulse mode - status (0: Stop 1: Start)	value	both (OnChange)
{deviceName}/read/{ioName}/relayTotalCount	Relay - total count	attribute	Interval
{deviceName}/read/{ioName}/relayCurrentCount	Relay - current count	value	Interval
{deviceName}/read/{ioName}/relayCurrentCountReset	Relay - reset current count (1: Reset)	attribute	Interval
{deviceName}/read/{ioName}/relayStatus	Relay - Relay mode - status (0: OFF, 1: ON)	value	both (OnChange)
{deviceName}/read/{ioName}/aiMode	AI - mode (0: disable 1: 0-10 V, 2: 0-20 mA, 3: 4-20 mA burnout, 4: 4-20 mA, 5: ±10 V)	attribute	Interval
{deviceName}/read/{ioName}/aiValueRaw	AI - raw value	attribute	Interval
{deviceName}/read/{ioName}/aiValueRawMin	AI - minimum raw value	attribute	Interval
{deviceName}/read/{ioName}/aiValueRawMax	AI - maximum raw value	attribute	Interval
{deviceName}/read/{ioName}/aiResetMinValue	AI - reset minimum value (1: Reset)	attribute	Interval
{deviceName}/read/{ioName}/aiResetMaxValue	AI - reset maximum value (1: Reset)	attribute	Interval
{deviceName}/read/{ioName}/aiStatus	AI - status (0: normal, 1: burnout, 2: over range, 3. under range)	value	both (OnChange)

Topic	Description	Category	Trigger
{deviceName}/read/{ioName}/aiBurnoutValueScaled	AI - scaled burnout value	attribute	Interval
{deviceName}/read/{ioName}/aiValueScaled	AI - scaled value	value	both (interval)
{deviceName}/read/{ioName}/aiValueScaledMin	AI - minimum scaled value	attribute	Interval
{deviceName}/read/{ioName}/aiValueScaledMax	AI - maximum scaled value	attribute	Interval
{deviceName}/read/{ioName}/aoMode	AO - mode (0: Disable, 1: 0-10 V, 2: 0-20mA, 3: 4-20 mA)	attribute	Interval
{deviceName}/read/{ioName}/aoValueRaw	AO - raw value	attribute	Interval
{deviceName}/read/{ioName}/aoValueScaled	AO - scaled value	value	both (interval)
{deviceName}/read/{ioName}/aoStatus	AO - status (0: Normal, 1: Fault)	value	both (OnChange)
{deviceName}/read/{ioName}/rtdStatus	RTD - Status (0: normal, 1: burnout)	value	both (OnChange)
{deviceName}/read/{ioName}/rtdMode	RTD - Type (0: PT50, 1: PT100, 2: PT200, 3: PT500, 4: PT1000; 14: 310 Ohm, 15: 620 Ohm, 16: 1250 Ohm, 17: 2200 Ohm; 20: JPT100, 21: JPT200, 22: JPT500, 23: JPT1000; 30: NI100, 31: NI200, 32: NI500, 33: NI1000, 34: NI120, 50: disable)	attribute	Interval
{deviceName}/read/{ioName}/rtdValueScaled	RTD - scaled value	value	both (interval)
{deviceName}/read/{ioName}/rtdValueScaledMin	RTD - minimum scaled value	attribute	Interval
{deviceName}/read/{ioName}/rtdValueScaledMax	RTD - maximum scaled value	attribute	Interval
{deviceName}/read/{ioName}/rtdResetMinValue	RTD - reset minimum value (1: RESET)	attribute	Interval
{deviceName}/read/{ioName}/rtdResetMaxValue	RTD - reset maximum value (1: RESET)	attribute	Interval
{deviceName}/read/{ioName}/tcStatus	TC - Status (0: normal, 1: burnout)	value	both (OnChange)
{deviceName}/read/{ioName}/tcType	TC - Type (0: J Type, 1: K Type, 2: T Type, 3: E Type, 4: R Type, 5: S Type, 6: B Type, 7: N Type, 14: ±78.126 mV, 15: ±39.062 mV, 16: ±19.532 mV, 50: disable)	attribute	Interval
{deviceName}/read/{ioName}/tcValueScaled	TC - scaled value	value	both (interval)
{deviceName}/read/{ioName}/tcValueScaledMin	TC - minimum scaled value	attribute	Interval
{deviceName}/read/{ioName}/tcValueScaledMax	TC - maximum scaled value	attribute	Interval

Topic	Description	Category	Trigger
{deviceName}/read/{ioName}/tcResetMinValue	TC - reset minimum value (1: RESET)	attribute	Interval
{deviceName}/read/{ioName}/tcResetMaxValue	TC - reset maximum value (1: RESET)	attribute	Interval
{deviceName}/write/{ioName}/tcResetMinValue	TC - reset minimum value (1: RESET)	attribute	Interval
{deviceName}/write/{ioName}/tcResetMaxValue	TC - reset maximum value (1: RESET)	attribute	N/A

Subscribe Topic

Topic	Description	Template	Category
{deviceName}/write/{ioName}/birValue	BIR - value	0 to 1	value
{deviceName}/write/{ioName}/wirValue	WIR - value	-32768 to 32767	value
{deviceName}/write/{ioName}/dirValue	DIR - value	-2147483648 to 2147483647	value
{deviceName}/write/{ioName}/firValue	FIR - value	Float	value
{deviceName}/write/{ioName}/diCounterValue	DI - Counter mode - value	0 to 4294967295	value
{deviceName}/write/{ioName}/diCounterOverflowFlagClear	DI - Counter mode - clear overflow flag (1: Clear)	0 or 1	attribute
{deviceName}/write/{ioName}/diCounterStatus	DI - Counter mode - status (0: pause, 1: run)	0 or 1	value
{deviceName}/write/{ioName}/doStatus	DO - status (0: OFF, 1: ON)	0 or 1	value
{deviceName}/write/{ioName}/doPulseCount	DO - Pulse mode - count	0 to 65535	attribute
{deviceName}/write/{ioName}/doPulseOnWidth	DO - Pulse mode - ON width (unit: 500us)	1 to 65535	attribute
{deviceName}/write/{ioName}/doPulseOffWidth	DO - Pulse mode - OFF width (unit: 500us)	1 to 65535	attribute
{deviceName}/write/{ioName}/doPulseStatus	DO - Pulse mode - status (0: Stop 1: Start)	0 or 1	value
{deviceName}/write/{ioName}/relayCurrentCountReset	Relay - reset current count (1: Reset)	0 or 1	attribute
{deviceName}/write/{ioName}/relayStatus	Relay - Relay mode - status (0: OFF, 1: ON)	0 or 1	value
{deviceName}/write/{ioName}/aiResetMinValue	AI - reset minimum value (1: Reset)	1	attribute
{deviceName}/write/{ioName}/aiResetMaxValue	AI - reset maximum value (1: Reset)	1	attribute
{deviceName}/write/{ioName}/aoValueRaw	AO - raw value	0 to 65535	attribute
{deviceName}/write/{ioName}/aoValueScaled	AO - scaled value	0 to 4294967295	value
{deviceName}/write/{ioName}/rtdResetMinValue	RTD - reset minimum value (1: RESET)	1	attribute
{deviceName}/write/{ioName}/rtdResetMaxValue	RTD - reset maximum value (1: RESET)	1	attribute
{deviceName}/write/{ioName}/tcResetMinValue	TC - reset minimum value (1: RESET)	1	attribute

{deviceName}/write/{ioName}/tcResetMaxValue	TC - reset maximum value (1: RESET)	1	attribute
---	-------------------------------------	---	-----------

Troubleshooting

This section provides troubleshooting instructions for this device.

Forgot username & password


If you forget your username and password, use a pointed object such as a straightened paper clip to hold down the Reset Button for 10 seconds. This will restart the unit and reset all settings on the device, including the username and password. The factory defaults will be loaded once the READY LED turns green again.

INFORMATION The default username is admin, and the default password is moxa.


Forgot IP address of the unit

If you forget the IP address of the unit, use IOxpress utility to search for the device if IOxpress service is already enabled in **Security** → **Service Settings**. Otherwise, load the factory default settings and access the unit with the default IP address.

Step 1: Open IOxpress, go to **Device Library** and click **Device** → **Search** in the menu.

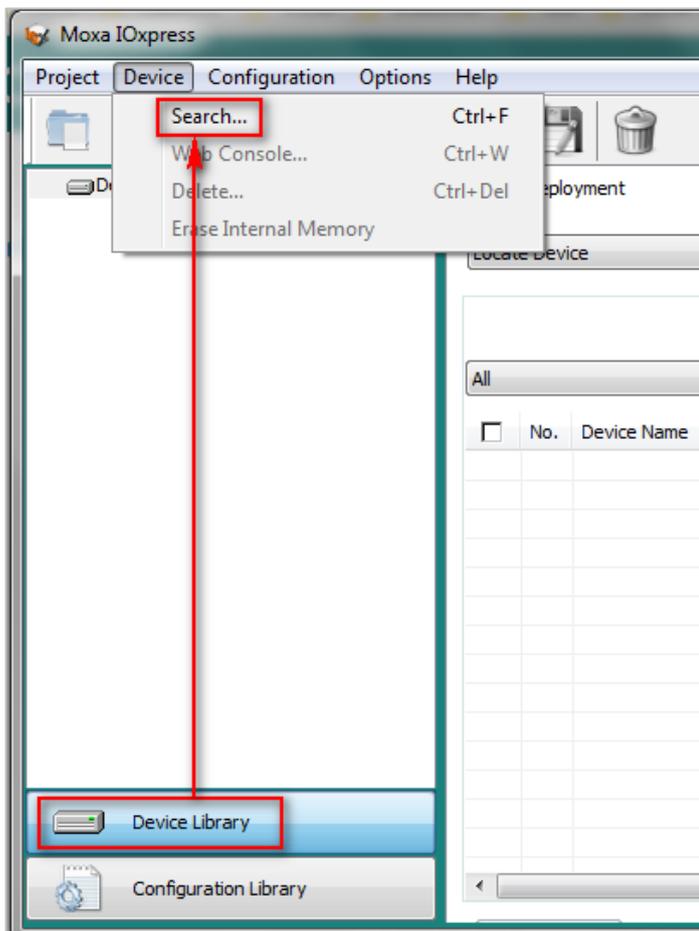

Step 2: In the **Search for Devices** window, choose the product series you would like to search in the **By Product Series** dropdown menu, and then click the **Submit** button. IOxpress will start to search the devices and list them in the table.

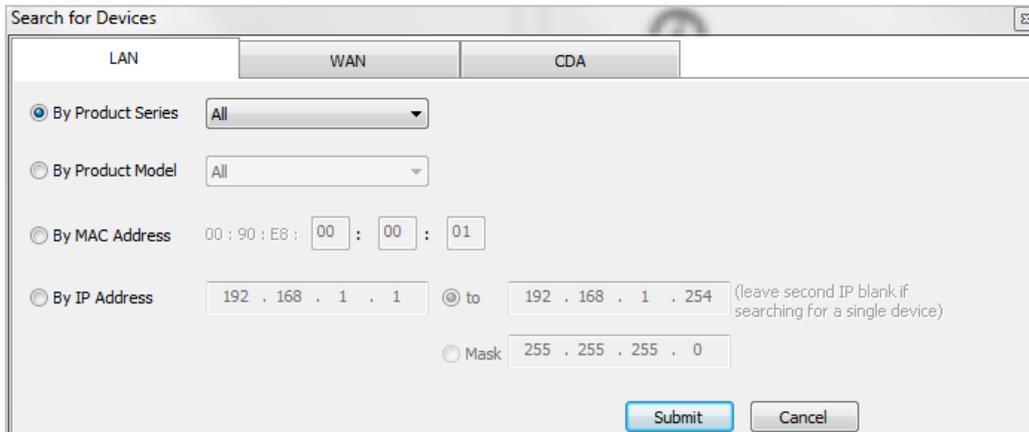

Failed to update firmware

If the firmware update process fails, the firmware file may be corrupted. Download the firmware file from Moxa's official website. Otherwise, check if the power supply is stable. An unstable power supply can lead to an incomplete firmware update.


NOTE This device supports firmware automatic recovery function. If the firmware in the device is corrupted, the system will load the backup firmware automatically to overwrite the corrupted one. When the system is in recovery mode, the RDY LED will blink RED slowly. Do not disconnect the power cable when performing the recovery process. After the recovery process is complete, you can update firmware again.

Failed to update configuration

If the configuration update process fails, the configuration file may be corrupted. Get the configuration file and update it again. Otherwise, check to see if the power supply is stable. An unstable power supply can result in the configurations not being successfully updated.


Failed to access the unit through IP address & IOxpress

Incorrect network configurations can result in the user not being able to access the unit. Check if the device and PC are in the same subnet by following the procedure below.

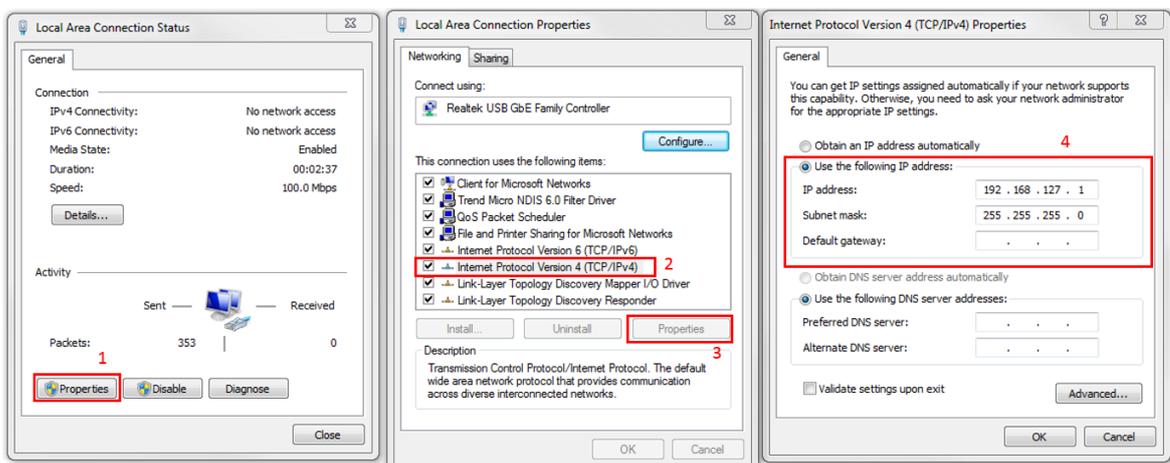

INFORMATION The default IP address of the device is 192.168.127.254.

This may also occur when you try to configure multiple devices with the same computer. The reason for this could be that multiple devices have the same default IP address. When sending TCP/IP packets, the packet may get sent to the wrong MAC address, as it follows the previous record in the computer's ARP Cache. To rectify this problem, you can erase the ARP Cache records by entering "arp -d" command in the built-in Command-Line tools.

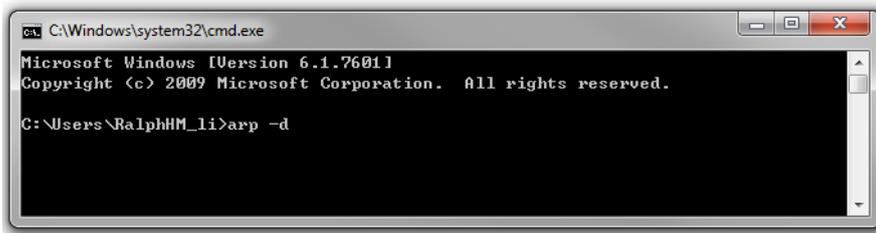

Failed to enter System Ready Mode

If the RDY LED stays red, and your web console is not accessible, it means that the system is experiencing an error. Follow the steps to recover the system.


Step 1: Hold down the RESET button for 30 seconds to trigger the system recovery process. The system will load the backup firmware and then restart the unit. The system is ready when the RDY LED is green.

Step 2: Open the web console and then update the firmware and configurations to the device.


Import Self-Signed Certificate

When using web service via https, you must import the self-signed certificate before using the web service via https, or the browser may block the connection. Take the following steps to import the self-signed certificate, which was generated by the ioThinx 4510, into the browser.


1. Download the self-signed certificate from the ioThinx 4510.
2. From the Chrome browser, click **Settings**.

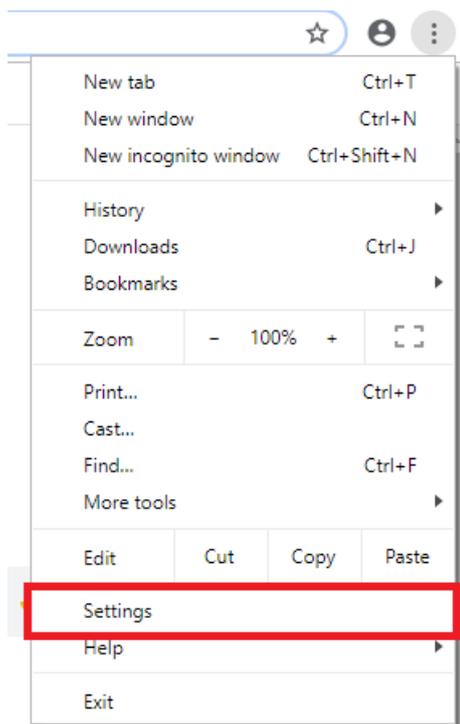


3. Click **Advanced** at the bottom of the browser window and then locate **Manage certificates**.

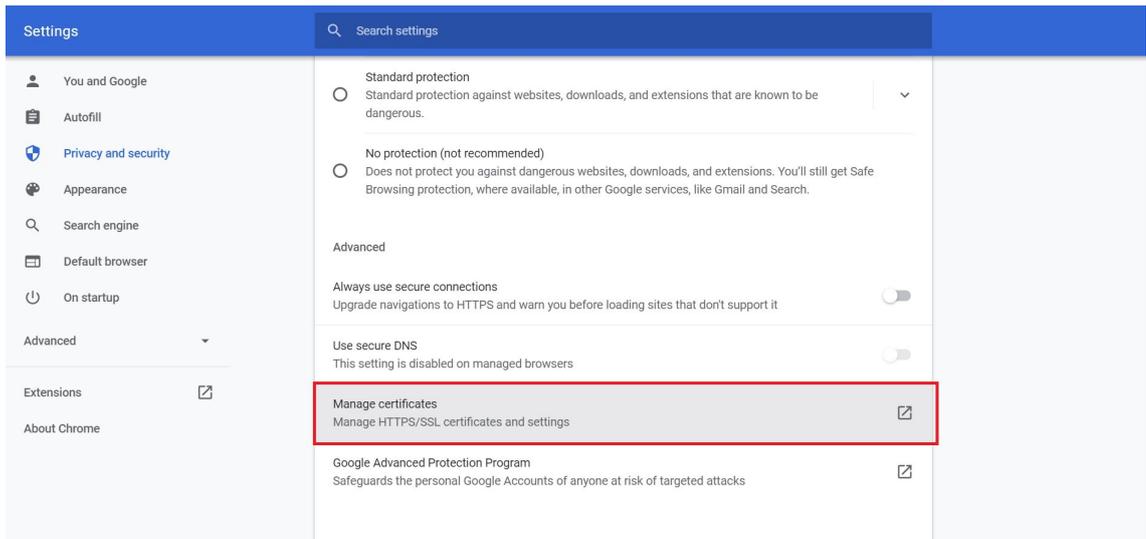


4. Click the **Trusted Root Certification Authorities** tab and then click **Import**

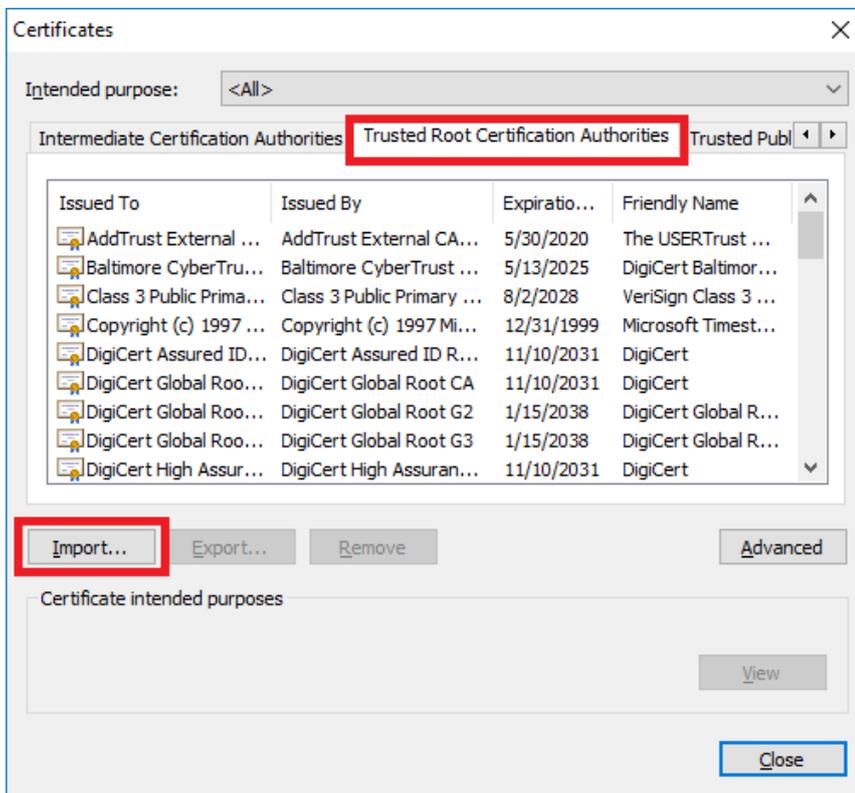


5. Choose the certificate exported by the ioThinx 4510 and then click **Next**.

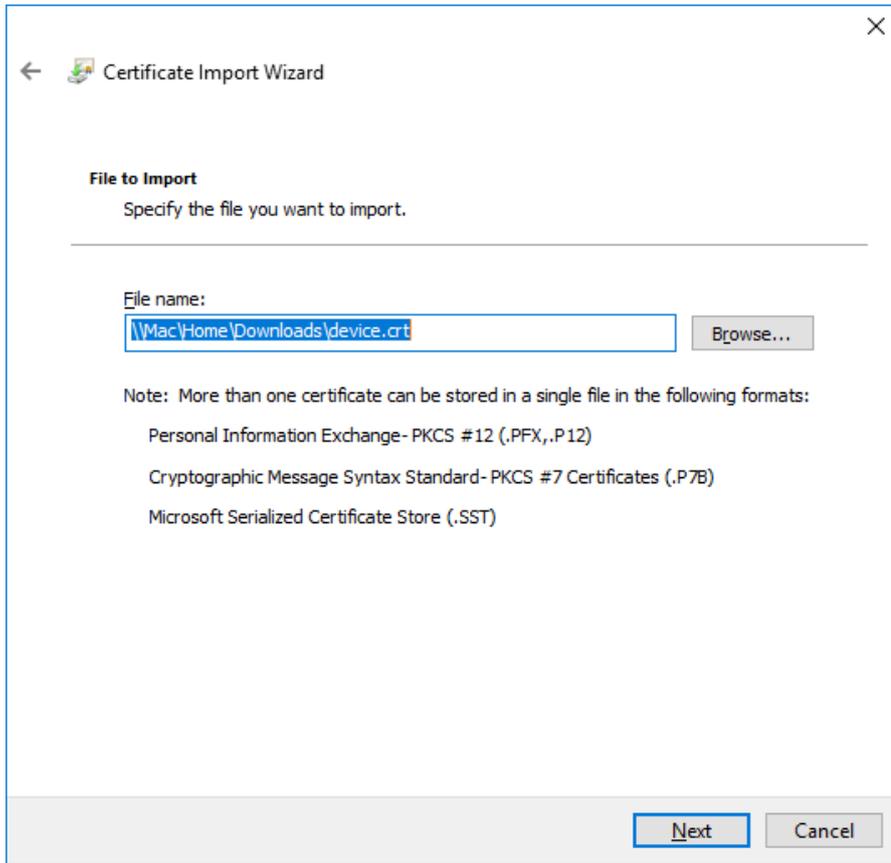


6. Click **Next** until you see the following page, and then click **Finish** to complete the certificate import.

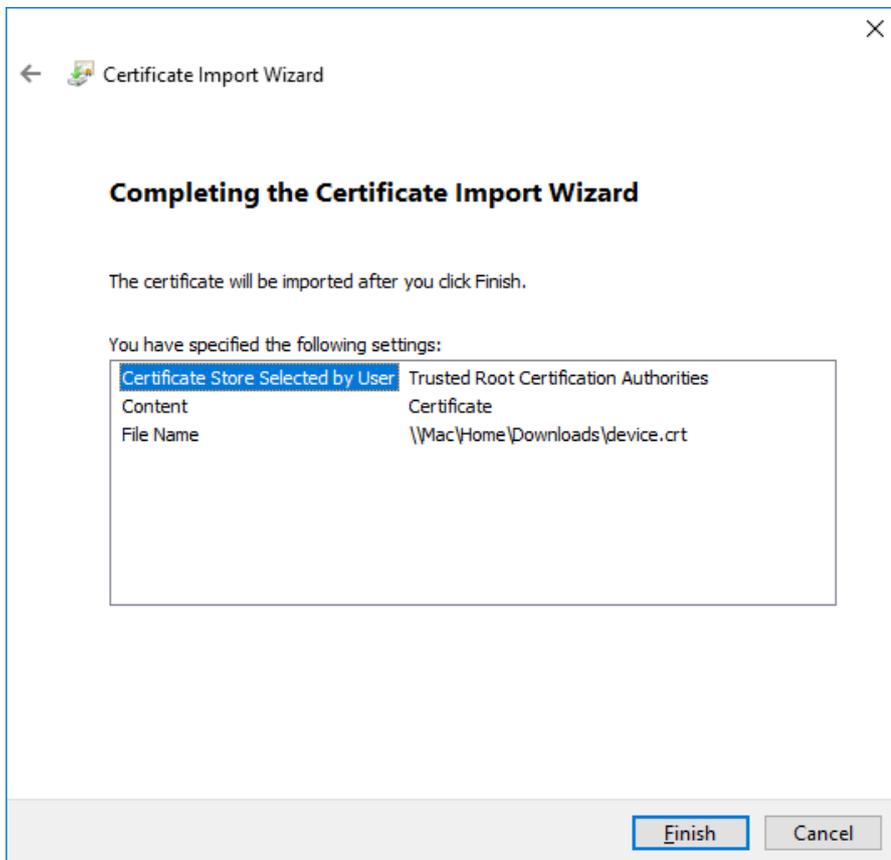

- 7. When the security warning message pops up, click **Yes** to complete the certificate installation.

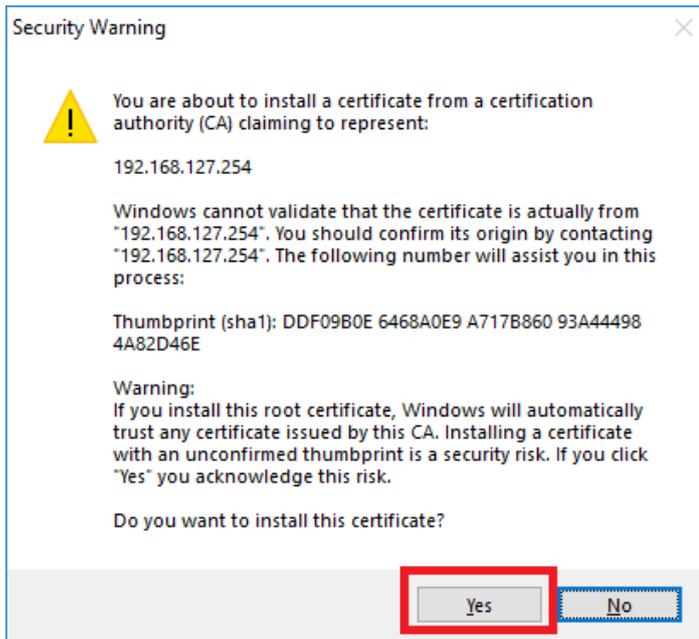

- 8. Open the browser and open the ioThinX 4510's web console. You should see the lock icon to the left of the web address.

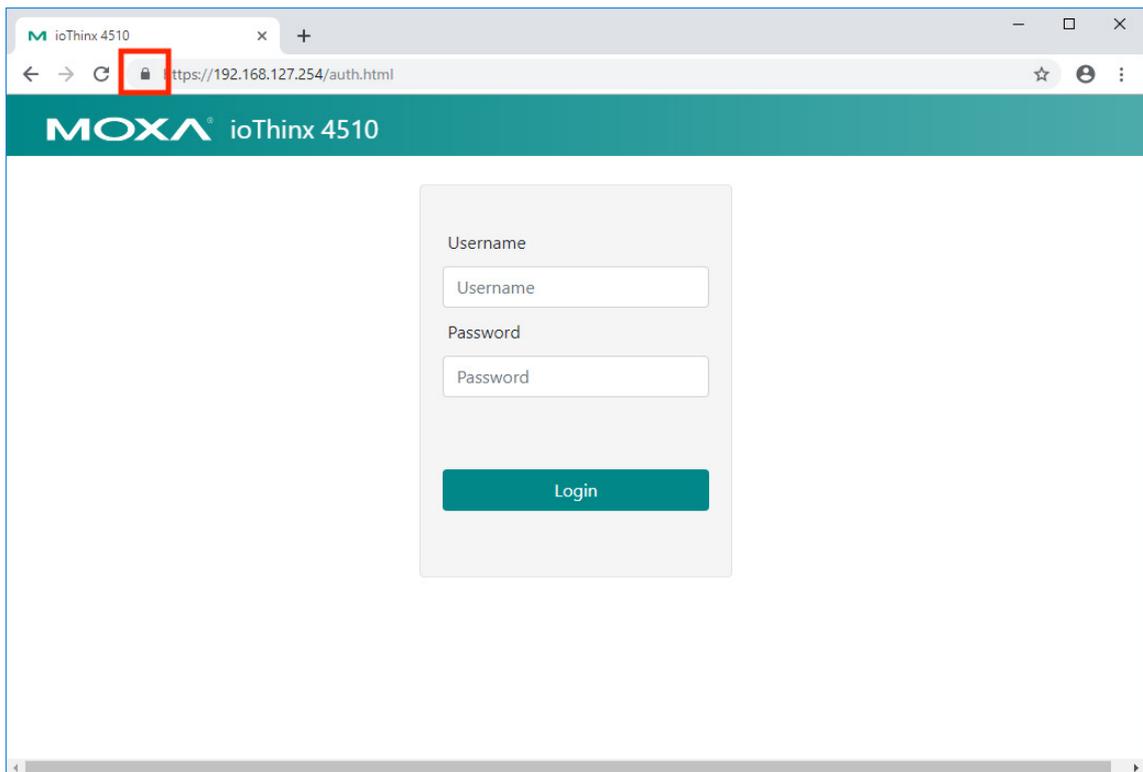

Return Value of a System Error

The ioThinx 4510 provides an error code to monitor the status of a system through protocols. Users can use protocols, including MQTT, RestfulAPI, SNMP and Modbus TCP, to monitor system status. The response value is based on the system status. You can find the definition of each return value as below.

0x00000000	Normal
0x00000001	Resetting to default
0x00000002	Upgrading
0x00000004	Booting
0x00000008	Others
0x00000010	Eternal bus error. Communication watchdog will be triggered.
0x00000020	Internal bus error.
0x00000040	Extension module connection error
0x00000080	Failed to update the configuration file
0x00000100	Failed to update the firmware file.
0x00000200	Configuration file error. Default settings will be reloaded.
0x00000400	Module mismatch
0x00000800	Safe mode
0x00001000	Service warning: All IT protocols have been disabled.