

IEX-402-VDSL2 Series Hardware Installation Guide

Moxa Managed VDSL2 Ethernet Extender

First Edition, Feb 2013



© 2013 Moxa Inc. All rights reserved.

P/N: 1802004020020

Overview

The IEX-402-VDSL2 is an industrial managed Ethernet extender for extending up to 3 km of LAN segments over twisted-pair copper wires at data rates of up to 100 Mbps using the VDSL2 standard. The Ethernet extender is designed with one 10/100BaseT(X) and one DSL port.

The IEX-402-VDSL2 series is designed for use in harsh operating environments. The DIN-rail mount, wide operating temperature range (-40 to 75°C), and dual power input make it ideal for installation in industrial applications.

To simplify configuration, the device will set one as CO and the other as CPE with auto CO/CPE negotiation (factory default setting). Advanced management and monitoring functionalities through NMS, including a virtual panel, improve the user experience for quick troubleshooting.


Package List

The Moxa IEX-402-VDSL2 is shipped with the following items. If any of these items are missing or damaged, please contact your customer service representative for assistance.

- IEX-402-VDSL2 Ethernet extender
- Hardware installation guide
- CD-ROM with user's manual, Windows utility, MXview 2.3 trial version and NMS plug-in
- Warranty card


IEX-402-VDSL2 Panel Layout

Front Panel View

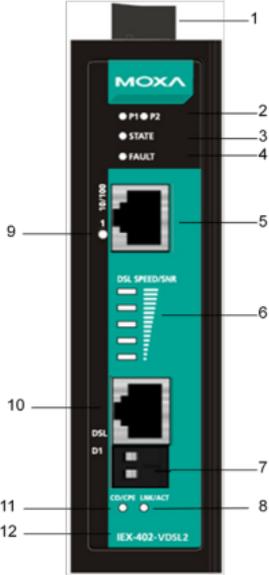


1. Terminal block for power input (PWR1, PWR2)
2. Power input PWR1/PWR2 LED
3. State LED
4. Fault LED
5. 10/100BaseT(X) port
6. DSL speed/SNR LED
7. Detachable 2-contact DSL port
8. Link/ACT LED
9. TP port's 10/100 Mbps LED
10. DSL port(RJ-45/RJ-11 connector)
11. CO/CPE LED
12. Model name
13. Grounding screw
14. Power input PWR1/PWR2
15. RS-232 console port
16. DIP switches
17. Reset button
18. Screw hole for wall mounting kit
19. DIN rail kit


Top Panel View

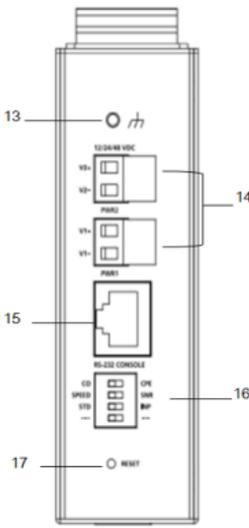

Rear Panel View

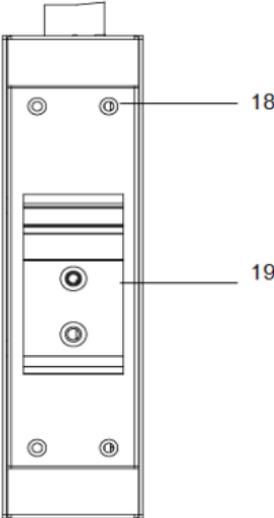

Mounting Dimensions - unit = mm (inches)


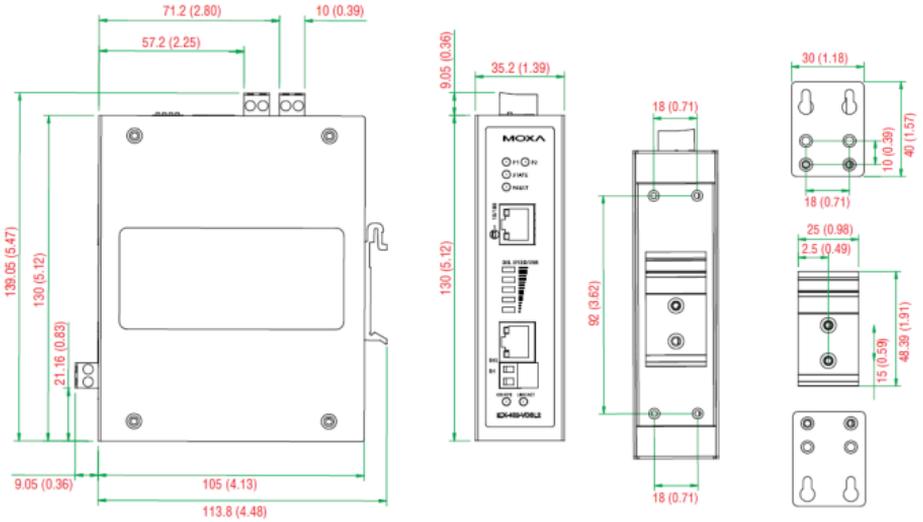


DIN Rail Mounting

The aluminum DIN rail attachment plate should already be fixed to the back panel of the IEX-402-VDSL2 when you take it out of the box. If you need to reattach the DIN rail attachment plate, make sure the stiff metal spring is situated towards the top, as shown in the following figures.

STEP 1: Insert the top of the DIN rail into the slot just below the stiff metal spring.

STEP 2: The DIN rail attachment unit will snap into place as shown below.

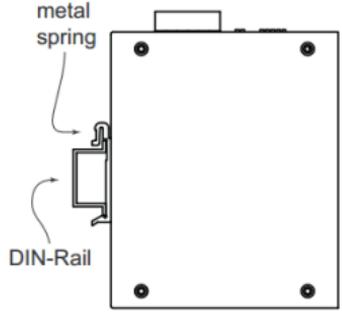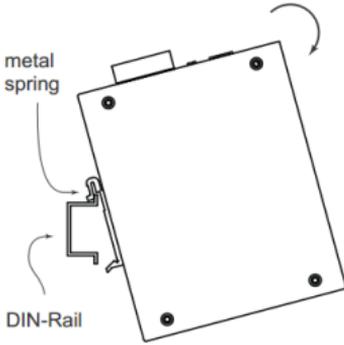


To remove the Moxa Ethernet Extender from the DIN rail, simply reverse steps 1 and 2.

Wall Mounting (optional)

For some applications, you will find it convenient to mount the IEX-402-VDSL2 on the wall, as shown in the following figures.


STEP 1:

Remove the aluminum DIN rail attachment plate from the IEX-402-VDSL2 rear panel, and then attach the wall mount plates as shown in the diagram as shown below.

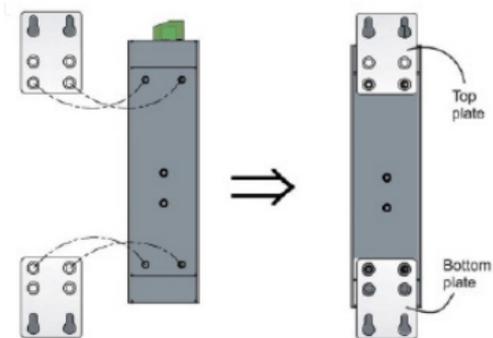

STEP 2:

Mounting the IEX-402-VDSL2 on the wall requires 4 screws. Use the switch, with wall mount plates attached, as a guide to mark the correct locations of the 4 screws. The heads of the screws should be less than 6.0 mm in diameter, and the shafts should be less than 3.5mm in diameter, as shown in the figure at the right.

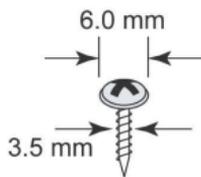

NOTE Before tightening the screws into the wall, make sure the screw head and shank size are suitable by inserting the screw into one of the keyhole-shaped apertures of the wall mounting plates.

Do not tighten the screws completely—leave about 2 mm to allow room for sliding the wall mount panel between the wall and the screws.

STEP 3:

Once the screws are fixed into the wall, insert the four screw heads through the large parts of the keyhole-shaped apertures, and then slide the IEX-402-VDSL2 downwards, as indicated. Tighten the four screws for added stability.

Wiring Requirement



ATTENTION

Safety First!

Be sure to disconnect the power cord before installing and/or wiring your Moxa Ethernet Extender.

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size.

If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment

Be sure to read and follow these important guidelines:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.

NOTE: Do not run signal or communications wiring and power wiring through the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.

- Use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- When necessary, you should label the wiring to all devices in the system.

Grounding the Ethernet Extender

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.



ATTENTION

This product is intended to be mounted onto a well-grounded mounting surface, such as a metal panel.

Wiring the Redundant Power Inputs

Both power inputs can be connected simultaneously to live DC power sources. If one power source fails, the other live source acts as a backup, and automatically supplies the IEX-402-VDSL2 with power.

The two 2-contact terminal block connectors on the IEX's top panel are used for IEX's two DC power inputs. Top and front view of the terminal block connectors are shown here.



Step 1: Insert the negative/positive DC wires into the V-/V+ terminals

Step 2: To keep the DC wires from pulling loose, use a small flat-blade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

Step 3: Insert the plastic terminal block connector prongs into the terminal block receptor, which is located on IEX's top panel.



ATTENTION

Before connecting the IEX-402-VDSL2 to the DC power inputs, make sure the DC power source voltage is stable.

Auto MDI/MDI-X Connection

The Auto MDI/MDI-X function allows users to connect the IEX-402-VDSL2's 10/100BaseTX ports to any kind of Ethernet device, without needing to pay attention to the type of Ethernet cable being used for the connection. This means that you can use either a straight-through cable or cross-over cable to connect the IEX-402-VDSL2 to Ethernet devices.

Communication Connections

IEX-402-VDSL2 models have one 10/100BaseT(x) Ethernet port, and one DSL port.

10/100BaseT(X) Ethernet Port Connection

The 10/100BaseT(X) ports located on the IEX's front panel are used to connect to Ethernet-enabled devices.

Next, we show pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports, and also show cable wiring diagrams for straight-through and cross-over Ethernet cables.


MDI Port Pinouts

| Pin | Signal |
|-----|--------|
| 1 | Tx+ |
| 2 | Tx- |
| 3 | Rx+ |
| 6 | Rx- |


MDI-X Port Pinouts

| Pin | Signal |
|-----|--------|
| 1 | Rx+ |
| 2 | Rx- |
| 3 | Tx+ |
| 6 | Tx- |


8-pin RJ45

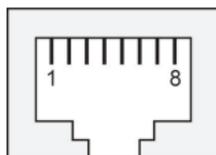

RJ45 (8-pin) to RJ45 (8-pin) Straight-Through Cable Wiring

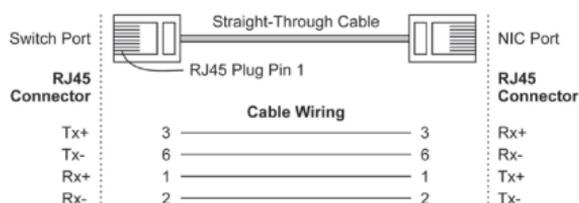

RJ45 (8-pin) to RJ45 (8-pin) Cross-Over Cable Wiring

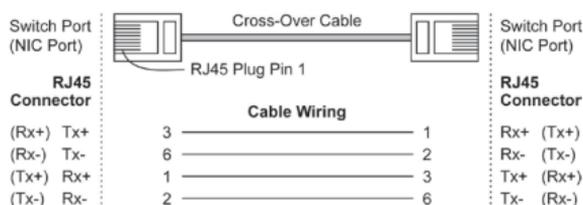


DSL Port Connection

The DSL port located on the IEX-402-VDSL2 has two connection options. One is the RJ45/RJ11 connector interface (2-wire on pin 4 and pin 5), the other is the screw detachable interface. Pinouts are illustrated below.


RJ11(RJ45 connector) DSL Port Pinouts

| Pin | Signal |
|-----|--------|
| 1 | --- |
| 2 | --- |
| 3 | --- |
| 4 | Ring |
| 5 | Tip |
| 6 | --- |
| 7 | --- |
| 8 | --- |

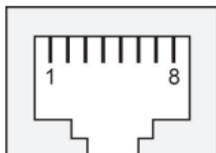

Wiring the 2-Contact DSL Port

The 2-contact terminal block connectors on the IEX's top panel are used for the IEX's DSL port wiring. Top and front views of the terminal block connectors are shown here.



Step 1: Insert the wires into the Ring/Tip terminals

Step 2: To keep the wires from pulling loose, use a small flat-blade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

Step 3: Insert the plastic terminal block connector prongs into the terminal block receptor, which is located on the IEX's top panel.


RS-232 Console Port Connection

The IEX-402-VDSL2 has one RS-232 (10-pin RJ45) console port, located on the top panel. Use either an RJ45-to-DB9 (see the cable following wiring diagrams) to connect the IEX-402-VDSL2's console port to your PC's COM port.


You may then use console terminal software, such as Moxa PComm Terminal Emulator, to access the IEX-402-VDSL2'S serial console.

RJ45 (10-pin) Console Port Pinouts


| Pin | Description |
|-----|-------------|
| 1 | DCD |
| 2 | DSR |
| 3 | RTS |
| 4 | GND |
| 5 | TxD |
| 6 | RxD |
| 7 | GND |
| 8 | CTS |
| 9 | DTR |
| 10 | --- |

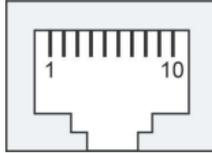

RJ45 (10-pin) to DB9 (F) Cable Wiring

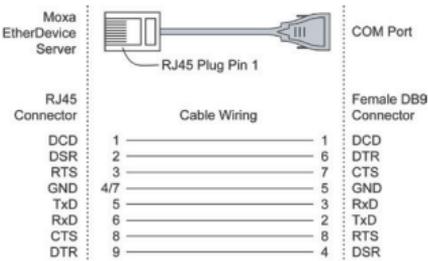

RJ45 (10-pin) to DB25 (F) Cable Wiring

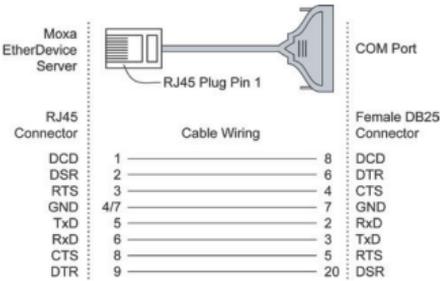

Restore Factory Defaults Button


Press and hold the Reset button for 5 seconds to load the factory default settings. Use a pointed object, such as a straightened paper clip or toothpick, to depress the Reset button. This will cause the STATE LED to

blink once a second. After depressing the button for 5 continuous seconds, the STATE LED will start to blink rapidly. This indicates that factory default settings have been loaded and you can release the reset button.

NOTE Do NOT power off the Ethernet extender when loading default settings.

DIP Switches Settings

The IEX-402-VDSL2 series provides 3 hardware DIP switches for advanced configurations, including CO/CPE, SPEED/SNR, and STD/INP.

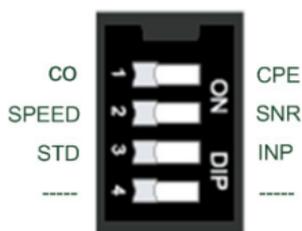

1. CO/CPE DIP Switch:

The default configuration is CO.

Designate the extender as a CO (central office) or CPE (customer premises equipment) device.

2. SPEED/SNR DIP Switch:

The default configuration is SPEED.

Select the type of DSL connection status, SPEED or SNR, to be displayed on the **DSL SPEED/SNR** LED on the front panel of the device.

3. STD/INP DIP Switch:

The default configuration is STD.

Select STD (standard) mode or INP (impulse noise protection) mode for the DSL connection.

STD mode: Direct data transmission with less than 2 ms latency

INP mode: Data transmission with impulse noise protection. Latency is under 8 ms with 500µs interleave DMT.

NOTE Reboot the device after reconfiguration of CO/CPE and STD/INP DIP switch settings.

Auto Negotiation Mode

The VDSL2 Ethernet extenders operate in pairs. One of the units needs to be configured as a CO device and the other as a CPE device. By factory default, IEX-402-VDSL2 is configured as a CO device.


To make configuration easier, the IEX-402-VDSL2 supports auto CO/CPE negotiation. When both extender have the CO/CPE DIP switch set as CO (factory default setting), auto CO/CPE negotiation will automatically assign one device as the CO and the other device as the CPE.

LED Indicators

| LED | Color | State | Description |
|-------------------|-------|---|---|
| PWR1 | AMBER | On | Power is being supplied to the power input PWR1 |
| | | Off | Power is not being supplied to the power input PWR1 |
| PWR2 | AMBER | On | Power is being supplied to the power input PWR2 |
| | | Off | Power is not being supplied to the power input PWR2 |
| STATE | GREEN | On | System has passed self-diagnostic test on boot-up and is ready to run |
| | | Blinking | 1. System is undergoing the self-diagnostic test when booting up. 2. Blinks continuously when pressing the reset button 5 seconds to reset to factory default. |
| | RED | On | 1. System failed the self-diagnostics test on boot-up. 2. Link Fault Pass Through active, link fault on the opposite unit |
| | | Blinking | Link Fault Pass Through active, link fault on this unit |
| FAULT | RED | On | System is in the event of failure, or is under quick inspection |
| | | Off | System is in normal operation |
| 10/100M (TP port) | GREEN | On | The corresponding port's link is active |
| | | Blinking | The corresponding port's data is being transmitted |
| | | Off | The corresponding port's link is inactive |
| LINK/ACT | GREEN | On | The corresponding port's link is active under STD mode |
| | | Blinking | The corresponding port is auto negotiating for the optimized speed (Blink every 1 sec) |
| | | | The corresponding port's data is being transmitted |
| | Off | The corresponding port's link is inactive | |
| | AMBER | On | The corresponding port's link is active under INP mode |
| | | Blinking | The corresponding port is auto negotiating for the optimized speed (Blink every 1 sec) |
| | | | The corresponding port's data is being transmitted |
| Off | | The corresponding port's link is inactive | |
| CO/CPE | GREEN | On | The IEX-402 is set as CPE |
| | | Off | The corresponding port's link is inactive |
| | AMBER | On | The IEX-402 is set as CO |
| | | Off | The corresponding port's link is inactive |

DSL Speed/SNR LED Indicator

| | Asymmetric Tx Speed(Kbps) | | Symmetric Tx speed(Kbps) | | SNR (dB) |
|---|---------------------------|---|--------------------------|---|----------|
| 5 | 80001 - 100000 | 5 | 60001 - 100000 | 5 | 21-30 |
| 4 | 55001 - 80000 | 4 | 30001 - 60000 | 4 | 13-20 |
| 3 | 20001 - 55000 | 3 | 15001 - 30000 | 3 | 6-12 |
| 2 | 5001 - 20000 | 2 | 4001 - 15000 | 2 | 5 |
| 1 | 256 - 5000 | 1 | 256 - 4000 | 1 | 3-4 |

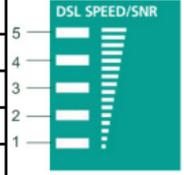

Specifications

| Technology | |
|---------------------------------|---|
| Standards | IEEE802.3, 802.3u, 802.3x, 802.1p, ITU-T G.993.2 |
| VDSL2 Data Rate | Up to 100Mbps depends on line condition |
| Protocols | SNMPv1/v2c/v3, DHCP Client, SNTP, HTTP, Telnet, Syslog, LLDP, Modbus/TCP, IPv6 |
| MIB | MIB-II |
| Flow Control | IEEE802.3x flow control, back pressure flow control |
| Interface | |
| RJ45 Port | 10/100BaseT(X) auto negotiation speed, F/H duplex mode, and auto MDI/MDI-X connection |
| VDSL Port | RJ-11(RJ-45 connector) or detachable 2-contact terminal block |
| Console | RS-232 (RJ45) |
| LED Indicators | PWR1, PWR2, FAULT, 10/100M (TP port), STATE, CO/CPE, LINK/ACT, DSL SPEED/SNR |
| DIP Switches | Reset button, CO/CPE, SNR/SPEED,STD/INP |
| Power | |
| Input Voltage | 12/24/48 VDC (9.6 to 60 VDC) |
| Input Current (@24V) | 0.33A |
| Connection | Two removable 2-pin terminal block |
| Overload Current Protection | Present |
| Reverse Polarity Protection | Present |
| Physical Characteristics | |
| Housing | Metal, IP30 protected |
| Dimension | 35 x 130 x 105 mm |
| Weight | 275 g |
| Installation | DIN rail, wall mount (optional kit) |
| Environmental Limits | |
| Operating Temperature | -10 to 60°C (14 to 140°F); -40 to 75°C (-40 to 167°F) for -T models |
| Storage Temperature | -40 to 85°C (-40 to 185°F) |
| Ambient Relative Humidity | 5% to 95% (non-condensing) |
| Altitude | Up to 2000 m, please contact Moxa for products guaranteed to function at higher altitudes |

| Regulatory Approvals | |
|-----------------------------|---|
| Safety | UL 508 |
| EMI | FCC Part 15 Subpart B Class A, CISPR (EN55022) class A |
| EMS | EN61000-4-2 (ESD), Level 3 EN61000-4-3 (RS), Level 3 EN61000-4-4 (EFT), Level 3 EN61000-4-5 (Surge), Level 3 EN61000-4-6 (CS), Level 3 EN61000-4-8 |
| Shock | IEC60068-2-27 |
| Freefall | IEC60068-2-32 |
| Vibration | IEC60068-2-6 |
| Warranty | 5 years |



ATTENTION

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

Technical Support Contact Information **www.moxa.com/support**

Moxa Americas:

Toll-free: 1-888-669-2872

Tel: 1-714-528-6777

Fax: 1-714-528-6778

Moxa China (Shanghai office):

Toll-free: 800-820-5036

Tel: +86-21-5258-9955

Fax: +86-21-5258-5505

Moxa Europe:

Tel: +49-89-3 70 03 99-0

Fax: +49-89-3 70 03 99-99

Moxa Asia-Pacific:

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231